

003SH User Guide

Getting Started	
Parts & Functions	6
Parts & Functions	5
About USIM Card	6
Using SD Card	7
Battery Installation	8
Charging Battery	9
Handset Power On/Off	
Using Touch Panel	12

Basic Functions

Handset Interface	16
Using Applications	17
Mobile Manners	21
Security Codes	21
Activation Screen Lock	22
Using Google Accounts	23
Downloading Applications	23
Text Entry	24
Entering Characters	25
Saving Frequently Used Words	26

Handset Interface

41
42
43
44

Phone/Address Book

Placing/Answering Calls	45
Alternative Dialing Methods	46
Calling form Outside Japan	47
Call History & Call Time	33
Call Barring	34
Optional Services	35
Using Address Book	36
Backup/Restore Address Book	38

Messaging & Browser

Customizing Handset Address	39
Using S! Mail	39
Incoming Messages	40
Using SMS	41
Handling Messages	42
Using Gmail	43
Using PC Mail	44
Browsing the Internet	45

Contents

Camera/AV

Capturing Still Images	45
Selection Camera by Use	48
Registering Faces	49
Capturing 3D Images	49
Recording Videos	50

Tools

Pen Light	52
Managing Files	52


Connectivity

Using Wi-Fi (Wireless LAN)	53
Using Bluetooth®	54
Connecting PC via USB Cable	55
Sharing Media Files	56

Settings


Wireless & Networks	. 57
Language & Keyboard Settings	. 59
Date & Time Settings	61

4

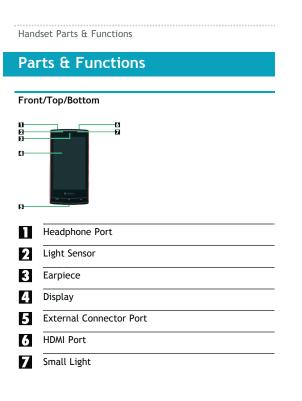


Back/Sides

0 2 6 	
1	Camera
2	Mobile Light
3	Battery Cover
4	FeliCa Logo
5	Speaker
6	Strap Eyelet
7	Infrared Port
8	Microphone
9	Battery Cover Notch

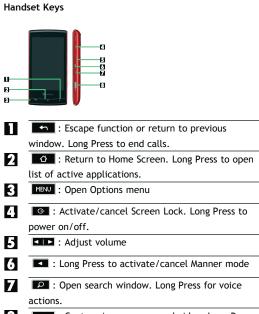


 Capture images or record video. Long Press to activate mobile camera. Long Press in Unlock window to illuminate Mobile Light.




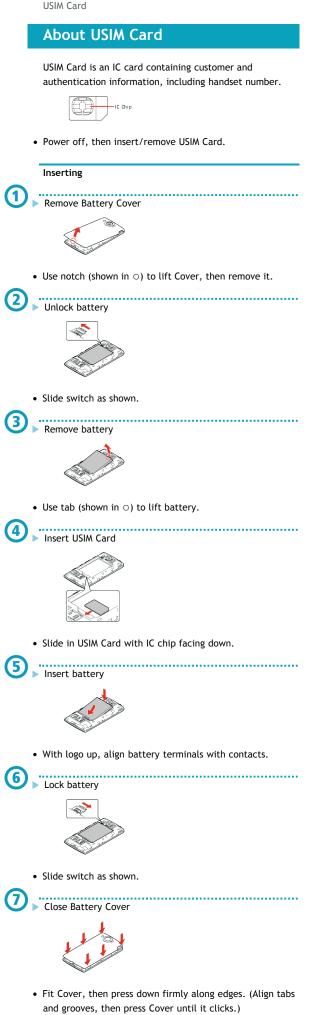

Removing

Close Battery Cover

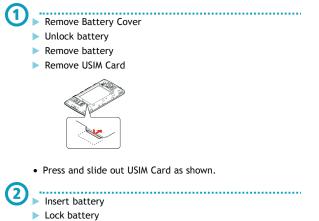


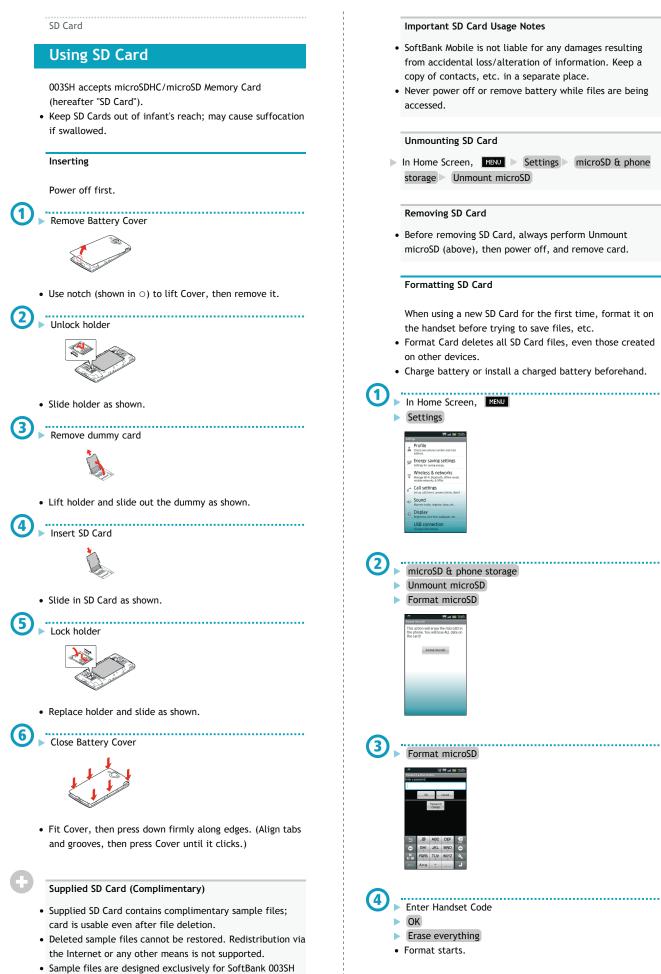

(not for use on other handset models).

• Warranty does not cover supplied SD Card/sample files.

Battery

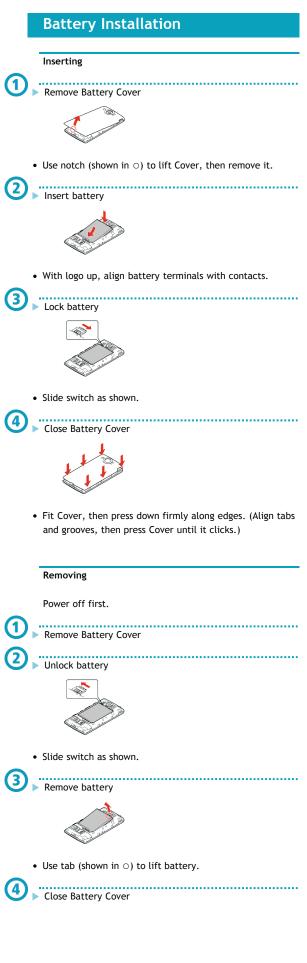

About Battery

- Charge battery at least once every six months; uncharged battery may die or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with dry cotton swabs.

Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are recyclable.
 - To avoid fire or electric shock, do not short-circuit or disassemble battery.
 - To recycle a used lithium-ion battery, take it to any shop displaying the symbol below.



9

When Finished


Disconnect handset from Micro USB Data Cable and close Port Cover.

Important USB Charge Usage Notes

- Handset may power on automatically when connected to a PC via Micro USB Data Cable; avoid connection aboard aircraft or in hospitals, etc. where handset use is prohibited.
- Battery may not charge or charge slowly depending on PC status/environment.

In-Car Charger

In-Car Charger may be purchased separately.

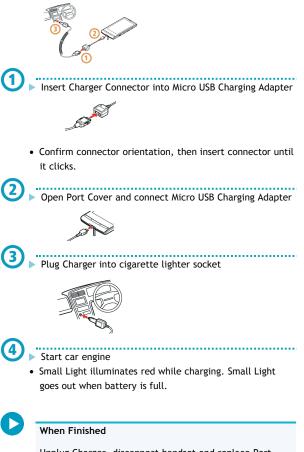

Unplug Charger, disconnect handset and replace Port Cover.

Charging Battery

Battery must be inserted in handset to charge it.

- Do not pull, bend or twist the cord.
- Battery is unchargeable when Small Light flashes; may be defective or simply at the end of its life; replace it.
- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

AC Charger

Charging

Use Micro USB Charging Adapter together with AC Charger ZTDAA1 (sold separately).

Insert Charger Connector into Micro USB Charging Adapter
 Confirm connector orientation, then insert connector until it clicks.
 Open Port Cover and connect Micro USB Charging Adapter

Extend blades and plug AC Charger

*

• Small Light illuminates red while charging. Small Light goes out when battery is full.

When Finished

3

Unplug AC Charger and fold back blades. Disconnect handset and close Port Cover.

USB Charge

Connect handset to a PC via Micro USB Data Cable.

- Power on handset and PC first.
- Battery may not charge if SD Card is not inserted.




Open Port Cover and connect Micro USB Data Cable



Connect Micro USB Data Cable to PC USB port



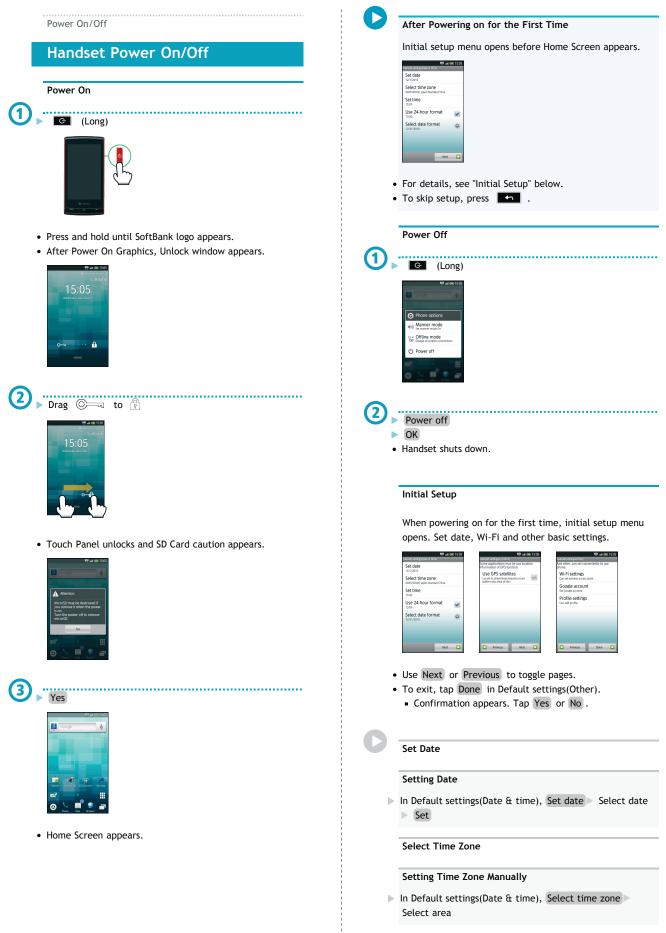

Set Time

Setting Time Manually

In Default settings(Date & time), Set time > Select time
 Set

Use 24-hour Format

Changing Time Format

- In Default settings(Date & time), Use 24-hour format
- Select Use 24-hour format to toggle 24 hour (\checkmark) and 12 hour (\checkmark).

Select Date Format

Changing Date Format

In Default settings(Date & time), Select date format Select option

Use GPS Satellites

Enabling/Disabling GPS Positioning

- ▶ In Default settings(Location), Use GPS satellites ▶ Agree
- Select Use GPS satellites to enable (✓) or disable (
).

Wi-Fi Settings

Enabling/Disabling Wi-Fi

- In Default settings(Other), Wi-Fi settings Wi-Fi
- Select Wi-Fi to toggle on (🗹)/off (🗹).

Enabling/Disabling Available Network Notifications

- In Default settings(Other), Wi-Fi settings Network notification
- Select Network notification to toggle on ()/off (
).
- Available when Wi-Fi is on (🗹).

Registering Access Points

- In Default settings(Other), Wi-Fi settings Easy Wi-Fi registration AOSS method or WPS method Follow onscreen instructions
- Available when Wi-Fi is on (🗹).

Connecting to a Listed Access Point

- In Default settings(Other), Wi-Fi settings Select access point Follow onscreen instructions
- Available when Wi-Fi is on (🗹).

Adding Access Points Manually

- In Default settings(Other), Wi-Fi settings
 Add Wi-Fi network
 Complete setup
 Save
- Available when Wi-Fi is on (🖌).

Enabling Auto-login for Public WLAN Services

- In Default settings(Other), Wi-Fi settings Auto login settings Select service Auto-login ON Enter ID Enter password OK OK
- Available when Wi-Fi is on (🗹).
- May omit last step (OK) for some services.
- Tap Service area to select areas as needed.

Google Accounts

Creating a New Google Account

- In Default settings(Other), Google account
 Next
 Create
 Enter name and username
 Next
 Enter password
 Next
 Choose question and enter answer
 Enter secondary mail address
 Create
 Follow onscreen instructions
- Available when USIM Card is installed.

Signing in to a Google Account

In Default settings(Other), Google account
 Next
 Sign in
 Enter username and password
 Sign in
 Finish setup

Profile Settings

Saving Profile

- ► In Default settings(Other), Profile settings ► Enter information ■ ■ Save ► Yes
- Tap 👴 to show/add entry field or 😵 to hide/delete.

Touch Panel

Using Touch Panel

Touch Display to select menu items, open functions, scroll pages, etc.

Тар

Tap item or key to open or execute corresponding function/operation.



• In this guide, "select" means to tap.

Long Touch

Touch item for 1+ seconds (handset vibrates) to move icon, open menu, etc.



 
Slide

Slide finger to scroll menu, etc.



Flick

Flick to toggle sheets, pages, etc.




Drag

Drag item (e.g., Touch Panel unlock slider) to move it.



Spread & Pinch

 Spread or pinch fingers to enlarge or reduce images, etc.





Calibrating Touch Panel

Calibrate Touch Panel to improve response. Hold handset normally during calibration.

In Home Screen, MENU ▷ Settings ▷ About phone ▷ Adjust touch panel ▷ Tap center of each circle **Basic Operations**

Handset Interface

Home Screen & Launcher

Perform most operations from Home Screen or Launcher.



Selection & Execution

Tap item, icon, key, etc. to open or execute corresponding function/operation.



• Press for return to previous window.

Screen Lock

Display goes completely dark and Screen Lock activates after a period of inactivity.

- Screen Lock prevents accidental operation/function activation.
- To cancel Screen Lock, press 🚺 or 💽 , then drag ⊙—¬¬ to 🕆 .



Options Menu Operations



Press MENU to open Options menu.



• Alternatively, in Home Screen, Long Touch open area for Home settings.

Handset Customization

 
In Home Screen, press MENU then select Settings to change settings. 👯 atl 📟 Energy saving setting Wireless & networks Call settings


About Checkbox

Checkbox (\checkmark or \checkmark) appears beside some options. Tap to select (🗹) or cancel (📝) option.

Portrait and Landscape Orientation

For some functions/windows, Display orientation changes with handset orientation.



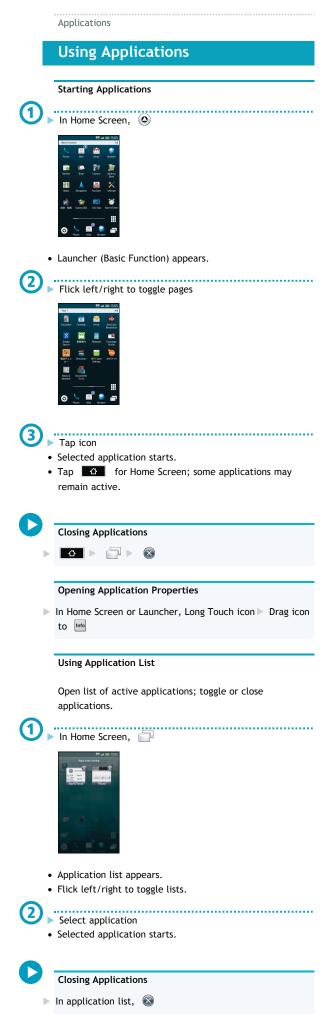

Hiding Application List

🕨 In application list, 🛛 🖸

Major Applications

■Launcher (Basic Function)



Phone	Place calls or open Call History
Mail	Use SoftBank messaging services
Gmail	Use Google webmail service
Browser	Browse the Internet
Market	Download applications (some paid)
Book	Read/download e-Books
Camera	Capture still images
Address Book	Save and manage contacts
Maps	Find locations around the world
Navigation	Get route/estimated travel time
YouTube	Watch/post video clips
Settings	Customize handset settings
音楽・動画	Play media files
Gallery(3D)	View still images and video, convert
	2D images to 3D, etc.
One Seg	Watch/record TV programs
Alarm/Timer	Use Alarm, StopWatch, or Timer

■Launcher (Camera/AV)



Camera (3D photos)	Capture 3D images
Video Camera	Record video
Picture (3D-	Saved images sorted by registered
capable)	face/period scheduled in Calendar
Contents Manager	Manage SD Card files
Barcode Reader	Scan QR/JAN Codes
Business Card	Scan business cards; save names,
Reader	addresses, etc. to Address Book
Information	Scan shop names, phone numbers,
Reader	etc.; save info to Address Book
Text Reader	Scan and paste text in messages or
	Notepad
MusicPlayer	Play SD Card music files
SlideVideo	Create slideshow video
HDMI	Connect handset to an HDTV
Household	Scan receipts to enter items, fees,
account	prices, etc. automatically
Kanji/Eng.	Scan kanji or English words and look
Grabber	up meaning, etc.

Launcher (Communication)



Viewn	View 40 media resources (newspapers,
	magazines & TV news)
mora touch	Sample/purchase music
ビデオストア	View/download HQ video files
	(animation, TV shows, films, etc.)
S-1 BATTLE	Watch comedy tournament archives
選べる動画	Watch a variety of select content
Twitter	Tweet or read others' tweets
mixi for SH	Post text/images & get status updates
Ustream	Stream/watch 2D/3D live feeds

■Launcher (Tool 1)



Calculator	Do basic arithmetic, etc.
Calendar	Use calendar/manage schedule
Email	Exchange PC mail account messages
Send and Receive	Transfer files between handset and
by Infrared	compatible devices via infrared
Google Search	Search handset and the Internet
	Find routes with travel costs,
	schedules, etc.
Notepad	Jot down memos, etc.
Exchange Profile	Exchange phone numbers, mail
	addresses, etc. with compatible
	devices
電波チェッカー	Check signal conditions/report results
Dictionary	Use preloaded/online dictionaries
Wi-Fi Spot	Connect to SoftBank Wi-Fi Spot
Settings	automatically
おサイフケータイ	Use e-money and e-coupons
News and Weather	View news and weather forecast for
	current/specified area
Documents To Go	Open documents created on a PC, etc.

■Launcher (Tool 2)



3D Osusume	Access 3D functions and features
Kisekae touch	Customize handset interface
Flamingo mini	Sample wallpaper image application
One Seg menu	Access TV functions easily
Voice Recorder	Record voice memos/sounds
Compass	Get directions from current position
Pedometer	Counts steps, calories burned, etc.
Voice Search	Speak Internet search terms
Talk	Exchange real-time text messages
Places	Find restaurants, gas stations, etc.
Latitude	Share current location information

■Launcher (Game)



パワプロ3D	3D baseball game
バイオハザード:	Mobile only 3D survival horror game
ディジェネレー	
ション	
ロックマン	3D remake of long-selling action game
SILPHEED	Space-based 3D shooter game
Alternative	
魔界村騎士伝 I	3D horror action game
ラグナロク	Online fantasy, virtual world RPG
Mobile Story	
	3D horror adventure game
FilMeee	Twitter client; tweet via avatar, etc.

Obtaining Applications

Go to a (Market) via Home Screen/Launcher.
Alternatively, go to GALAPAGOS SQUARE via Bookmarks.


Manner Mode

Mobile Manners

Mute most handset function sounds.

• Shutter click, video recording tones, etc. still sound even in Manner mode.

Activating Manner Mode

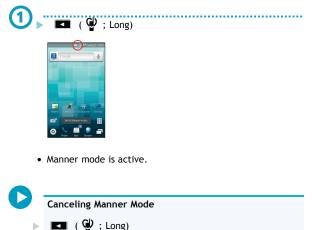

💶 (🔮 ; Long)

Security Codes

Code Types

Some functions/services require these codes for use:	
Handset Code	User settable: Use/change some
	handset functions/settings
Center Access 4-digit code in contract: Change	
Code	services; use Optional Services via
	landlines; or set call restrictions
Lock No.	9999 by default: Use Security Lock
	functions



Write Down Security Codes

Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

• If you forget Security Codes, contact us for recovery. For more information, see SoftBank Mobile Website.

.....

Saving Handset Code

- In Home Screen, MENU
 - Settings
 - Location & security

 - Set passcode






2 Enter Handset Code

- ► OK
- Re-enter Handset Code
- ► OK
- ► OK

Screen Lock

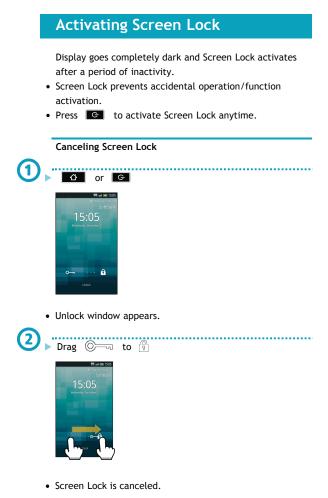


Google Account

Using Google Accounts

Sign in to a Google account to use Google services. • Available when USIM Card is installed.

• Some applications may be limited or disabled without a Google account.

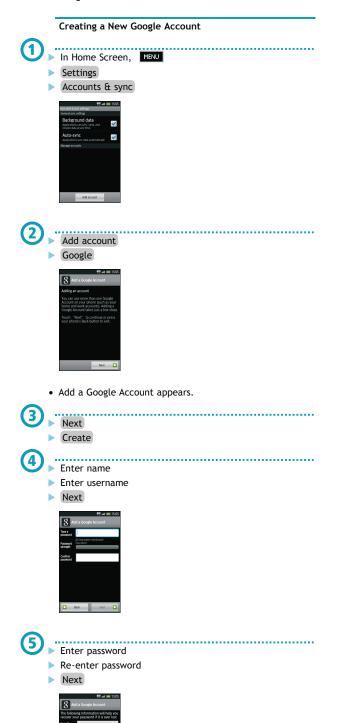



Select security question

- Enter answer
- Enter secondary mail address
- Create
- Follow onscreen instructions.

Signing in to a Google Account

For applications requiring a Google account, window below appears; sign in to use the application.





In Add a Google Account, Next Sign in





Enter username

- Enter password
- Sign in
- Finish setup

Market

Downloading Applications

Download various applications from Android Market.

- Sign in to a Google account beforehand.
- Application operations are subject to change due to automatic updates.
- SoftBank Mobile is not liable for any damages resulting from use of applications obtained from Android Market.

Installing Free Applications

<u>.</u> In Launcher (Basic Function), 🚔 (Market)

- Market opens.
- If confirmation appears, follow onscreen instructions.
-
- Select free application Install (FREE)
 - OK

1

2)

• Download (installation) starts.

Purchasing Paid Applications

• SoftBank Mobile is not liable for any issues that arise from purchase of applications, including refunds.

~ In Launcher (Basic Function), i (Market)

- Market opens.
- If confirmation appears, follow onscreen instructions.

..... Select paid application

- Buy (price)
- ► OK
- Download (installation) starts.

Purchased Applications

- No additional payment required for re-downloads of uninstalled purchased applications.
- Install purchased applications on other Android devices free of charge by using the same Google account used for the purchase.

Refund Requests

Request refunds within designated period. Returned applications are deleted from handset; no payment is required. (One refund request per application.)

▶ In Market, MENU ▶ My apps > Select application> Refund Select answer OK

Updating Applications

- • Market opens.

 - If confirmation appears, follow onscreen instructions.

.....

- MENU
- My apps
- Select application
- Update
- OK
- ► OK
- Download (installation) starts.



Enabling Automatic Updates

► In Market, MENU ► My apps ► Select application Allow automatic updating (🗹)



Text Entry (Basics) Key Assignments D **Text Entry** Ð **Keyboard Basics** Type characters Use a keyboard to enter characters as follows: 12-Key: 2 Reverse toggle character options; undo last action Multiple characters assigned to each key. QWERTY: Single when Undo appears letters assigned to each key. • Tap a text entry field for keyboard. 3 Move cursor left • Default input method: iWnn IME - SH edition. 4 Enter pictograms, symbols or emoticons; convert hiragana to katakana/alphanumerics 5 Switch entry modes 6 Delete characters Move cursor right 7 8 Open text entry options; convert hiragana or insert spaces 12-Key Keyboard 9 Insert line breaks; enter current characters 冠 🤁 all 🕮 Switching Entry Modes QWERTYUI Tap to toggle Hiragana-Kanji, Half-width alphabet DFGHJKL and Half-width numeric modes. Follow these steps to use ★ Z X C V B N M ∰ other entry modes: QWERTY Keyboard Hold handset horizontally for landscape keyboard. In a text entry window, Long Touch ΘI 12-Key Keyboard Q W E R T Y U I O Z X C V B N N 2 QWERTY Keyboard Select mode Switching Keyboard Types ▶ In any keyboard, 💉 ▶ Change keyboard(Portrait) or Change keyboard(Landscape) **Changing Input Method** Select iWnn IME - SH edition or Android keyboard. Android • Keyboard interface changes accordingly. keyboard is QWERTY (no Japanese input mode). Long Touch text entry window Input method Android ► keyboard or iWnn IME- SH edition

Entry Mode Indicators

Current entry mode indicator appears:

ात्र Cree	ate SI Ma		1	# 15:05 [7:30:48
2	Se line)	A.	N
ŋ	.@	ABC	DEF	×
0	GHI	JKL	MNO	0
10 12-10	PQRS	TUV	WXYZ	4
	A+a	-		٦.

Hira	gana-Kanji	i		
Full	width Kata	akana		
Half	width Kat	akana		
Full	width alph	nabet		
Half	width alpl	habet		
Full	width num	neric	 	
Half	width nun	neric	 	
Char	acter code	2		

Using Voice Input

► In a text entry window, Voice Input Speak into Microphone

• If confirmation appears, follow onscreen instructions.

Text Entry (Entering)

Entering Characters

Toggle Input & Flick Input

In 12-Key entry, tap keys to toggle characters (Toggle Input), or flick key for target character (Flick Input).

Follow these steps to enter P - 7:
 Toggle Input



Tap key to toggle P, Q, R, S and 7; tap v to enter.
Tap v to reverse toggle character options.

	0150 005500	character options.
Р	Tap PORS	once
Q	Tap PQRS	twice
R	Tap PQRS	three times
S	Tap Pors	four times
7	Tap PORS	five times


■Flick Input



• Long Touch a key for guidance; flick toward target character. Tap or to enter.

Р	Tap PORS once
Q	Touch and flick left
R	Touch and flick up
S	Touch and flick right
7	Touch and flick down

Hiragana

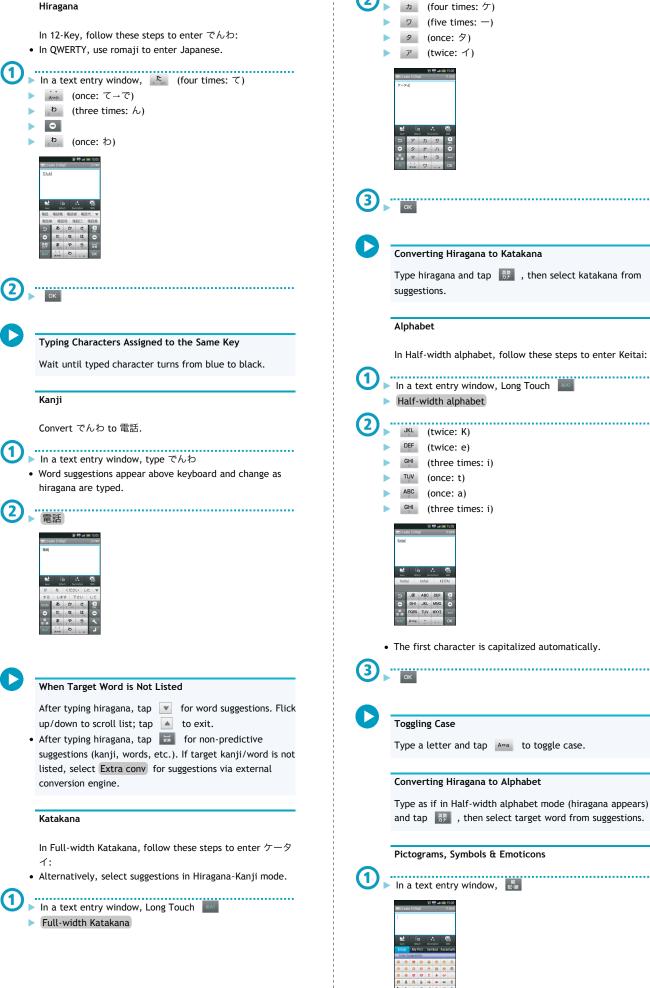

.....

SoftBank 003SH


.....

发行40 日曜の結婚式にカメラと三脚を

selecting text.

- 波 맨 at = 1

日曜の結婚式にカメ

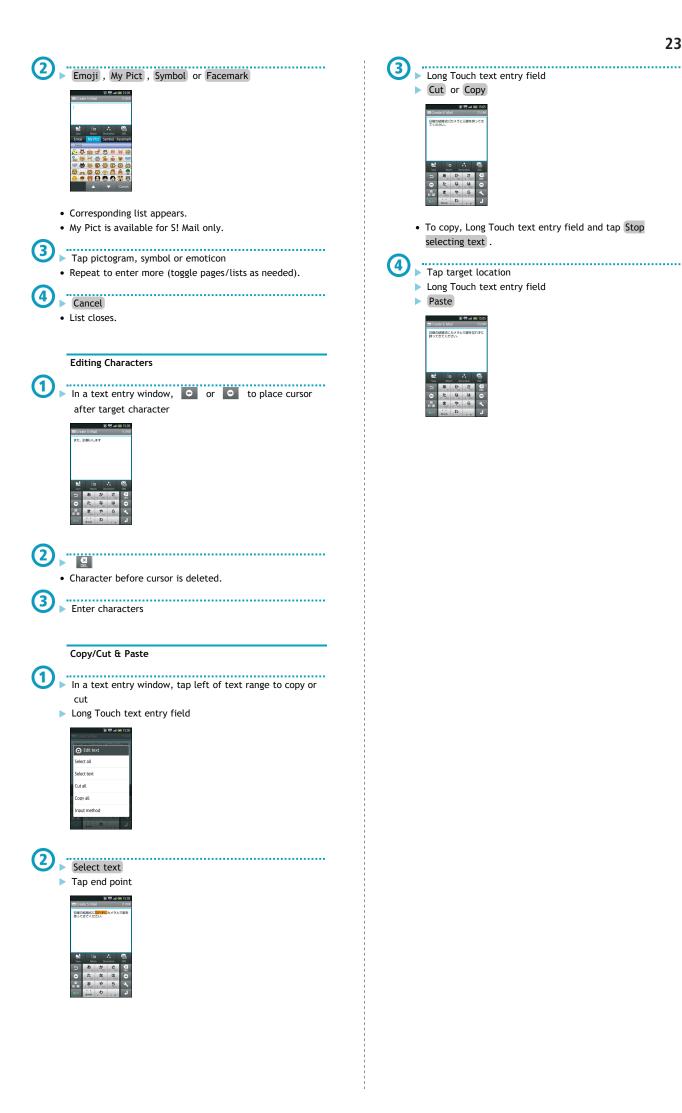

Text Entry (User Dictionary)

Saving Frequently Used Words

Saved words appear among suggestions.

Saving Words

In Home Screen, MENU

.....

- Settings
- Language & keyboard
- iWnn IME SH edition
- Japanese user dictionary



• Saved word list appears.











• Entry is saved.



Editing Entries

In saved word list, select word ► MENU ► Edit ► Edit reading/word ► Save

Deleting Entries

► In saved word list, select word ► MENU ► Delete ► OK

Home Screen (Basics)


Home Screen Basics

Home Screen appears at power on; most operations start here.

- Home Screen includes five sheets by default.
- From anywhere, press for Home Screen.

Window Description



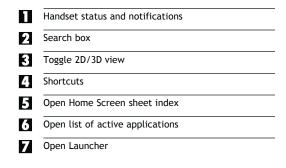

Toggling Home Screen Sheets

Flick left/right to toggle Home Screen sheets.



• Add shortcuts, widgets or folders to each sheet.

Switching to 3D View

- ▶ In Home Screen, 🔐
- Tap 💁 to return to 2D view.

Using Home Screen Sheet Index

Use Home Screen sheet index to switch, add or delete sheets.

.....





• Home Screen sheet index appears.



2

Select sheet

Adding Sheets

In Home Screen sheet index, Add

Deleting Sheets

Closing Home Screen Sheet Index

▶ In Home Screen sheet index,

Home Screen (Customizing)



26 Add shortcut	
19 at a 15.05	
Select shortcut	
Applications	
Bookmark	
Je Contact	
🚂 Direct Dial	
Jirect Message	
Directions & Navigation	
Phone Mad Accessor	
3	
3 Applications	

- Application list appears.
- Flick left/right to toggle sheets.
- ► Select application
 - Corresponding icon appears.

Moving Shortcuts

In Home Screen, Long Touch shortcut Drag it to target location

Removing Shortcuts

 In Home Screen, Long Touch shortcut Drag it to (trash)

Adding Widgets

- In Home Screen, Long Touch open areaHome settings opens.
- 2 Add Widgets

⊖ Cho	iose widget
<u>)</u>	ddress Book
<u> </u>	nalog clock (large)
$\leq \prime$	nalog clock (small)
30 0	alendar
0	ompass
	ALAPAGOS QUARE

3

Select widget

• Corresponding icon appears.

Moving Widgets

In Home Screen, Long Touch widget Drag it to target location

Deleting Widgets

In Home Screen, Long Touch widget Drag it to m (trash)

Adding Folders

- In Home Screen, Long Touch open area
- Home settings opens.

Add Folders

- New folder
- Corresponding icon appears.



.....

Sorting Shortcuts into Folders

In Home Screen, Long Touch shortcut Drag it to target folder

Moving Folders

▶ In Home Screen, Long Touch folder ▶ Drag it to target location

Deleting Folders

In Home Screen, Long Touch folder Drag it to (trash) Launcher (Basics)

Launcher Basics

Use Launcher to access applications.

• Launcher includes six pages by default; add pages as needed.


Opening Launcher

▶ In Home Screen, ()

1



• Launcher (Basic Function) appears.

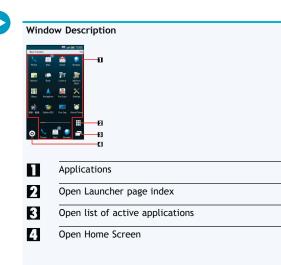

Switching Launcher Pages

Flick left/right



Using Launcher Page Index

Use Launcher page index to switch, add or delete pages.



1

• Launcher page index appears.



P Detect



Adding Pages

In Launcher page index, Add

Deleting Pages

In Launcher page index, Long Touch page Drag it to (trash)

.....

Closing Launcher Page Index

▶ In Launcher page index, 🚺





Drag icon to Add to HOME (do not release yet)
 Drag icon to target location in Home Screen (release)

(1)

Using Notifications

Open notifications (missed call, etc.), check handset status or change various settings.

Opening Notifications



- Notifications opens.
- Alternatively, tap top of Launcher or other windows.

Windo	ow Description
2010-12-1(Wed)	樽 at 6m 1565
SoftBank	15:05
Notifications	Clear
2 0903922000 Mosed call.	15.05
Status	
Battery 100%	Reception level treet 4
3G data	-12
· · · ·	
Manner mode	Pluming applications
	Notification details; tap Clear to delete all
	notifications
5	Handset status
2	Hanuset status
_	
3	Open list of active applications
7	Activate/cancel VeilView
4	ACTIVATE/ CATCEL VEILVIEW
5	Open Manner mode options
	open manner mode openons
6	Close Notifications

Indicators

Indicators

Indicators (handset status, new message notification, etc.) appear at the top of Display.

Google	Ť
	11 11 11 11 11 11 11 11 11 11 11 11 11


Handset Status

-00	Signal strength
1000	
ì	Out-of-range
) OTT	Offline mode active
600	International roaming in progress
3G Ì₩	Data transmission (3G) in progress
G	Data transmission (GSM) in progress
L)	Alarm set
P	Standard manner mode active
a	Drive manner mode active
]83	Silent manner mode active
ê	Connected to Wi-Fi network
8	Bluetooth® transmission ready
₿•	Bluetooth® transmission in progress
• •	Answer phone active (be : message recorded)

Notifications

×	Missed calls
••	Answer phone message recorded
P	New message (SMS/S! Mail)
入 @	New message (PC Mail)
\bowtie	New message (Gmail)
9	Alarm time passed

Phone (Basics)

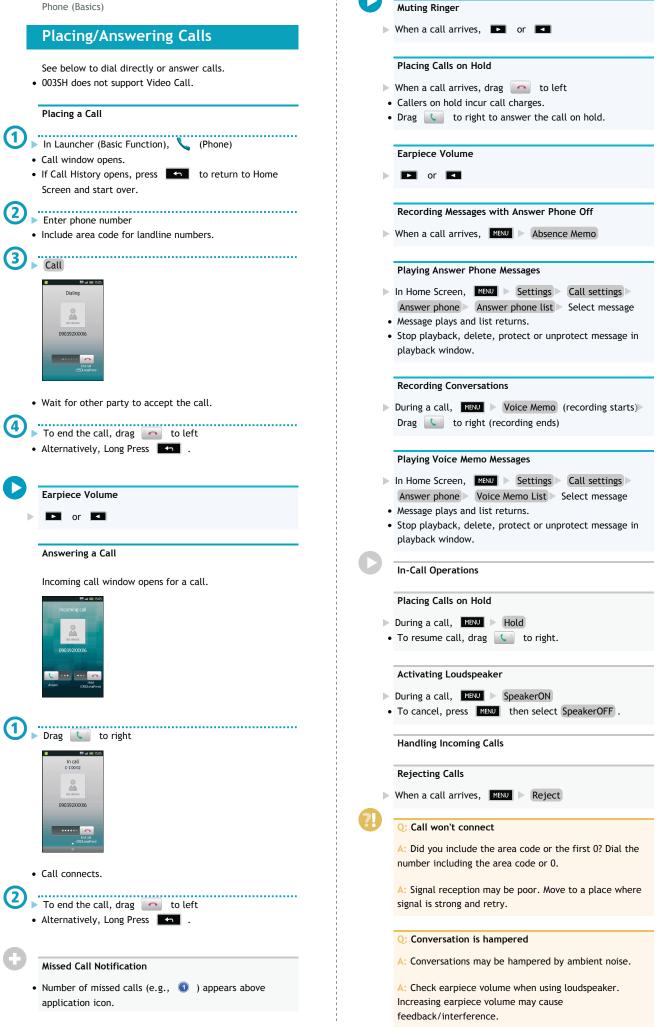


Q: Clicking noise is heard during call


A: Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.

Emergency Location Report

- Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets.
 - Registration/transmission fees do not apply.
 - Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
 - Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with 184). However, the corresponding agency may obtain your Location Information in a life threatening situation.
 - Location Information is not reported during international roaming.
- Emergency calls are restricted when Offline mode and USIM card lock are active. Long Press G and cancel Offline mode, power off, then restart handset.

Phone (Advanced)

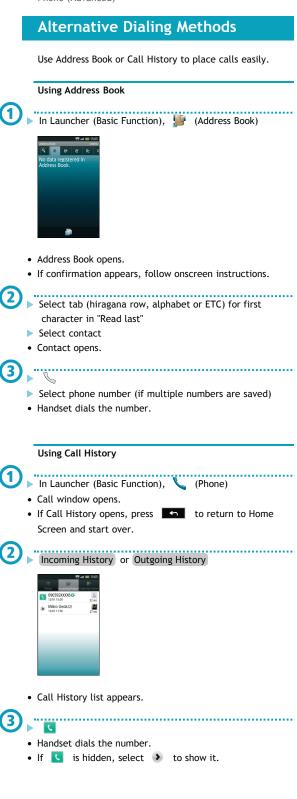

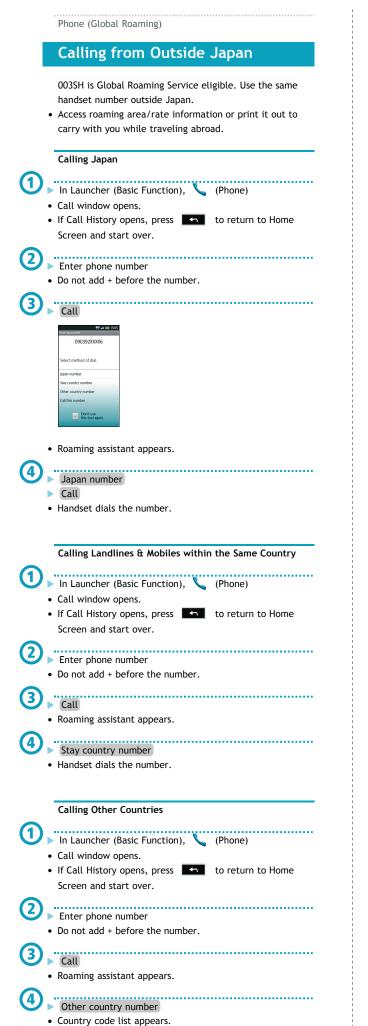


Select country • Handset dials the number. Calling SoftBank Handsets Outside Japan Always select 日本(JPN). **Changing Country Codes** In Home Screen, MENU > Settings > Call settings > Int'l call settings Country code Select country Change from all list > Select country > Register • Select Change with direct to enter country name and code directly. **Deleting Country Codes** ► In Home Screen, MENU ► Settings ► Call settings ► Int'l call settings > Country code > Select country > Delete from list Enabling/Disabling Abroad Assistant In Home Screen, MENU > Settings > Call settings > Int'l call settings Abroad assistant Select Abroad assistant to toggle Enable (Disable (🗹).

5

►

►

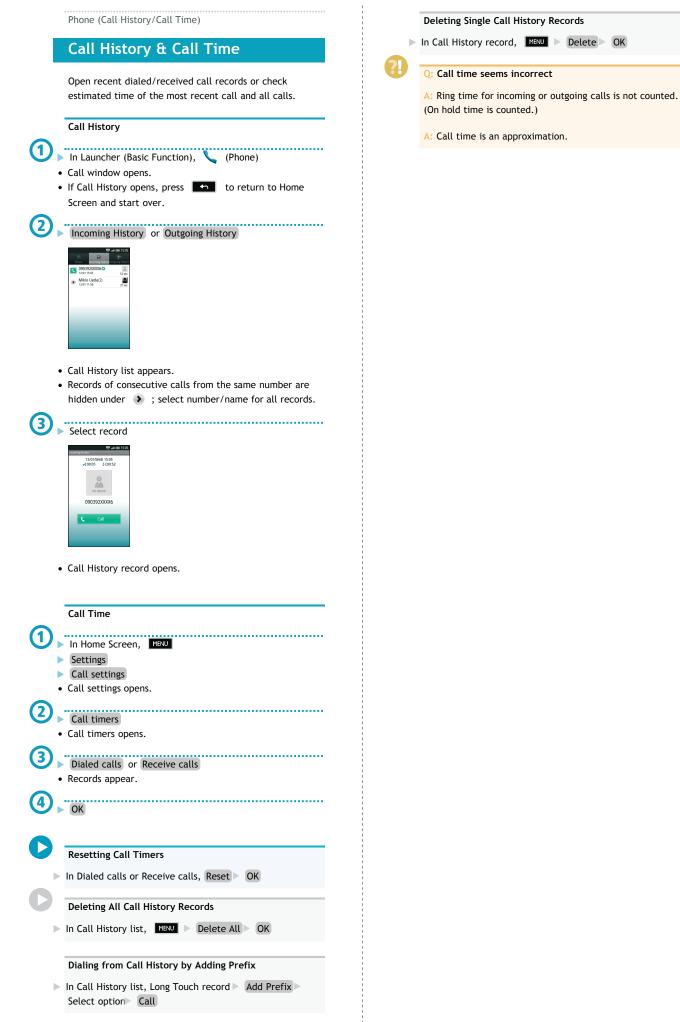


Phone (Call Barring)

Call Barring

Restrict outgoing calls or reject incoming calls.

Restrict Destinations

Allow calls to numbers saved in Address Book or Call Permitted List.

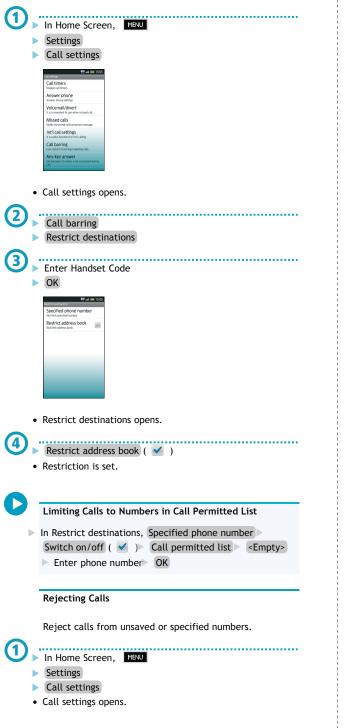

Call barring Reject call cified nu Not registered number lumber not sent -Payphone Unavailable • Reject call opens. (3) Not registered numbers (🗹) • Rejection is set. **Reject Calls from Specified Numbers** ▶ In Reject call, Specified numbers > Switch on/off (🗹) Reject numbers list < Empty> Enter phone number> OK Reject Calls without Caller ID 🕨 In Reject call, Number not sent (🗹) Reject Calls from Payphones 🕨 In Reject call, Payphone (🖌) Reject Calls with Undisplayable Caller ID 🕨 In Reject call, Unavailable (🗹)

Phone (Optional Services)

Optional Services

Use the following optional call services.

Available Services

Call Forwarding	Automatically divert all or all	
	unanswered incoming calls to another	
	preset phone number	
Voicemail	Redirect all or unanswered calls to	
	Voicemail Center; access messages	
	from handset/touch tone phones	
Call Waiting	Answer incoming calls or open another	
	line during a call	
Group Calling	Switch between open lines or connect	
	multiple lines at once for	
	teleconferencing	
Caller ID	Show or hide your own number when	
	placing calls	
Call Barring	Restrict incoming/outgoing calls	
	depending on conditions	

• A separate contract may be required for some services.

Initiating Call Forwarding ▶ In Home Screen, MENU Settings Call settings · Call settings opens. Voicemail/divert Voicemail/divert menu opens. Settings/stop Divert menu opens. Always or No answer · Forward to window opens. Enter phone number Numbers starting with 1, 00, 0120 or 0990 cannot be saved. Select wait time field Select ring time > OK • Call Forwarding is active. • For Always , omit ring time selection step. Canceling Call Forwarding In Divert menu, Stop call forward Yes Initiating Voicemail ▶ In Home Screen, MENU Settings Call settings Call settings opens. Voicemail/divert

• Voicemail/divert menu opens.

Settings/stop • Divert menu opens. Always or No answer · Forward to window opens. Voicemail Select wait time field Select ring time > OK • Voicemail is active. • For Always , omit ring time selection step. **Playing Voicemail Messages** ▶ In Voicemail/divert menu, Play voicemail ▶ Follow voice guidance Canceling Voicemail ▶ In Divert menu, Stop call forward ▶ Yes **Missed Call Notification** • Activate this function for records of calls missed when handset is off/out-of-range. Activate Voicemail then follow these steps: ▶ In Call settings, Missed calls ▶ Settings ▶ Call ▶ Follow voice guidance **Missed Calls** Setting Handset Response to Missed Calls ▶ In Call settings, Missed calls ▶ Sounds & alerts > Set • Set Missed calls sound , Vibration pattern , Incoming calls lamp and Ring duration . Call Waiting (Contract Required) Activating Call Waiting In Call settings, Other service settings Call waiting (🧹) Placing Line 1 on Hold to Answer Line 2 ▶ When a tone sounds during a call, drag **[u**] to right • Drag 🚺 to right to switch between lines. Ending the Call on Hold ▶ While switching between lines, MENU ▶ More ▶ End held call Group Calling (Contract Required) Talking on Multiple Lines Simultaneously call connects, MENU More Merge calls Placing All Lines on Hold ▶ During Group Calling, MENU ▶ Hold All

Call Barring

Setting Outgoing Call Restrictions

- In Call settings, Call barring Bar outgoing Select option Enter Center Access Code OK
- "All outgoing calls" restricts all non-emergency calls; "Bar int'l call" restricts all international calls; "Local & home only" restricts all international calls except to Japan.
- This also restricts outgoing SMS messages.

Canceling All Outgoing Call Restrictions

 In Call settings, Call barring
 Bar outgoing
 Stop all outgoing calls
 Enter Center Access Code
 OK

Setting Incoming Call Restrictions

- In Call settings, Call barring
 Bar incoming calls
 Select option
 Enter Center Access Code
 OK
- "Restrict all incoming calls" rejects all calls, and "Bar if abroad" rejects calls when outside Japan.
- This also restricts incoming SMS messages.

Canceling All Incoming Call Restrictions

In Call settings, Call barring Bar incoming calls Stop All incoming calls Enter Center Access Code OK

Caller ID

Hiding Caller ID

In Call settings, Other service settings Notify caller ID Hide number


Q: Calls are not restricted

A: When Call Forwarding or Voicemail is active, activating "All outgoing calls" or "Restrict all incoming calls" may not restrict calls.

ddress Book	(Basics)
-------------	----------

Using Address Book

Save phone numbers, mail addresses, etc.

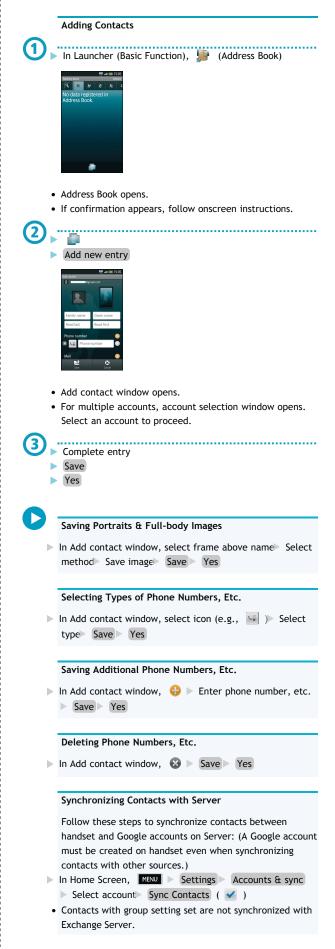

Other Entry Items

• Select Other in Add contact window to save birthday, postal address or set ringtone, etc.

Opening Contacts

In Launcher (Basic Function),
 Address Book opens.

 Select tab (hiragana row, alphabet or ETC) for first character in "Read last"

Select contact



• Contact opens.

Dialing via Address Book

In a contact, select Select phone number (if multiple numbers are saved)

Messaging via Address Book

- ▶ In a contact, select 🔀 ▶ Compose and send message
- If selection window (for mail address, application, etc.) opens, follow onscreen prompts.

TapFlow UI Menu

- Select in Address Book to open TapFlow UI menu; menu icon arrangement and types/sizes change with frequency of function/setting use.
 - Select All Menu for full menu.

Editing Contacts

In a contact, 📄 ト Edit > Edit > Save > Yes

Deleting Contacts

In Address Book, ☐ > All Menu > Delete > Select and delete > Select contact (✓)> Delete > Yes

Deleting All Contacts

In Address Book, □ > All Menu > Delete > Delete all
 Yes

Deleting Single Contacts

▶ In a contact, 📄 ▶ Delete ▶ Yes

Resetting TapFlow UI Menu

In Address Book, All Menu
 Reset usage history
 Yes



Back Up Important Information


• If handset is left with no battery or an exhausted one, contacts may be altered/lost; handset damage may also affect information recovery. SoftBank is not liable for any resulting damages. Keep separate copies of contacts, etc.

Backup/Restore Address Book

Back up handset Address Book to SD Card, and restore to handset or import on other handsets as needed.

- Handset may not support data exchange with some devices; some Address Book settings may be lost.
- Backup/Restore stops if battery runs low. Be sure battery is adequately charged beforehand.
- MicroSD backup is selectable when there is free memory of 11 MB or more on handset.

Backing up Address Book (Handset to SD Card)

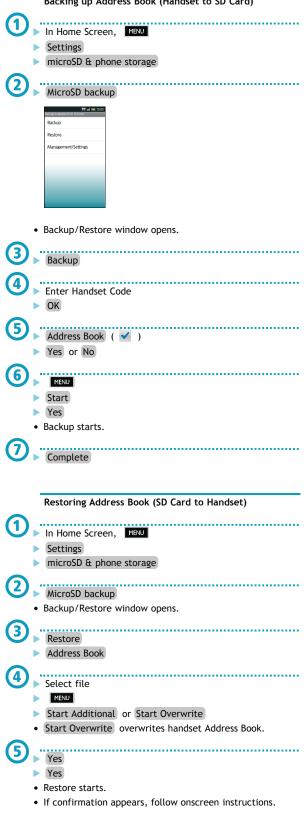

6 Complete

SoftBank Mail (Changing Address) SoftBank Mail (Composing) **Using S! Mail** Customizing Handset Address Exchange messages with e-mail compatible handsets, PCs, Change alphanumerics before @ of the default mail etc.; attach images, use pictograms, etc. address. Transmit messages of up to 2 MB. Changing Address Sending S! Mail In Launcher (Basic Function), (Mail) Follow these steps to send S! Mail to a number/address • Message list (Inbox) appears. saved in Address Book: Settings 1 In Launcher (Basic Function), 🚊 (Mail) Mail/address settings • Handset connects to the Internet and My SoftBank (Japanese) opens. Follow onscreen instructions. My SoftBank (Japanese) • Set up spam blocking filters, and more. & 🖿 전 • Message list (Inbox) appears. Create 2 • S! Mail Composition window opens. Address Book Select contact Select number or mail address Select subject field Enter subject 6 Select message text field • Text entry window opens. Enter message Send Send Options • In Mail Composition window, press MENU and select Send options ; set Priority, Reply address and Delivery report as needed. Attaching Files ▶ In Mail Composition window, Attach > Select source/method and attach file Complete message Send • Large images may be automatically reduced to approximately 400 - 500 KB by default. (Change resize setting via "Send image size" in "Send/create settings.") • If recipient cannot receive large messages (up to 2 MB), message may be truncated or attachments may be lost.

Sending Graphic Mail

In text entry window, Decoration Set Complete message Send

Using Templates

In Mail Composition window, MENU
 Retrieve
 template
 Select template
 Select
 Complete
 message
 Send

Saving Signature

In Inbox, Settings SI mail settings Send/create settings Signature ON Create signature Save

Creating Mail Groups

Create mail groups to send messages to multiple recipients at one time.

- In Inbox, Settings Mail group settings [Add new]
 Enter group name OK Select group [Add new]
 Save recipients
- To enter saved recipients, select Mail Group in Quote address menu.

Converting to SMS

- In Mail Composition window, SMS Complete message
 Send
- If confirmation appears, select Yes .

Saving Messages to Unsent

After completing message, Save

Selecting Attachment Image Size Limit

In Inbox, Settings SI mail settings Send/create
 settings Send image size Select option

Restricting Outgoing Messages

In Inbox, Settings General settings Send/create
 settings Set restrict destination Enter Handset Code
 OK Set restrict destination [Add new] Save
 recipients

SoftBank Mail (Receiving)

Incoming Messages

- By default, complete message including attachments is retrieved; transmission fees apply depending on subscribed price plan.
- Automatic message retrieval outside Japan may incur high charges.

Opening Received Messages

(1)	1
Ċ	

When message arrives, ringtone sounds and 🗟 appears at Display top

.....

.....

Tap Display top		

2010-12-1(Wed) SoftBank		ų.	15:	15:05 05
				Clear
Mikio Ueda How's it going?				15:05
Battery 100%	1	nti Re	ceptic ei 4	in level
3G data Availing				
Manner mode Off	Vehi	w		ning cations

Notifications opens.

Select message

.....

		199 a	•	151
Inbox	· • •			٠
	受信メール	-		۲
	How's it going? Mkio Ueda		12/1	15:
ingi	Invite to the rea Milio Ueda	union	12/1	12
200	Good morning Tetsuya Kimura		12/1	2
R	Will you be free Sora Natsuyama	e?	11/30	18

• Message list (Inbox) appears.

•	Sel	ect	me	ssag	e
	 Q[#] 	al	₩9 at	15:05	
	How's it 2010/12	da<090390 going? /01 15:05:5	9000(1> 5		
	l've just fir Fil be at ti	ished my v he place at a	vork. How a sround 8 p	ibout you? m.	
	2	<u>89</u>	Û	Ê	
		Fonistrá			

(4)

• Message window opens.

Unread Message Notification

• Number of unread messages (e.g., **()**) appears above application icon.

Message Type/Status (Inbox)

	J · · J · · · · · · · · · · · · · · · · · · ·
\searrow	Unread
	Read
SMS	SMS
Ŕ	Replied
Ż	Forwarded
	Attachments
	Protected
	Mail Notice (remaining portion exists)

ress settings My SoftBank	Using SMS
structions.	Exchange short messages with SoftBank handsets.
	Sending SMS
	Follow these steps to send SMS to a number saved in Address Book:
te message Send	In Launcher (Basic Function), 🔛 (Mail)
olete message	Wet Image: Constraint of the second of the
	Message list (Inbox) appears.
	Create
e ettings ibration/Lamp	
	SMS Composition window opens.
ettings eption method ption ditions), condition ions then select	 Address Book Select contact
	Select number
	 Select message text field Text entry window opens.
l ⊳	Enter message
	Send
	Confirming Handset Number
	► In Home Screen, MENU ► Settings ► Profile
	Saving Messages to Unsent
	> After completing message, Save
	Requesting Delivery Confirmation
	 In SMS Composition window, MENU Send options Delivery report On
	Restricting Outgoing Messages
	 In message list, Settings General settings Send/create settings Set restrict destination Enter Handset Code OK Set restrict destination [Add

new] Save recipients

SoftBank Mail (SMS)

Confirming Handset Address

 In message list, Settings Mail/address settings
 Handset connects to the Internet and My SoftBank (Japanese) opens. Follow onscreen instructions.

Switching Inbox Folders

Flick left/right in message list

Replying to Messages

In message window, Reply Complete message Send

Forwarding Messages

In message window, Forward Complete message Send

Retrieving Messages Manually

In message list, Receive new mails

Retrieving Remaining Portions

- ► In message window, Receive
- Tap 📑 to select item to retrieve.

Changing Incoming Message Ringtone

In message list, Settings
 General settings
 Receive/display settings
 Sound/Vibration/Lamp
 Melody
 Select tone/file
 OK

Customizing S! Mail Retrieval

- In message list, Settings
 S! mail settings
 Receive/display settings
 Mail reception method
 Method of Receiving Mail
 Select option
- For Receive all (only for specific conditions), condition setting window opens. Specify conditions then select Done.

Retrieving All Server Mail

In message list, MENU > Server Mail ServerMail_Receive

Changing Character Encoding

In message list, Settings SMS settings Character Encoding Settings Select option SoftBank Mail (Managing)

Handling Messages

Organize messages in folders, or set keys by folder to sort sent/received messages automatically.

	sent/received mess	ages automatically.
	Checking Saved Me	essages
	In Launcher (Basic Message list (Inbox)	Function), 🚍 (Mail) appears.
2,	Folder	
	Ver dia 1555 Ver ver ver ver ver ver ver ver ver ver v	
•	Folder list appears.	
3,	Select folder	
	Will you book Markets Market	
•	Message list appear	s.
4	Select message Message window op	ens.
D	Window Description	n
	international des 1955 Calific Natar International des 1955 International	
	受信メール	Received messages (except those
		sorted into folders)
	フォルダ	Sorted received messages
	All	All received messages
	送信メール	Sent messages
	Unsent Folder	Unsent messages
	Template Folder	Graphic Mail messages and created templates

Switching Folders

Flick left/right in message list

Protecting Messages

 In message list, Long Touch message Protect
 To cancel, Long Touch protected message and select Release .

Deleting Messages	
► In message list, Long Touch message ► Delete ► Yes	
Organizing Messages in Folders	
Follow these store to make a massare to 7 + 11 sta	
Follow these steps to move a message to フォルダ1:	
① ► In Launcher (Basic Function), ⓐ (Mail)	
Message list (Inbox) appears.	(1
 Long Touch message Move 	
3 ► 7 7 μ91	
► OK	
Adding Folders	
In folder list, MENU ► Create new inbox or Create new outbox ► Enter name OK	
Deleting Folders	V
▶ In folder list, Long Touch folder ▶ Delete folder ▶ Yes	
Sorting Messages into Folders Automatically	
Follow these steps to sort incoming messages by sender saved in Address Book:	
U ► In Launcher (Basic Function), (Mail)	
Message list (Inbox) appears.	
 Folder Folder list appears. 	
Long Touch folder	
 Register sorting [Add new] 	
la contrario [Add new]	
tout Canada	
Seeki danum Sabat.	
Sender/Destination	
Select contact	
Select number or mail address	
 Messages received from specified sender are saved into the designated folder. 	
-	
Deleting All Server Mail	
In message list, MENU Server Mail	
ServerMail_Delete Yes	
Checking Memory Status	
In message list, Settings Check mail capacity	

•	Sign in to a Google account beforehand.
	Starting Gmail
1.	In Launcher (Basic Function), 🎽 (Gmail)
	Protect (c) Production Abouth the outh threes - Abouth > Nexto Allow at threes - Abouth I haven't three Abouth
	Inbox opens.
•	If confirmation appears, follow onscreen instructions.
D	Opening Help

► In Inbox, MENU ► More ► Help

Gmail

Using Gmail

Use Google webmail service.

Email

Using PC Mail

Add account information to exchange PC mail messages on handset; add additional accounts as needed.

Mail Account Setup

D 🕨 In Launcher (Tool 1), (Email)



• Account setup menu opens (initial startup).

- Enter mail address and password
- Next

2

- Handset automatically configures most mandatory items.
- Some accounts may not set up automatically; if so, complete setup manually. Contact ISP for details.
- Enter account name or user name
- Done

For Microsoft Exchange

 Manually configure incoming mail server settings: Enter YUsernameDomain in DomainYUsername field for some ISPs. For details, contact your Exchange Server administrator.

Starting Email (PC Mail Application)

🕨 In Launcher (Tool 1), 🔮 (Email)

1



- Inbox opens. (For multiple accounts, Email window opens.)
- Adding Accounts
- ► In Inbox, MENU ► Accounts ► MENU ► Add account ► Complete setting

Email Window Description



Combined Inbox	Received messages for all accounts
Starred	Starred messages for all accounts
Drafts	Incomplete messages for all accounts
Outbox	Unsent messages for all accounts
Accounts	Open Inbox by account

- ✓ indicates account used for message creation.
- Tap
 to open Mailbox of selected account.



Inbox	Received messages
Drafts	Incomplete messages
Outbox	Unsent messages
Sent	Sent messages
Trash	Deleted messages

• Mailbox items vary by account.

Inbox I	Description
Itics	ψφ and down 15.05 Fege work
Mikio Ueda	12/12010
Jun Ito Please confirm it.	
Mikio Ueda Natter of today's r	会 (1271/2010) (1271/2010)
Load mor	e messages
Mark read Ada	d star Delete
	Selected messages are handled simultaneously
Ø	File attached
1	Starred

• Handle other folders (Outbox, etc.) like Inbox.

Opening Mailbox from Inbox

▶ In Inbox, MENU ▶ Folders

Crosting Horozog	Provincer
Creating Messages	Browser
▶ In Launcher (Tool 1), 🔮 (Email)	Browsing the Internet
Import Import	View Internet sites via Browser.
Make beds The second	Using Browser
	In Launcher (Basic Function), 🌍 (Browser)
Inbox opens. (For multiple accounts, Email window opens.)	
MENU	3 994007 € ₹ ₹-9920 2 26-5 3 197072 3 197072
Compose	Norm Second Se
Complete message	
Send	Handset connects to the Internet.
Attachments	
Attachment size limit is 5 MB per file.	 ► In a page, MENU ► History ► Select item
When New Message Arrives	record
	Entering URLs Directly
Ringtone sounds and 🕅 appears at Display top.	▶ In a page, select URL entry field▶ Enter URL▶ →
	Opening Frequently Visited Sites
	► In a page, MENU ► History ► Most visited ► Select record
	Searching Words/Phrases
	 In a page, select URL entry field Enter word/phrase Select link
	Saving Bookmarks
	 In Launcher (Basic Function), () (Browser) Handset connects to the Internet.
	Bookmarks
	Water Water Water Variation Water
	Bookmarks window opens.
	3 Add
	 Check/edit title OK
	• Current site is saved as a bookmark.
	Opening Bookmarks
	▶ In a page, MENU ▶ Bookmarks ▶ Select bookmark


(1)

(2)

3

Opening Additional Windows
● In Launcher (Basic Function), (Growser)
Handset connects to the Internet.
New window
 Current page opens in another window.
Switching Windows In a page, MENU ▶ Windows ▶ Select window
Closing Windows
▶ In a page, MENU ▶ Windows ▶ Select ×
Additional Settings
Follow these steps to adjust browser settings: ▶ In a page, Menu > More > Settings > Set

Camera (Photo Camera Basics)

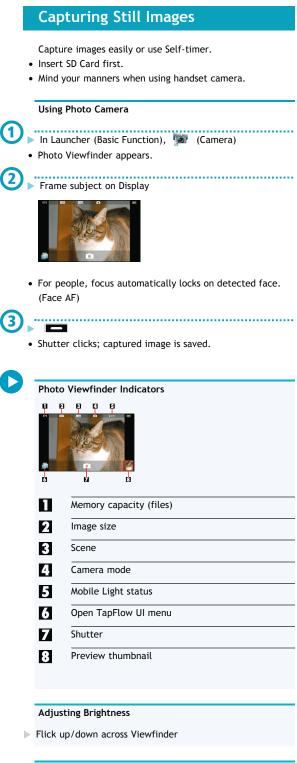

Adjusting Zoom


Flick left/right across Viewfinder

Selecting Mobile Light Option

- ▶ In Photo Viewfinder, 📄 ▶ Mobile light ▶ Select option
- Do not shine Mobile Light in eyes; may damage eyesight.

Locking Focus

- In Photo Viewfinder, tap focus lock target
- Camera continuously focuses on moving subjects.
- To release shutter, tap the subject again.

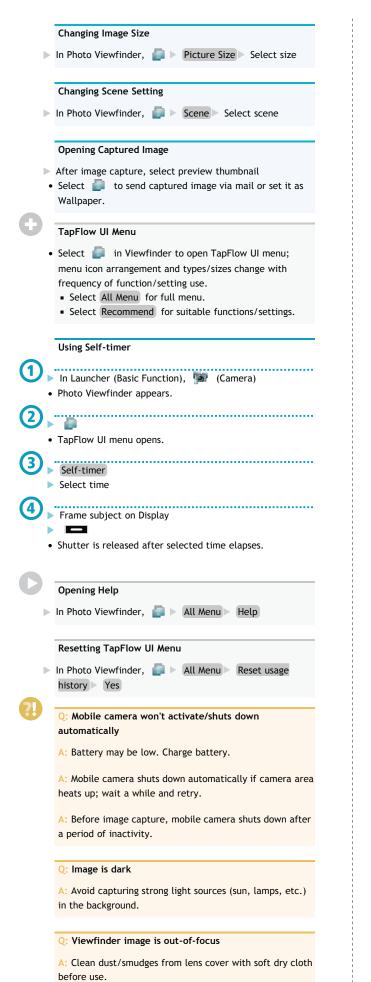



Important Mobile Camera Usage Notes

 
- Leaving handset at high temperature or exposing lens to direct sunlight may affect image quality.
- Camera distinguishes the locked subject by color; lightcolored subjects or subjects having the same color as the background may not be tracked correctly.

Camera (Additional Functions)

Selecting Camera by Use

Switch cameras by purpose; change settings as needed.

Switching Cameras



Switch camera

			_	
Easy Auto Comera	Rapid Shooting Cam	Video Camera	Rancode Reader	
* A	°Q		°Q	
Business Card Reader	Kanji/Eng. grabber	Test Reader	Information Reader	

• Switch camera menu opens.

Select camera

• Selected camera activates.

3


Major Photo Cameras:

Easy Auto Camera	Capture images with minimal user
	settable options
Rapid Shooting	Capture images consecutively
Camera	
Self Portrait	Use guide to capture self portraits
Camera	
Camera (3D	Capture 3D images
photos)	

.....

Changing Settings

Furimuki

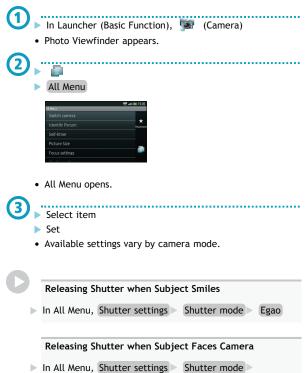

Adjusting Image Color to Lighting Conditions

▶ In All Menu, ISO Sensitivity > Select level

Selecting Automatic Save Option

▷ In All Menu, Save settings ▷ Auto Save ▷ ON or OFF


Changing Rapid Shooting Mode


In All Menu (Rapid Shooting Camera), Shooting Type Select mode Select frame count/size

Camera (Identify Person) Camera (3D photos) Capturing 3D Images **Registering Faces** Capture 3D still images. Register people's faces; related information appears in Viewfinder upon face detection, and saved images are • Insert SD Card first. sorted into "Portrait" in Picture (3D-capable). • Mind your manners when using handset camera. Saving Entries Using Camera (3D Photos) In Launcher (Basic Function), 闅 (Camera) In Launcher (Camera/AV), (Camera (3D photos)) • 3D Photo Viewfinder appears. • Photo Viewfinder appears. 2 Frame subject on Display All Menu • All Menu opens. Identify Person Shutter clicks. Slowly move handset to the right • Identify Person menu opens. • Image is captured when progress bar reaches End ; saves automatically. **Register Face** Frame subject on Display; use guide for best position • Guide turns light blue when face is detected. **3D Photo Viewfinder Indicators** П Ø ØØ Ģ • ы П Memory capacity (files) Select Empty Image size 2 New Registration Select Name field Scene 3 Camera mode (3D) 4 Enter name Save 5 Mobile Light status Open TapFlow UI menu 6 Shutter 7 Adding Memo & Text Color 8 Preview thumbnail Select Memo field to add information; select pull-down menu to change text color. **Editing Entries Adjusting Brightness** In Identify Person menu, Edit Information > Select entry Flick up/down across Viewfinder Edit Select item Edit Save Adjusting Zoom **Deleting Entries** Flick left/right across Viewfinder ▶ In Identify Person menu, Edit Information ▶ Select entry Delete Yes Selecting Mobile Light Option **Moving Entries (Changing Priorities)** ▶ In 3D Photo Viewfinder, 📄 ▶ Mobile light ▶ Select option In Identify Person menu, Edit Information Select entry • Do not shine Mobile Light in eyes; may damage eyesight. Change Priority Drag to target location Opening Captured 3D Image


After image capture, select preview thumbnail


- Select image as Wallpaper, or send via infrared.
- SoftBank 003SH

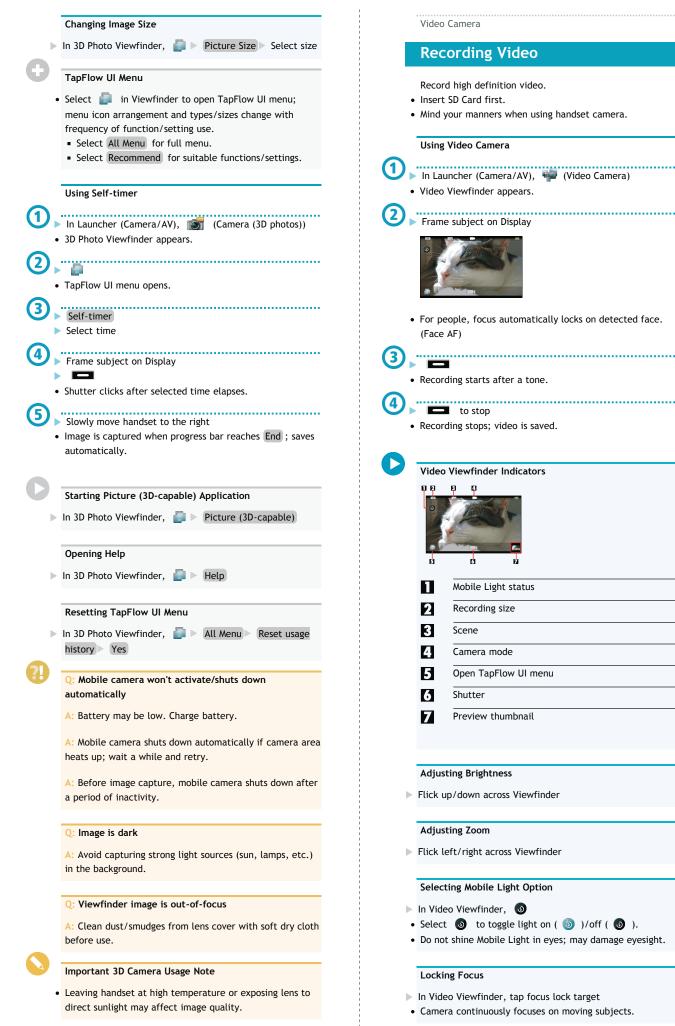

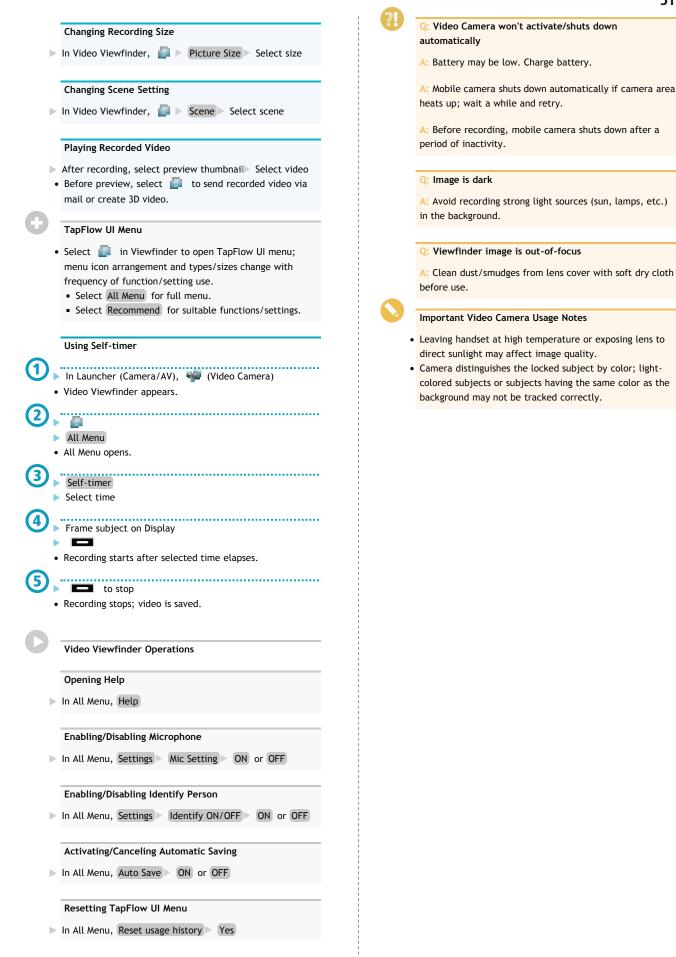

Pen Light

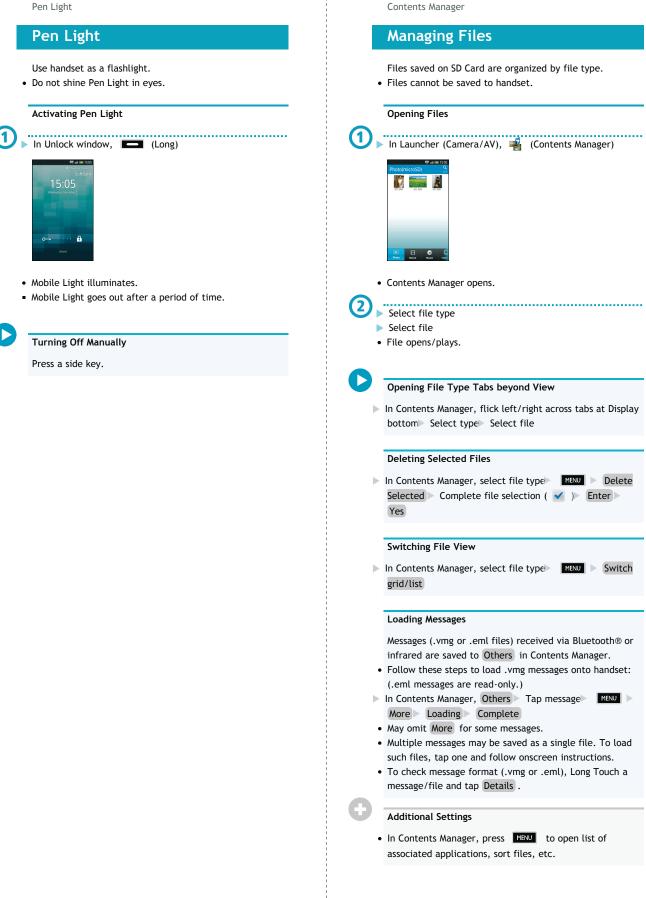

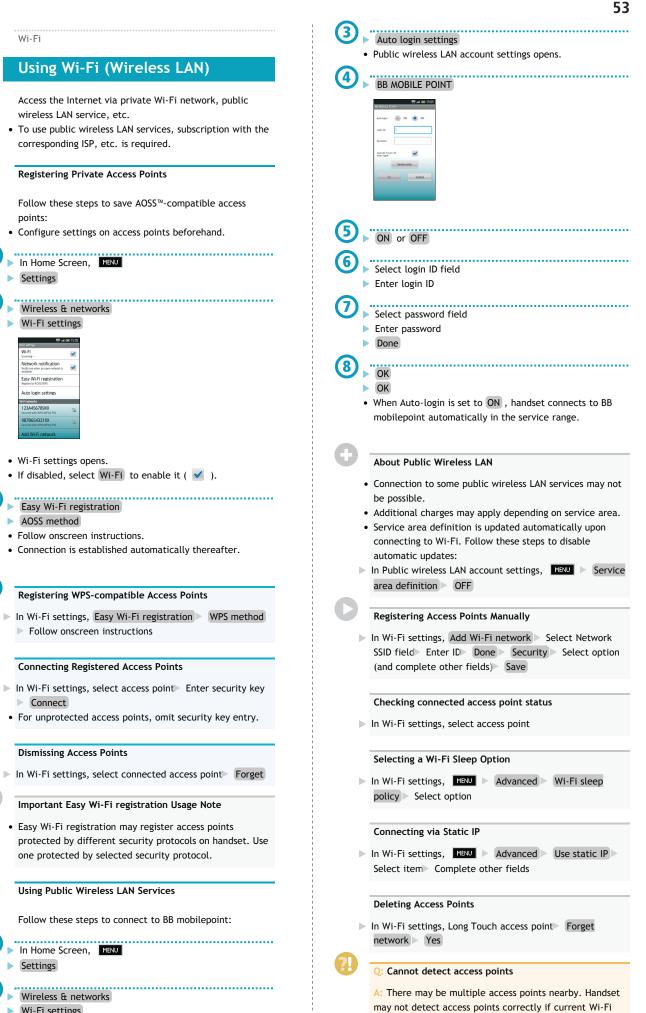

- Wi-Fi settings
- Wi-Fi settings opens.
- If disabled, select Wi-Fi to enable it (\checkmark).

SoftBank 003SH

channel is used by other access points at the same time.

Bluetooth®

Using Bluetooth®

Wirelessly transfer files/data between handset and compatible devices (handsfree devices, etc.).
Bluetooth® connection may not be possible with some Bluetooth® devices.

- Connection may fail depending on the other device.
- Noise may interfere with wireless or handsfree conversations.

Activating Bluetooth®

▶ In Home Screen, MENU

- Settings
- Wireless & networks
- Bluetooth
- Select Bluetooth to toggle on (✓)/off (✓).

Device Search & Pairing

Search for nearby Bluetooth® devices and pair them with handset; transfer files to/from paired devices.

- Activate Bluetooth® on devices to be paired first.
- Pair with up to 20 devices.

In Home Screen, MENU

 
Settings

Wireless & networks

- Bluetooth settings
 - Electron terms

 E

• Bluetooth Settings opens.




		💲 👯 💷 15:0
Search		
R	SBM0035H	
C	XXXXXX	
8	XXXXXX	
	G	

- Search starts; found devices are listed.
- Handset searches for up to 20 devices at one time. Retry if target device is not found.

Select device

- Enter same passkey for handset and other device
- ► OK
- Paring is complete.
- Passkey is a 4 to 16-digit code required for authentication.
- Passkey entry is omitted for some devices.

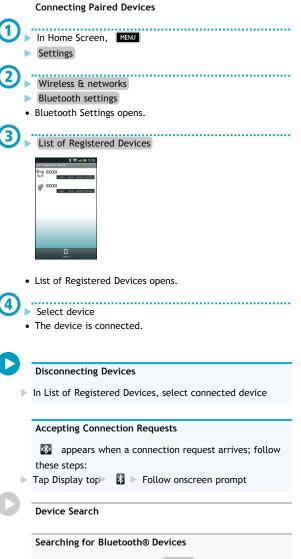

In List of Registered Devices, Search

Transferring Files

Receiving Files via Bluetooth®

- In Bluetooth Settings, Receive Data
- Handset is ready for connection; perform file transfer on the other device. Follow onscreen instructions.
- Handset Code is required to receive all files at once.
- To use messages received via Bluetooth®, open them from Contents Manager. For details, see "Loading Messages" in "Managing Files."

Sending Single Files via Bluetooth® (e.g., Address Book)

- In Launcher (Basic Function), Address Book Long Touch contact Send by Bluetooth Yes Select device
- If an image is set for selected contact, image transfer confirmation appears.

Sending Selected Files via Bluetooth® (e.g., Address Book)

- In Launcher (Basic Function), Address Book ► MENU All Menu ► Send by Bluetooth ► Select and send ► Complete contact selection (✓) ► Send ► Yes ► Select device
- If a contact with image is included, image transfer confirmation appears.

Sending All Files via Bluetooth® (e.g., Address Book)

- In Launcher (Basic Function), Address Book
 MENU
 All Menu
 Send by Bluetooth
 Send all items
 Yes
 Select device
 Enter Handset Code
 OK
- If a contact with image is included, image transfer confirmation appears.

Managing Paired Devices

Deleting Paired Devices

- In List of Registered Devices, Long Touch device
 Delete
 Select option
 Yes
- Protected devices are also deleted.

Q: Cannot use Bluetooth®

A: Offline mode may be active. Cancel it to use Bluetooth® functions.

Important Bluetooth® Usage Notes

- Information in contacts may not appear correctly on recipient devices.
- Additional application activation interrupts file transfer.
- Transfer up to 10 MB at one time.

USB Connection

Connecting PC via USB Cable

Connect handset to a PC via USB Cable to access SD Card from the PC without removing card from handset; transfer files, upgrade handset OS, and more.

- Use Micro USB Data Cable (SHDDL1).
- Do not remove battery or SD Card during PC connection.
- To use Fast transfer mode, install USB Cable driver on the PC beforehand. Download the driver from manufacture Website ケータイdaSH (access from PCs).

USB Connection Modes

Available Modes:	
Card reader mode	Exchange files between SD Card and PCs
Fast transfer mode	Upgrade handset OS, etc.
MTP mode	Transfer music/image files from PCs to SD Card

• MTP mode requires Windows Media Player 11 or 12.

Using Card Reader Mode

Connect handset to a PC via Micro USB Data Cable
 If an SD Card is inserted, Card reader mode activates.

Mount

- Use PC to transfer files to/from SD Card.
- Offline mode is active while handset is mounted.


Device Removal

Unmount handset on the PC, then select Turn OFF .

Important Card Reader Mode Usage Note

 If activating an application requiring SD Card while handset is mounted, an "SD Card unavailable" message may appear. Unmount handset and retry.

Using MTP Mode

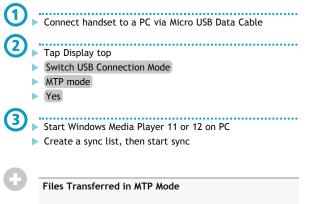

• Copy protected files and some other files may be unplayable on handset.

Enabling/disabling USB Battery Charge

- ► In Home Screen, MENU ► Settings ► USB connection ► USB battery charge
- Select USB battery charge to toggle on ()/off ().
- Setting applies when connecting handset to a PC via Micro USB Data Cable or when switching USB connection mode.

Selecting USB Connection Mode

In Home Screen, MENU > Settings USB connection
 USB connection mode > Select mode
 Available during USB connection.

Note

• Offline mode may activate during file transfer.

Using with Blu-ray Disc Recorders

- Transfer video files from Blu-ray Disc recorders to SD Card to play them on handset.
 - Connect handset to a Blu-ray Disc recorder in Card reader mode.
- For details, see the Blu-ray Disc Recorder guide.
- For information on compatible Blu-ray Disc Recorders, see the following URL:
 - http://www.sharp.co.jp/support/av/dvd/doc/ info_cellular.html (From PC; Japanese)

DLNA Server

Sharing Media Files

Use handset as a DLNA server; share media files with DLNA devices over Wi-Fi.

• Enable Wi-Fi beforehand.

Enabling Handset as a DLNA Server

1	► In Home Screen, MENU
	Settings
2	 Wireless & networks DLNA server settings DMS Settings window opens.
3	 Wi-Fi Network for DMS Select network
4	 DMS Handset is set as a DLNA server. Select DMS to toggle on ()/off ().
C	Saving DLNA Server Name

- ▶ In DMS Settings window, DMS name > Enter name > OK
- Not available when handset is running as a DLNA server.
- Saved name appears on client devices (TVs, etc.).

Settings (Wireless & networks)

Wireless & Networks

Offline Mode

Disabling/Enabling All Wireless Connections

- ► In Home Screen, MENU ► Settings ► Wireless & networks ► Offline mode
- Select Offline mode to toggle on (\checkmark)/off (\checkmark).

Wi-Fi

Enabling/Disabling Wi-Fi

- ► In Home Screen, MENU ► Settings ► Wireless & networks ► Wi-Fi
- Select Wi-Fi to toggle on (✓)/off (📈).
- Alternatively, select Wi-Fi settings \rightarrow Wi-Fi instead of selecting Wi-Fi .

Wi-Fi Settings

Enabling/Disabling Available Network Notifications

- ► In Home Screen, MENU ► Settings ► Wireless & networks ► Wi-Fi settings ► Network notification
- Available when Wi-Fi is on (🖌).
- Select Network notification to toggle on (✓)/off(
 →).

Registering Access Points via AOSS or WPS

- In Home Screen, MENU Settings Wireless & networks Wi-Fi settings Easy Wi-Fi registration
 AOSS method or WPS method Follow onscreen instructions
- Available when Wi-Fi is on (🖌).

Enabling/Disabling Auto-login in Public WLAN Service Areas

- In Home Screen, MENU Settings Wireless & networks Wi-Fi settings Auto login settings
 Select service Auto-login ON or OFF Enter ID and password OK
- Available when Wi-Fi is on (🖌).
- Registration procedure varies by ISP/contract terms.
- If confirmation appears, follow onscreen instructions.

Adding Networks

- In Home Screen, MENU Settings Wireless & networks Wi-Fi settings Add Wi-Fi network Enter Network SSID Select security protocol Save
- Available when Wi-Fi is on (🗹).
- Additional information may be required for some security protocols; complete all fields.

DLNA Server Settings

Enabling/Disabling DLNA Device Media File Sharing

- ▷ In Home Screen, MENU ▷ Settings ▷ Wireless & networks ▷ DLNA server settings ▷ DMS
- Set up Wi-Fi Network for DMS beforehand.
- Select DMS to toggle on (✓)/off (✓).
- See TV user guide to learn how to connect handset to DNLA-compatible TV.

Setting Up a Network (Wi-Fi Access Point) for DLNA Service

► In Home Screen, MENU ► Settings ► Wireless & networks ► DLNA server settings ► Wi-Fi Network for DMS ► Select option

Saving a Name that Appears on DLNA Devices

 In Home Screen, MENU Settings Wireless & networks DLNA server settings DMS name Enter name OK

Bluetooth

Activating/Canceling Bluetooth®

- ► In Home Screen, ► Settings ► Wireless & networks ► Bluetooth
- Select Bluetooth to toggle on (\checkmark)/off (\checkmark).
- Alternatively, select Bluetooth settings \rightarrow Bluetooth instead of selecting Bluetooth .

Bluetooth Settings

Device Search & Pairing

- In Home Screen, KENU Settings Wireless & networks Bluetooth settings Register New Device
 OK Select device Enter same passkey for handset and other device OK
- Passkey is a 4 to 16-digit code required for authentication.
- May omit passkey entry for some devices.
- To hide confirmation, select do not show this message again .
- If target device is not detected, select Search Again .

Checking Paired Devices

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings List of Registered Devices
- To establish a Bluetooth® connection, select a listed device.

Renaming Paired Devices

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings List of Registered Devices Long Touch device Details Edit Enter name Save
- Use up to 16 characters.
- Pictograms and line breaks are not supported.

Deleting Paired Devices

- In Home Screen, MENU > Settings > Wireless & networks > Bluetooth settings > List of Registered Devices > Long Touch device > Delete > Delete One or Delete All > Yes
- For Delete All , Long Touch any device.

Connecting to Bluetooth® Devices by Service

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings List of Registered Devices Long Touch device Select a Service to Connect to Select item
- Only supported service options are selectable.

Protecting/Unprotecting Paired Devices

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings List of Registered
 Devices Long Touch device Protect or Unprotect
 Yes
- To cancel protection of all devices at one time, select Remove All Protection instead of Unprotect . (Long Touch any device in this case.)
- Protected devices will not be overwritten even when pairing handset with exceeding number of devices; protection is not effective against Delete One or Delete All.

Specifying a Preferred Device for Wireless Connection

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings List of Registered Devices Long Touch device Connection Priority Setting Select option
- Available for devices that support HSP, HFP or A2DP.

Receiving Files

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings Receive Data (Perform file transfer on the other device) Yes
- Passkey confirmation/entry window may appear depending on the other device; follow onscreen instructions.
- To use messages received via Bluetooth®, open them from Contents Manager. For details, see "Loading Messages" in "Managing Files."

Changing Handset Name that Appears on Other Devices

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings Detailed Bluetooth Settings Information on your Device Edit Enter name Save
- Use up to 16 characters.
- Pictograms and line breaks are not supported.

Allowing/Prohibiting Other Devices to Detect Handset

► In Home Screen, MENU ► Settings ► Wireless & networks ► Bluetooth settings ► Detailed Bluetooth Settings ► Search Permission ► Select option

Selecting whether to Use Handsfree Device as Primary Means of Conversation

In Home Screen, MENU ▷ Settings ▷ Wireless & networks ▷ Bluetooth settings ▷ Detailed Bluetooth Settings ▷ Handsfree setting ▷ Select option

Accepting/Rejecting Connection Requests while Connected to a Device

- In Home Screen, MENU Settings Wireless & networks Bluetooth settings Detailed Bluetooth Settings Multiple connect standby Select option
- Even if Multiple connect standby is off , handset may still receive files from some Bluetooth® devices while connected to the current one.

VPN Settings

Adding Virtual Private Networks (VPNs)

- In Home Screen, MENU > Settings > Wireless & networks > VPN settings > Add VPN > Select item > Complete setting
- Select a VPN to connect/disconnect it. Long Touch one to edit/delete it.

Mobile Networks

Enabling/Disabling Mobile Data Transmissions

- ▷ In Home Screen, Menu ▷ Settings ▷ Wireless & networks ▷ Mobile networks ▷ Data transmission
- Select Data transmission to toggle on (\checkmark)/off (\checkmark).

Enabling/Disabling Data Roaming

- ► In Home Screen, MENU ► Settings ► Wireless & networks ► Mobile networks ► Data roaming
- Select Data roaming to enable (\checkmark) or disable (\checkmark).
- If confirmation appears, follow onscreen instructions.

Adding Access Points

In Home Screen, MENU
 Settings
 Wireless & networks
 Mobile networks
 Access Point Names
 MENU
 New APN
 Select item
 Complete setting
 MENU
 Save

Restoring Default Settings

In Home Screen, MENU ▷ Settings ▷ Wireless & networks ▷ Mobile networks ▷ Access Point Names ▷
 MENU ▷ Reset to default

Switching between 3G and GSM Networks Automatically

In Home Screen, MENU > Settings > Wireless & networks > Mobile networks > 3G/GSM Settings > Auto


Switching between 3G and GSM Networks Manually

 In Home Screen, MENU > Settings > Wireless & networks > Mobile networks > 3G/GSM Settings > Manual > Select Network

Selecting a Network Operator

- In Home Screen, Menu
 Settings
 Wireless & networks
 Mobile networks
 Network operators
 Select automatically (or select operator directly)
- Select Select automatically to set an appropriate network operator automatically.
- Select Search networks to search for network operators again.

Settings (Language & keyboard)

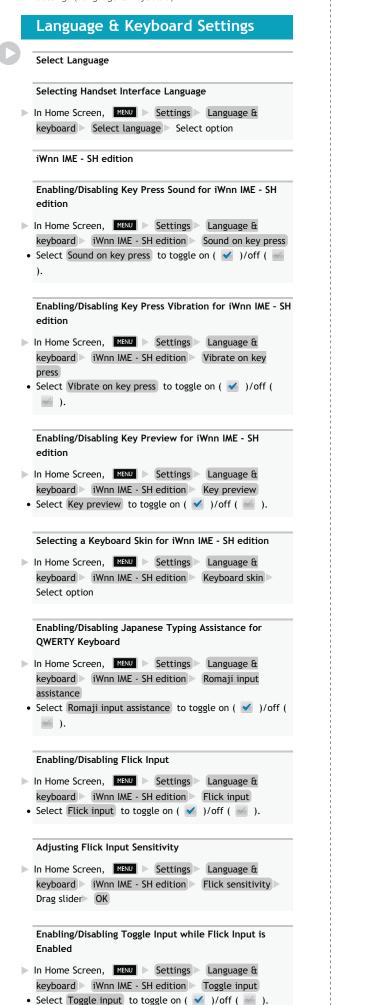

Selecting Automatic Cursor Movement Option ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > iWnn IME - SH edition > Auto cursor move Select option Enabling/Disabling Word Suggestions Based on Entered Characters ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > iWnn IME - SH edition > Word prediction Select Word prediction to toggle on (✓)/off (✓). Enabling/Disabling Word Suggestions Based on Entered **Characters Including Wildcard Characters** ► In Home Screen, MENU ► Settings ► Language & keyboard 🕨 iWnn IME - SH edition 🕨 Wildcard prediction Select Wildcard prediction to toggle on (✓)/off (✓ • Wildcard prediction is effective when Word prediction is enabled. Enabling/Disabling Word Suggestions Based on Entered Words ► In Home Screen, MENU ► Settings ► Language & keyboard > iWnn IME - SH edition > Next word guess Select Next word guess to toggle on (✓)/off (✓). Selecting the Number of Lines for Word Suggestions ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > iWnn IME - SH edition > Number of conversion lines Portrait or Landscape Select option Enabling/Disabling an External Conversion Engine ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > iWnn IME - SH edition > Extra conversion engine Select option • If confirmation appears, follow onscreen instructions. Enabling/Disabling Auto Capitalization for English Typing ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > iWnn IME - SH edition > Auto capitalization). Enabling/Disabling Voice Input ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > iWnn IME - SH edition > Voice input > Select option Saving Words to English User Dictionary ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard 🕨 iWnn IME - SH edition 🕨 English user dictionary MENU Add Enter reading/word Save

Editing Words Saved in English User Dictionary

► In Home Screen, MENU ► Settings ► Language & keyboard ► iWnn IME - SH edition ► English user dictionary ► Select item MENU ► Edit ► Enter reading/word ► Save Deleting Words Saved in English User Dictionary

In Home Screen, MENU
Settings
Language &

keyboard iWnn IME - SH edition English user dictionary Select item MENU Delete or Initialize OK

Enabling/Disabling Automatic Saving of Entered Characters to Learning Dictionary

- In Home Screen, MENU Settings Language & keyboard WINN IME SH edition Learning dictionary Input word learning
- Select Input word learning to toggle on ()/off ().

Resetting Learning Dictionary

In Home Screen, MENU Settings Language & keyboard WINN IME - SH edition Learning dictionary OK

Activating Download Dictionaries

- In Home Screen, MENU > Settings Language & keyboard iWnn IME SH edition > Download dictionary > Select dictionary
- Select a dictionary to toggle on (✓)/off (✓).
- Words in active dictionaries (🖌) appear among suggestions.

Deleting Download Dictionaries

- In Home Screen, MENU Settings Language & keyboard iWnn IME SH edition Download dictionary Long Touch dictionary Yes
- Active dictionaries (\checkmark) cannot be deleted.
- To delete multiple download dictionaries at one time, select Download dictionary , press MENU then select Delete all \rightarrow Yes .

Adding Names to Dictionaries from Contacts

In Home Screen, MENU ► Settings ► Language & keyboard ► iWnn IME - SH edition ► Contacts name collaboration ► Load the latest data ► OK

Deleting Names Added to Dictionaries from Contacts

In Home Screen, MENU > Settings > Language & keyboard > iWnn IME - SH edition > Contacts name collaboration > initialize > OK

Enabling/Disabling Original Message Quotation in Word Suggestions

- ▷ In Home Screen, MENU ▷ Settings ▷ Language & keyboard ▷ iWnn IME SH edition ▷ Learn mail replies
- Select Learn mail replies to toggle on (\checkmark)/off (\checkmark).

Resetting iWnn IME - SH edition Settings

- In Home Screen, MENU ▷ Settings ▷ Language & keyboard ▷ iWnn IME SH edition ▷ Set the default settings ▷ OK
- **Resetting Emoticon List** ► In Home Screen, MENU ► Settings ► Language & keyboard ≥ iWnn IME - SH edition ≥ Reset facemark list OK Enabling/Disabling Mushroom (Plug-in for Text Input Expansion) ► In Home Screen, MENU ► Settings ► Language & keyboard > iWnn IME - SH edition > Mushroom > Select option • If confirmation appears, follow onscreen instructions. Android Keyboard Enabling/Disabling Key Press Vibration ► In Home Screen, MENU ► Settings ► Language & keyboard Android keyboard Vibrate on keypress Select Vibrate on keypress to toggle on ()/off (Enabling/Disabling Key Press Sound ► In Home Screen, MENU ► Settings ► Language & keyboard > Android keyboard > Sound on keypress Select Sound on keypress to toggle on (✓)/off (✓). Enabling/Disabling Auto Capitalization for English Typing ► In Home Screen, MENU ► Settings ► Language & keyboard Android keyboard Auto-capitalization Select Auto-capitalization to toggle on ()/off (). Enabling/Disabling Voice Input ► In Home Screen, MENU ► Settings ► Language & keyboard Android keyboard Voice input Select option • If confirmation appears, follow onscreen instructions. Enabling/Disabling Input Language Switching by Flicking Finger on Spacebar ► In Home Screen, MENU ► Settings ► Language & keyboard 🕨 Android keyboard 📐 Input languages 🕨 Select language Select a language to toggle on (✓)/off (✓). Enabling/Disabling Word Suggestions ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard Android keyboard Show suggestions Select Show suggestions to toggle on (✓)/off (✓). Enabling/Disabling Auto-Complete Entry ► In Home Screen, MENU ► Settings ► Language & keyboard Android keyboard Auto-complete
- Select Auto-complete to toggle on (✓)/off (✓).
- Auto-complete is usable when Show suggestions is enabled.

User Dictionary

Saving Words to User Dictionary

- ▶ In Home Screen, MENU ▶ Settings ▶ Language & keyboard > User dictionary > MENU > Add > Enter word OK
- Select a saved word to edit/delete it.

Settings (Date & time) Date & Time Settings Set Date Setting Date Manually ▶ In Home Screen, MENU ▶ Settings ▶ Date & time ▶ Set date > Select date > Set Select Time Zone Setting Time Zone Manually ▶ In Home Screen, MENU ▶ Settings ▶ Date & time ▶ Select time zone > Select area Set Time Setting Time Manually ▶ In Home Screen, MENU ▶ Settings ▶ Date & time ▶ Set time > Select time > Set Use 24-hour Format Enabling/Disabling 24-hour Format ▶ In Home Screen, MENU ▶ Settings ▶ Date & time ▶ Use 24-hour format Select Use 24-hour format to toggle on (✓)/off (✓). Select Date Format Changing Date Format ▶ In Home Screen, MENU ▶ Settings ▶ Date & time ▶

Select date format > Select option

SoftBank 003SH

Index

A

About USIM Card	6
Activation Screen Lock	17
Alternative Dialing Methods	31

B

Backup/Restore Address Book	
Battery Installation	8
Browsing the Internet	45

C

Call Barring	34
Call History & Call Time	33
Calling form Outside Japan	32
Capturing 3D Images	49
Capturing Still Images	45
Charging Battery	9
Connecting PC via USB Cable	55
Customizing Handset Address	
Customizing Home Screen	25
Customizing Launcher Pages	28

D

Date & Time Settings6	51
Downloading Applications1	19

e

Entering Characters	. 2	1

Ð

Handling Messages	
Handset Interface	13
Handset Power On/Off	10
Home Screen Basics	24

U

Incoming Messages40
Indicators

D

M

Language & Keyboard Settings	59
Launcher Basics	27

Managing Files52

64

Mobile Manners16

0

Optional Services	

P

Parts & Functions	5
Pen Light	
Placing/Answering Calls	

R

Recording Videos	
Registering Faces	

S

Saving Frequently Used Words 2	24
Security Codes1	7
Selection Camera by Use4	18
Sharing Media Files5	6

Ū

U

Using Address Book	
Using Applications	14
Using Bluetooth	54
Using Gmail	43
Using Google Accounts	
Using Notifications	29
Using PC Mail	
Using S! Mail	
Using SD Card	7
Using SMS	41
Using Touch Panel	12
Using Wi-Fi (Wireless LAN)	53

