

304HW User Guide

1

Introduction

Introduction

Getting Started

Parts & Functions	8
Home Screen	
Notification for Setting Maximum Traffic	
USIM Card	
Battery Installation	
Charging	
Power On/Off	

Connecting WLAN

WLAN (Wi-Fi)	20
Enabling WLAN (Wi-Fi)	21
Connecting Windows PC	21
Connecting Mac	25
Connecting Android [™] Device	26
Connecting iPhone/iPod touch/iPad	28
Connecting Nintendo 3DS LL/3DS/DSi LL/DSi	32
Connecting Wii U/Wii	36
Connecting PlayStation® Vita/PSP® (PlayStation® Portable)	.38
Connecting PlayStation®4	
Connecting PlayStation®3	44
Connecting WPS Supported WLAN Device	.47
Connecting IEEE802.11b WLAN Device	48

Connecting with Micro USB Cable (Windows)

USB Connection with Windows PC	52
Device Recognition/Removal on Windows PC	52
Installing/Uninstalling Driver (Windows PC)	54

Connecting with Micro USB Cable (Mac)

USB Connection with Mac	58
Device Recognition/Removal on Mac	58
Installing/Uninstalling Driver (Mac)	59

Settings (Touch Menu)

Touch Menu	62
Quick Setup	62
Showing/Setting Data Usage	64
Setting Internet Wi-Fi	69
Enable to Watch TV	71
Confirm Information	72
Checking WLAN Connected Device Information	75
Setting SSID or Authorization Method	.75
Using WPS	80
Other Settings	82
Checking Wi-Fi Router Information	91
Checking Help	92
Operation for Setting Maximum Traffic	93

304HW User Guide Contents

Settings (WEB UI)

Overview of WEB UI	102
WEB UI Window on PC	104
Quick Setup	108
Setting Mobile Network	111
Setting Internet Wi-Fi	122
Setting LAN Wi-Fi	128
Router Setting	141
System	159
Showing/Setting Data Usage	164
Confirm Information	170
Setting Software Update	176
Setting from Mobile Device	178

Terrestrial TV

Terrestrial TV	188
Enabling TV	189
Watching TV on Android [™] Device	190
Watching TV on iPhone/iPod touch/iPad	194

Appendix

Troubleshooting	200
Specifications	204
Setting List	205
Glossary	213
Warranty & Service	214
Customer Service	214

Safety Precautions

Safety Precautions	.216
General Notes	. 222
Specific Absorption Rate (SAR) Information for the	his
Product	. 224

Introduction

ntroduction.....

Before You Begin

Read " クイックスタート (Quick Start)" (Japanese), "Safety Precautions" and this guide thoroughly beforehand for proper usage.

Accessible services may be limited by contract conditions.

Guide Usage Notes

Most operation descriptions are based on default settings.

Screenshots & Key Labels

Screenshots are provided for reference only. Actual displays may differ in appearance. Buttons are simplified in description. Actual displays and images differ in appearance.

Other Descriptions

This product is referred to as "Wi-Fi router" in this guide.

Operating Environment (Compatible Operating Systems)

Use Wi-Fi router in any of these operating environments. Use outside these environments may affect performance. Operating environment (hardware, connected peripherals, installed applications, etc.) may also affect performance.

- For PC support, OS version upgrade information, etc., see corresponding manufacturer's product support documentation.
- The following operating environment (Compatible Operating Systems) is based on the information as of July, 2014.

Item	Description
	Windows Vista Home Basic (32-bit or 64-bit)
	Windows Vista Home Premium (32-bit or 64-bit)
	Windows Vista Business (32-bit or 64- bit)
	Windows Vista Ultimate (32-bit or 64-bit) Windows 7 Home Basic (32-bit or 64-bit)
Compatible Operating	Windows 7 Home Basic (32-bit or 64-bit) Windows 7 Home Premium (32-bit or 64- bit)
Systems	Windows 7 Professional (32-bit or 64-bit)
	Windows 7 Ultimate (32-bit or 64-bit)
	Windows 8 (32-bit or 64-bit) Windows 8 Pro (32-bit or 64-bit)
	Windows 8.1 (32-bit or 64-bit)
	Windows 8.1 Pro (32-bit or 64-bit)
	Mac OS X 10.6 to 10.7 (32-bit or 64-bit)
	Mac OS X 10.8 (64-bit)
	Mac OS X 10.9 (64-bit)
	Windows Vista: 512 MB+ (1 GB+
	recommended)
	Windows 7: 1 GB+ (32-bit)/2 GB+ (64- bit)
Memory	Windows 8: 1 GB+ (32-bit)/2 GB+ (64-
Requirements	bit)
	Windows 8.1: 1 GB+ (32-bit)/2 GB+ (64-
	bit)
	Mac OS X: 256 MB+ (512 MB+
	recommended)
Hard Disk	200 MB+ recommended (100 MB+ free
Capacity	space needed) (Common to each OS)
Interface	USB2.0
	Microsoft Internet Explorer 7.0 or later
Compatible	Safari 4.0 or later
Browser	Mozilla Firefox 17.0 or later
	Google Chrome 21.0 or later
	Opera 12.0 or later

Package Contents

The following items are included in the package. Please confirm package contents before use. Contact Customer Service for missing items.

Keep accessories including Warranty in a safe place. AC adapter is not supplied. Purchase AC adapter as optional accessory (sold separately).

- · 304HW
- Micro USB Cable (HWDAZ1)
- Battery (HWBBB1)
- ・クイックスタート(準備編)(Japanese)
- ・クイックスタート(接続・地上デジタル放送視聴編)(Japanese)
- ・お願いとご注意 (Japanese)
- ・保証書(本体用)(Japanese)

SSID and Security Key

When connecting to a Wi-Fi device, SSID (Network Name) and Security Key (WPA Key or WEP Key) are required. Confirm SSID and Security Key as follows.

1

In Home screen, "SSID"



🟁 SSID and Security Key appear.

- Two SSID are set to Wi-Fi router. By default, WPA/WPA2-PSK is set as security for SSID A; WEP is set for SSID B.
- For greater security, use WPA/WPA2 instead of WEP.
 However, some game consoles do not support WPA/WPA2.
- Alternatively, remove Battery Pack from Wi-Fi router to check default SSID and Security Key. See "Check SSID and Security Key."

Usage Conditions

- Wi-Fi router supports Software Update. Use Wi-Fi router with the latest software updated.
- Communication speed may become slow or communication may not be available because of connection congestion or communication environment.
- To use Wi-Fi router abroad, change settings according to the law of each country.
- To prevent from using by third party, set Pass code for canceling Screen Lock. See "Screen Lock" about procedures of Pass code setting for canceling Screen Lock.

Trademarks


- SoftBank, SoftBank's equivalent in Japanese and the SOFTBANK logo are registered trademarks or trademarks of SOFTBANK CORP. in Japan and other countries.
- Pocket WiFi is a registered trademark of eAccess Ltd.
- HUAWEI is a trademark or registered trademark of HUAWEI TECHNOLOGIES CO., LTD.
- Microsoft[®], Windows[®], Internet Explorer, Windows Vista[®] are trademarks or registered trademarks of Microsoft Corporation in the United States/other countries. Microsoft Windows Operating System is indicated in its abbreviated form as Windows.
- The trademark "iPhone" is used with a license from Aiphone K.K. Mac, Macintosh, Safari, iPhone, iPod, iPod touch, and iPad are registered trademarks of Apple inc. TM and © 2011 Apple Inc. All rights reserved.
- · Apple is a trademark of Apple Inc.
- "PlayStation", "PS3" and "PSP" are registered trademarks of Sony Computer Entertainment Inc. "PSVITA" and "PS4" are a trademark of the Company.
- Wii, Wii U, Nintendo 3DS LL, Nintendo 3DS, Nintendo DSi LL and Nintendo DSi are trademarks or registered trademarks of Nintendo.
- Wi-Fi[®], WPA[™], WPA[™], Wi-Fi Protected Setup[™] and the logos are trademarks or registered trademarks or Wi-Fi Alliance.
- Google, Android, Google Chrome are trademarks or registered trademarks of Google Inc.
- Firefox is a trademark or registered trademark of Mozilla Foundation in the United States/other countries.
- Opera is a trademark or registered trademark of Opera Software ASA. Go to "http://www.opera.com/" for details on Opera.
- The names of the companies, products and services used in this guide are registered trademarks or trademarks of the respective companies.

Getting Started

Parts & Functions	8
Home Screen	8
Notification for Setting Maximum Traffic	12
USIM Card	12
Battery Installation	15
Charging	16
Power On/Off	18

Parts & Functions

Wi-Fi Router

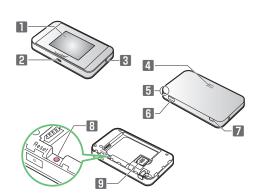

Part	Description		
1 Display	Wi-Fi router status appears; Wi-Fi router Display is a Touchscreen; Touch directly with the finger to operate		
2 External Device Port	Connect AC Charger (optional accessory) and Micro USB Cable		
Si External TV Antenna Slot	When the TV signal conditions are poor, connecting a commercially available antenna cable and the adapter plug such as 75Ω (mini plug) $\Leftrightarrow 75 \Omega$ (type F) matching box may improve the signal conditions		
Detter	Remove Battery Cover to remove/insert Battery or USIM Card		
4 Battery Cover	•		
	•		
Cover	Battery or USIM Card		
Cover S Notch Power	Battery or USIM Card Use notch to remove Battery Cover		
Cover S Notch Power Button	Battery or USIM Card Use notch to remove Battery Cover Power on/off and turn Display on/off Use for watching TV;		


Notes on Using Reset Button

Note the following for using Reset Button.

- Power on Wi-Fi router in advance.
- Be careful not to be injured when pressing Reset Button.
- Do not Press Reset Button strongly. May cause damage.
- · Do not use sharpened object. May cause damage.
- Using pen or pencil may make Reset Button dirty with ink etc.
- The factory defaults are also reset from WEB UI. For details, see "Resetting Wi-Fi Router."

Home Screen

Layout

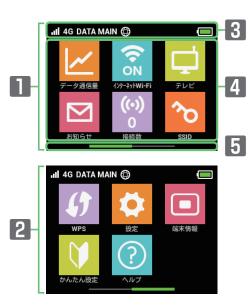

Part	Description	
1 Home		
Screen (First page)	First page of Home Screen	
2 Home		
Screen	Second page of Home Screen; Flick to	
(Second	change page	
page)		
8 Status bar	Status Indicators for communication	
	status and battery level appear	
4 Touch Menu	Touch Menu icons for various functions	
5 Page	Indicates which Home Screen page you	
Indicator	are in	

Status Indicators


Item	Description			
	Mobile networks connected (Signal is strong)			
	Mobile networks connected (Signal is weak)			
圈外	Out of service area			
°.1	Roaming connection status			
হ	Internet Wi-Fi connected (Signal is strong)			
	Internet Wi-Fi connected (Signal is weak)			
4G / LTE / 3G	Network Name			
DATA MAIN / DATA SUB	Network operator name			
٥	Internet connected			
8	Internet not connected			
^	Software update notification			
Ł	Downloading software			
	Battery charged			
	Battery low			
	Battery almost empty (Charge Battery)			
F	Charging			
((*)) ₁	Number of connected WLAN devices (appears in Lock Screen)			
×	Unread notification (appears in Lock Screen)			
TVall	TV reception level (Signal is strong)			
TVIII	TV reception level (Signal is weak)			
)))) ^{1,2}	Notice of Communication speed reduction			
<mark>)))</mark> 2	Start of Communication speed reduction			
>>> 2	Release Communication speed reduction			

1 Shown when the remaining data traffic to start speed reduction reaches a specified value.

2 Cleared at the beginning of next month. Also cleared in the settings of Wi-Fi router. For details, see "Clear Notification lcons for Maximum Traffic."

Touch Menu Icons

Tap Touch Menu icons to check function settings or Wi-Fi router information.

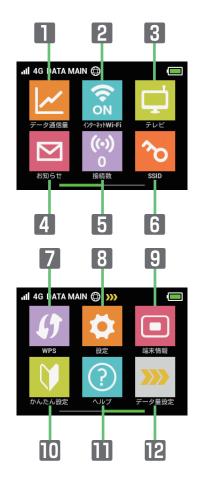

Item	Description
■ データ通信量	Show mobile network data usage, set maximum traffic and Auto Reset Date, etc.
 2 インターネッ ト Wi-Fi 	Connect to Internet Wi-Fi and SoftBank Wi-Fi Spot, and make the settings
3 テレビ	Set to watch TV on mobile device connected to Wi-Fi router via WLAN
4 お知らせ	Check and delete received notifications; appears for new notifications ¹
5 接続数 ²	Show number of connected devices
6 SSID	Show and set SSID and Security Key for Wi-Fi router
7 WPS	Set WPS connection
3 設定	Set switching Home screen icon, Roaming, Pass code for unlocking Screen Lock, Brightness, Sleep, Wi- Fi Communication Standard, Software Update, Clear Notification icons, etc.
9 端末情報	Show URL for WEB UI, Wi-Fi router's phone number and software version
₪ かんたん設定	Show SSID and Security Key, set Pass code for unlocking Screen Lock, and check details of watching TV
■ ヘルプ	Show Help for icons on Display

9

Item	Description	
	Icon is shown when data traffic	
	approaches to the value which	
	Communication speed reduction starts or	
囮 データ量設定	Communication speed reduction starts;	
	You can apply to return normal speed,	
	apply ahead to keep normal speed or	
	cancel application	

1 🖾 (Unread notification) appears at the top of Lock Screen

- 2 (Mumber of connected devices) appears at the top of Lock Screen
- Tap 6 on the settings window or notification window to go back to the previous window and Tap 6 to go back to Home Screen.

Display Off/Sleep Mode

- If no operation is performed on Wi-Fi router for a minute, Display turns off automatically. Press Power Button to disable Sleep mode.
- When Wi-Fi router is not connected to any WLAN devices and no operations are made for a certain period of time or Wi-Fi router is not charged, Display turns off and Wi-Fi router goes into Sleep mode for saving power (Time before going into Sleep mode is set to five minutes by default.)
- In Sleep mode, WLAN is disabled.
- Press Power Button to turn Display on and release Sleep mode. After Sleep mode is released, WLAN function is enabled and Wi-Fi router reconnects to WLAN devices.
- Some WLAN devices automatically disconnect WLAN connection if no data communication is performed for a certain period of time. When such a WLAN device is connected to Wi-Fi router, WLAN connection is disconnected due to the auto disconnecting function and Wi-Fi router may go into Sleep mode.
- Change time before going into Sleep mode and ON/OFF setting of Sleep mode in Touch Menu or WEB UI. For details, see "Setting Sleep Mode," "LAN Wi-Fi Advanced Settings."

Touchscreen Operations

Wi-Fi router Display is a Touchscreen. Tap, Swipe/Flick, etc. • Tap

Tap item or key to open or execute corresponding function/ operation.



Swipe/Flick
 Swipe/Flick to toggle sheets, pages, etc.


Slide
 Slide item to move it.



11

Text Entry Window

Use onscreen keyboards for text entry.

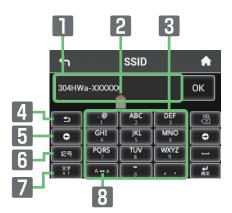



Item	Description		
Entry Box	Text entry		
2 Cursor	Show entry position		
3 Keyboard	Entry key		
4 Return to previous character	Return to previous character		
5 Cursor (left)	Move cursor to left		
Entry mode (Symbol)	Symbol entry window opens		
Entry mode (alphabet, numbers)	Toggle alphabets and numbers		
B Uppercase/ Lowercase	Toggle uppercase and lowercase for an unfixed character		
9 Delete	Delete a character before cursor		
Cursor (right)	Move cursor to right		
Space	Enter a space		
12 Fix	Confirm text entry		

Text Entry

Multiple letters ("ABC", "DEF") are assigned to each key.

Tapping key toggles characters.

- Example: For "b", Tap
- Example: For "c", Tap

To go back to the previous character assigned to the same key, Tap

• Example: When "c" appears by Tapping three times, Tap to return to "b."

For characters assigned to the same key, operate as follows.
Example: For "ca", Tap [▲]
Tap [▲]
Tap [▲]
Tap [▲]
Tap [▲]

To toggle uppercase and lowercase for entered character, Tap

To enter symbols such as "#" or "/", Tap To show all symbols, Tap Tap ↓ to return to the original screen.

Notification for Setting Maximum Traffic

Notification for Setting Maximum Traffic

Communication speed is reduced due to data traffic volume. Information, Pop-up screen or Notification icon at notification or start of speed reduction appears.

Condition	Description	
	Notification is sent and >>> or pop-	
Notice speed	up screen is shown when data traffic	
reduction	approaches to the value which	
	Communication speed reduction starts	
	Notification is sent and 题 or pop-	
Start speed	up screen is shown when data traffic	
reduction	reaches the specified value and	
	Communication speed reduction starts	
Release	Notification is sent and 跡 is shown	
speed	when Communication speed reduction is	
reduction	released by your application	

USIM Card

USIM Card contains customer information, including phone number.

Handling USIM Card

- SoftBank Mobile Corp. is not liable for damages resulting from inserting USIM Card in other-brand IC card reader etc.
- · Always keep IC chip clean.
- \cdot Clean USIM Card with a soft dry cloth.
- \cdot Do not attach labels on USIM Card. May cause malfunction.
- · For handling, see USIM Card user guide.
- \cdot USIM Card is the property of SoftBank Mobile Corp.
- \cdot You are charged for reissue of lost or damaged USIM Card.
- Return USIM Card to SoftBank Mobile Corp. when canceling contract.
- Returned USIM Card is recycled for protection of the environment.
- Specifications and performance of USIM Card are subject to change without notice.
- Keep copy of saved contents in USIM Card by yourself.
 SoftBank Mobile Corp. is not liable for damages incurred due to loss of saved information.
- In case USIM Card or Wi-Fi router (USIM Card inserted) is lost or stolen, request to have usage suspended urgently. Contact Customer Service, General Information.
- Power off Wi-Fi router before removing/installing USIM Card. Removing USIM Card while being used might cause malfunction.

 


Install USIM Card

Power off Wi-Fi router in advance.

1

Remove Battery Cover



- \cdot Use notch (\bigcirc) to lift Battery Cover then remove it.
- \cdot Be careful not to hurt your fingernail etc.

2

 
Remove Battery



 \cdot Use tab (\bigcirc) to slowly lift up as shown.

3


Open USIM Card Stopper



 \cdot Slide USIM Card Stopper to 0 , then lift up to 2 .

4

 
Install USIM Card



• Confirm the orientation of corner notch ① and place USIM Card on USIM Card Slot with IC chip ② facing down.

5

 Close USIM Card Stopper



- \cdot Lower USIM Card Stopper to 0 , then slide it to 0 .
- \cdot Make sure USIM Card is inserted correctly.
- Do not touch or scratch IC chip when installing/removing USIM Card.

6

Insert Battery



- Align Battery terminals with Wi-Fi router terminals with (+) (-) printed side facing up and press Battery against (), then firmly push down to (2).

7

Close Battery Cover

 
 \cdot Place Battery Cover on Wi-Fi router in the correct orientation and press down every corner (\bigcirc) and check there are no gaps.

Remove USIM Card

Power off Wi-Fi router in advance.

1

Remove Battery Cover



- \cdot Use notch (\bigcirc) to lift Battery Cover then remove it.
- \cdot Be careful not to hurt your fingernail etc.

2

 
Remove Battery



 \cdot Use tab (\bigcirc) to slowly lift up as shown.



Open USIM Card Stopper



 \cdot Slide USIM Card Stopper to 1 , then lift up to 2 .

4

 
Remove USIM Card



· Remove USIM Card not to touch IC chip.

5

Close USIM Card Stopper



 \cdot Lower USIM Card Stopper to ${\rm (}{\rm)}$, then slide it to ${\rm (}{\rm ?}{\rm)}$.



 
Insert Battery



• Align Battery terminals with Wi-Fi router terminals with (+) (-) printed side facing up and press Battery against 0, then firmly push down to 0.

7

Close Battery Cover



- Place Battery Cover on Wi-Fi router in the correct orientation and press down every corner (\bigcirc) and check there are no gaps.

 
Battery Installation

Insert Battery

Power off Wi-Fi router in advance.

1

Remove Battery Cover



- \cdot Use notch (\bigcirc) to lift Battery Cover then remove it.
- \cdot Be careful not to hurt your fingernail etc.

2

 
Insert Battery



• Align Battery terminals with Wi-Fi router terminals with (+) (-) printed side facing up and press Battery against (), then firmly push down to (2).

3

Close Battery Cover




 \cdot Place Battery Cover on Wi-Fi router in the correct orientation and press down every corner (\bigcirc) and check there are no gaps.

Remove Battery

Power off Wi-Fi router in advance.

1

 Remove Battery Cover



- \cdot Use notch (\bigcirc) to lift Battery Cover then remove it.
- Be careful not to hurt your fingernail etc.



 
Remove Battery



 \cdot Use tab (\bigcirc) to slowly lift up as shown.

3

Close Battery Cover




 \cdot Place Battery Cover on Wi-Fi router in the correct orientation and press down every corner (\bigcirc) and check there are no gaps.

Check SSID and Security Key

Remove Battery and check SSID (Network Name) and Security Key (WPA Key and WEP Key).

1

 Remove Battery Cover



- \cdot Use notch (\bigcirc) to lift Battery Cover then remove it.
- \cdot Be careful not to hurt your fingernail etc.



 
Remove Battery



 \cdot Use tab (\bigcirc) to slowly lift up as shown.



Check SSID and Security Key



Charging

Wi-Fi router is not fully charged by default. Charge Wi-Fi router before use.

Wi-Fi router discharges even when not in use. Charge Wi-Fi router before use if it is not in use for a long time. Usage times gradually become shorter due to repeated charging/discharging. For estimated charging times and usage times, see "Specifications."


Using AC Charger (optional accessory)

AC Charger is an optional accessory. Use specified AC Charger [ZTDAC1/ZTDAD1] only.

- Charging with AC Charger [ZTDAC1/ZTDAD1] is explained.
- · See AC Charger user guide.
- Do not connect Micro USB plug with Wi-Fi router or AC Charger wet.


1

Insert AC Charger (optional accessory) Micro USB plug into External Device Port and power plug to AC outlet

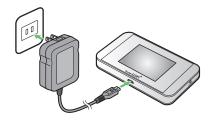

2	
2	
~	
	- C -

 When complete, unplug AC Charger (optional accessory)






Using USB (PC)

Use supplied Micro USB Cable.

- · Make sure to power on PC before charging.
- Depending on PC connection environment, charging may fail.

1


Insert Micro USB Cable (Micro USB plug) into External Device Port and Micro USB Cable (USB plug) to a PC

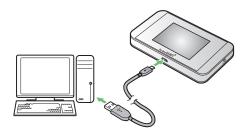

• When connecting Wi-Fi router to a PC for the first time, Driver software is automatically installed.

2

When complete, remove Micro USB Cable from PC and Wi-Fi router

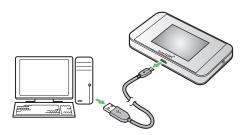

Check battery level on Display.

Charging

Charging Conditions

Under low temperatures charging, performance decreases.

Use Micro USB Cable and AC Charger (optional accessory) in temperatures between $5^\circ\!C$ - $35^\circ\!C$. USB charging may be unavailable depending on Wi-Fi router temperature.

Use Supplied Accessories or Optional Accessories

Always charge with supplied Micro USB Cable connected to PC or with compatible AC Charger (optional accessory). Do not fold cable or apply force to a connector. May cause malfunction.

Charging with PC

Charging takes longer than with AC Charger (optional accessory). Time required depends on the connected PC.

Wi-Fi Router and AC Charger (Optional Accessory) Becoming Warm/Hot

Wi-Fi router and AC Charger (optional accessory) may become warm while charging. This is not a malfunction. However, stop using them immediately if they become extremely hot; they may be malfunctioning.

Precaution for extended use

Wi-Fi router may become hot while in use or while charging for a long period, especially in high temperatures. Prolonged contact with skin may cause low-temperature burn injuries.


Connecting Micro USB Cable

Confirm that orientation of Micro USB Cable plugs is correct. Connecting in wrong orientation may cause damage or malfunction.

Display while Charging

Even when power is off, Press Power Button to show Animation and battery level. When charging is complete,
appears. 17

Power On/Off

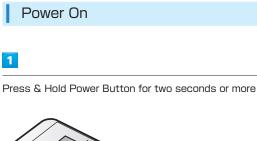



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (W) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.

2

Slide Display up/down to cancel Screen Lock



Screen is unlocked and Home screen appears. Clock is shown on Lock Screen.

Shown date and time are obtained from connected network. Date and time are not changed by users. To use overseas, date and time are not obtained depending on connected network. Even when date and time are obtained, they are shown in Japan time.

- ・For the first time activation or after resetting, "ようこそ!" screen (かんたん設定) appears.
- Tap " 次へ," and Show SSID and Security Key, set Pass code for unlocking Screen Lock, and check details of watching TV. For settings, see "Quick Setup."
- When Pass code for unlocking screen is set, Pass code entry screen appears. For unlocking screen by entering Pass code, see "Entering Pass Code to Unlock Screen."
- When PIN verification is set to USIM, PIN entry screen appears. See "PIN Verification (Wi-Fi Router)" or "PIN Verification (WEB UI)" to enter PIN. For PIN verification settings, see "PIN Verification."

Power Off

1

Press & Hold Power Button for two seconds or more





Connecting WLAN

WLAN (Wi-Fi)	20
Enabling WLAN (Wi-Fi)	21
Connecting Windows PC	21
Connecting Mac	25
Connecting Android™ Device	26
Connecting iPhone/iPod touch/iPad	28
Connecting Nintendo 3DS LL/3DS/DSi LL/DSi	32
Connecting Wii U/Wii	36
Connecting PlayStation® Vita/PSP® (PlayStation® Portable)	.38
Connecting PlayStation 4	43
Connecting PlayStation®3	44
Connecting WPS Supported WLAN Device	.47
Connecting IEEE802.11b WLAN Device	48

Overview

Wi-Fi router supports 802.11b/g/n standards. Connect WLAN devices (PC, game console, etc.) via WLAN for wireless data transfers.

Wi-Fi router supports Wi-Fi Protected Setup (WPS), which easily configures Wi-Fi connection settings on any WPS compliant WLAN device.

Enter Wi-Fi router's SSID (Network Name) and Security Key (WPA Key or WEP Key) to connect non-WPS compliant WLAN devices.

For SSID and Security Key, see "SSID and Security Key." In this manual, set-up on Windows PC, Mac, Android[™] device, iPhone, iPod touch, iPad, Nintendo 3DS LL, Nintendo 3DS, Nintendo DS series^{*}, Wii U, Wii, PS Vita (PlayStation_®Vita), PSP_® (PlayStation_® Portable), PS4[™] (PlayStation_®4), PS3_® (PlayStation_®3) or WPS devices are described.

* "Nintendo DS series" is a generic term used to refer to Nintendo DSi LL/DSi.

 These settings should be performed the first time Wi-Fi router is connected to another WLAN device. After setup is complete, enable WLAN on Wi-Fi router and the WLAN device to resume connection automatically.

👸 WLAN (Wi-Fi)

Advanced Settings

Change WLAN advanced settings as required. For details, see "Setting LAN Wi-Fi."

Simultaneous Connection

Up to ten WLAN devices can be used simultaneously. When Multi-SSID or Internet Wi-Fi is ON, up to nine WLAN devices can be used simultaneously.

Automatic Update for Optimizing Wi-Fi Connection

Settings for optimizing connection may be received and updated automatically while connected to Wi-Fi.

\rm Notes on WLAN (Wi-Fi) Use

Security

To ensure security, change default SSID (Network Name) and Security Key (WPA Key or WEP Key).

Communication Speed

When Internet Wi-Fi or Multi-SSID function is enabled, communication speed may decrease depending on number of WLAN devices connected to Wi-Fi router.

Wi-Fi Communication Standard Setting

If you are unable to connect with WLAN, change Wi-Fi Communication Standard Setting and retry. For details, see "Wi-Fi Communication Standard Setting."

Reception interference

IEEE802.11b/g/n WLAN device and Bluetooth device use the same 2.4GHz band. If the WLAN device or Bluetooth device is used near Wi-Fi router, the communication speed may lower by reception interference and TV reception may be affected.

Enabling WLAN (Wi-Fi)

Wi-Fi router connects to the Internet automatically when powered on.

Connecting to 4G/LTE/3G

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.
- When Wi-Fi router goes into Sleep mode, WLAN is disabled.
 Press Power Button to disable Sleep mode and enable
 WLAN again.

Connecting Windows PC

Connect a Windows PC to connect to the Internet.

Windows 8.1

This section describes setup operations with screenshots and steps for SSID A at WPA security setting on Windows 8.1.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, ((Number of connected devices) lights and when Wi-Fi router connects to the Internet, (() (Internet connected) lights.

2

Activate PC WLAN function

Method for enabling PC WLAN varies by model. Contact PC manufacturer.

3

Move Pointer to upper right or lower right (For Touchscreen, Swipe from right end) \rightarrow charm $\diamond \rightarrow 4$



4

Select Wi-Fi router's SSID → "Connect"



- For SSID, see "SSID and Security Key."
- · If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

5

Enter Security Key correctly -> "Next"



- WLAN connection counter number on Display increases by one (e.g. ♀ ♀).
- For Security Key, see "SSID and Security Key."
- Confirmation message for sharing PC may appear; do not set it. For sharing PC, see Windows Help.

Windows 7

This section describes setup operations with screenshots and steps for SSID A at WPA security setting on Windows 7.

1

Press & Hold Power Button for two seconds or more




- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.


Activate PC WLAN function

Method for enabling PC WLAN varies by model. Contact PC manufacturer.

"Start" → "Control Panel" → "Network and Internet" → "Network and Sharing Center"

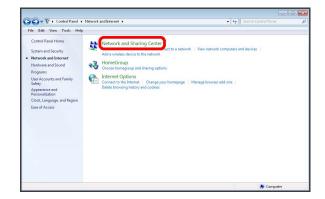

"Connect to a network"

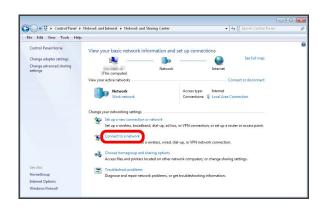

5

Select Wi-Fi router's SSID → "Connect"



- For SSID, see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.



Enter Security Key correctly → "OK"

😰 Connect to a Netw	vork		×
Type the network security key			
Security key:	•••••• ✓ Hide characters		
		ОК	ancel

- When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀ ♀).
- For Security Key, see "SSID and Security Key."

Windows Vista

This section describes setup operations with screenshots and steps for SSID A at WPA security setting on Windows Vista.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (O) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, (Internet connected) lights.


2

Activate PC WLAN function

Method for enabling PC WLAN varies by model. Contact PC manufacturer.

3

"Start" → "Control Panel" → "Network and Internet" → "Network and Sharing Center"

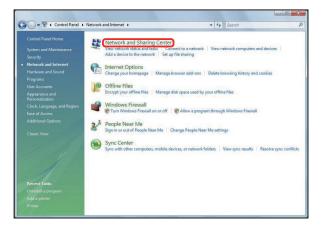

4

"Connect to a network"

Control Panel +	Network and Internet Netw	rork and Sharing Center 👻 🍫 Sea	rch
Tasks View computers and devices	Network and Sharing	g Center	View full map
Connect to a network			view roa map
Manage wireless networks	1		_ (
Set up a connection or network		Multiple networks	Internet
Manage network connections	(This com		and the
Diagnose and repair	Martine Theorem		
	Network (Private netw		Customize
	Access	Local and Internet	
	Connection	Local Area Connection	View status
	Network 5 (Public ne	etwork)	Customize
1111	Access	Local and Internet	
111 15 1	Connection	Local Area Connection	View status
Y/	B Sharing and Discover	y	
A	Network discovery	© On	e
	File sharing	• On	•
See also	Public folder sharing	© Off	\odot
Internet Options	Printer sharing	© On	
Windows Firewall	Media sharing	e off	

5

Select Wi-Fi router's SSID → "Connect"

Show All		[
🐓 304HWa-XX	XXXX Security-enabled network	llee
2	Security-enabled network	llee
2	Security-enabled network	litee

• For "SSID," see "SSID and Security Key."

- · If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

C	
0	

Enter Security Key correctly → "Connect"

Туре	the network security key or passphrase for 304HWa-XXXXXX
The pe	rson who setup the network can give you the key or passphrase.
Securit	ty key or passphrase:
••••	
🔲 Disj	play characters
-	If you have a <u>USB flash drive</u> with network settings for 304HWa-XXXXXX, insert it now.

For Security Key, see "SSID and Security Key."



"Close"

When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting Mac

Connect a Mac to connect to the Internet.

Mac

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting on Mac OS \times 10.9.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (1) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, (1) (Internet connected) lights.

2

In Apple menu, "System Preferences..." → "Network"

2000	ihow All		System P	references		Q.	
General	Desktop & Screen Saver	Dock	Mission Control	Language & Region	Security & Privacy	Q Spotlight	Notifications
CDs & DVDs	Displays	Energy Saver	Keyboard	Mouse	Trackpad	Printers & Scanners	Sound
iCloud	(@) Internet Accounts	Network	Bluetooth	Sharing			
Users & Groups	Parental Controls	App Store	Dictation & Speech	Date & Time	Startup Disk	Time Machine	Accessibility

3

"Wi-Fi" -> "Turn Wi-Fi On"



WLAN function on Mac is enabled.

4

In "Network Name" pulldown list, select Wi-Fi router's SSID

	Location:	Automatic		\$	
Ethernet Not Connected	«»	Status:	On	Turn Wi-Fi Off	1
HUAWEI Mobile	«·· »		Wi-Fi is turned on bi network.	ut is not connected to a	
FireWire Not Connected	*	Network Name	/ No network sele	cted	
e Wi-Fi	8		304HWa-XXXX	x e	Î
On			the same and	and the second se	1
Bluetooth PAN	8		states and the	-	• ((•
Not Connected	~		ALC: N. 1	-	(
			ma. 00-000		()
			00000-0000		6
			FIRE PART AND	Contract of the local division of the local	(()
			Instant South 1	£	
			10/7 km, 14714		1
			ALC: NOT THE OWNER.	-	([e ([e ([e ([e
			Section and		(0.
			No.		(0.
24		Show Wi-Fi statu	The part of the local division of the local	A Contractor of the	(.
+ - ☆▼			And the Party of t		
			and the second s		(1. (1.

- For "SSID," see "SSID and Security Key."
- · If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm ((•)) (Number of connected devices) appears.

5

Enter Security Key in "Password" correctly → Click "Remember this network" → "Join"

3	WPA2 pass	word.
	Password:	
		Show password Remember this network
?		Cancel

When connection is established, WLAN connection count number on Display increases by one (e.g. A → A).

For Security Key, see "SSID and Security Key."

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting Android[™] Device

Connect an Android[™] device to connect to the Internet.

Android™ Device

This section describes setup operations with screenshots and steps for "SSID A" under "WPA" security setting on Android™ 4.0. Some operations and screenshots vary by security method.

Operation steps vary by Android[™] device. For details, refer to Android[™] device user guide.








- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (O) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, (Internet connected icon) lights.



In Home screen of Android[™] device, "Settings"





In "WIRELESS & NETWORKS" field, "Wi-Fi"

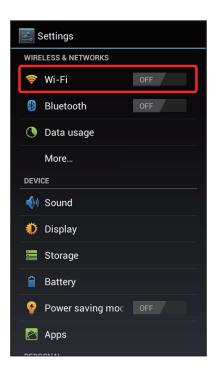

4

 Enable Wi-Fi

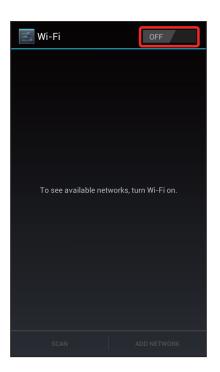



5

Tap Wi-Fi router's SSID

式 Wi-Fi	ON
304HWa-XXXXXX Secured with WPA/WPA2 (WF available)	25 🥱
Secured with WPA2 (WPS ava	ailable)
Secured with WPA2	? .
Secured with WPA/WPA2(WF available)	PS 🛜
Secured with WPA/WPA2 (WF available)	es 🧟
Secured with WPA	Ş .
Secured with WPA/WPA2(WF available)	PS 🛜
SCAN	ADD NETWORK

- For "SSID," see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, Tap set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

6

Enter Security Key in "Password" correctly → "Connect"



When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting iPhone/iPod touch/ iPad

Connect an iPhone/iPod touch/iPad to connect to the Internet.

iPhone/iPod touch

This section describes setup operations with screenshots and steps for "SSID A" under "WPA" security setting on iPhone with iOS7.1.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.

2

"Settings" → "Wi-Fi"



3


Enable Wi-Fi

Settings	Wi-Fi	
Wi-Fi		
Location accur Wi-Fi is turned	acy is improved on.	when

WLAN function on iPhone/iPod touch is enabled.

4

In "CHOOSE A NETWORK..." list, Tap Wi-Fi router's SSID

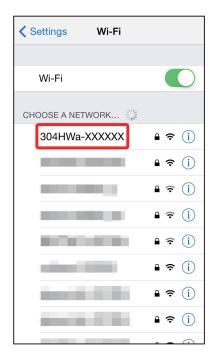

- \cdot For "SSID," see "SSID and Security Key."
- $\cdot\,$ If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm ((•)) (Number of connected devices) appears.

5

Ente	er Se	ecur	ity k	(ey i	n "P	ass	word	d" co	orrec	tly 🔿	"Join
	Enter	the p	assw	ord fo	or "30	04HW	a-XXX	(XXX,	,		
Ca	ncel		Ente	ər Pa	assv	vord		J	oin		
Pa	assw	/ord	•	•••	•••	•					
1	2	3	4	5	6	7	8	9	0		
-	7	:	;	()	¥	&	@	"		
#+=			,		?	!	,		\mathbf{x}		
A	BC			spa	ace		ſ	Joi	n		

- Connecting WLAN
- When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀ ♀).
- For Security Key, see "SSID and Security Key."

iPad

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting.

1


Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, ((Number of connected devices) lights and when Wi-Fi router connects to the Internet, ((Internet connected) lights.

2

"Settings" → "Wi-Fi"

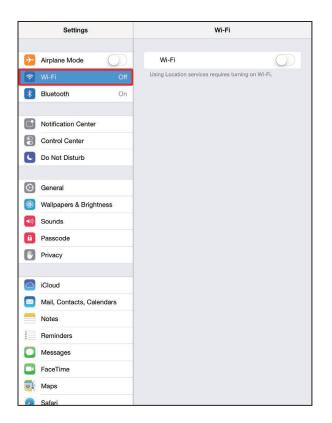

	3	
-		

Enable Wi-Fi

	Settings	Wi-Fi	
≁	Airplane Mode	Wi-Fi	\bigcirc
Ŷ	Wi-Fi Off	Using Location services requires turning on Wi-Fi	
*	Bluetooth On		
C	Notification Center		
8	Control Center		
C	Do Not Disturb		
_			
Ø	General		
*	Wallpapers & Brightness		
()	Sounds		
A	Passcode		
	Privacy		
	iCloud		
	Mail, Contacts, Calendars		
	Notes		
	Reminders		
	Messages		
	FaceTime		
.	Maps		
0	Safari		

[🕺] WLAN function on iPad is enabled.


In "CHOOSE A NETWORK..." list, Tap Wi-Fi router's SSID

ETWORK (a-XXXXXX)
a-XXXXX
ê ≎ (ê ≎ (ê ≎ (
) \$ 4 (; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ;
i ? (j
<u> </u>
Networks
available, you will have to manually select a

- For "SSID," see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

5

Enter Security Key in "Password" correctly → "Join"

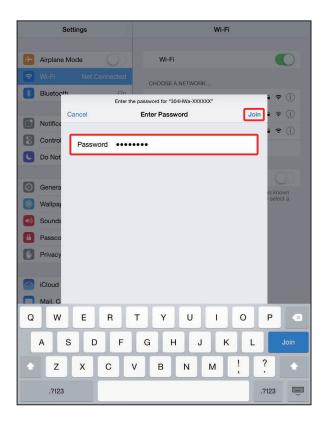

- When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀).
- For Security Key, see "SSID and Security Key."
- SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting Nintendo 3DS LL/ 3DS/DSi LL/DSi

Connect Nintendo 3DS LL/3DS/DSi LL/DSi to Wi-Fi router to connect to Internet.

The described connection procedures are independently verified. Please refrain from contacting Nintendo Co., Ltd regarding these descriptions.

Nintendo 3DS LL/3DS

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to Nintendo 3DS LL/3DS user guide.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (W) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, (Internet connected) lights.


2

In Nintendo 3DS menu, "本体設定 " → " はじめる " → " インターネッ ト設定 "

🗭 "インターネット設定" appears.

3

"インターネット接続設定"

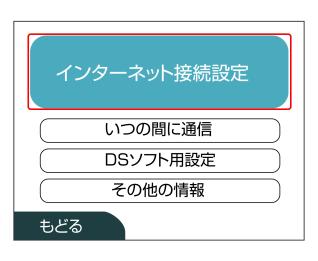


4

"接続先の登録"



5



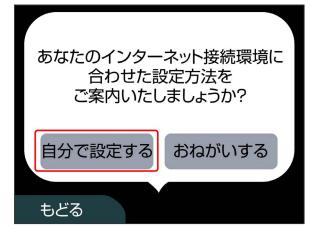

6

"アクセスポイントを検索"



In list, Touch Wi-Fi router's SSID



- For "SSID," see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

8


Enter Security Key correctly -> "決定 "

	XXX	XX	XX)						
1	2	3	4	5	6	7	8	9	0	-	◆消去
q	W	е	r	t	У	u	i	0	р		ب
а	s	d	f	g	h	j	k	T	;	,	"
z	x	c	; v	b) r	ר ר	m,			/ =	= @
Ca	ips	SI	nift		Ż	白鸟		ţ	英	かた	5 カナ
ABC			あい	5		記号			ケータイ		
やめる						決定					

• For Security Key, see "SSID and Security Key."


9

"OK"

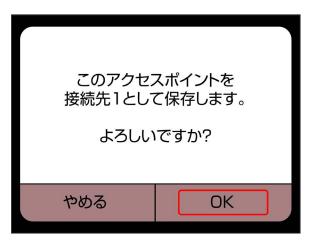

10

"OK"

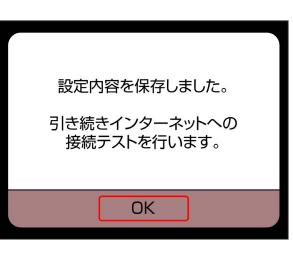

Nintendo DSi LL/DSi

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to Nintendo DSi LL/DSi manual.

1


Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (W), (Number of connected devices) lights and when Wi-Fi router connects to the Internet, (Internet connected) lights.

2

In Nintendo DSi menu, "本体設定"

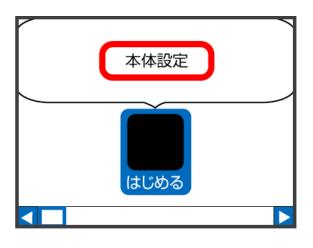

3

"インターネット"




インターネッ	`	
	接続設定	
	オプション	
	利用規約	
	もどる	

5

4

"上級者設定"

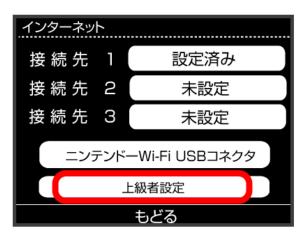

6

Touch any one of "未設定 "



"アクセスポイントを検索"



8

In list, Touch Wi-Fi router's SSID


接続先4	
304HWa-XXXXX	
xxxxxx	
ххххх	
もどる	再検索

 \cdot For "SSID," see "SSID and Security Key."

- $\cdot\,$ If Wi-Fi router's SSID is changed, select set name.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

9


Enter Security Key correctly, "OK"

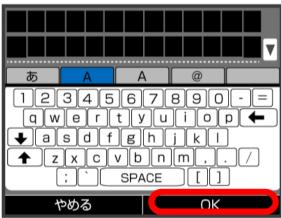

• For Security Key, see "SSID and Security Key."

10

"OK"

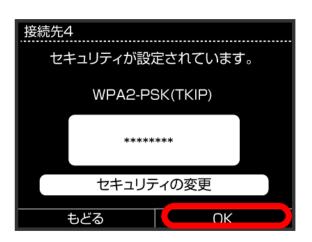

"OK"



Connection test starts. When "接続テストに成功しました。" appears, setting is complete. When connection is established, WLAN connection count number on Display increases by one (e.g. ???).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting Wii U/Wii

Connect Wii U/Wii to connect to Internet. The described connection procedures are independently

verified. Please refrain from contacting Nintendo Co., Ltd regarding these descriptions.

Wii U

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to Wii U user guide.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.

2

In Wii U menu, "Wii U 本体設定 "

3

" インターネット "

4

"インターネットに接続する"

🕺 Searching access points starts.

5

In list, select Wi-Fi router's SSID

- \cdot For SSID, see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, select set name.
- When SSID is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

Enter Security Key correctly, "OK"

- Connection test starts. When "接続テストに成功しました。" appears, setting is complete. When connection is established, WLAN connection count number on Display increases by one (e.g. ???).
- For Security Key, see "SSID and Security Key."

7

"OK"

🕺 Saving of settings starts.

- When setting default access point window appears, set if necessary.
- Wii U update window may appear. Update if necessary. For updates or operations, refer to Nintendo website.

Wii

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to Wii user guide.

To connect Wii with Wi-Fi router, change Wi-Fi 通信規格設定 to "IEEE802.11 b/g/n." For details, see "Wi-Fi Communication Standard Setting."

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, ((Number of connected devices) lights and when Wi-Fi router connects to the Internet, (() (Internet connected) lights.

2

In Wii menu, "Wii"

3

"Wii 本体設定 "

4

Select Direction Key " > " to show "Wii 本体設定 2" window, " イ ンターネット "

5

"接続設定"

6

Select any one of " 未設定 "

7

"Wi-Fi 接続 "

8

"アクセスポイントを検索"

In list, select Wi-Fi router's SSID

- For SSID, see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, select set name.
- When SSID is not shown, Press Power Button to show Lock Screen, then confirm ((•)) (Number of connected devices) appears.

10

Enter Security Key correctly, "OK"

For Security Key, see "SSID and Security Key."

11

"OK"

Saving of settings starts.

12

"OK"

Connection test starts. When "接続テストに成功しました。" appears, setting is complete. When connection is established, WLAN connection count number on Display increases by one (e.g. ????).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting PlayStation® Vita/ PSP® (PlayStation® Portable)

Connect PS Vita and PSP® to connect to the Internet. The described connection procedures are independently verified. Please refrain from contacting Sony Computer Entertainment Inc. regarding these descriptions.

PlayStation®Vita

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to PS Vita user guide.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (O) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.

2

In PS Vita Home menu, "Settings" → "Start"



"Network"



4

"Wi-Fi Settings"

Network	12:34 🛑
Wi-Fi Settings	
Bluetooth® Settings	
Internet Connection Test	
Internet Connection Status	
	 Wi-Fi Settings Bluetooth® Settings Internet Connection Test

5

In list, Touch Wi-Fi router's SSID



- For SSID, see "SSID and Security Key."
- \cdot If Wi-Fi router's SSID is changed, select set name.
- When SSID is not shown, Press Power Button to show Lock Screen, then confirm ((•)) (Number of connected devices) appears.

6

Enter Security Key -> ____

									12:34 💳
	E	Enter th	ne passi	word fo	r the a	ccess p	oint.		
	SSID:304HWa-XXXXXX Security Method:WPA-PSK / WPA2-PSK								
	ł	Hide Pa	assword						
q	N	/		·	t) :	y l	J i		o p
6	a]	s	d	f	g	h	j	k	
t	0	z	x	с	v	b	n	m	×
	123				Space		Þ.		

• For Security Key, see "SSID and Security Key."

7

"OK"



Setting is complete. Wi-Fi settings window appears. When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀).

PSP_® (PlayStation_® Portable)

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting on PSP-2000/PSP-3000.

Some operations and screenshots vary when using PSP- 1000° or by security method. For details, refer to PSP_ $_{\oplus}$ user guide.

* For PSP-1000 system software older than ver1.52, some operations differ.

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.

2

Turn on PSP® WLAN Switch

3

In PSP_® Home menu, "Settings" → "Network Settings → Press ● Button



4	

"Infrastructure Mode" → Press 🔘 Button

Network Setting	S
	Ad Hoc Mode
	nfrastructure Mode

5

"New Connection" -> Press
Button

Settings	
Select Connection to edit.	
[New Connection]	
304mwa-XXXXXX	
XXXXXXX	
XXXXXXXX	
XXXXXXXX	

 \cdot For PSP-1000, Enter connection name and Press Direction Key " \triangleright ."



"Scan" \rightarrow Press Direction Key " \triangleright "

Settings	
WLAN Settings	
Scan Linter Manually Automatic Wireless Hotspot	•

In list, select Wi-Fi router's "SSID" → Press 🔘 Button

Select the a	iccess point to be u	sed.
SSID	Security	Signal Strengt
	WPA-PSK (AES)	100%
304HWa-XXXXXX	WPA-PSK (Th	(IP)
	WEP	100%
	None	100%

- For "SSID," see "SSID and Security Key."
- If Wi-Fi router's "SSID" is changed, select set name, then Press
 Button.
- When "SSID" is not shown, Press Power Button to show Lock Screen, then confirm (()) (Number of connected devices) appears.

	-	
	×	
	•	
_		

Confirm SSID → Press Direction Key " ▷ "

Network Settings	
 SSID 304HWa-XXXXXX 	

9

"WPA-PSK (TKIP)" → Press Direction Key " ▷ "

Network S	ettings	
	WLAN Security Settings	
	None WEP WPA-PSK (TKIP) WPA-PSK (AES)	•

10

Press ● Button → Enter Security Key → Press Direction Key



• For Security Key, see "SSID and Security Key."

11

"Easy" \rightarrow Press Direction Key " \triangleright "

Address Settings

12

Confirm connection name \rightarrow Press Direction Key " \triangleright "

Network Settings	
Enter the connection name.	


This window does not appear in PSP-1000. Go to step 13.

Confirm setting list \rightarrow Press Direction Key " \triangleright "




14

Press 🔘 Button

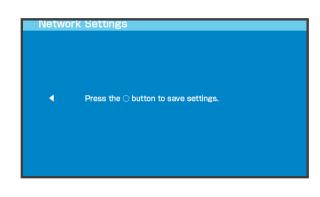

15

Press 🔘 Button

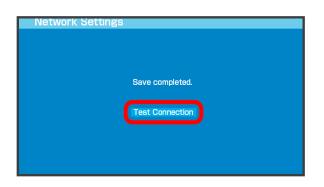

Connection test starts. When complete, test results appear. When connection is established, WLAN connection count number on Display increases by one (e.g. (→)).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting PlayStation®4

Connect PS4™ to connect to Internet.

The described connection procedures are independently verified. Please refrain from contacting Sony Computer Entertainment Inc. regarding these descriptions.

PlayStation_®4

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to PS4™ user guide.

1

Press & Hold Power Button for two seconds or more



Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.

When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected icon) lights.

2

In PS4[™] Home menu, "Settings" → "Network" → "Set Up Internet Connection" → Press **()** Button



3

"Use Wi-Fi" → Press 🔘 Button

Set Up Ir	ternet Connection How do you want to connect to the network?	
	Use Wi-Fi	
	Use a LAN Cable	
🛞 Back 🌘) Enter	

4

"Easy" → Press 🔘 Button

Set Up Internet Connection			
	How do you want to set up the Internet connection?		
	Easy		
	Custom		
🛞 Back 🌘) Enter		

5

In list, select Wi-Fi router's SSID → Press Button

Set Up Internet Connection				
	Which Wi-Fi network do you want to use?			
	XX	₽ ₪		
	XXXXXXX	9 D		
	xxxx	6 9		
	304HWa-XXXXXX	ڻ ه		
	XX	8 M		
	XXXXXXXX	₽ ₽		
S Back D Enter Search				

- · For SSID, see "SSID and Security Key."
- If Wi-Fi router's SSID is changed, select set name, then Press
 Button.
- When SSID is not shown, Press Power Button to show Lock Screen, then confirm ((•)) (Number of connected devices) appears.

Enter Security Key → "Done" → "OK" → Press Button

Set Up Internet Connection			
What is the password for "304HWa-XXXXXXX?			
ОК			
Sack Denter			
Subject C Enter			

Saving of settings starts.

- · For Security Key, see "SSID and Security Key."
- 7

"Test Internet Connection" → Press () Button

Test Internet Connection			
Connection	n test complete.		
SSID Obtain IP Address Internet Connection			
Back			

Connection diagnosis starts. When complete, diagnosis results appear. When connection is established, WLAN connection count number on Display increases by one (e.g. →).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting PlayStation®3

Connect PS3® to connect to Internet. The described connection procedures are independently verified. Please refrain from contacting Sony Computer Entertainment Inc. regarding these descriptions.

PlayStation_®3

This section describes setup operations with screenshots and steps for "SSID A" at "WPA" security setting. Some operations and screenshots vary by security method. For details, refer to PS3® user guide.

1






- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.

2

In PS3_® Home menu, "Settings" → "Network Settings" → "Internet Connection Settings"

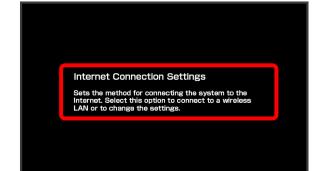

"OK" → Press 🔘 Button

Internet Connection Settings
Adjust settings for connection to the Internet. If making a wired connection, you must have an Ethernet cable connected. OK

4

"Easy" \rightarrow Press Direction Key " \triangleright "

Internet Connection Settings				
Select a setting method.				
Custon				


5

"Wireless" \rightarrow Press Direction Key " \triangleright "

Internet Connection Settings	
Select a connection method. If making a wired connection. you must have an Ethernet cable connected. Wired Connection	

6

"Scan" \rightarrow Press Direction Key " \triangleright "

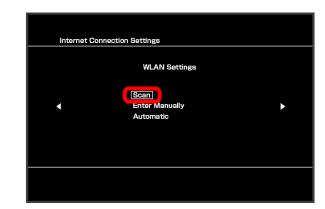

7

In list, select Wi-Fi router's SSID → Press ④ Button

Inter	net Connection Sett	ings	
	Select the acc	cess point to be used	
	SSID	Security WDA2-DSK (AFS)	Signal Strength
	304HWa-XXXXXX	WPA-PSK (TKIP)	100%
		WEP None None	100% 100% 100%

- For SSID, see "SSID and Security Key."
- If Wi-Fi router's SSID is changed, select set name, then Press
 Button.
- When SSID is not shown, Press Power Button to show Lock Screen, then confirm ((•)) (Number of connected devices) appears.

8

Confirm SSID \rightarrow Press Direction Key " \triangleright "


Int	ernet Connection Setting	gs	
	SSID 304HWa-XXXXXX		•

"WPA-PSK/WPA2-PSK" → Press Direction Key " ▷ "



10

Press **●** Button → Enter Security Key → Press Direction Key " ▷ "

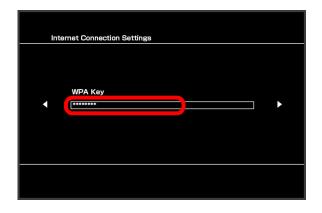

• For Security Key, see "SSID and Security Key."

11

Confirm the setting list \rightarrow Press \bigcirc Button

Internet	Connection Settings		
	Press the \bigcirc butto	on to save settings.	
	Settings List		
	Internet Connection	Enabled	
	Connection Method	Wireless	
	SSID	304HWa-XXXXXX	
	Security	WPA-PSK / WPA2-PSK	
ļ	WPA Key	******	

🕺 Saving of settings starts.

12

Press 🔘 Button

Internet Connection Settings	
Connection	n test completed.
Obtain IP Address	Succeeded
Internet Connection	Succeeded

Connection test starts. When complete, test results appear. When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀).

SSID (Network Name) and Security Key (WPA Key or WEP Key)

For SSID and Security Key, see "SSID and Security Key." If they are changed, use set SSID and Security Key. Default SSID is shown in alphanumeric with leading "304HWa-" or "304HWb-." Do not connect to other neighboring WLAN network.

Connecting WPS Supported WLAN Device

WPS Supported WLAN Device

1

Press & Hold Power Button for two seconds or more



- Lock Screen appears when powered on and WLAN function is enabled. Wi-Fi router automatically connects to the Internet.
- When WLAN is enabled, (()) (Number of connected devices) lights and when Wi-Fi router connects to the Internet, () (Internet connected) lights.


2

Enable WLAN function on WLAN device, and make any required WPS settings

 Method of setting WPS function varies by device. See WLAN device user guide etc.

3

"WPS"

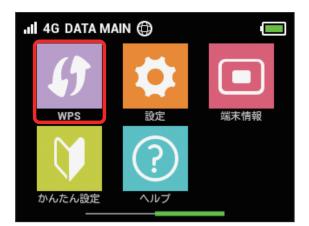

4


" 無線 LAN 端末と接続する "



Wi-Fi-router is on standby to accept WLAN device connection.

5

While window below appears (within 120 seconds), set up WPS connection on WLAN device

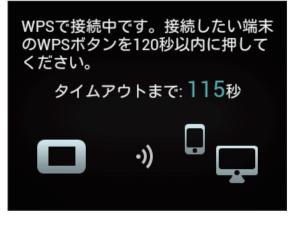

6

"OK"



・When "WPS 接続に失敗しました。" appears, Tap OK, then retry.

To make other settings on WLAN device, follow the onscreen instructions

When connection is established, WLAN connection count number on Display increases by one (e.g. ♀ ♀).

Precautions for Using WPS Function

SSID Stealth

While Wi-Fi router's stealth is enabled, WPS function is not available. For SSID stealth function, see "Quick Setup," "Setting LAN Wi-Fi."

Encryption

When encryption is set to WEP, WPS function is not available.

Connecting IEEE802.11b WLAN Device


IEEE802.11b WLAN Device

To connect IEEE802.11b WLAN Device, change Wi-Fi communication standard setting.

 Even except for IEEE802.11b WLAN Device, change of the settings may be required for WLAN connection. If you are unable to connect with WLAN, change Wi-Fi Communication Standard Setting and try.



"設定"

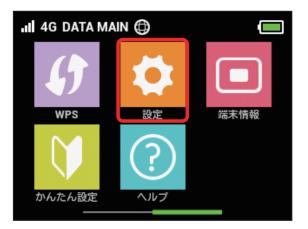




"Wi-Fi 通信規格設定 "



"IEEE802.11 g/n"

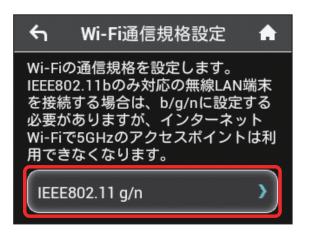

4

Tap checkmark of "IEEE 802.11 b/g/n"

۴	通信規格	A
IEEE802.11	g/n	~
IEEE802.11	b/g/n	×

Connecting IEEE802.11b WLAN device is enabled.

• Wi-Fi router is not used via Internet Wi-Fi 5GHz access point.

Connecting with Micro USB Cable (Windows)

USB Connection with Windows PC	52
Device Recognition/Removal on Windows PC	52
Installing/Uninstalling Driver (Windows PC)	54

USB Connection with Windows PC

Overview

Wi-Fi router automatically connects to Internet when powered on. Use a PC connected to Wi-Fi router with Micro USB Cable to transfer data.

Device Recognition/Removal on Windows PC

Device Recognition (Windows PC)


When connecting Wi-Fi router to PC for the first time, Driver software is automatically installed.

1

Power on PC

2

Connect Micro USB Cable to External Device Port, then insert USB plug into a PC

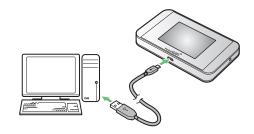

🏁 PC recognizes Wi-Fi router (it takes a while.)

• If auto-installation is not allowed on your PC, installation selection window may appear. Click "AutoRun.exe" to install driver.

Device Removal (Windows)

- For Windows 8.1/Windows 8/Windows 7 users, make sure to finish data upload or download, then remove Wi-Fi router.
- For Windows Vista users, use "Safely Remove Hardware/ Safe to Remove Hardware" to stop device operation, then remove Wi-Fi router from PC. See the following steps for removal.

1

Make sure that data uploading or downloading has finished


2

Double-click 🜄 on Task Tray

🏁 "Safely Remove Hardware" appears.

3

"USB Mass Storage Device" -> "Stop"

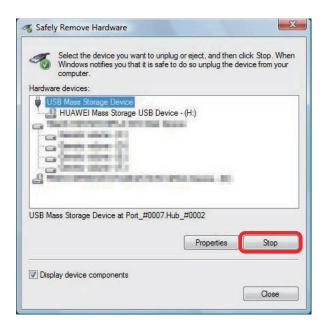

🏁 "Stop a Hardware device" appears.

If multiple USB devices are connected to PC, make sure to select Wi-Fi router.

4


"OK"



· Check if Wi-Fi router is safe to remove.

5

When message for safe removal appears, remove Wi-Fi router

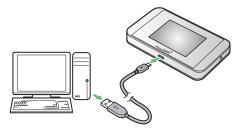

🔀 Device removal is complete.

Notes on Device Removal

Operation While in Standby/Sleep Mode

Wi-Fi router may malfunction if PC goes into standby (suspend/resume) or Sleep (hibernation) mode with it connected. Make sure to remove Wi-Fi router before PC goes into standby or Sleep mode. Wi-Fi router may malfunction if PC restarts or is turned on with it connected. Remove Wi-Fi router before starting PC.

WEB UI

Exit WEB UI before removing Wi-Fi router from PC. Do not remove Wi-Fi router from PC during data communication.

Installing/Uninstalling Driver (Windows PC)

Manual Installation

When connecting Wi-Fi router to PC for the first time, Driver software is automatically installed.

If installation does not start automatically depending on PC environment or installation selection window does not appear, install in the following steps.

Screenshots and steps described here are for Windows 8.1. • Power on PC and connect Wi-Fi router in advance.

1

Desktop -> Activate Explorer

2

"This PC"

- For Windows 7, Click "Start menu" → "Computer."
- · For Windows Vista, Click "Start menu" → "Computer."

3

Double-click "Pocket WiFi"

H 🖸 🖬 🖬 1		This PC			- 0 ×
The Computer	View				~ 6
🐑 🎯 🔹 🕇 🍺	This PC >			👻 👶 🛛 Search This PC	, р
Favorites Desidop Douriceds Douriceds Recent places This PC Desitop	Folders (6) Destrop Destrop Music Devices and drives (4)	Documents Pictures	Downloads		
Documents Documents	CD Drive (E) Pocket WiFi O bytes free of 4.58 MB CDFS		- Janaran		
• 🗣 Network					
10 items					81 22

"User Account Control" appears depending on PC setting.

4

"Yes"

- Installation is complete.
- · For Windows Vista, Click "Continue."

Uninstalling Driver

Screenshots and steps described here are for Windows 8.1.

1

Desktop -> Activate Explorer

2

"Computer" -> "Uninstall or change a program"

#1 🔉 🗄 ¥ 1	This PC	- 0 ×
File Computer V	for	-ca 🕤
Downloads Recent places This PC Desktop Decements	Desition Desition	
Documents Downloads Music Pictures Videos Local Disk (C)	Jugardana (
🗣 Network		
9items		10 g

3

In list, select "Pocket WiFi Service" → "Uninstall/Change"

8		Programs and Features			- 0
🐑 🍥 🝷 🕇 🚮 🕨 Control	Panel > All Control Panel Items > Programs and I	Features		v 🖒 Se	erch Programs and Features 🔎
Control Panel Home View installed updates Turn Windows features on or off	Uninstall or change a program To uninstall a program, select it from the list	and then click Uninstall, Change, or R	repair.		
	Organize + Uninstall/Change				(i • 🖬 🧕
	Name	Publisher	Installed On Size	Version	
		10 m			
	and the second	and the second second	1000		
	a second s	Conception in succession	and the second second	a location of	
	and the second se	the second second	and the second second	a contractor	
		the second second		and the second second	
	Pocket WiFi Service	Pocket WiFi	7/3/2014	22.001.25.00.168	
	Contraction of the local division of the loc	Sec.	25 1	1 See	
	Packat Wifi Product venion: 22 Help linit: htt		tp://web.setting		

🟁 Uninstallation starts.

🛨 Windows 7/Windows Vista

Windows 7

Operate as follows.

"Start menu" → "Control Panel" → "Programs" → "Programs and Features" → "Pocket WiFi Service" → "Uninstall/ Change" → In "User Account Control," "Yes"

🟁 Uninstallation starts.

Windows Vista

Operate as follows.

"Start menu" → "Control Panel" → "Programs" → "Programs and Features" → "Pocket WiFi Service" → "Uninstall/ Change" → In "User Account Control," "Continue"

🔀 Uninstallation starts.

\rm Notes on Installation

Removing

Do not remove Wi-Fi router during installation. May cause failure of installation, system shutdown or other abnormality.

Administrative Privileges

Log in as Administrator.

Connecting with Micro USB Cable (Mac)

USB Connection with Mac	58
Device Recognition/Removal on Mac	58
Installing/Uninstalling Driver (Mac)	59

USB Connection with Mac

Overview

Wi-Fi router automatically connects to Internet when powered on. Use a Mac connected to Wi-Fi router with Micro USB Cable to transfer data.

Device Recognition/Removal on Mac


Device Recognition (Mac)

1

Power on Mac

2

Connect Micro USB Cable to External Device Port, then insert USB plug into Mac

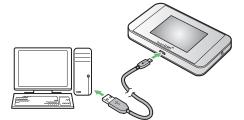

Mac recognizes Wi-Fi router (it takes a while.)

Remove Wi-Fi Router from Mac


Remove Wi-Fi router from Mac in the following steps.

1

Make sure that data uploading or downloading has finished

2

Remove Wi-Fi router from Mac

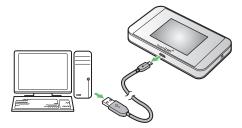



Operation During Sleep Mode

Wi-Fi router may malfunction if Mac goes into Sleep mode with it connected. Make sure to remove Wi-Fi router before Mac goes into Sleep mode. Wi-Fi router may malfunction if Mac restarts or is turned on with it connected. Remove Wi-Fi router before activating Mac.

WEB UI

Exit WEB UI before removing Wi-Fi router from Mac. Do not remove Wi-Fi router from Mac during data communication.


Installing/Uninstalling Driver (Mac)

Driver Installation (Mac)

Screenshots and steps described here are for Mac OS X 10.9.

1

Connect Wi-Fi router to Mac

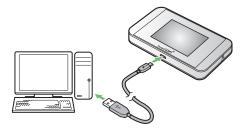

Pocket WiFi" icon appears on desktop and "Pocket WiFi" folder automatically opens.

2

Double-click "Pocket WiFi.app"

000	Pocket WiFi	
Pocket WiFi.app		

3

Enter Mac Name (user name) and Password and Click "OK"

mbbservicePkg wants to make changes. Type your password to allow this.
Name:
Password:

When complete, "Pocket WiFi" icon and "Pocket WiFi" folder are removed on Desktop.

Uninstalling Driver (Mac)

1

In Dock, 😰 → In "DEVICES," "Macintosh HD" → "Library"

00	Macintos	h HD		
< >		Q		
FAVORITES	Name	Date Modified	Size	Kind
All My Files	Applications	particular articular annual		Folder
Applications	v 🔝 Library	Man of Street, street		Folder
	 Improvement (regarded) 	Dec 10, DOLLARS		Folder
Desktop	> 10 million	THE PL. BURG. OR SH		Folder
Documents	> in iteration	hear & 2020-4, 20,700-		Folder
C Downloads	Internet in the second seco	Training, 181-181		Folder
0	 Externations 	Man. M. Delli R. Morris-		Folder
DEVICES	 Emoline 	Day 100, 01010, 110 and		Folder
Macintosh HD	 Interpretation 	BARLING, STORE, STATE		Folder
C Party Sector	 Internations 	August 20, 2011 A. 10, 10		Folder
	 Including titles being 	Inc. N. LEWIS CO.	122	Folder
TAGS	 In Community 	trans. M. Stat. S. Street		Folder
● レッド	 Inclusion for former 	Republic State, and a		Folder
	 International 	THE VEL BOARD AND THE	-	Folder
● オレンジ	> Dimensional Associations	Inter \$1, 1993; BOR-		Folder
- 1IC-	International	HAR ON, BUILDING		Folder
● グリーン	 International 	Marth, Mich. 2000		Folder
	> Dimension	Install, Bill & Billion		Folder
● ブルー	> (iii) miniti	NOT DRAFFICE AN AD	1000	Folder
● パーブル	> Dimension	here a, prove, party		Folder
0 221	> installer	Inter and America America		Folder
	 Imparticutor 	line (etc. line) a del		Folder
All Tags	 In the second sec	August, March March		Folder
	 Internet Phase Internet 	THE OL, BUILDER, M. R. R.		Folder
	> 🔛	Personal Della, Della,		Folder
	> (iii) (iiii)	INCOME, MILLION AND AND		Folder
	 Industria instanti 	PRODUCT, DOLL, DOUB		Folder
	 Institute 	Terri \$10,100,000, 5,0,000		Folder
	 Internet participants 	INCOME. INCOME.		Folder
	And an all the second s	and the lower and the		Paldes.

 "Macintosh HD" is a hard disk name. It may vary by operating environment.

2

"StartupItems" → "MobileBrServ" → Double-click "Uninstall. app"

000	Mac	intosh HD		
< >		Q		
FAVORITES	Name	▲ Date Modified	Size	Kind
All My Files		THE OWNER AND A DESCRIPTION OF		Folder
A Applications	 Indexe 	Dec 14, 8423, 55,448		Folder
	> in the local in	Har 20, BUILDER		Folder
Desktop	 In statifier 	Des Dil, Britt, 18 M		Folder
Documents	> 🔛 Managali	No. 10, 2023, 58 54		Folder
O Downloads	 Image: A second s	THE VE. BUT LIE IN		Folder
Obowinioaus	 Interiment 	Frank 10, 1983 A 497		Folder
DEVICES	 Income manufactory 	that off, strain, the sale		Folder
Macintosh HD		Real Vol. Drift S., Drift W.		Folder
And Contractor Contractor	 Implemente 	Nucl. 100, 8040.4, 710, 516		Folder
() Partition	 Internet 	Departs, and A. W. B.		Folder
TAGS	 intervit 	Der Dil, 2023, 58 24		Folder
	 Impactory 	Regist, and a most		Folder
	 Internation 	Des Dd. Brilling with		Folder
● オレンジ	V Startupitems	Number, 18-118	10.00	Folder
- 1ID-	MobileBrServ	TOBAL DE LA		Folder
● グリーン	ArConfig.dat	Number, Division	1 KB	Unix Eble File
	mbbservice	Barris, States, and	303 KB	Unix Eble File
● ブルー	mbbserviceopen.app	Frains, in a	205 KB	Application
● パーブル	MobileBrServ	Page 10, 2012 A, 30 (12	59 bytes	Unix Eble File
0 221	runmbbserviceopen	NAME AND ADDRESS OF TAXABLE PARTY.	121 bytes	Unix Eble File
	StartupParameters.plist	Number of Contraction	193 bytes	Property List
All Tags	Ininstall.app	Numero, Status	103 KB	Application
		PROD. PR. DOLLA, MINTER		Folder
	 Implates 	Nulling, 10-Cul-		Folder
		Date of the local division of the local divi		Folder
	 III Helen 	Frank 78, 1982 A. 199-41		Folder
	Implementation	Magnett, and A. and M.		Folder
		line (etc. line) a conver-		Folder
	Y GO Lennes	Der St. Digts 10 ed		Folder

3

Enter Mac Name (user name) and Password and Click "OK"

Uninstall wants to make changes. Type your password to allow this.
Name:
Password:

🟁 When complete, "MobileBrServ" folder becomes empty.

Settings (Touch Menu)

Touch Menu	62
Quick Setup	62
Showing/Setting Data Usage	64
Setting Internet Wi-Fi	69
Enable to Watch TV	71
Confirm Information	72
Checking WLAN Connected Device Information	75
Setting SSID or Authorization Method	75
Using WPS	80
Other Settings	82
Checking Wi-Fi Router Information	91
Checking Help	92
Operation for Setting Maximum Traffic	93

Touch Menu

Wi-Fi router Display is a Touchscreen. Tap Touch Menu icons to check function settings or product information.

Touch Menu

Touch Menu icons are as follows.

 


🖉 Touch Menu icon

For description for icons in Touch Menu, see "Touch Menu Icons."


Quick Setup

Use かんたん設定 to show SSID and Security Key, set Pass code for unlocking Screen Lock, and check details of watching TV.



1

"かんたん設定"

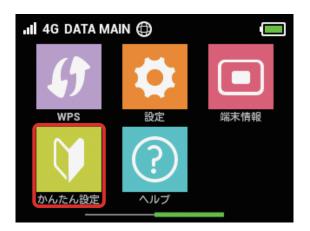


2

"次へ"




 For the first time activation or after resetting, "ようこそ!" screen (かんたん設定) appears. In that case, "ホームへ" is not shown. "次へ"

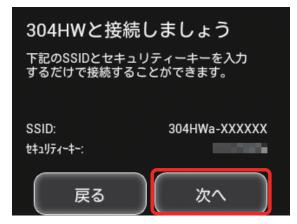

- Enter SSID and Security Key shown on the screen to connect WLAN devices.
- For connection to WLAN devices, see "Connecting Windows PC," "Connecting Mac," "Connecting Android™ Device," "Connecting iPhone/iPod touch/iPad," "Connecting Nintendo 3DS LL/3DS/DSi LL/DSi," "Connecting Wii U/ Wii," "Connecting PlayStation® Vita/PSP® (PlayStation® Portable)," "Connecting PlayStation®4," "Connecting PlayStation®3."

4

To set Pass code for screen unlock, Tap Entry Box

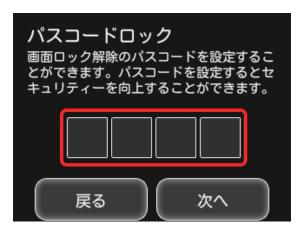

・If not setting Pass code, Tap "次へ" without any entry and go to step 8.

5

Enter four-digit Pass code → "OK"



 When Pass code is set, Pass code entry screen appears when unlocking screen. For unlocking screen by entering Pass code, see "Entering Pass Code to Unlock Screen."

6


Re-enter four-digit Pass code → "OK"




- Settings (Touch Menu)
- If re-entered Pass code is different from the one first entered, the screen returns to the step 5 screen. Input Pass code again.

7

"次へ"

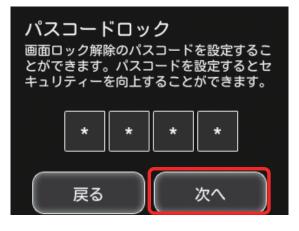

Confirm description for watching TV → " 次へ "

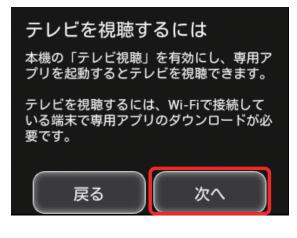

9

"ご利用開始"



Home screen appears. かんたん設定 is complete.

Showing/Setting Data Usage

Set to show/hide data traffic volume for mobile network on Display. Also, set maximum traffic or reset date for data traffic.

Data traffic is an estimation. May differ from actual traffic volume. For actual traffic volume, contact SoftBank Customer Support.

Data traffic does not include Internet Wi-Fi communication.

Check Data Traffic Volume

Show accumulated data traffic at the moment from start of use or reset.

1

" データ通信量 "



2

Check data traffic volume

د م	データ通信量 🔒
当月	269.98MB/2GB
	前回リセット日:2014-5-1 自動リセット日:毎月 31日
当日	99.17MB
1日前	j 56.27MB
2日前	〕 0.0B

Accumulated data traffic volume at the moment from start of use or reset is shown. Moreover, the data traffic from start to a maximum of three days before is also shown.

・Current data traffic volume compared to the maximum traffic volume set in "データ通信量設定" is shown. For setting maximum traffic, see "Setting Maximum Traffic."

Showing Data Traffic on Home Screen

1

" データ通信量 "



2

"設定"



3

"表示しない" of "ホーム画面に表示"



4

Tap checkmark of "当月" or "当日"

← ホーム画面に表示	A
表示しない	~
当月	*
当日	*

Settings (Touch Menu)

🧏 Settings are modified.

When Home screen is shown, 🗾 (Data traffic volume icon) on Home screen changes.

When "当月 " is selected, Accumulated data traffic volume at the moment from start of use or reset is shown on 🔜 (Bar icon). And when "当日 " is selected, the data traffic in the day is shown numerically.

• Data traffic volume shown in 🔜 (Bar icon) appears with three-digit numbers with decimal places rounded off.


Setting Maximum Traffic

Set monthly data traffic volume. When data traffic volume exceeds the set volume, Notification icon etc. appears.

- When "当月" is selected to show data traffic volume on Home screen, e (Bar icon) is shown on Home screen.
 When data traffic volume exceeds the maximum volume set in 最大通信量 (step 4), bar icon of data traffic changes to
 [Bar icon in red).
- Maximum traffic does not mean a limit on data communication. Use this volume as measure of usage.




" データ通信量 "

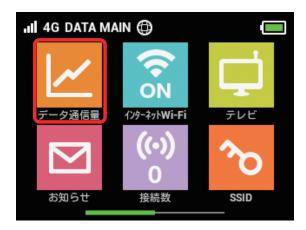

2

"設定"

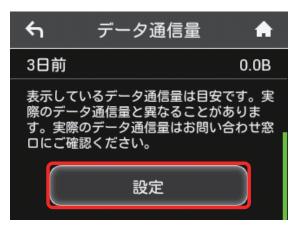

3

Tap number in "最大通信量 "



• Tap 🔒 (GB) to change unit for maximum traffic to 📠 (MB).

4

Enter number for maximum traffic → "OK"

4	← 最大通信量					
2					ОК	
1	2	3	4	5		
6	7	8	9	0		

Maximum traffic is set.

• Enter value number between 1 and 999.

Setting Auto Reset Date

Set date of month for automatically resetting accumulated data traffic.

It is reset at the timing which changes on the next day from set date.




"データ通信量"



2

"設定"

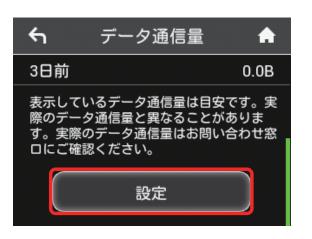

3

Tap number in " 自動リセット日 "



4

Enter day for Auto reset date → "OK"



🟁 Auto reset date is set.

- Enter value number between 1 and 31.
- \cdot If 31 is set, data traffic is reset at the end of the month.

"Reset" and "Auto Reset"

The reset items differ in "Reset" and "Auto Reset." The reset items are as follows.

Reset

Reset this month, current day, a day ago, two days ago, three days ago immediately.

· Auto Reset

Data traffic for this month resets as the date changes to the day after the reset date. Data traffic after the reset date continues to accumulate. Resetting Data Traffic

1

" データ通信量 "



2

"設定"






" リセット "



4

" はい "

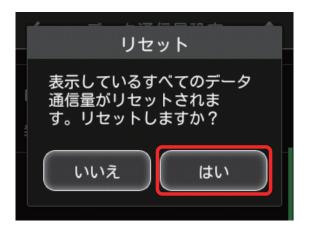

🟁 Data volume is reset.

Setting Internet Wi-Fi

Wi-Fi router connects to the Internet via a household or office WLAN router, SoftBank Wi-Fi spot, etc. This internet connection is called "Internet Wi-Fi."

Setting Internet Wi-Fi

Connect to the Internet via Wi-Fi.

- Simultaneous use of Internet Wi-Fi and Multi-SSID (SSID B) is not available.
- When Internet Wi-Fi function is enabled, communication speed may decrease depending on number of WLAN devices connected.

1

" インターネット Wi-Fi"



2


"利用可能なネットワーク"



- ・When " インターネット Wi-Fi" is "OFF," Tap "OFF" to "ON."
- ・When "インターネット Wi-Fi" is turned to "ON" with Multi-SSID (SSID B) enabled, information screen appears. Tap " はい " to disable Multi-SSID automatically.

3

Tap network to connect

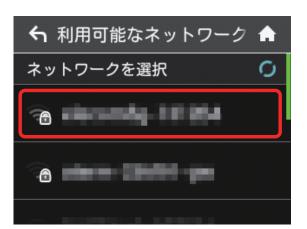

4

Enter Security Key, "OK"






Setting Up SoftBank Wi-Fi Spot

Use a SoftBank Wi-Fi Spot to connect to the Internet.

1

" インターネット Wi-Fi"

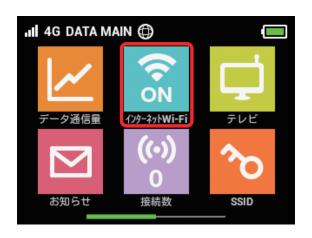

2

In " ソフトバンク Wi-Fi スポット ," "OFF"



- ・When "インターネット Wi-Fi" is "OFF," Tap "OFF" to "ON."
- ・When "インターネットWi-Fi" is turned to "ON" with Multi-SSID (SSID B) enabled, information screen appears. Tap "はい" to disable Multi-SSID automatically.

3

" ログインパスワード "



4

Tap Number Keys to enter four-digit login password, then "OK"



Wi-Fi router connects to SoftBank Wi-Fi Spot. Internet connection is available.

 Connecting to a New Network via Internet Wi-Fi

In Home screen, "インターネットWi-Fi"→"利用可能なネットワー ク"→"ネットワークを追加"→ Enter SSID → "OK" → Select authorization → "OK" → Enter Security Key → "OK"

🧭 Wi-Fi router connects to the entered SSID device.


Enable to Watch TV

When "テレビ視聴 " is set to " 有効," TV is viewable using a TV application on a mobile device connected via Wi-Fi. This function is set to " 有効 " by default. For watching TV, see "Terrestrial TV."

Set "テレビ視聴" on Wi-Fi router to "有効"


1

"テレビ"

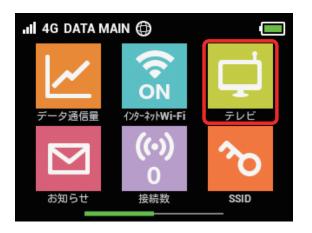

2

"テレビ視聴"

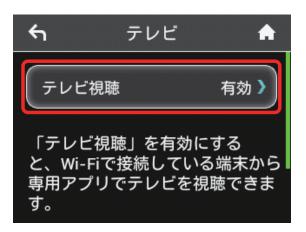

3

Tap checkmark of " 有効 "



🌠 "テレビ視聴" is set to "有効."


Confirm Information

Wi-Fi router receives available Information notices.

Confirm Information

1

" お知らせ "

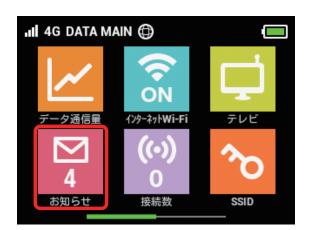

2

Tap Information to confirm



3

Confirm Information



🟁 Confirm Information.

" お知らせ "



2

Tap Information to delete



3

"削除"



4

" はい "



5

"OK"



Information is deleted.

Select and Delete Information

1

" お知らせ "



2

Checkmark Information to delete



· Checkmark Checkbox on the top of screen to select all.

3



4

 
"はい"





"OK"






Checking WLAN Connected Device Information

Check WLAN device information such as PC, smartphone, game consoles connected to Wi-Fi router.

Checking WLAN Connected Device Information



" 接続数 "

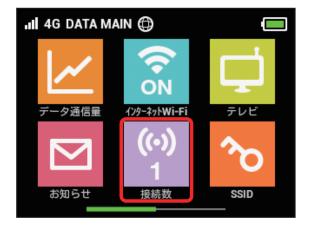

2

Check connected devices



MAC address or device names, connection times for devices connected to Wi-Fi router are shown.


Setting SSID or Authorization Method

Set Wi-Fi router SSID (Network Name), Security Key (WPA Key or WEP Key), authorization or encryption. Also, enable/disable Multi-SSID (SSID B) for using two SSIDs.

SSID and Security Key



"SSID"

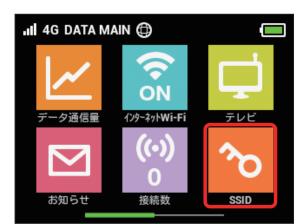

2

"SSID"



Enter SSID, then "OK"

۴۱		SSID		A
304HWa-XXXXXX				ОК
_	. @ 1	ABC 2	DEF 3	
•	GHI 4	JKL 5	MNO 6	
記号	PQRS 7		WXYZ 9	
文学 人 1	A ++ a	ō	, .	HR

• For setting details such as text string for SSID, see "Wi-Fi Router Settings (Setting Range/Default Value)."

4

" セキュリティーキー "



5

Enter Security Key, then "OK"

ہ	t	キュリティーキ	:~	A
xxxxxxx			ОК	
5	. @ 1	ABC 2	DEF 3	
•	GHI 4	JKL 5	MNO 6	
記号	PQRS 7		WXYZ 9	
文字 人 1	A ++ a	ū	, .	

Entered SSID and Security Key are set.

For setting details such as text string for Security Key, see
 "Wi-Fi Router Settings (Setting Range/Default Value)."

Authorization Method and Encryption Method

Select authorization and encryption used for WLAN connection.

Select authorization method and encryption method from the following.


· Authorization method

Item	Description
自動	"Open" or "Shared key" is selected automatically according to the connecting device authorization method; "WEP" is selected for encryption
Open	Authorization is not available; "NONE" or "WEP" is selected for encryption
Shared key	Authorize using WEP Key; "WEP" is selected for encryption
WPA2-PSK	Authorize using WPA Security Key; "AES" is selected for encryption
WPA/WPA2- PSK	Authorize using WPA Security Key; "AES+TKIP" is selected for encryption

Encryption method

Item	Description
NONE	Security Key is not used; When "Open" is selected in Authorization method
WEP	When " 自動 "/"Shared key"/"Open" is selected in Authorization method
AES	When "WPA2-PSK" is selected in Authorization method
AES+TKIP	When "WPA/WPA2-PSK" is selected in Authorization method

"SSID"

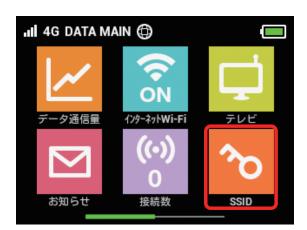

2

" 認証方式 "



3

Tap checkmark for authorization



🕺 Authorization method is modified.

- ・Notification appears for some authorization methods requiring that Security Key be changed. In that case, Tap " はい" and enter Security Key on Entry screen.
- \cdot If authorization does not appear, Flick to scroll window.


4		
f		
<u>ج</u>	認証方式	A
Shared key		~
WPA2-PSK		~
WPA/WPA2	-PSK	~

" 暗号化方式 "



6

Tap checkmark for encryption

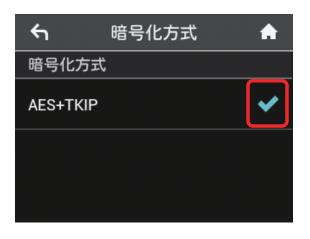

Communication is performed with selected authorization and encryption.

Enabling Multi-SSID


Turn on Multi-SSID (SSID B) to set basic WLAN for SSID B.

- To use SSID B, turn off Internet Wi-Fi function. Connect to the Internet via mobile network.
- · SSID B does not support WPA/WPA2.
- When Multi-SSID is enabled, communication speed may decrease depending on number of WLAN devices connected.

1

I

" インターネット Wi-Fi"

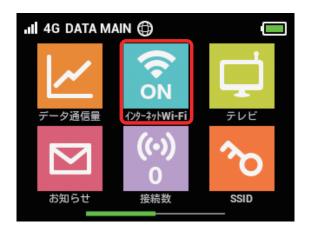

2

Tap "ON" in " インターネット Wi-Fi"



※ "設定中 " message appears and " インターネットWi - Fi " turns to "OFF." Return to Home screen to confirm " インターネット Wi-Fi" icon is "OFF," then "SSID"



4

"OFF" of "SSIDB 有効 " in "SSID B"

ssid 🔶
AES+TKIP >
OFF

・When Internet Wi-Fi is turned to "ON" with "SSIDB 有効" enabled, Information screen appears. Tap "はい" to disable Internet Wi-Fi function automatically.

5

Set SSID and Security Key, authorization and encryption as well as SSID $\ensuremath{\mathsf{A}}$

€ 1	SSID	A
SSIDB有効		ON
SSID	304HWb-XX	XXXX >
セキュリティーキー		•••

🕺 SSID B is available.

 For setting procedures, see "Setting SSID or Authorization Method."

Using WPS

Wi-Fi router supports WPS. Use WPS to connect WPS supported game console or wireless router easily.

Connecting WLAN Device

Connect WPS supported WLAN devices.


1

Enable WLAN function on WLAN device, and make any required WPS settings

 Method of setting WPS function varies by device. See WLAN device user guide etc.

2

"WPS"

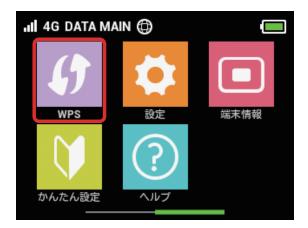

3

" 無線 LAN 端末と接続する "





While window below appears (within 120 seconds), set up WPS connection on WLAN device





"OK"



・When "WPS 接続に失敗しました。" appears, Tap "OK," then retry.



To make other settings on WLAN device, follow the onscreen instructions

Wi-Fi router connects to WLAN device.

Connecting to the Access Point

Connect WPS supported access point.

• Enable Internet Wi-Fi in advance.


1

Enable WLAN function on access point device, and make any required WPS settings

 Method of setting WPS function varies by device. See access point device user guide etc.

2

"WPS"

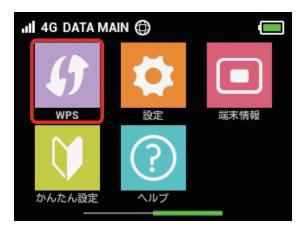

3

"アクセスポイントと接続する"



4

While window below appears (within 120 seconds), make WPS connection settings on access point device



5

"OK"



・When " インターネット Wi-Fi WPS 接続に失敗しました。" appears, Tap "OK," then retry.

6

To make other settings on access point device, follow the onscreen instructions

🥙 Wi-Fi router connects to access point.

Precautions for Using WPS Function

SSID Stealth

While Wi-Fi router's stealth is enabled, WPS function is not available. For SSID stealth function, see "Quick Setup," "Setting LAN Wi-Fi."

Encryption

When encryption is set to WEP, WPS function is not available.

Other Settings


Make settings including rearranging Home screen icons, Roaming, Pass code for unlocking Screen Lock, Brightness, Sleep, Wi-Fi Communication Standard, Software Update, Clear Notification icons, etc.

Home Screen

Rearrange Touch Menu icons on Home screen.

1

"設定"

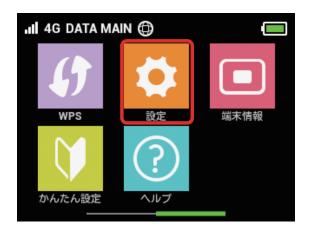

2

"ホーム画面設定"



3

Tap icon to switch



Selected icon is framed in white.

・" データ量設定 " icon cannot be selected and switched.

4

Tap icon to switch with



Selected icons are switched.



Mome screen with icons rearranged appears.


 To reset Home screen to the default, Tap "ホーム画面設定を リセット "→"はい."

International Roaming

Enable auto-International roaming connection.

1

"設定"

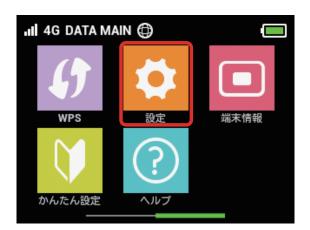

2

"国際ローミング設定"



3

In " 自動接続 ," "OFF"



"OFF" is turned to "ON." International roaming is available.

Screen Lock

Set Pass code entry for canceling Screen Lock.

1

"設定"




2

"画面ロック設定"



3

In " パスコードロック ," "OFF"

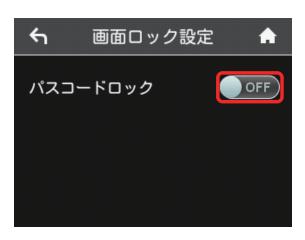

4

Enter four-digit Pass code → "OK"



5

Re-enter four-digit Pass code → "OK"



🧭 Unlocking Pass code is set.

- If re-entered Pass code is different from the first one entered, screen returns to the step 4 screen. Input Pass code again.
- When Pass code is set, Pass code entry screen appears when unlocking screen. For unlocking screen by entering Pass code, see "Entering Pass Code to Unlock Screen."
- ・To change the set Pass code, in step 3, Tap "パスコード変更" and enter Pass code, then set a new Pass code.

Slide screen up or down to unlock



2

Enter four-digit Pass code → "OK"



Screen is unlocked and Home screen appears.


- · If Pass code is incorrect, re-enter prompt appears.
- If you forget Pass code, reset Wi-Fi router to cancel Screen Lock by Pass code. To reset Wi-Fi router, see "Wi-Fi Router" or "Resetting Wi-Fi Router." By resetting, note that in addition to Pass code for Screen Lock, all Wi-Fi router settings return to their default state.

Changing Screen Brightness

Set screen brightness.

1

"設定"

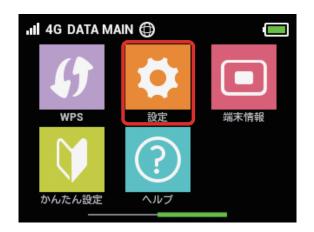

2

"ディスプレイ設定"



3

Tap brightness bar



Screen backlight is changed to the set brightness.

85

Brightness is set in five levels.

Settings (Touch Menu)

Changing Backlight Time

Set backlight timeout when there is no operation of Wi-Fi router.

1

"設定"



2

" ディスプレイ設定 "



3

" バックライトの点灯時間 "



4

Tap checkmark for desired seconds




Backlight changes to the set timeout.

Setting Sleep Mode

When operation is not performed for a certain period of time or when charging Battery without connection to any WLAN device, Wi-Fi router goes into Sleep mode for energy-saving. Set time period for Sleep mode. Five minutes are set by default. And set Sleep to OFF not to shift to Sleep mode.

1

"設定"

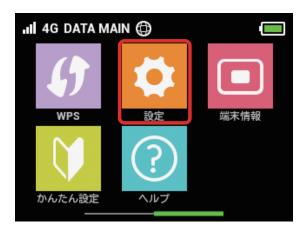


2

"スリープ設定"



3

"オフまでの時間 "

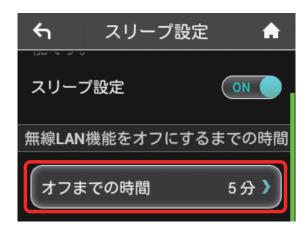

 \cdot Without using Sleep mode, Tap "ON" to turn to "OFF."

4

Tap checkmark for desired minutes

ب	オフまでの時間	A
1分		V
3分		
5分		~


🧭 Wi-Fi router goes into Sleep mode at set time.

Wi-Fi Communication Standard Setting

If you are unable to connect with WLAN at the time of purchase, you may be able to do so by changing Wi-Fi Communication Standard Setting.

1

"設定"

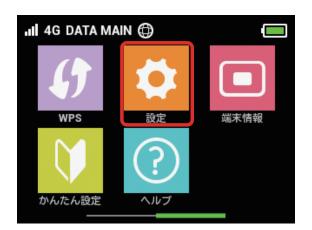


2

"Wi-Fi 通信規格設定 "



3

"IEEE802.11 g/n"

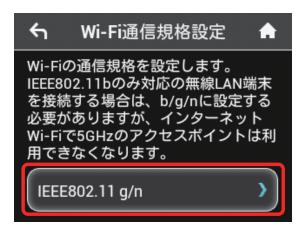

4

Tap checkmark for communication standard



Set Wi-Fi Communication Standard Setting.

• When IEEE802.11 b/g/n is set, Wi-Fi router cannot be used via Internet Wi-Fi 5GHz access point.

Updating Software

Update software.


1

"設定"




2

"ソフトウェア更新"

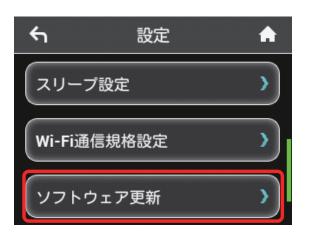

3

"ソフトウェア更新"

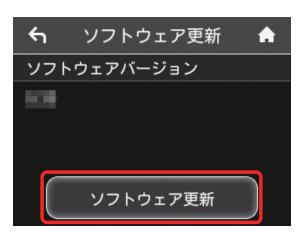

4

Confirm message and " (געי "



- Checks for the latest software. If software update is found, update software.
- ・When software in use is the latest, "お使いのソフトウェアは最 新版です。" appears.

Software Update

Packet communication charges are not applied for Software update.


While software is updated, other functions are disabled. Software update is not available during International roaming.



Clear present Notification icons for maximum traffic.

1

"設定"

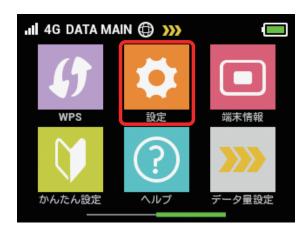


2

"通知アイコン消去"



3

"ご利用データ量"

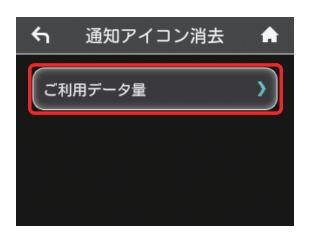

4

"はい"





"OK"



Shown Notification icons are cleared.

・This step clears only Notification icons shown on Status Bar. "データ量設定 " icon on Touch Menu is not cleared.


Checking Wi-Fi Router Information

Check Wi-Fi router status such as URL for WEB UI, phone number, software version, etc.

Checking Wi-Fi Router Information



"端末情報"

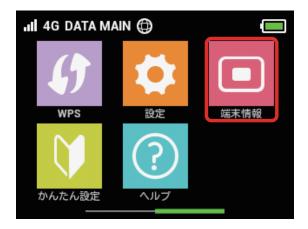

2

Check Wi-Fi router information



Check information as follows.


Item	Description
WEB UI URL	URL for accessing WEB UI
電話番号	Phone number saved to USIM Card
IMEI	Serial number
ソフトウェアバー ジョン	Software version
機種名	Product name (304HW)

Check Certification

Wi-Fi router is certified according to various standards.

1

" 端末情報 "

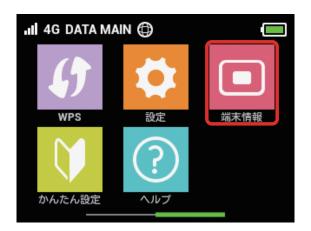

2

"認証"



3

Check certification




Checking Help

Check description for status icons or Touch Menu icons appearing in the top of window.

Viewing Description for Status Icons

" ヘルプ "

1

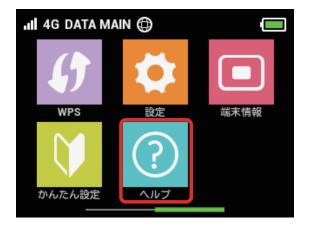

2

"ステータスアイコン"




🕺 Description for Status icons appears.

Viewing Description for Touch Menu Icons

1

" ヘルプ "

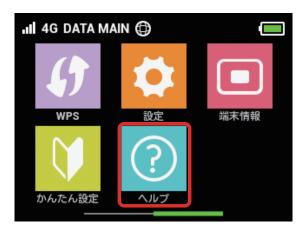

2

"タッチメニューアイコン"



Description for Touch Menu icons appears.

Operation for Setting Maximum Traffic

Clear Notification Icons

Clear present Notification icons for maximum traffic.


1

"設定"




2

"通知アイコン消去"

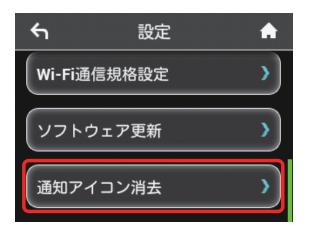

3

"ご利用データ量"

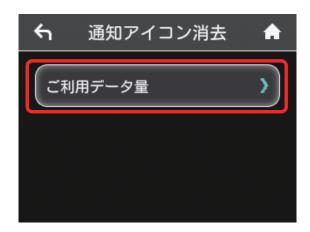

4

"はい"



5

"OK"



Shown Notification icons are cleared.

・This step clears only Notification icons shown on Status Bar. "データ量設定" icon on Touch Menu is not cleared.

Apply Ahead for Release from Speed Reduction (on Pop-up Screen)

When a pop-up notice appears for an approaching Communication speed reduction, you can apply ahead to have the speed reduction released.

Operation screen may look different from the actual screens.

1

Check Information on pop-up screen -> "はい"



· When Error message is shown, retry.

2

Select data traffic to release







Application ahead is complete.

Apply Ahead for Release from Speed Reduction (on Touch Menu)

You can apply ahead to have data traffic released from speed reduction on Touch Menu.

Operation screen may look different from the actual screens.



" データ量設定 "



· When Error message is shown, retry.

2

Select data traffic to release



3

"設定"

 


4

"OK"



Application ahead is complete.



If release from speed reduction is applied for ahead, you can cancel your application.

· Operation screen may look different from the actual screens.

1

" データ量設定 "



When Error message is shown, retry.



"予約をキャンセルする"

۴	予約の取消	A
	通常速度を維持する りをキャンセルします	0
	データ量 (追加料金)	
	XGB(X,XXX円)	
Ŧ	予約をキャンセルする	





Application ahead is canceled.

Release Speed Reduction (on Pop-up Screen)

When a pop-up notice appears for the start of Communication speed reduction, you can apply to have the speed reduction released and return to normal speed.

Operation screen may look different from the actual screens.

1

Check Information on pop-up screen -> " はい "



• When Error message is shown, retry.


2

Select data traffic to release



3

"設定"

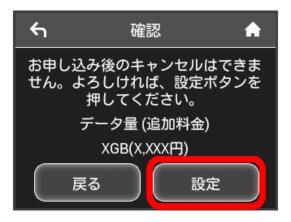


4





 Application is complete.



You can apply to have data traffic released from speed reduction on Touch Menu.

Operation screen may look different from the actual screens.

1

" データ量設定 "



When Error message is shown, retry.



Select data traffic to release

← 通常速度に戻す申込 🔶
通常速度に戻します。 追加料金を選択してください。
データ量 (追加料金)
XGB(X,XXX円)



4

"OK"



Application is complete.

Browser screen during speed reduction

The following screen is shown when opening a web page under Communication speed reduction.

- Select "通常速度に戻さない" when a web page is shown.
 When repowering handset on, the browser screen under speed reduction may be shown again.
- To discontinue this screen from being shown, check " 次の低速化開始まで表示しない." The browser screen under speed reduction will not be shown until the next speed reduction.



Settings (WEB UI)

Overview of WEB UI	102
WEB UI Window on PC	104
Quick Setup	108
Setting Mobile Network	111
Setting Internet Wi-Fi	122
Setting LAN Wi-Fi	128
Router Setting	141
System	159
Showing/Setting Data Usage	164
Confirm Information	170
Setting Software Update	176
Setting from Mobile Device	178

Overview of WEB UI

Connect Wi-Fi router to a computer or mobile device via Micro USB Cable or WLAN. Use web browser to check Wi-Fi router information or make settings.

For web browser support, see "Operating Environment (Compatible Operating Systems)."

Activating WEB UI on PC

Screenshots and steps described here are for computer (Windows 8.1) compatible with WEB UI.

1

Start computer and connect Wi-Fi router via WLAN or USB Cable

• For WLAN connection with PC, see "WLAN (Wi-Fi)," and for USB connection, see "Connecting with Micro USB Cable (Windows)," "Connecting with Micro USB Cable (Mac)."

2

"端末情報"



🕺 URL of WEB UI appears on Display of Wi-Fi router.

Activate browser on the PC and enter URL (http://web.setting) shown on Display in the address bar of browser


€1	端末情報 1	A		
WEB UI UF	1L			
http://web.setting				
電話番号				
MAIN: SUB:				

🟁 WEB UI Home Page appears.

• Select English from Language list.

WEB UI Window on PC

Layout

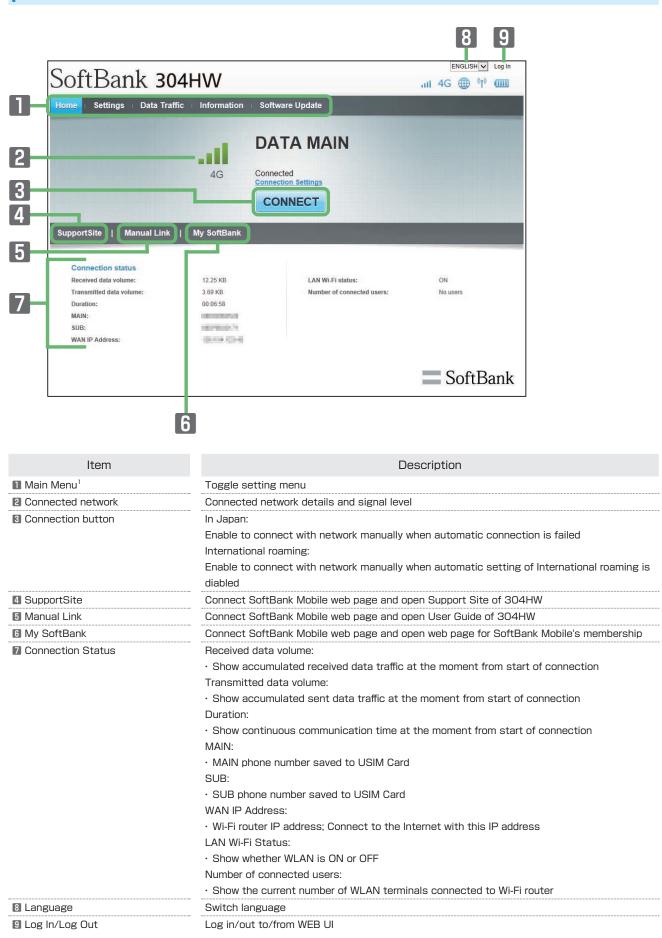

1 Input Login password when having not logged in to WEB UI.

	SoftBank 304	
0-	Quick Setup Mobile Network -Mobile Network Profile Management PIN Management Internet Wi-Fi Quick Setting Router Setting System	Mobile Network Network Search Mode: Auto Apply
2		International Roaming Auto connection: Enable Disable If you want to use international roaming, communication fees would be expensive. Apply


Item	Description		
1 Menu List	Show Submenus; Click option to toggle setting page		
2 Setting Page	Information/Setting for each function		
Software Update Notification	Appears when update file is available		
4 Signal Strength	Mobile Network		
	· , , , , , (Strong) ⇔ , , , , (Weak) ⇔ 圏外 (Out of Service Area)		
	Internet Wi-Fi		
	\cdot $rightarrow$ (Strong) \Leftrightarrow $rightarrow$ (Weak)		
5 Network Type	Mobile Network		
	 4G: SoftBank 4G connected 		
	LTE: SoftBank LTE connected		
	 3G: SoftBank 3G connected 		
	Internet Wi-Fi		
	• 奈 : Internet Wi-Fi connected (Including SoftBank Wi-Fi Spot)		
6 Internet Connection Status	I Connected to Internet		
	Internet :: Internet:		
7 WLAN Status	(위 :WLAN is ON		
	ም :WLAN is OFF		
Battery Level	$(IIII) (High) \Rightarrow (ILow)$		
	(Flashing): Nearly empty (Charge Battery)		

Settings (WEB UI)

Logging into WEB UI from PC

1

In Main Menu of WEB UI Home Page, "Log In"

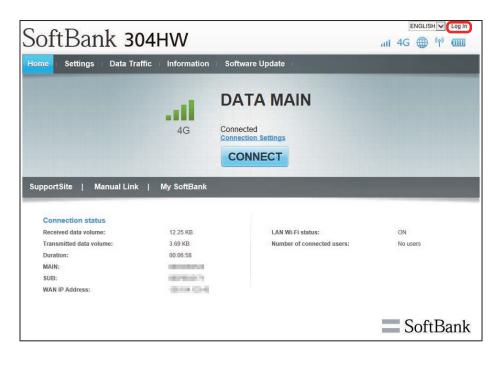

🕺 Login window opens.

· Alternatively, Click Main Menu item ("Settings"/"Data Traffic"/"Information"/"Software Update").

2

Enter Login password → "Log In"

Log	ı In		
	Password:		
	••••	^	
			Log In

Icog In" in the top right window changes to "Log Out." Login is complete. For login from Main Menu item ("Settings"/"Data Traffic"/"Information"/"Software Update"), clicked item page appears.

· Password is "admin" by default.

Default Login Password

For enhancing security, it is recommended to change default Login password. To change Login password, see "Changing Login Password for WEB UI."

Logging into WEB UI

Please note the following for WEB UI login.

- While operating Display on Wi-Fi router, Login to WEB UI is not available. Press Power Button and turn off Display or Lock Screen. Then log in to WEB UI.
- \cdot Login to WEB UI from two or more devices simultaneously is not available.
- · Connecting to WEB UI is not available from SSID B.
- When five minutes passes without operation on WEB UI, you are logged out automatically, and entered information is deleted.

Changing Settings via WLAN Connection

Changing Internet Wi-Fi setting, LAN Wi-Fi setting on WEB UI from device connected via WLAN may disconnect WLAN connection.

Quick Setup

Clicking "Settings" in WEB UI Main Menu opens Quick Setup Wizard. Set basic items such as SSID, authorization, and Security Key for connecting WLAN device. Settings are changed later.

Quick Setup

Setting items are as follows:

Item	Description
SSID	Set SSID (Network Name)
Authorization method	Set authorization method
Encryption method	Set encryption method
WPA security key	Appears when "WPA2-PSK" or "WPA/WPA2-PSK" is selected in Authorization method.
WFA Security Key	Enter Security Key
WEP key 1	Appears when "Auto," "Open," or "Shared key" is selected in Authorization method and
WLF KGY I	Encryption method is "WEP." Enter WEP key
SSID stealth	Set whether to send Wi-Fi router SSID

· For setting values, see "WEB UI Settings (Setting Range/Default Value)."

1

In Main Menu, "Settings"

	affic Information	Software Update	
	att	DATA MAIN	
	4G	Connected	
		CONNECT	
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN WI-Fi status: Number of connected users:	ON No users
Received data volume: Transmitted data volume: Duration:	3.69 KB 00:06:58		
Received data volume: Transmitted data volume: Duration: MAIN:	3.69 KB 00:06:58		
Received data volume: Transmitted data volume: Duration:	3.69 KB 00:06:58		

🕺 Quick Setup Wizard appears.

"Next"

2

Home : Settings : D	ata Traffic	: Information : Software Update :
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
System	0	Next

3

Confirm description for SSID and SSID Stealth in LAN Wi-Fi setup, "Next"

Home Settings	Data Traffic	: Information ⊨ Software Update ⊨
Quick Setup		LAN Wi-Fi Setup
Mobile Network Setting	0	Step 2 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	SSID: You can contain a maximum of 32 one-byte alphanumeric characters as a name of
Router Setting	0	wireless local area network (LAN Wi-Fi).
System	0	SSID stealth
		Enable: Turning on this function will not broadcast SSID. SSID will be hidden, but SSID should be entered on devices to connect. Disable: This allows search and connection of WI-Fi network from devices to connect. Back Next

4

Configure LAN Wi-Fi, "Next"

Home Settings	Data Traffic	: Information Software I	Update	
Quick Setup		LAN Wi-Fi Setup		
Mobile Network Setting	0			Step 3 of 4
Internet Wi-Fi	0	201D 4		
LAN Wi-Fi	0	SSID A SSID:	304HWa-XXXXXX	
Router Setting	0	Authorization method:	WPA/WPA2-PSK	
System	0	Encryption method:	AES+TKIP	
		WPA security key:	•••••	
		SSID stealth:	Disable	
				Back

Check network configuration, "Complete"

Home Settings	Data Traffic	: Information Softwa	are Update	
Quick Setup		Confirm setting		
Mobile Network Setting	0			Step 4 of 4
Internet Wi-Fi	0			
LAN Wi-Fi	0	SSID A		
Router Setting	0	SSID:	304HWa-XXXXXX	
System	0	Authorization method:	WPA/WPA2-PSK	
		Encryption method:	AES+TKIP	
		SSID stealth:	Disable	
				Back Complete

Settings such as SSID, authorization, Security Key are complete and Home screen appears.

Make advanced settings when using 4G/LTE/3G network.

Check Search Mode of Mobile Networks

Search Mobile networks to set network. In Japan, always use auto-mode. Settings are not changed.

1

In Menu List, "Mobile Network Setting" -> "Mobile Network"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Mobile Network		
Profile Management		Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
PIN Management		content changed, and return to the Home screen.
Internet Wi-Fi	0	
LAN Wi-Fi	0	Next
Router Setting	0	
System	0	

Search mode appears.

International Roaming

Overseas, roaming service for 3G is available.

1

In Menu List, "Mobile Network Setting" -> "Mobile Network"

Home Settings Data Tra	affic = Information = Software Update =
Quick Setup	Welcome to The Quick Setup Wizard
Mobile Network Setting	Step 1 of 4
Profile Management PIN Management	Allows to set a minimum on LAN WI-FI. When press the "home" button in process, not save content changed, and return to the Home screen.
Internet Wi-Fi	
LAN Wi-Fi O	Next
Router Setting	
System O	

2

Change International roaming → "Apply"

Home Settings	Data Traffic	⊨ Information ⊨ Software Update ⊨
Quick Setup		Mobile Network
Mobile Network Setting	0	
→Mobile Network		Network Search
Profile Management PIN Management		Mode: Auto 🔽
Internet Wi-Fi	0	
LAN Wi-Fi	0	Apply
Router Setting	0	
System	0	
		International Roaming Auto connection: C Enable Disable If you want to use international roaming, communication fees would be expensive. Apply

International roaming setting is changed.

Creating Profile

Set the following items and create profile.

Item	Description
Profile name	Enter profile name
APN	Enter APN
User name	Enter username
Password	Enter password
Authorization method	Select authorization method

· For setting values, see "WEB UI Settings (Setting Range/Default Value)."

1

In Menu List, "Mobile Network Setting" -> "Profile Management"

Home Settings	Data Traffic	Information E Software Update E
Quick Setup Mobile Network Setting	0	Welcome to The Quick Setup Wizard
Mobile Network		Step 1 01 4
Profile Management PIN Management		Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save content changed, and return to the Home screen.
Internet Wi-Fi	0	
LAN Wi-Fi	0	Next
Router Setting	0	
System	0	

2

"New profile"

Information Software U	lpdate ⊨
Profile Managemen	nt
Profile name:	Commercial 1(default)
APN:	*****
User name:	*****
Password:	******
Authorization method:	*****
	New profile Edit Delete
	Profile Managemer DATA MAIN Profile name: APN: User name: Password:

Set each item → "Save"

New profile		×
Profile name:	XXXXXXXXXXX	
APN:	XXXXXXXXXXX	
User name:	XXXXXXXXXX	
Password:	•••••	
Authentication:	Auto 🗸	
	Save	

Created profile appears for profile name.


Editing Profile

Edit already saved profile.

Initial profile set by default and currently used profile cannot be edited.

1

In Menu List, "Mobile Network Setting" -> "Profile Management"

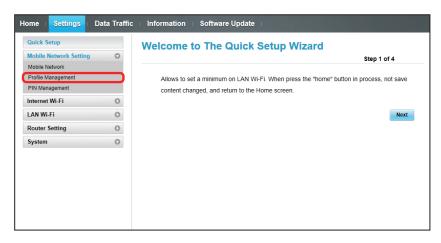

2

Select profile name → "Edit"

Home Settings Data Traf	fic Information Software Up	odate :	
Quick Setup	Profile Management	t	
Mobile Network Setting			
Mobile Network	DATA MAIN		
→Profile Management			
PIN Management	Profile name:	XXXXXXXXXX(default)	\checkmark
Internet Wi-Fi O			
LAN Wi-Fi 🔹 💿	APN:	XXXXXXXXXX	
Router Setting O	User name:	XXXXXXXXXX	
System O	Password:	******	
	Authorization method:	Auto	
		New p	rofile Edit Delete



Enter each item → "Save"

Edit		*
Profile name:	XXXXXXXXXX	
APN:	XXXXXXXXXX	
User name:	XXXXXXXXXX	
Password:	••••	
Authentication:	Auto 🗸	
	Save	

Deleting Profile

Delete created profiles. Preset profiles are not deleted.

1

In Menu List, "Mobile Network Setting" -> "Profile Management"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Nobile Network		
Profile Management		Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
PIN Management		content changed, and return to the Home screen.
nternet Wi-Fi	0	
AN Wi-Fi	0	Next
Router Setting	0	
System	0	


2

Select profile name → "Delete"

Quick Setup		Profile Managem	ent	
Mobile Network Setting	0			
Mobile Network		DATA MAIN		
Profile Management				
PIN Management		Profile name:	XXXXXXXXXXX(default)	~
nternet Wi-Fi	0			
AN WI-FI	0	APN:	XXXXXXXXXX	
Router Setting	0	User name:	XXXXXXXXXXXX	
System	0	Password:	******	
		Authorization method:	Auto	
			New prof	ile Edit Delete

3

"OK"

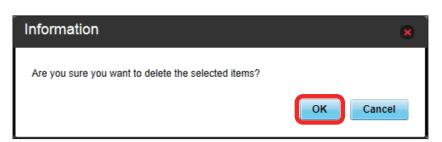

Profile is deleted.

USIM PIN

PIN (Personal Identification Number) is a code to prevent unauthorized use.

- Enable PIN verification to use Wi-Fi router by PIN entry on Wi-Fi router or WEB UI when Wi-Fi router is powered on.
- Incorrectly entering PIN code three consecutive times activates PIN Lock. PUK Code is required to unlock it. For details about PUK, contact Customer Service, General Information. Incorrectly entering PUK Code ten consecutive times locks Wi-Fi router completely. If Wi-Fi router is completely locked, Wi-Fi router must be serviced. Contact Customer Service, General Information.

PIN Verification

Set PIN Verification. USIM PIN is "9999" by default.

1

In Menu List, "Mobile Network Setting" -> "PIN Management"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Mobile Network		
Profile Management		Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
PIN Management		content changed, and return to the Home screen.
Internet Wi-Fi	0	
LAN Wi-Fi	0	Next
Router Setting	0	
System	0	

2

Set "PIN verification" to "Enable" → Enter PIN code → "Apply"

Home Settings I	Data Traffic	Information Softw	vare Update
Quick Setup		PIN Manageme	nt
Mobile Network Setting	0		
Mobile Network Profile Management		If PIN setting is ena	abled, need to enter PIN code each time the power is on.
→PIN Management		PIN verification:	Enable
Internet Wi-Fi	0	PIN code:	••••
LAN Wi-Fi	0	Remaining attempts:	3
Router Setting	0		
System	0		Apply

PIN code entry from Wi-Fi router or WEB UI is required when Wi-Fi router is powered on.

PIN Verification (WEB UI)

1

Activate web browser and enter "http://web.setting" in address bar

2

Enter four- to eight-digit PIN code

PIN Required	
PIN code: Remaining attempts: 3	
	Apply

3

"Apply"

PIN code: Remaining attempts: 3	PIN Requ	ired	
Арріу	PIN code:		
			Anniv
			Appiy

 \gg When correct PIN is entered, Home screen appears.

Slide screen up or down to unlock



2

Enter four- to eight-digit PIN \rightarrow "OK"



When correct PIN is entered, Home screen appears.

Settings (WEB UI)

Changing PIN

Change PIN. PIN can be changed when PIN verification is enabled.

1

In Menu List, "Mobile Network Setting" → "PIN Management"

Home : Settings : Dat	ta Traffic	Information Software Update
Quick Setup	0	Welcome to The Quick Setup Wizard
Mobile Network Setting Mobile Network		Step 1 of 4
Profile Management PIN Management		Allows to set a minimum on LAN WI-Fi. When press the "home" button in process, not save content changed, and return to the Home screen.
Internet Wi-Fi	0	
LAN Wi-Fi Router Setting	0	Next
System	0	

2

Set "PIN verification" to "Modify" → Set required items → "Apply"

Home Settings	Data Traffic	Information Softw PIN Manageme	vare Update	
Mobile Network Setting Mobile Network Profile Management	0		abled, need to enter PIN code each time	the power is on.
→PIN Management		PIN verification:	Modify 🖌	
Internet Wi-Fi	0	PIN code:	••••	
LAN Wi-Fi	0	New PIN:	••••	
Router Setting	0	Confirm PIN:	••••	
System	0	Remaining attempts:	3	
				Арріу

PIN is modified.

• For setting values for PIN, see "WEB UI Settings (Setting Range/Default Value)."

Canceling PIN Verification

Disable PIN Verification.

1

In Menu List, "Mobile Network Setting" -> "PIN Management"

Home : Settings : Data Traffic	c ⊫ Information ⊣ Software Update ⊨
Quick Setup	Welcome to The Quick Setup Wizard
Mobile Network Setting	Step 1 of 4
Mobile Network	
Profile Management PIN Management	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
	content changed, and return to the Home screen.
LAN Wi-Fi O	Next
Router Setting	
System 🕐	

2

Set "PIN verification" to "Disable" → Enter PIN code → "Apply"

Home Settings D	ata Traffic		are Update 👔
Mobile Network Setting	0	PIN Managemer	it
Mobile Network Profile Management		If PIN setting is enal	bled, need to enter PIN code each time the power is on.
→PIN Management		PIN verification:	Disable
Internet Wi-Fi	0	PIN code:	••••
LAN Wi-Fi	0	Remaining attempts:	3
Router Setting	0		
System	0		Apply

PIN verification is canceled.

Setting Mobile Network during International Roaming

Scan mobile network manually to set during international roaming. In Menu list, "Mobile Network Setting" → "Mobile Network" → In Network Search Mode, "Manual" → "Apply" → Select network → "OK"

Mobile network is set.

Setting Internet Wi-Fi

Wi-Fi router connects to the Internet via a household or office WLAN router, SoftBank Wi-Fi spot, etc. This internet connection is called "Internet Wi-Fi."

Simultaneous use of Internet Wi-Fi and Multi-SSID (SSID B) is not available.

Internet Wi-Fi Settings

Enable Internet Wi-Fi to connect to the Internet via Wi-Fi using WLAN router at home or office or public WLAN service.

· When Internet Wi-Fi function is enabled, communication speed may decrease depending on number of WLAN devices connected.

1

In Menu List, "Internet Wi-Fi" → "Internet Wi-Fi"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
Internet Wi-Fi		Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Priority Management		content changed, and return to the Home screen.
LAN Wi-Fi	0	
Router Setting	0	Next
System	0	

2

Turn "Internet Wi-Fi" to "ON" → Access point to connect, "Connect"

Home : Settings : [Data Traffic	□ Information □ Software Update □
Quick Setup		Internet Wi-Fi
Mobile Network Setting	0	
Internet Wi-Fi	0	Internet Wi-Fi 🛛 💿 🔿 🖓
→Internet Wi-Fi		Internet Wi-Fi and SSID B can not enabled at the same time.
Priority Management		
LAN Wi-Fi	0	SoftBank Wi-Fi spot Oon Oor
Router Setting	0	When connecting to SoftBank Wi-Fi spot, your phone number and network secret code will be
System	0	sent on the Internet. SoftBank Wi-Fi spot can be used when Internet Wi-Fi is on.
		Password:
		Show Security Key Save Scan Add network WPAWPA2-PSK WEP Connect WPAWPA2-PSK Connect WPAWPA2-PSK Connect Connec
		WPA2-PSK Connect

 \cdot Click "Scan" to re-scan surrounding Internet Wi-Fi access points.

• When "ON" of "Internet Wi-Fi" is clicked with Multi-SSID (SSID B) enabled, information screen appears. Tap "OK" to disable Multi-SSID automatically.

Enter Security Key → "Connect"

3

Enter Security K	ley	×
Enter Security Key		
•••••	^	
		Connect

Connection is established and "Connected" appears below selected access point SSID.

Setting Up SoftBank Wi-Fi Spot

Turning on SoftBank Wi-Fi Spot automatically connects when entering a SoftBank Wi-Fi Spot service area.

· SoftBank Wi-Fi Spot password is a four-digit security code set at subscription.

1

In Menu List, "Internet Wi-Fi" → "Internet Wi-Fi"



2

Confirm that "Internet Wi-Fi" is set to "ON" → Turn "SoftBank Wi-Fi spot" set to "ON"

Home Settings	Data Traffic	: Information ⊨ Software Update ⊨
Quick Setup		Internet Wi-Fi
Mobile Network Setting	0	
Internet Wi-Fi	0	Internet Wi-Fi Oor
→Internet Wi-Fi		Internet Wi-Fi and SSID B can not enabled at the same time.
Priority Management		
LAN Wi-Fi	0	SoftBank Wi-Fi spot
Router Setting	0	When connecting to SoftBank Wi-Fi spot, your phone number and network secret code will be
System	0	sent on the Internet. SoftBank Wi-Fi spot can be used when Internet Wi-Fi is on.
		Password:
		Show Security Key
		Save

• When "ON" of "Internet Wi-Fi" is clicked with Multi-SSID (SSID B) enabled, information screen appears. Tap "OK" to disable Multi-SSID automatically.

3

Enter SoftBank Wi-Fi spot password

Quick Setup		Internet Wi-Fi	
Mobile Network Setting	0		
nternet Wi-Fi	0	Internet Wi-Fi	● ON ○ OFF
Internet Wi-Fi		Internet Wi-Fi and SSID B can not enabled at the same	e time.
Priority Management			
LAN WI-FI	0	SoftBank Wi-Fi spot	● ON ○ OFF
Router Setting	0	When connecting to SoftBank Wi-Fi spot, your phone n	number and network secret code will be
System	0	sent on the Internet. SoftBank Wi-Fi spot can be used	when Internet Wi-Fi is on.
		Password:	
		Show Security Key	

"Save"

4

Home I Settings I I	Data Traffic	Information Software Update	
Quick Setup		Internet Wi-Fi	
Mobile Network Setting	0		
Internet Wi-Fi	0	Internet Wi-Fi	● ON ○ OFF
→Internet Wi-Fi		Internet Wi-Fi and SSID B can not enabled at the same ti	ime.
Priority Management			
LAN Wi-Fi	0	SoftBank Wi-Fi spot	● ON ○ OFF
Router Setting	0	When connecting to SoftBank Wi-Fi spot, your phone nu	mber and network secret code will be
System	0	sent on the Internet. SoftBank Wi-Fi spot can be used wh	nen Internet Wi-Fi is on.
		Password:	
		Show Security Key	
			Save

SoftBank Wi-Fi Spot setup is complete.

Preferred Access Point

Set a preference order for APNs and set a preferred APN.

1

In Menu List, "Internet Wi-Fi" → "Priority Management"

Home Settings D	ata Traffic	⊨ Information ⊨ Software Update ⊨
Quick Setup Mobile Network Setting	0	Welcome to The Quick Setup Wizard
Internet Wi-Fi	0	Step 1 of 4 Allows to set a minimum on LAN WI-Fi. When press the "home" button in process, not save
Priority Management	0	content changed, and return to the Home screen.
Router Setting System	0	Next
ojotom		

2

Click 🛉 / 🖡 of access point

Quick Setup		Priority Management			
Mobile Network Setting	0	· · · · · · · · · · · · · · · · · · ·			
Internet Wi-Fi	0	You can set the connection priority of Internet Wi-Fi access	point registere	ed. And co	onnect
Internet Wi-Fi		preferentially from the top of the list.			
Priority Management		If you add new item when this list reached it's limitation of 1	6 (include the	preset 5 if	tems), the old
LAN Wi-Fi	0	item with lowest priority will be replaced.			
Router Setting	0				
Funtam	0	0002softbank WPA/WPA2-EAP			
System	0	0002softbank			
		WPA2-EAP			
		0001softbank			
		NONE			
		mobilepoint			
		WEP			
		FON			
		NONE			
		wheepowing-107,004		ø	×
		WPA2-PSK			
		WEP	+	ø	×
		almost 2009 1 g	(†	1	×
		WPA/WPA2-PSK			

 \cdot Access point name moves up or down with each click.

"Apply"

3

lome Settings E	Data Traffic	□ Information □ Software Update □
Quick Setup		Priority Management
Mobile Network Setting	0	
Internet Wi-Fi	0	You can set the connection priority of Internet Wi-Fi access point registered. And connect
Internet Wi-Fi		preferentially from the top of the list.
Priority Management		If you add new item when this list reached it's limitation of 16 (include the preset 5 items), the old
LAN Wi-Fi	0	item with lowest priority will be replaced.
Router Setting	0	0002softbank
System	0	WPAWPA2-EAP 0002softbank WPA2-EAP 0001softbank NONE mobilepoint WEP WPA2-PSK WPAWPA2-PSK WEP
		Apply

preference order is set.

· To edit access point, Click ∥→ Edit set content → "Save."

To delete access point, Click X→ "Apply."

Pre-set Access Points

Five SoftBank Wi-Fi Spot access points are pre-set. Priority of those five access points cannot be changed or deleted.

Connecting to a New Network via Internet Wi-Fi

In Menu list, "Internet Wi-Fi" → "Internet Wi-Fi" → "Add network" → Enter SSID → Select authorization method → Enter Security Key → "Save"

🧭 Wi-Fi router connects to the entered SSID device.

Note on Changing Internet Wi-Fi Settings

Changing Internet Wi-Fi setting on WEB UI from device connected via WLAN may disconnect WLAN connection.

Setting LAN Wi-Fi

Connect to computers, smartphones, game consoles, etc. via WLAN. This WLAN connection is described as "LAN Wi-Fi." WLAN devices connected to Wi-Fi router via LAN Wi-Fi access the Internet using Internet Wi-Fi function of Wi-Fi router.

LAN Wi-Fi Basic Settings (SSID A)

Make basic WLAN settings for SSID A. Setting items are as follows:

Item	Description
Show SSID and security key on LCD	Checkmark to show SSID and Security Key when "SSID" in Touch Menu is tapped
SSID	Set SSID (Network Name)
Authorization method	Set authorization method
Encryption method	Set encryption method
WPA security key	Appears when "WPA2-PSK" or "WPA/WPA2-PSK" is selected in "Authorization
	method"; Enter Security Key
WEP key 1 to 4	Appears when "Auto," "Open" or "Shared key" is selected in Authorization method and
	Encryption method is "WEP"; Enter WEP key
Default Key	Set default WEP key
Privacy Separator	Set whether to prohibit interactive communication between WLAN devices connected
	to SSID A
SSID stealth	Set whether to send Wi-Fi router SSID

• For setting values for SSID or Security Key, see "WEB UI Settings (Setting Range/Default Value)."



In Menu List, "LAN Wi-Fi" → "Basic Settings"

ic Information Software Update
Welcome to The Quick Setup Wizard
Step 1 of 4
Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
content changed, and return to the Home screen.
Next

Set each item → "Apply"

2

Home Settings Data Ti	affic Information Software	Update
Quick Setup	Basic Settings	
Mobile Network Setting		
Internet Wi-Fi	WPS cannot be used if Enc	cryption mode is set to NONE or WEP.
LAN Wi-Fi	If Encryption mode is set to	WEP, a wireless network adapter working in 802.11n only mode may
→Basic Settings	fail to access the Mobile Wi	-Fi.
Advanced Settings MAC Address Filtering	When using device which is	s connecting to Wi-Fi router by Wi-Fi to configure Wi-Fi related
DHCP	setting, device Wi-Fi might t	be disconnected from Wi-Fi router. To re-connected, device have to
Router Setting	re-connected to Wi-Fi router	r again.
System	Show SSID and security key SSID A	on LCD
	SSID:	304HWa-XXXXXX
	Authorization method:	WPA/WPA2-PSK
	Encryption method:	AES+TKIP
	WPA security key:	•••••
	Privacy Separator:	OFF
	SSID stealth:	O Enable
	SSID B	
		ON OFF SSID B can not access Web UI.
	Show password	
		Apply

🔀 LAN Wi-Fi basic settings for SSID A are made.

Enabling Multi-SSID Function (SSID B)

Make basic WLAN settings for SSID B.

• To use SSID B, turn off Internet Wi-Fi function. Connect to the Internet via mobile network.

 \cdot SSID B does not support WPA/WPA2.

 \cdot When Multi-SSID is enabled, communication speed may decrease depending on number of WLAN devices connected.

Setting items are as follows:

Item	Description
SSID	Set SSID (Network Name)
Authorization method	Set authorization method
Encryption method	Set encryption method
WEP key 1 to 4	Appears when "Auto," "Open" or "Shared key" is selected in Authorization method and
	Encryption method is "WEP"; Enter WEP key
Default Key	Set default WEP key
Privacy Separator	Set whether to prohibit interactive communication between WLAN devices connected
	to SSID B
SSID stealth	Set whether to send Wi-Fi router SSID

• For setting values for SSID or Security Key, see "WEB UI Settings (Setting Range/Default Value)."

1

In Menu List, "LAN Wi-Fi" → "Basic Settings"

Home Settings	Data Traffic	: ⊫ Information ⊨ Software Update ⊨
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Basic Settings		content changed, and return to the Home screen.
Advanced Settings		
MAC Address Filtering		Next
DHCP		
Router Setting	0	
System	0	

Turn "SSID B" to "ON"

2

Home : Settings :	Data Traffic	Information Softwar	e Update	
Quick Setup		Basic Settings		
Mobile Network Setting	0	Busic octaings		
Internet Wi-Fi	0	WPS cannot be used if En	cryption mode is set to NONE or WEP.	
LAN Wi-Fi	0	If Encryption mode is set to WEP, a wireless network adapter working in 802.11n only mode may		
→Basic Settings		fail to access the Mobile V	Vi-Fi.	
Advanced Settings		When using device which	is connecting to Wi-Fi router by Wi-Fi to configure Wi-Fi related	
MAC Address Filtering DHCP		-	t be disconnected from Wi-Fi router. To re-connected, device have to	
	0	re-connected to Wi-Fi rout		
Router Setting System	0	Show SSID and security ke		
		SSID:	304HWa-XXXXXX	
		Authorization method:	WPA/WPA2-PSK	
		Encryption method:	AES+TKIP V	
		WPA security key:	••••••	
		Privacy Separator:	OFF 🗸	
		SSID stealth:	O Enable	
		SSID B		
			ON OFF SSID B can not access Web UI.	
		SSID:	304HWb-XXXXXX	
		Authorization method:	Open 🔽	
		Encryption method:	WEP	
		WEP key 1:	•••••	
		WEP key 2:	•••••	
		WEP key 3:	•••••	
		WEP key 4:	•••••	
		Default Key:	WEP key 1	
		Privacy Separator:	OFF 🗸	
		SSID stealth:	O Enable	
		Show password		
			Apply	

Information screen appears when clicking "ON" of "SSID B" with Internet Wi-Fi enabled. Click "OK" to disable Internet Wi-Fi function automatically.

Set each item → "Apply"

Quick Setup Mobile Network Setting Internet Wi-Fi LAN Wi-Fi Hadroned Settings Advanced Settings MAC Address Filtering Dice Router Setting System System Sill Seamothe used if Encryption mode is set to NONE or WEP. If Encryption mode is set to WEP, a wireless network adapter working in 802.11n only mode fail to access the Mobile Wi-Fi. When using device which is connecting to Wi-Fi router by Wi-Fi to configure Wi-Fi related setting, device Wi-Fi might be disconnected from Wi-Fi router. To re-connected, device have re-connected to WI-Fi router again. System Sill Sine Setting and accurity key on LCD SSID A Sill Sill Sill Sill Sill Sill Sill Sill	lome I Settings I D)ata Traffic	Information Softwar	e Update ⊣	
Mobile Network Setting ● Internet WI-Fi ● CAN WI-Fi ● • Glasic Settings • Advanced Settings • MAC Address Filtering ● DHCP • Router Setting ● System ●	Quick Setup		Basic Settings		
LAN WI-FI If Encryption mode is set to WEP, a wireless network adapter working in 802.11n only mode fail to access the Mobile WI-FI. Advanced Settings When using device which is connecting to WI-FI router by WI-FI to configure WI-FI related setting. device WI-FI might be disconnected from WI-FI router. To re-connected, device have re-connected to WI-FI router again. System If Show SSID and security key on LCD SSID A SSID: 304HWa-XXXXXXX Authorization method: WPAAWPA2-PSK Incryption method: Encryption method: MPAAWPA2-PSK SSID Statilth: Incryption method: SSID B SSID B SSID: 304HWb-XXXXXX Authorization method: MPAAWPA2-PSK Encryption method: MPAAWPA2-PSK SSID B Incryption method: SSID B SSID B can not access Web UL SSID: 304HWb-XXXXXX Authorization method: Open WEP key 1: Increase WEP key 1: Increase <	Mobile Network Setting	0	Buolo oottilligo		
Basic Stitung: Advanced Setting: McA dadress Fittering DHCP Router Setting: System Signed Status Signe Status	Internet Wi-Fi	0	WPS cannot be used if En	ncryption mode is set to NONE or WEP.	
: Basic Settings Avanced Settings Mac Address Filtering Dicp System System System Since Setting (System) System Since Setting (System)	LAN Wi-Fi	0	If Encryption mode is set t	to WEP, a wireless network adapter working in 802.11n only mode may	
MAC Address Filtering When using device which is connecting to Wi-Fi router by Wi-Fi to configure Wi-Fi related setting, device Wi-Fi might be disconnected from Wi-Fi router. To re-connected, device have re-connected to Wi-Fi router again. System Still Show SSID and security key on LCD SSID A SSID A SSID A SSID A SSID in method: MPAAWPA2-PSK ♥ Privacy Separator: OFF Privacy Separator: OFF SSID isealth: Called Wi-Fi router SSID: SSID B SSID: SSID B SSID: SSID Stealth: SSID: SSID Stealth: SSID: SSID B SSID	→Basic Settings				
BHCP Setting ● Router Setting ● System ● Sistip and security key on LCD SSID A Sistip A SSID A Sistip A SSID Sistip A SSID A Sistip A SSID A SSID B ● Privacy Separator: OFF SSID B ● ON OFF SSID B can not access Web UL SSID A SSID A SSID B ● WEP key 1: ● WEP key 2: ● WEP key 1 ● WEP key 1 ● WEP key 1 ● SSID stealth: ● Disable <	-				
Roter Setting Image: Connected to WI-FI router again. System Image: Sister	-		-	• • •	
System Image: System imag		-			
SSID: SSID: Authorization method: Encryption method: MPA/WPA2-PSK Encryption method: MPA security key: WPA security key: WPA security key: WPA security key: WPA security key: SSID steatth: SSID steatth: SSID steatth: SSID B O N O OFF SSID B can not access Web UI. SSID B SSID B can not access Web UI. SSID B WEP key 1: WEP key 2: WEP key 2: WEP key 2: WEP key 2: WEP key 3: WEP key 4: Default Key: WEP key 1 WEP key	-			ey on LCD	
Authorization method: WPA/WPA2-PSK Encryption method: AES+TKIP WPA security key:					
Encryption method: WPA security key: Privacy Separator: SSID stealth: SSID stealth: SSID S SSID S SSID: Authorization method: Encryption method: WEP WEP key 1: WEP key 2: WEP key 2: WEP key 3: WEP key 1: WEP key 1: WE					
WPA security key: Privacy Separator: OFF SSID stealth: OFF SSID stealth: ON OFF SSID B ON OPE SSID: 304HWb-XXXXXX Authorization method: Open Encryption method: WEP WEP key 1: WEP key 2: WEP key 3: WEP key 4: Default Key: WEP key 1 Privacy Separator: OFF SSID steatth:					
Privacy Separator: OFF SSID steatth: OFF SSID Steatth: Enable SSID B Image: Constraint of the second se			Encryption method:	AES+TKIP	
SSID steatth: C Enable Disable SSID B ON OFF SSID B can not access Web UL SSID Authorization method: Open Encryption method: WEP VEP key 1: WEP key 2: WEP key 2: WEP key 3: WEP key 3: WEP key 4: Default Kay: WEP key 1 VEP key			WPA security key:	•••••	
SSID B Image: Solution of the state of			Privacy Separator:	OFF	
Image: Single can not access Web UI. SSID: 304HWb-XXXXXX Authorization method: Open Encryption method: Image: WEP WEP key 1: Image: Single can not access Web UI. WEP key 2: Image: Single can not access Web UI. WEP key 3: Image: Single can not access Web UI. WEP key 3: Image: Single can not access Web UI. WEP key 4: Image: Single can not access Web UI. Default Key: Image: WEP key 1 Privacy Separator: OFF SSID steatth: Image: Single can not access Web UI.			SSID stealth:	O Enable	
SSID: 304HWb-XXXXX Authorization method: Open Encryption method: WEP WEP key 1: Image: Comparison of the second of th			SSID B		
Authorization method: Open Encryption method: WEP WEP key 1: ••••• WEP key 2: •••••• WEP key 3: •••••• WEP key 4: •••••• Default Key: WEP key 1 Privacy Separator: OFF SSID stealth: O				ON OFF SSID B can not access Web UI.	
Encryption method: WEP WEP key 1: •••••• WEP key 2: •••••• WEP key 3: •••••• WEP key 4: •••••• Default Key: WEP key 1 Privacy Separator: OFF SSID stealth: O Enable I Disable			SSID:	304HWb-XXXXX	
WEP key 1: ••••• WEP key 2: ••••• WEP key 3: ••••• WEP key 4: ••••• Default Key: WEP key 1 ✓ Privacy Separator: OFF ✓ SSID stealth: ○ Enable ● Disable			Authorization method:	Open 🗸	
WEP key 2: •••••• WEP key 3: •••••• WEP key 4: •••••• Default Key: WEP key 1 Privacy Separator: OFF SSID stealth: ○ Enable ● Disable			Encryption method:	WEP	
WEP key 3: ••••• WEP key 4: ••••• Default Key: WEP key 1 Privacy Separator: OFF SSID stealth: O Enable I Disable			WEP key 1:	••••	
WEP key 4: ••••• Default Key: WEP key 1 Privacy Separator: OFF SSID stealth: O Enable I Disable			WEP key 2:	••••	
Default Key: WEP key 1 Privacy Separator: OFF SSID stealth: O Enable I bisable			WEP key 3:	••••	
Privacy Separator: OFF V SSID stealth: O Enable O Disable			WEP key 4:	•••••	
SSID stealth: O Enable O Disable			Default Key:	WEP key 1	
			Privacy Separator:	OFF	
Show password			SSID stealth:	○ Enable	
			Show password		
App				Apply	

🔀 LAN Wi-Fi basic settings for SSID B are made.

LAN Wi-Fi Advanced Settings

Setting items are as follows:

I

Item	Description
Country	Set country where you use WLAN
Channel	Set WLAN channel; Only Auto is selected when Internet Wi-Fi is enabled
Communication standard	Set WLAN Communication standard
Multi-SSID AP isolation	Set whether to permit interactive communication between devices connected SSID A and SSID B; This option appears only when Multi-SSID (SSID B) is enabled
Sleep Mode Settings	Set whether to disable WLAN function automatically when Wi-Fi router does not connect to WLAN devices; WLAN function is not turned off while charging even if Sleep Mode Settings is ON
Sleep Mode Timer (Min)	Set auto-timeout time for WLAN function when Sleep Mode Settings is "Enable"
Out of service Wi-Fi Automatic Disconnection	Set whether to automatically disconnect communication with WLAN device out of network area
Frequency bandwidth	Set WLAN channel frequency band width; Select 20 MHz frequency band or 20 MHz or 40 MHz frequency band

· For setting values, see "WEB UI Settings (Setting Range/Default Value)."

In Menu List, "LAN Wi-Fi" → "Advanced Settings"

Home Settings D	ata Traffic	: Information ⊨ Software Update ⊨
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Basic Settings		content changed, and return to the Home screen.
Advanced Settings		
MAC Address Filtering		Next
DHCP		
Router Setting	0	
System	0	

Set each item → "Apply"

Home Settings Da	ta Traffic	Information Softw	vare Update	
Quick Setup		Advanced Setti	nas	
Mobile Network Setting	0		0	
Internet Wi-Fi	0	When Wi-Fi is used abr	road, the configuration n	nust be changed according to a local law.
LAN Wi-Fi	0	When using device whi	ch is connecting to Wi-F	i router by Wi-Fi to configure Wi-Fi related
Basic Settings		setting, device Wi-Fi mi	ight be disconnected fro	m Wi-Fi router. To re-connected, device have to
→Advanced Settings		re-connected to Wi-Fi re	outer again.	
MAC Address Filtering				
DHCP		Country:	JAPAN	V
Router Setting	0	Channel:	Auto (1-11) 🗸	Internet Wi-Fi is available, channel setting
System	0	onumer.	Auto (1-11)	can only be used auto mode.
		Communication standard:	802.11g/n	The rule of Wi-Fi communication: when connect to device that only support IEEE802.11b, user need to set the mode as b/g/n. At this time, Wi-Fi 5GHz is disabled.
		Multi-SSID AP isolation:	Enable	For the devices separate connect SSID A and SSID B, plesae set enable/disable to communication bewteen theirs. When you turn on the sleep setting, the Wi-Fi LAN
		Sleep Mode Settings:	Enable	terminal does not connect and turn off the Wi-Fi LAN function. However, insert the charger, even if sleep settings turn on, the Wi-Fi LAN feature does not turn off.
		Sleep Mode Timer (Min):	5 🗸]
		Out of service Wi-Fi Automatic Disconnection:	Disable]
		Frequency bandwidth:	20MHz]
				Apply

🔀 LAN Wi-Fi advanced settings are made.

MAC Address Filtering

Save MAC addresses of WLAN devices and set WLAN connection permission to enhance security. • When Multi-SSID (SSID B) is enabled, MAC Address Filtering is set in SSID B.

1

In Menu List, "LAN Wi-Fi" → "MAC Address Filtering"

Home Settings	Data Traffic	: Information : Software Update :
Quick Setup Mobile Network Setting	0	Welcome to The Quick Setup Wizard
Internet Wi-Fi LAN WI-Fi Basic Settings Advanced Settings MAC Address Filtering DHCP	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save content changed, and return to the Home screen.
Router Setting System	0	


2

In "MAC Address Filtering," "Allow"/"Deny" → Enter MAC address → "Apply"

Home : Settings :	Data Traffic	Information Software	Update :	
Quick Setup		MAC Address Filt	ering	
Mobile Network Setting	0		3	
Internet Wi-Fi	0	Set device connection enab	le/disable with MAC address filtering mode.	
LAN Wi-Fi	0	Disable: Can not restrict dev	rice connection through the Wi-Fi MAC filter.	
Basic Settings		Allow: Allow a client to conn	ect to the device using LAN Wi-Fi if the client's MAC address exists	
Advanced Settings		in the MAC Address list.		
→MAC Address Filtering		Deny: Deny a client's conne	ction to the device using LAN Wi-Fi if the client's MAC address exists	
DHCP		in the MAC Address list.		
Router Setting	0	SSID A		
System	0	MAC Address Filtering:	Allow	
		MAC Address:	eg: 00:1D:0F:10:2D:D9	
		Charles - Charles		
		SSID B		
		MAC Address Filtering:	Disable 🗸	
		MAC Address:		
			Apply	

 \cdot When deleting or editing entered MAC addresses, Click "Apply" as well.

"OK"

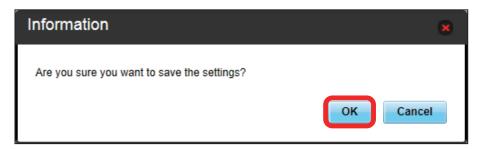

MAC Address Filtering is set.

Set MAC addresses are deleted and MAC Address Filtering is canceled.

1

In Menu List, "LAN Wi-Fi" → "MAC Address Filtering"


Home : Settings : D	Data Traffic	Information : Software Update :
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Basic Settings		content changed, and return to the Home screen.
Advanced Settings		
MAC Address Filtering		Next
DHCP		
Router Setting	0	
System	0	

2

In Mac Address Filtering, "Disable" → "Apply"

Home Settings	Data Traffic	□ Information □ Software Update □
Quick Setup		MAC Address Filtering
Mobile Network Setting	0	inde Address Filtering
Internet Wi-Fi	0	Set device connection enable/disable with MAC address filtering mode.
LAN Wi-Fi	0	Disable: Can not restrict device connection through the Wi-Fi MAC filter.
Basic Settings		Allow: Allow a client to connect to the device using LAN Wi-Fi if the client's MAC address exists
Advanced Settings		in the MAC Address list.
→MAC Address Filtering		Deny: Deny a client's connection to the device using LAN Wi-Fi if the client's MAC address exists
DHCP		in the MAC Address list.
Router Setting	0	SSID A
System	0	MAC Address Filtering: Disable
		MAC Address: eg: 00:1D:0F:10:2D:D9
		SSID B
		MAC Address Filtering: Disable
		MAC Address:
		Арріу

"OK"

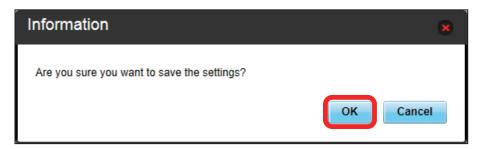

MAC Address Filtering is canceled.

Assign IP addresses to devices inside LAN. Setting items are as follows:

Item	Description
IP address	Set Wi-Fi router private address
Subnet mask	Set Subnet mask
DHCP server	Set whether to use DHCP function
Start IP address	Set lowest IP address to be assigned to WLAN devices
End IP address	Set highest IP address to be assigned to WLAN devices
DHCP lease time (s)	Set IP address lease time

For setting values, see "WEB UI Settings (Setting Range/Default Value)."

1

In Menu List, "LAN Wi-Fi" → "DHCP"


Home Settings D	ata Traffic	□ Information □ Software Update □
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Basic Settings		content changed, and return to the Home screen.
Advanced Settings		
MAC Address Filtering		Next
DHCP		
Router Setting	0	
System	0	

2

Set each item → "Apply"

Home : Settings : Data Traffic	Information Software	Update :
Quick Setup	DHCP	
Mobile Network Setting		
Internet Wi-Fi O	IP Address Settings	
LAN Wi-Fi 📀	IP address:	192.168.128.1
Basic Settings Advanced Settings	Subnet mask:	255.255.255.0
MAC Address Filtering	DHCP server configurat	tion
→DHCP	-	
Router Setting	DHCP server:	● Enable ○ Disable
System O	Start IP address:	192.168.128.100
	End IP address:	192.168.128.200
	DHCP lease time (s):	86400
		Apply

"OK"

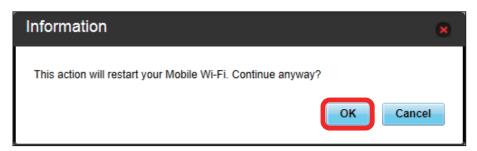

🕺 Wi-Fi router is rebooted and DHCP is set.

\rm Note on Changing LAN Wi-Fi Settings

Changing LAN Wi-Fi setting on WEB UI from device connected via WLAN may disconnect WLAN connection.

Router Setting

Set router function such as Firewall and IP address filter.

Firewall Switch

Set Firewall function. Setting items are as follows:

Item	Description
Firewall	Set whether to use Firewall function
IP address filtering	Set whether to use IP Address Filter function
WAN port ping reply	Set whether to enable WAN ping to respond

1

In Menu List, "Router Setting" → "Firewall"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
nternet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall IP Address Filtering		Next
Portmapping		
Special Applications		
DMZ		
SIP ALG		
UPnP		
NAT		
Out Of Service Notification		

2

Set each item → "Apply"





Setting IP Address Filtering

Set whether to apply rules and allow transmissions from Internet through Firewall, based on sender/receiver addresses. Setting items are as follows:

Item	Description
LAN IP Address	Set source IP address to apply rules; Specify IP address from IP addresses used on LAN
LAN Port	Set source port number to apply rules
WAN IP Address	Set destination IP address to apply rules
WAN Port	Set destination port number to apply rules
Protocol	Select protocol to apply rules
Status	Set whether to apply rules
Options	Save or delete rules

· For setting values, see "WEB UI Settings (Setting Range/Default Value)."

1

In Menu List, "Router Setting" → "IP Address Filtering"



• If a message asking to enable IP Address Filtering in Firewall setting appears, see "Firewall Switch" and enable IP address filtering from Firewall then retry.



"Add"

Mobile Network Setting Internet Wi-Fi Internet Wi-Fi Filter packets using the following rules specified with protocol, port and IP address. LAN Wi-Fi Filter packets using the following rules specified with protocol, port and IP address. Router Setting Filter packets using the following rules specified with protocol, port and IP address. Seture Setting Filter packets using the following rules specified with protocol, port and IP address. Firewall LAN WAN Port: The value range of LANWAN Port is clicked. LAN IP Filter List LAN IP Address Mod Address Special Applications Address DMZ SIP ALG UPnP Address NAT Apply	Quick Setup		IP Address Filtering
LAN Wi-Fi • LANWAN port: Tre value range of LANWAN Port is 1-85535. Router Setting • Firewall • LAN IP Filter List LAN Portmapping Special Applications DMZ SIP ALG	Mobile Network Setting	0	
Conter Setting Conter Setting Firewall Can lip Can lip Portmapping Can lip Can lip Special Applications Can lip Can lip DMZ Can lip Can lip Can lip SiP ALG Can lip Can lip Can lip UPP Can lip Can lip Can lip NAT Can lip Can lip Can lip	Internet Wi-Fi	0	Filter packets using the following rules specified with protocol, port and IP address.
Koute Setting Image: Constraint of the setting of t	LAN Wi-Fi	0	LAN/WAN port: The value range of LAN/WAN Port is 1-65535.
LAN IP LAN Port WAN IP Address WAN Port Protocol Status Options Portmapping Add Add Add Add Add Add Add SIP ALG UPnP Add Add Apply Apply	Router Setting	0	Settings will not take effect until the "Apply" button is clicked.
Portmapping Address LAN Port WAN IP Address WAN Port Protocol Status Options Special Applications Add Add Image: Special Applications Image: Special Applications Image: Special Applications SIP ALG Image: Special Applications Image: Add Image: Special Applications Image: Add Image: Special Applications Image: Add Image: Special Applications SIP ALG Image: Special Applications Image: Add Image: Special Applications Image: Add Image: Special Applications Image: Add Image: Add Image: Special Applications NAT Image: Special Applications Image: Add Image: Special Applications Image: Add Image: Special Applications Image: Add Image: Ad	Firewall		LAN IP Filter List
Portmapping Address Special Applications Address DMZ Address SIP ALG	→IP Address Filtering		
DMZ SIP ALG UPnP NAT Apply	Portmapping		Address
SIP ALG UPnP Apply NAT	Special Applications		Add
UPnP Apply NAT	DMZ		
NAT	SIP ALG		
	UPnP		App
Out Of Service Notification	NAT		
	Out Of Service Notification		

Enter each item → "OK"

3

ome Settings E	Data Traffio	c Information	Software	e Update				
Quick Setup		IP Addres	s Filteri	ina				
Mobile Network Setting	0							
Internet Wi-Fi	0	Filter packets	using the foll	lowing rules speci	fied with pro	otocol, port a	nd IP addre	SS.
LAN Wi-Fi	0	LAN/WAN p	ort: The value	range of LAN/WAN F	Port is 1-6553	5.		
Router Setting	0	Settings will	not take effect u	until the "Apply" butto	on is clicked.			
Firewall		LAN IP Filt	er List					
→IP Address Filtering		LAN IP Address	LAN Port	WAN IP Address	WAN Port	Protocol	Status	Options
Portmapping		Address	1	10.00.00.00		TCP/UDP V	OFF V	OK Cancel
Special Applications								
DMZ		Add						
SIP ALG								
UPnP								
NAT								Apply
Out Of Service Notification								
System	0							

- \cdot Turn Status to "ON" to filter set IP addresses and reject connection.
- Turn Status to "OFF" not to filter set IP addresses and permit connection. Use for temporarily deactivating filtering. Filtering is not canceled.

"Apply"

Home Settings	Data Traffic	Information I Software Update I
Quick Setup		IP Address Filtering
Mobile Network Setting	0	
Internet Wi-Fi	0	Filter packets using the following rules specified with protocol, port and IP address.
LAN Wi-Fi	0	LAN/WAN port: The value range of LAN/WAN Port is 1-65535.
Router Setting	0	Settings will not take effect until the "Apply" button is clicked.
Firewall		LAN IP Filter List
→IP Address Filtering		LAN IP Address LAN Port WAN IP Address WAN Port Protocol Status Options
Portmapping		TCP/UDP OFF Edit Delete
Special Applications		
DMZ		Add
SIP ALG		
UPnP		
NAT		Apply
Out Of Service Notification		
System	0	

5

"OK"



🔯 Setting is made.

Settings (WEB UI)

Canceling IP Address Filtering

1

In Menu List, "Router Setting" → "IP Address Filtering"

Home Settings	Data Traffic	⊢ Information ⊢ Software Update ⊨
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall		
IP Address Filtering		Next
Portmapping		
Special Applications		
DMZ		
SIP ALG		
UPnP		
NAT		
Out Of Service Notification		
System	0	


2

"Delete"

Home Settings	Data Traffic	: Information ⊨ Software Update ⊨
Quick Setup		IP Address Filtering
Mobile Network Setting	0	v
Internet Wi-Fi	0	Filter packets using the following rules specified with protocol, port and IP address.
LAN Wi-Fi	0	LAN/WAN port: The value range of LAN/WAN Port is 1-65535.
Router Setting	0	Settings will not take effect until the "Apply" button is clicked.
Firewall		LAN IP Filter List
→IP Address Filtering		LAN IP Address LAN Port WAN IP Address WAN Port Protocol Status Options
Portmapping		Address TCP/UDP OFF Edi Delete
Special Applications		
DMZ		Add
SIP ALG		
UPnP		
NAT		Apply
Out Of Service Notification		
System	0	

3

"OK"

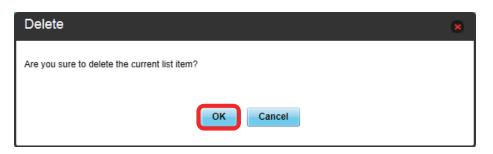

"Apply"

4

Quick Setup		IP Address Filtering
Mobile Network Setting	0	
Internet Wi-Fi	0	Filter packets using the following rules specified with protocol, port and IP address.
LAN Wi-Fi	0	LAN/WAN port: The value range of LAN/WAN Port is 1-65535.
Router Setting	0	 Settings will not take effect until the "Apply" button is clicked.
Firewall		LAN IP Filter List
→IP Address Filtering		LAN IP LAN Port WAN IP Address WAN Port Protocol Status Options
Portmapping		Address LAW FOIL WAIN IF Address WAIN FOIL FIOLOCOL Status Options
Special Applications		Add
DMZ		
SIP ALG		
UPnP		Apply
NAT		
Out Of Service Notification		
System	0	

Setting is canceled.

Setting Portmapping

Set a virtual server for accessing a specified device inside LAN via the Internet. Setting items are as follows:

Item	Description
Name	Name virtual server
WAN Port	Set source port number
LAN IP Address	Set IP address for device inside LAN to make available as a server; Specify IP address from IP addresses used on LAN
LAN Port	Set destination port number for device inside LAN to make available as a server when transmitting packets
Protocol	Select protocol to apply rules
Status	Set whether to apply rules
Options	Save or delete rules

For setting values, see "WEB UI Settings (Setting Range/Default Value)."

1

In Menu List, "Router Setting" → "Portmapping"

Home : Settings : D	ata Traffic	⊨ Information ⊨ Software Update ⊨
Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall		
IP Address Filtering		Next
Portmapping		
Special Applications		
DMZ		
SIP ALG		
UPnP		
NAT		
Out Of Service Notification		
System	0	
-		

2

"Add"

Quick Setup		Portmapp	ing					
Mobile Network Setting	0							
Internet Wi-Fi	0	Configure a	Portmapping to	enable extern	al computers t	to access W	WW, FTP or	other services
LAN Wi-Fi	0	provided by	the LAN.					
Router Setting Firewall	0	address.		dress. The packe				e forwarded to this
IP Address Filtering		LAN/WAN Por		une computer una	t provides service	es. It is a sillyi	e port and the	value range of
→Portmapping		Protocol: F	rotocols applied	by services.				
Special Applications		 Settings will 	not take effect u	ntil the "Apply" bu	utton is clicked.			
SIP ALG		Port Mapp	ing List					
UPnP		Name	WAN Port	LAN IP Address	LAN Port	Protocol	Status	Options
NAT Out Of Service Notification		Add						
	O							

Enter each item → "OK"

3

Quick Setup		Portmappi	na					
Mobile Network Setting	0							
Internet Wi-Fi	0	Configure a Po	ortmapping t	to enable extern	al computers	to access WV	WW, FTP o	r other services
LAN Wi-Fi	0	provided by the	e LAN.					
Router Setting	0	IP address: S	pecify LAN a	ddress. The packe	ts which match	the specified co	nditions will I	pe forwarded to this
Firewall		address.						
IP Address Filtering		 LAN/WAN port is 		f the computer that	provides servic	ces. It is a single	e port and the	e value range of
Portmapping		Protocol: Pro		by services				
Special Applications				until the "Apply" bu	tton is clicked.			
DMZ								
SIP ALG		Port Mappin	g List					
UPnP		Name	WAN Port	LAN IP Address	LAN Port	Protocol	Status	Options
NAT		XXXX			1	TCP/UDP 🗸	OFF 🗸	OK Cancel
Out Of Service Notification				·		·		
System	0	Add						

 \cdot Turn Status to "ON" to activate port mapping.

 \cdot Turn Status to "OFF" to deactivate port mapping. Use for temporarily deactivating mapping. Mapping is not canceled.


4

"Apply"

Home Settings	Data Traffic	Information	Softwar	e Update 🗉				
Quick Setup		Portmappi	ng					
Mobile Network Setting	O							
Internet Wi-Fi	0	Configure a P	ortmapping t	o enable externa	al computers t	o access W	WW, FTP o	r other services
LAN Wi-Fi	0	provided by the LAN.						
Router Setting	0		Specify LAN ac	ddress. The packet	s which match th	e specified co	onditions will I	be forwarded to this
Firewall IP Address Filtering		-	-	f the computer that	provides service	es. It is a single	e port and the	value range of
→Portmapping		LAN/WAN Port i Protocol: Pro		by services.				
Special Applications		 Settings will r 	ot take effect of	until the "Apply" bu	tton is clicked.			
DMZ		Port Mappir	ng List					
SIP ALG UPnP		Name	WAN Port	LAN IP Address	LAN Port	Protocol	Status	Options
NAT		XXXX		10103-00-00	1	TCP/UDP	OFF	Edit Delete
Out Of Service Notification	I	Add						
System	0	Add						
								Apply

5

"OK"

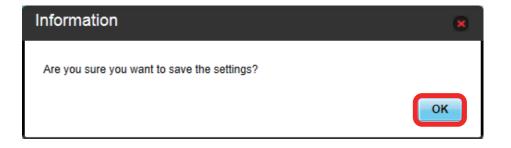

Settings (WEB UI)

Canceling Portmapping

1

In Menu List, "Router Setting" -> "Portmapping"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	- Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall		
IP Address Filtering		Next
Portmapping		
Special Applications		
DMZ		
SIP ALG		
UPnP		
NAT		
Out Of Service Notification		
System	0	

2

"Delete"

Quick Setup		Portmapp	ina					
Mobile Network Setting	0							
nternet Wi-Fi	0	Configure a Portmapping to enable external computers to access WWW, FTP or other services						
LAN Wi-Fi	0	provided by t	he LAN.					
Router Setting	0		Specify LAN a	ddress. The packet	s which match th	ne specified co	onditions will b	be forwarded to this
Firewall		address.	ort: The part of	f the computer that	provideo convicu	. It is a single	a part and the	value range of
IP Address Filtering		LAN/WAN Port		The computer that	provides service	ss. it is a siriyi	e port and the	e value range of
Portmapping		Protocol: Protocols applied by services.						
Special Applications		 Settings will 	not take effect	until the "Apply" bu	tton is clicked.			
DMZ								
SIP ALG		Port Mappi	ng List					
UPnP		Name	WAN Port	LAN IP Address	LAN Port	Protocol	Status	Options
NAT		XXXX		10110-00-00	1	TCP/UDP	OFF	Edi Delete
Out Of Service Notification								
System	0	Add						

3

"OK"



"Apply"

4

Quick Setup		Portmapp	oing						
Mobile Network Setting	0								
Internet Wi-Fi	0	Configure a	Configure a Portmapping to enable external computers to access WWW, FTP or other service						
LAN Wi-Fi	0	provided by	the LAN.						
Router Setting	0	IP address	: Specify LAN ad	dress. The packe	ts which match th	ne specified co	nditions will b	be forwarded to th	
Firewall		address.							
IP Address Filtering		LAN/WAN LAN/WAN Port		the computer that	t provides service	es. It is a singl	e port and the	value range of	
Portmapping			Protocols applied	by services.					
Special Applications		 Settings will 	l not take effect u	ntil the "Apply" bu	itton is clicked.				
DMZ									
SIP ALG		Port Mapp	ing List						
UPnP		Name	WAN Port	LAN IP Address	LAN Port	Protocol	Status	Options	
NAT					,				
Out Of Service Notification		Add							
System	0								
System	0								

5

"OK"

Information	×
Are you sure you want to save the settings?	
	ок

🕺 Canceled setting is applied.

Setting Special Applications

Enable to use special applications such as online games and video phone system. Setting items are as follows:

Item	Description				
Name	Name applications				
Status	Set whether to apply rules				
Trigger Port	Set port number for data control				
Trigger Protocol	Select protocol for data control				
Open protocol	Select protocol for data transfer				
Open port	Set port number for data transfer				
Options	Save or delete rules				

• For setting values, see "WEB UI Settings (Setting Range/Default Value)."

• Refer to application user guide.

1

In Menu List, "Router Setting" -> "Special Applications"

Quick Setup		Welcome to The Quick Setup Wizard					
Mobile Network Setting	0	Step 1 of 4					
Internet Wi-Fi	0						
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save					
Router Setting	0	content changed, and return to the Home screen.					
Firewall IP Address Filtering Portmapping		Next					
Special Applications							
DMZ							
SIP ALG							
UPnP							
NAT Out Of Service Notification							
System	0						

2

"Add"

Quick Setup		Special Applications					
Mobile Network Setting	0						
Internet Wi-Fi	0	Configure parameters to allow the operation of special applications, such as online games, video conferencing, or IP phone over the LAN.					
LAN Wi-Fi	0	Trigger Protocol: Supports the interoperability of special applications and remote servers.					
	-	 Trigger Port: Outbound applications port. 					
Router Setting	0	 Open protocol: Protocols used by special applications. 					
Firewall		· Open port: Port used to access special applications over the Internet. It can be a single port or a range of ports. U					
IP Address Filtering		to 5 pairs of ports are supported. Use semicolons(;) to delimit ports. For detailed parameters please refer to specific					
Portmapping		applications descriptions.					
Special Applications		 Settings will not take effect until the "Apply" button is clicked. 					
DMZ		Special Applications List					
SIP ALG		Name Status Trigger Port Trigger Proto col Open protoco l Open port Options					
UPnP							
NAT		Add					
Out Of Service Notification							
System	0	Apply					
		14443					

Enter each item → "OK"

3

Quick Setup		Special A	pplicat	ions				
Mobile Network Setting	0							
Internet Wi-Fi	0	Configure para phone,over the		w the operation of	special applicati	ons, such as onlir	ne games, vide	o conferencing, or I
LAN Wi-Fi	0			ts the interoperat	pility of special ap	plications and rer	mote servers.	
Router Setting	0			pplications port.				
				used by special a		a Internet. It can b	o a cinale nort	or a range of ports
Firewall								ase refer to specifi
IP Address Filtering		applications de					parametere pre	
Portmapping				t until the "Apply"	button is clicked			
Special Applications								
DMZ		Special Applic			Trigger Proto	Open protoco		
SIP ALG		Name	Status	Trigger Port	col	I	Open port	Options
UPnP		XXXX	OFF 🗸		TCP/UDP V	TCP/UDP V	10	OK Cancel
NAT								·
Out Of Service Notification		Add						
System	0							

4

"Apply"

Quick Setup		Special A	pplicat	ions					
Mobile Network Setting	0								
Internet Wi-Fi	0	Configure para phone.over the		w the operation of	special application	ons, such as onli	ne games, video	o conferencing, or IF	2
LAN Wi-Fi	0			ts the interoperat	pility of special ap	plications and rei	note servers.		
	-	 Trigger Por 	t: Outbound a	pplications port.					
Router Setting	0	 Open protocol: Protocols used by special applications. 							
Firewall		 Open port: 	Port used to a	ccess special ap	plications over the	e Internet. It can I	oe a single port	or a range of ports.	Up
IP Address Filtering				ted. Use semicolo	ons(;) to delimit p	orts. For detailed	parameters plea	ase refer to specific	
Portmapping		applications descriptions.							
Special Applications		 Settings will 	not take effec	t until the "Apply"	button is clicked.				
DMZ		Special Applic	ations List						
SIP ALG		Name	Status	Trigger Port	Trigger Proto col	Open protoco I	Open port	Options	
UPnP		XXXX	OFF	1	TCP/UDP	TCP/UDP	1	Edit Delete	
NAT					,				
Out Of Service Notification		Add							
System	0								
								Appl	

5

"OK"

Information	8
Are you sure you want to save the settings?	
	ОК

Setting is made.

Canceling Special Applications

1

In Menu List, "Router Setting" -> "Special Applications"

Quick Setup		Welcome to The Quick Setup Wizard						
Mobile Network Setting	0	Step 1 of 4						
nternet Wi-Fi	0							
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save						
Router Setting	0	content changed, and return to the Home screen.						
Firewall IP Address Filtering Portmapping		Next						
Special Applications								
DMZ SIP ALG UPnP								
NAT								
Out Of Service Notification								
System	0							


2

"Delete"

Quick Setup		Special A	pplicat	ions				
Mobile Network Setting	0							
Internet Wi-Fi	0	Configure parar phone,over the		w the operation of	special applicati	ons, such as onli	ne games, vide	o conferencing, or IF
LAN Wi-Fi	0			ts the interoperat	oility of special ap	plications and re	mote servers.	
D (C #				pplications port.				
Router Setting	0	 Open protocol: Protocols used by special applications. Open port: Port used to access special applications over the Internet. It can be a single port or a range of ports. Up 						
Firewall								
IP Address Filtering				ted. Use semicolo	ons(;) to delimit p	orts. For detailed	parameters ple	ase refer to specific
Portmapping		applications des	1 C C C C C C C C C C C C C C C C C C C					
Special Applications		 Settings will 	not take ellec	t until the "Apply"	button is clicked.			
DMZ		Special Applic	ations List					
SIP ALG		Name	Status	Trigger Port	Trigger Proto col	Open protoco I	Open port	Options
UPnP		XXXX	OFF	11	TCP/UDP	TCP/UDP	1.1	Edit Delete
NAT								
Out Of Service Notification		Add						
	0							

3

"OK"

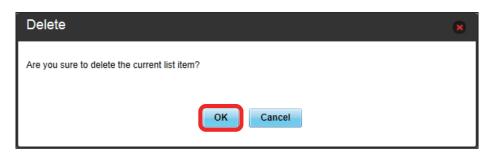

"Apply"

4

Quick Setup		Special Applications
Mobile Network Setting	0	
Internet Wi-Fi	0	Configure parameters to allow the operation of special applications, such as online games, video conferencing, or IF phone, over the LAN.
LAN Wi-Fi	0	Trigger Protocol: Supports the interoperability of special applications and remote servers.
Router Setting	0	Trigger Port: Outbound applications port. Open protocol: Protocols used by special applications.
Firewall		Open port: Port used to access special applications over the Internet. It can be a single port or a range of ports.
IP Address Filtering		to 5 pairs of ports are supported. Use semicolons(;) to delimit ports. For detailed parameters please refer to specific
Portmapping		applications descriptions. Settings will not take effect until the "Apply" button is clicked.
Special Applications		 Settings will not take ellect until the Apply button is clicked.
DMZ		Special Applications List
SIP ALG		Name Status Trigger Port Trigger Proto col Open protocol Open port Options
UPnP		
NAT		Add
Out Of Service Notification		
System	0	Appl

5

"OK"

Information	×
Are you sure you want to save the settings?	
	ок

Sanceled setting is applied.

DMZ

Set specified device inside LAN as DMZ host isolated from other devices. Setting items are as follows:

Item	Description
DMZ	Select whether to set DMZ host
DMZ IP address	Set IP address for DMZ host

For setting values, see "WEB UI Settings (Setting Range/Default Value)."

1

In Menu List, "Router Setting" → "DMZ"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN WI-FI	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall IP Address Filtering Portmapping Special Applications DMZ SIP ALG	_	Next
UPnP NAT Out Of Service Notification		
System	0	

2

Set each item → "Apply"

Quick Setup		DMZ	
Mobile Network Setting	0		
nternet Wi-Fi	0	If you set DMZ (Demilitarized Zones) "Enabled", all	ports of the IP address which you designated
LAN Wi-Fi	0	are opened for running network applications. You ca	an configure the DMZ address and enable or
Router Setting	0	disable the DMZ service on this page.	
Firewall		DMZ: ON OFF	
IP Address Filtering		DMZ IP address: 192.168.128.100	
Portmapping			
Special Applications			
DMZ			Apply
SIP ALG			
UPnP			
NAT			
Out Of Service Notification			
System	0		

SIP ALG

Set when using an SIP application to use Internet telephone, etc. Setting items are as follows:

Item	Description
SIP ALG ¹	Select whether to enable SIP ALG function
SIP port	Enter port number provided by SIP service provider

- SIP ALG is to be enabled when using SIP applications (e.g. X-Lite, Yate, Sipdroid, etc.) on a WLAN device connected to Wi-Fi router. If normal calling is not available with the SIP application, uncheck "SIP ALG" → "Apply" → Checkmark "SIP ALG" → "Apply," then reboot the SIP application.
- Refer to application user guide.

1


In Menu List, "Router Setting" → "SIP ALG"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall		
IP Address Filtering		Next
Portmapping		
Special Applications		
DMZ		
SIP ALG		
UPnP		
NAT		
Out Of Service Notification		
System	0	

2

Set each item → "Apply"

Home : Settings : D)ata Traffic	: Information : Software Update :
Quick Setup		SIP ALG
Mobile Network Setting	0	
Internet Wi-Fi	0	The modem supports SIP ALG function. Performing SIP application allows communication with
LAN Wi-Fi	0	other internet applications.
Router Setting Firewall	0	☑ SIP ALG
IP Address Filtering		SIP port. 5060
Portmapping Special Applications		
DMZ →SIP ALG		Apply
UPnP		
NAT Out Of Service Notification		
System	0	

 

UPnP

Set UPnP for using UPnP-compatible peripheral devices, audio visual devices, appliances and UPnP-compatible applications such as messenger software.

Setting items are as follows:

Item	Description
UPnP	Set whether to use UPnP

1

In Menu List, "Router Setting" → "UPnP"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
Internet Wi-Fi	0	
LAN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall		
IP Address Filtering		Next
Portmapping		
Special Applications		
DMZ		
SIP ALG		
UPnP		
NAT		
Out Of Service Notification		
System	0	

2

"Enable"/"Disable" → "Apply"

Quick Setup		UPnP
Mobile Network Setting	0	
nternet Wi-Fi	0	The UPnP architecture allows device-to-device networking of personal computers, networked
LAN Wi-Fi	0	home appliances, consumer electronics devices and wireless devices. It is a distributed, open
Router Setting	0	architecture protocol based on established standards such as the Internet Protocol Suite
Firewall		(TCP/IP), HTTP, XML, and SOAP.
IP Address Filtering		
Portmapping		UPnP: O Enable O Disable
Special Applications		
DMZ		
SIP ALG		Apply
NAT		
Out Of Service Notification		
System	0	

Setting is made.

NAT

Convert private IP address used inside LAN to global IP address for connecting to the Internet. Setting items are as follows:

Item	Description
Cone	Low security but normal operation of application; High compatibility with applications, gaming device etc.
Symmetric	Used for higher security gateway

1

In Menu List, "Router Setting" → "NAT"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
nternet Wi-Fi	0	
AN WI-FI	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
Firewall IP Address Filtering Portmapping Special Applications OMZ SIP ALG UPnP NAT Out Of Service Notification		Next
System	0	

2

"Cone"/"Symmetric" -> "Apply"

Quick Setup		NAT
Nobile Network Setting	0	
nternet Wi-Fi	0	Symmetric NAT is often deployed in gateways where higher security requirements exist. Cone
AN Wi-Fi	0	NAT provides lower security, but it allows some applications to perform correctly and is more
Router Setting	0	compatible with consumer applications, including applications on gaming devices.
Firewall		O Cone 💿 Symmetric
P Address Filtering		
Portmapping		
Special Applications		Apply
DMZ		
SIP ALG		
UPnP		
Out Of Service Notification		
System	0	

🧭 Setting is made.

Out of Service Notification

Set whether to notify on the web browser when Wi-Fi router is out of network service area.

• "Turn On" to notify that Internet connection is disabled on the web browser when Wi-Fi router is out of service area.


1

In Menu List, "Router Setting" -> "Out Of Service Notification"



2

"Turn On"/"Turn Off" → "Apply"

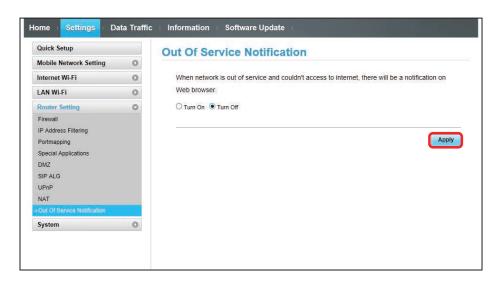

🧭 Setting is made.

System

Check Wi-Fi router device information and change login password for WEB UI. Also reset and reboot Wi-Fi router.

Checking Wi-Fi Router Information

Check device information such as software version.

1

In Menu List, "System" → "Device Information"

Quick Setup		Welcome to The Quick Setup Wizard
Mobile Network Setting	0	Step 1 of 4
nternet Wi-Fi	0	
LAN WI-FI	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
System	0	Next
Device Information		Next
Change Login Password		
Factory Data Reset		
Reboot		

Check information as follows.

Item	Description
Device name	Product name (304HW)
MAIN	MAIN phone number saved to USIM Card
SUB Number	SUB phone number saved to USIM Card
Hardware version	Hardware version
Software version	Software version
Firmware version	Firmware version
Web UI version	WEB UI version
WAN IP Address	Wi-Fi router IP address; Connect to the Internet with this IP address
IMEI	Serial number

159

Changing Login Password for WEB UI

Change Login password.

1

In Menu List, "System" -> "Change Login Password"

Quick Setup		Welcome to The Quick Setup Wizard
Nobile Network Setting	0	Step 1 of 4
nternet Wi-Fi	0	
AN Wi-Fi	0	Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save
Router Setting	0	content changed, and return to the Home screen.
System	0	Next
Device Information		
Change Login Password Factory Data Reset		
Reboot		

2

Enter current password

Quick Setup		Change Login Password
Mobile Network Setting	0	
Internet Wi-Fi	0	Current password:
LAN WI-FI	0	New password:
Router Setting	0	Confirm password:
System	0	Commin password.
Device Information		
Change Login Password		
Factory Data Reset		Apply
Reboot		

3

Enter a new password

Quick Setup		Change Login P	assword	
Mobile Network Setting	0			
Internet Wi-Fi	0	Current password:	****	
LAN Wi-Fi	0	New password:		
Router Setting	0			
System	0	Confirm password:		
Device Information				
Change Login Password				
Factory Data Reset Reboot				Apply

Re-enter the new password

Quick Setup		Change Login P	assword	
Mobile Network Setting	0			
Internet Wi-Fi	0	Current password:	••••	
LAN WI-FI	0	New password:	*****	
Router Setting	0	0		
System	0	Confirm password:		
Device Information				
Change Login Password				
Factory Data Reset				Apply
Reboot				

5

4

"Apply"

Quick Setup		Change Login P	assword	
Mobile Network Setting	0			
Internet Wi-Fi	0	Current password:	****	
LAN Wi-Fi	0	New password:		
Router Setting	0	Confirm password:		
System	0	Contirm password:	*****	
Device Information				
Change Login Password				
Factory Data Reset				Apply
Reboot				

New password is set and WEB UI Home screen appears.

- \cdot For enhancing security, it is recommended to change Login password regularly.
- \cdot Set safer Login password when setting a new one.
- For setting values for Login password, see "WEB UI Settings (Setting Range/Default Value)."


Resetting Wi-Fi Router

Restore Wi-Fi router settings to their factory defaults.

- \cdot All settings are restored except contents in USIM Card.
- · Alternatively, use Reset Button of Wi-Fi router. See description of Reset button in "Wi-Fi Router."

1

In Menu List, "System" → "Factory Data Reset"

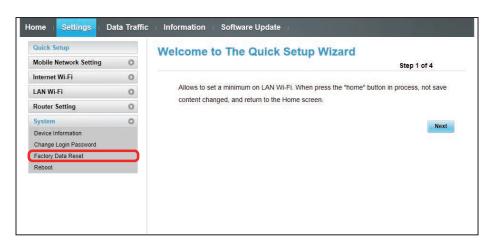


2

"Reset"

Mobile Network Setting Click the button below to perform factory data reset. Click the button below to perform factory data reset. Click the button below to perform factory data reset. Click the button below to perform factory data reset. Reset Reset Factory Data Reset	Quick Setup		Factory Data Reset	
LAN WI-Fi O Router Setting O System O Device Information Change Login Password Factory Data Reset	Mobile Network Setting	0		
Router Setting System Device Information Change Login Password Factory Data Reset	Internet Wi-Fi	0	Click the button below to perform factory data reset.	
System Reset Device Information Change Login Password Factory Data Reset	LAN Wi-Fi	0		
System O Device Information Change Login Password Factory Data Reset	Router Setting	0		
Change Login Password Factory Data Reset	System	0		leset
Factory Data Reset	Device Information			
	Change Login Password			
Reboot	Factory Data Reset			
	Reboot			

3

"OK"

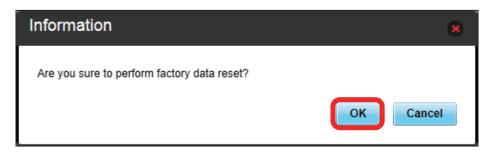

🧭 Wi-Fi router is reset and rebooted.

Rebooting Wi-Fi Router

Reboot Wi-Fi router.

1

In Menu List, "System" → "Reboot"

AN Wi-Fi O AN Wi-Fi O Allows to set a minimum on LAN Wi-Fi. When press the "home" button in process, not save content changed, and return to the Home screen. Next Device Information Change Login Password Factory Data Reset		Step 1 of 4
AN WI-Fi O Router Setting O lystem O Device Information Change Login Password factory Data Reset	nternet Wi-Fi O	
An Wi-Fi O touter Setting O ystem O Device Information Shange Login Password Shange Login Password Asset		
Statuter Setting O System O Device Information Next Shange Login Password A Gactory Data Reset A	AN WI-FI	
Vevice Information Next Change Login Password Cactory Data Reset	content changed, and return to the Ho	ome screen.
levice Information Change Login Password Cactory Data Reset	ystem O	Novt
actory Data Reset	Device Information	HOAL
	Change Login Password	
teboot	Factory Data Reset	
	Reboot	

2

"Reboot"

uick Setup		Reboot	
Nobile Network Setting	0		
nternet Wi-Fi	0	Click the button below to restart the device.	
AN Wi-Fi	0		
louter Setting	0		
iystem	0	Reboot	J
Device Information			
Change Login Password			
Factory Data Reset			

3

"OK"



🟁 Wi-Fi router is rebooted.

Showing/Setting Data Usage

Check data traffic volume. Also, set maximum traffic or reset date for data traffic.

Data traffic is an estimation. May differ from actual traffic volume. For actual traffic volume, contact SoftBank Customer Support. Data traffic does not include Internet Wi-Fi communication.

Check Data Traffic Volume

Accumulated data traffic volume at the moment from start of use or reset is shown. Moreover, the data traffic for a maximum of three days is also shown.



In Main Menu, "Data Traffic"

e Settings Data Tra	affic Information	Software Update	
		DATA MAIN	
	4G	Connected Connection Settings	
		CONNECT	
	My SoftBank		
Connection status		LAN WE Extense	01
Connection status Received data volume:	12.25 KB	LAN Wi-Fi status: Number of connected users:	ON No users
Connection status Received data volume: Transmitted data volume:		LAN Wi-Fi status: Number of connected users:	100
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB		100
Connection status	12.25 KB 3.69 KB 00.06:58		100

2

Check data traffic volume

ome : Settings : Data Traffic	Information	Software Update		
Data Traffic				
Mobile Network				
Monthly data usage Month Duration:06;33:19				
		Used:983.88 KB		
OGB				5GB
Last cleared:	2014-			
Auto reset date:	31		Reset	Setting
Today:	KB			
Yesterday:	B			
Two days ago:	≣ B			
Three days ago:	в			
	DATA MAIN		DATA SUB	
Download	KB		0 B	
Upload	KB		0 B	
	International F	Roaming		
Download	0 B			

- Accumulated data traffic volume at the moment from start of use or reset is shown. Moreover, the data traffic for a maximum of three days is also shown.
- Current data traffic volume compared to Maximum Traffic set in Data Traffic Setting is shown with bar. For setting maximum traffic, see "Setting Maximum Traffic."

Setting Maximum Traffic

Set monthly data traffic volume. When data traffic volume exceeds the set volume, Notification icon etc. appears in Home screen of Wi-Fi router.

- When "当月 " is selected to show data traffic volume on Home screen of Wi-Fi router, 🔜 (Bar icon) is shown on Home screen. When data traffic volume exceeds the maximum volume set in Data Traffic, bar icon of Data Traffic changes to 🚍 (Bar icon in red). Data traffic onto Home screen is set only on Wi-Fi router. It is not set on WEB UI.
- · Maximum traffic does not mean a limit on data communication. Use this volume as measure of usage.



In Main Menu, "Data Traffic"

IAIN S
Wi-Fi status: ON
nber of connected users: No users
nt

2

"Setting"

ne Setting	s : Data Traffic	Information	Software Update	
ata Traffic				
Mobile Net	NOLK			
Monthly	data usage Month Duration:06:33:19			
			Used:983.88 KB	
	OGB			5GB
	Last cleared:	2014-		565
	Auto reset date:	31		Reset Setting
	Auto reset date.	31		Incore Solding
	Today:	KB		
	Yesterday:	B		
	Two days ago:	B		
	Three days ago:	В		
		DATA MAIN		DATA SUB
Download		КВ		0 B
Upload		KB		0 B
		International	Roaming	
Download		0 B		

Enter number for data traffic → "Save"

Data Traffic Setting		8
Auto reset date: Maximum Traffic:	31 V 2 X GB V	Data traffic of the current month will only be reset. Maximum traffic not to mean you can not communicate , just use it as a reference.
	Save Cancel	

🏁 Maximum traffic is set.

- \cdot Enter value number between 1 and 999.
- · Set data volume in GB/MB.

Setting Auto Reset Date

Set date of month for automatically resetting accumulated data traffic.

1

In Main Menu, "Data Traffic"

ne Settings Data Trai	ffic Information So	ftware Update	
	4G Con	ATA MAIN	
pportSite Manual Link	_		
pportSite Manual Link	_		
	_	LAN Wi-Fi status:	ON
Connection status	My SoftBank	LAN Wi-Fi status: Number of connected users:	ON No users
Connection status Received data volume:	My SoftBank		
Connection status Received data volume: Transmitted data volume:	My SoftBank 12.25 KB 3.69 KB		
Connection status Received data volume: Transmitted data volume: Duration:	My SoftBank 12.25 KB 3.69 KB 00.06.58		

2

"Setting"

ta Traffic	:			
Mobile Ne	twork			
Monthly	/ data usage Month Duration:06:33:19			
	Duration. 06:33:19		Used:983.88 KB	
	0GB			5GB
	Last cleared:	2014-		308
	Auto reset date:	31		Reset Setting
	Today:	KB		
	Yesterday:	В		
	Two days ago:	B		
	Three days ago:	В		
		DATA MAIN	I	DATA SUB
Download		KB		0 B
Upload		KB		0 B
		Internet attack	- De amin a	
		Internation	ai Roaming	

Select date for resetting → "Save"

Data Traffic Setting		8
Auto reset date: Maximum Traffic:	31 V 2 GB V	Data traffic of the current month will only be reset. Maximum traffic not to mean you can not communicate , just use it as a reference.
	Save Cancel	

🕺 Auto reset date is set.

- · Value number is selected between 1 and 31.
- \cdot If 31 is set, data traffic is reset at the end of the month.



The reset items differ in "Reset" and "Auto Reset."

- The reset items are as follows.
- Reset

Reset this month, current day, a day ago, two days ago, three days ago immediately.

· Auto Reset

Data traffic for this month resets as the date changes to the day after the reset date. Data traffic after the reset date continues to accumulate.

In Main Menu, "Data Traffic"

e Settings Data Tra	fic Information	Software Update	
	al	DATA MAIN	
	4G	Connected	
		Connection Settings	
		CONNECT	
oportSite Manual Link	My SoftBank		
oportSite Manual Link	My SoftBank	CONTECT	
	My SoftBank	LAN Wi-Fi status:	ON
Connection status			ON No users
Connection status Received data volume:	12.25 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB 00:06:58	LAN Wi-Fi status:	

2

"Reset"

	Settings	Data Traffic	Information	Software Update		
nta 1	Fraffic					
Mo	bile Networ	k				
		usage Ionth uration:06:33:19				
				Used:983.88 KB		
	0	GB				5GB
	L	ast cleared:	2014-			
	A	uto reset date:	31		Reset	Setting
	т	oday:	KB			
	Y	esterday:	B			
	т	wo days ago:	B			
	Т	hree days ago:	B			
			DATA MAIN	I	DATA SUB	
Do	wnload		КВ		0 B	
Up	bload		KB		0 B	
			Internationa	al Roaming		
De	wnload		0.8	-		

3

"Yes"



Data volume is reset.

Confirm Information

If there is Information, Wi-Fi router receives Information.

Confirm Information

1

In Main Menu, "Information"

ne Settings Data Traffi	c Information	Software Update
	at	DATA MAIN
	4G	Connected Connection Settings
		CONNECT
nnortSite Manual Link	My SoffBank	CONNECT
pportSite Manual Link		
	My SoftBank	LAN Wi-Fi status: ON
Connection status		
Connection status Received data volume:	12.25 KB	LAN Wi-Fi status: ON
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN Wi-Fi status: ON
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB 00:06:58	LAN Wi-Fi status: ON

2

Select Information to confirm

Н	lome	∷ Settings ⊨ Data Traffic ⊨ Inf	ormation I Software Update I
	Info	ormation List View (2/4)	
	Select	All	Delete
		Date	Content
		20040-0100	64624802094248820906024482
		2444457828	PADADADADADADADADADADA
		and the second second	04033A030403AA0304030403
		and the second second	NEUROSCIENCIES CONTRACTOR
ĺ			

Confirm Information contents

3

	Information	(
A DECEMPTING OF THE ADVISED THE DECEMPTING OF THE OFFICE OFFICE OF THE OFFICE O		
A DECEMBER OF A		E

Information is shown in pop-up screen.

 \cdot To close pop-up screen, Click 🔽 in the top right.

Deleting Viewed Information

1

In Main Menu, "Information"

ne Settings Data Traffic	Information	Software Update	
	al.	DATA MAIN	
	4G	Connected	
		Connection Settings	
		CONNECT	
pportSite Manual Link	My SoftBank		
pportSite Manual Link Connection status	My SoftBank		
	My SoftBank	LAN Wi-Fi status:	ON
Connection status	Present (Sector)		ON No users
Connection status Received data volume:	12.25 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB	LAN Wi-Fi status:	

2

Select Information

Date Content Image: Content in the second sec	

3

"Delete"

Information	×

"OK"

4



Information is deleted after pop-up screen is shown.

Settings (WEB UI)

Select and Delete Information

1

In Main Menu, "Information"

ne Settings Data Traffic	Information	Software Update	
	4G	Connected Connection Settings	
pportSite Manual Link	My SoftBank		-
pportSite Manual Link Connection status Received data volume:	My SoftBank	LAN Wi-Fi status:	QN
Connection status			ON No users
Connection status Received data volume:	12.25 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB	LAN Wi-Fi status:	

2

Checkmark Information to delete

Se	elect All		Delete
	Date	Content	
16		09403484020840248024840249402480	
		INCOMPANY AND A DRUGGED AND A	
		04/2338/23144/2314/2314/2314/2314/231	
		INTERNO, PURCHARGE AND A DESCRIPTION	

· Checkmark "Select All" to select all.

"Delete"

Date Content		ormation List View (2/4)		
Image: Second and the second	Selec	t All		Delete
		Date	Content	
	2 📄	provine increase	09405888008800880088000880	
	/ 📄	SHOWN THESE	0003448833408000442408080888	
instruction and instruction of the second se		STREET TO DO NOT	14/21/A4/221/4/221/4/2214/2214/2214/22	
		and the second second	INTERNAL CONTRACTOR OF A DESCRIPTION OF A DESCRIPANTE A DESCRIPANTE A DESCRIPANTE A DESCRIPTION OF A DESCRIP	

4

"OK"

Information	×
Delete the selected information?	OK Cancel

protect in the second state of the second state is shown.

176 Setting Software Update

Set software update.

Enable auto-software update to check updates at regular intervals and automatically update if new software is found. If it is disabled, Wi-Fi router checks updates but does not download automatically.

Setting	Auto-Software Update
OCUMB	Auto obritilais opuato

1

In Main Menu, "Software Update"

ne Settings Data Traf	fic Information	Software Update	
		DATA MAIN	
	4G	Connected Connection Settings	
		CONNECT	
pportSite Manual Link	My SoftBank		
oportSite Manual Link	My SoftBank		
	My SoftBank	LAN Wi-Fi status: ON	
Connection status			
Connection status Received data volume:	12.25 KB	LAN WI-Fi status: ON	
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN WI-Fi status: ON	
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB 00:06:58	LAN WI-Fi status: ON	

2

"Enable" or "Disable"

Home Settings	Data Traffic : Information : Software Update
Software Updat	e
Auto Update:	● Enable ○ Disable
Data communication ca	nnot use during Software Update.
Software update is unav	vailable in overseas countries.
	Continue

🏁 Auto-software update downloading is enabled/disabled.

In Main Menu, "Software Update"

ne. Settings Data Traffic	Information	Software Update	
	at	DATA MAIN	
	4G	Connected Connection Settings	
		CONNECT	
anostCito I Manuallisk	Mr SoftDank		
pportSite Manual Link Connection status	My SoftBank		
	My SoftBank	LAN Wi-Fi status:	ON
Connection status			ON No users
Connection status Received data volume:	12.25 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume:	12.25 KB 3.69 KB	LAN Wi-Fi status:	
Connection status Received data volume: Transmitted data volume: Duration:	12.25 KB 3.69 KB	LAN Wi-Fi status:	

2

"Continue"

Home Settings	Data Traffic : Information : Software Update :
Software Updat	e
Auto Update:	
Data communication ca	nnot use during Software Update.
Software update is unav	vailable in overseas countries.
	Continue

 igtimes Check the latest software. If software update is found, update software.

 \cdot When software in use is the latest, "The latest version" appears.

🖉 Software Update

Packet communication charges are not applied for Software update. While software is updated, other functions are disabled. Software update is not available during International roaming.

Setting from Mobile Device

Access WEB UI from a smartphone etc. to show WEB UI page for mobile devices.

- SoftBank does not guarantee compatibility with all mobile devices.
- Available functions differ in WEB UI for mobile devices and WEB UI for PCs.


Activating WEB UI from Mobile Device

1

Confirm that Wi-Fi router and mobile device are connected via WLAN. • For instruction for WLAN connection, see " WLAN (Wi-Fi)."

2

" 端末情報 "

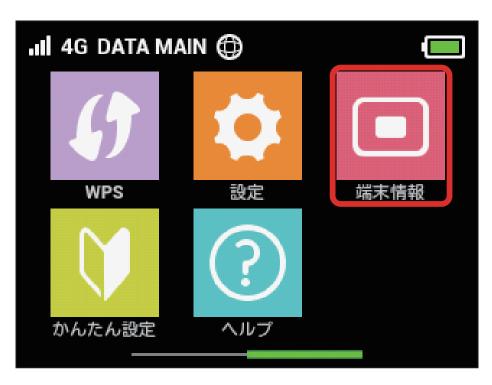


B URL of WEB UI appears on Display of Wi-Fi router.

Activate browser on the mobile device and enter URL (http://web.setting) shown on Display in the address bar of browser

4	端末情報
WEB UI UF	iL
http://web	setting
電話番号	
MAIN: SUB:	

🟁 WEB UI Home Page appears.

WEB UI Screen on Mobile Device

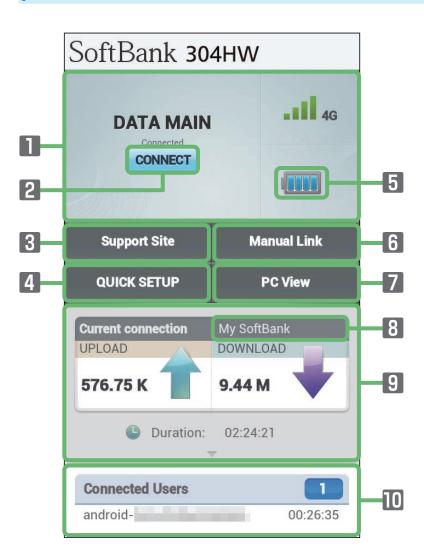

Item	Description		
Connected network	Connected network details and signal level		
Connection button	In Japan: Enable to connect with network manually when automatic connection is failed International roaming: Enable to connect with network manually when automatic setting of International roaming is diabled		
3 Support Site	Connect SoftBank Mobile web page and open Support Site of 304HW		
4 QUICK SETUP ¹	Open Quick Setup wizard		
5 Battery level	Battery level		
6 Manual Link	Connect SoftBank Mobile web page and open User Guide of 304HW		
7 PC View	Open WEB UI Home page for computer		
8 My SoftBank	Connect SoftBank Mobile web page and open web page for SoftBank Mobile's membership		
9 Current connection	Show accumulated data traffic at the moment from start of connection		
Ocnnected Users	Connected devices		

1 Input Login password when having not logged in to WEB UI.

In WEB UI Home screen, "QUICK SETUP"

SoftBank 304HW		
DATA MAIN Connected CONNECT		.111 46
Support Site	М	anual Link
QUICK SETUP		PC View
Current connection UPLOAD 576.75 K	My Soft DOWNL	OAD
Duration:	02:24:	

Login window opens.

2

Enter Login password → "Log In"

Lo	g In	×
	Password:	
	Log In	

😥 Quick Setup wizard opens.

• "admin" is set for Login password by default. For Login password, see "Changing Login Password for WEB UI."

Quick Setup from Mobile Device

Setting items are as follows:

Item	Description	
SSID	Set SSID (Network Name)	
Authorization method	Set authorization method	
Encryption method	Set encryption method	
WPA security key	Appears when "WPA2-PSK" or "WPA/WPA2-PSK" is selected in "Authorization method"; Enter Security Key	
WEP key 1	Appears when "Auto," "Open" or "Shared key" is selected in Authorization method and Encryption method is "WEP"; Enter WEP key	
SSID stealth	Set whether to send Wi-Fi router SSID	

For setting values, see "WEB UI Settings (Setting Range/Default Value)."



In WEB UI Home screen, "QUICK SETUP"

SoftBank 304HW		
DATA MAIN Connected CONNECT	.111 46	
Support Site	Manual Link	
QUICK SETUP	PC View	
Current connection UPLOAD 576.75 K	My SoftBank DOWNLOAD 9.44 M	
• • • • • • • • • •	02:24:21	
Connected Users	00:26:35	

Login window opens.

 \cdot When already logged in, go to step ${\color{red} {\bf 3}}$.

Enter Login password → "Log In"

Password:	ר
Log In	


🕺 Quick Setup wizard opens.



"Next"

Log Out	Qu ick Setup	Home
Welcome to	o The Quick Se tup Wizard	Step 1 of 4
press the "h	et a minimum on LAN Wi-Fi. When Iome" button in process, not save Inged, and return to the Home scree	en. Next

Confirm description for SSID and SSID Stealth in LAN Wi-Fi and "Next"

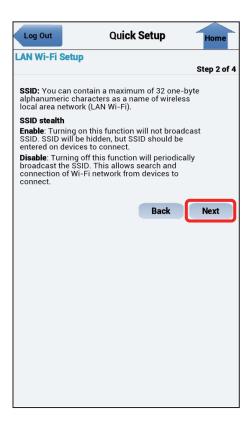

5

Configure LAN Wi-Fi, "Next"

Log Out	Quick Setup	Home
LAN Wi-Fi Setup		Step 3 of 4
SSID A		
SSID:	304HWa-XXXXXX	
Authorization method:	WPA/WPA2-PSK	
Encryption method:	AES+TKIP	
WPA security key:	••••••	
SSID stealth:	Disable	
	Back	Next

Check network configuration, "Complete"

6

Log Out Q	uick Setup	Home
Confirm setting		Step 4 of 4
SSID A		
SSID:	304HWa-XX	xxxx
Authorization method:	WPA/WPA2-	-PSK
Encryption method:	AES+TKIP	
SSID stealth:	Disable	
	Back	Complete

🕺 Quick Setup is complete.

Notes on Use on Mobile Device

Changing Wi-Fi Settings

Changing Internet Wi-Fi setting, LAN Wi-Fi setting on WEB UI from mobile device may disconnect WLAN connection.

Using WEB UI for PCs

Some functions are not available depending on web browser for using WEB UI for PCs on mobile devices.

Terrestrial TV

Terrestrial TV	188
Enabling TV	189
Watching TV on Android [™] Device	190
Watching TV on iPhone/iPod touch/iPad	194

Terrestrial TV

Watch One Seg and Full Seg by connecting Wi-Fi router with a smartphone, a tablet, etc. via WLAN (only in Japan).

- ・By default, "ワンセグ/フルセグ切替" is set to "ワンセグ固定."
- \cdot Install TV application to watch TV.
- For instruction for WLAN connection, see "Connecting Android™ Device," "Connecting iPhone/iPod touch/iPad."


TV Antenna

Wi-Fi router receives TV airwaves with TV Antenna.

• Fully extending TV Antenna and moving to other location may improve signal reception.

1

Pull out TV Antenna by notch

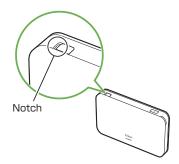

2

Pull TV Antenna slowly and fully extend it



3

Adjust TV Antenna for best reception



Precaution for TV

TV Antenna

- Be careful not to damage a nail etc. when pulling out TV Antenna from the notch of Wi-Fi router.
- Do not forcefully pull out TV Antenna, or when changing a direction. Doing so might cause malfunction or damage.
- Use with TV Antenna elongated completely. If not so, TV broadcast may not be received.
- When putting in TV Antenna, lower the lower part of TV Antenna straight and put in the tip completely instead of pinching the tip and putting it in by force.
- Do not lift or swing Wi-Fi router with TV Antenna. Failure to do so might cause damage or an injury.

Receiving One Seg/Full Seg

They may not be received depending on environment such as moving and out of service area. Full Seg may not be received even if One Seg is received. When "ワンセグ / フルセグ切替" is set to "フルセグ優先" if Full Seg is not received, it changes to One Seg automatically.

• The contents of a program may differ between One Seg and Full Seg.

Notes

Do not use TV while riding a bicycle or motorcycle, or driving a car. In addition, stay alert to the traffic around you when walking.

About Using Overseas

TV is not available due to different broadcast frequencies and formats abroad.

Channel Scan

Channel setting using area setting may not be available when the broadcasting frequency is changed or in some areas. In this case, scan channel list again.

Watching TV for a Long Time

Watching TV at a loud volume may affect hearing. Wi-Fi router, smartphone or tablet may also become warm and cause low-temperature burns by skin contact.

Protected Content Copyrights

Wi-Fi router adopts "The Software Based RMP System" to protect the content copyrights for terrestrial digital TV broadcasting. Therefore, the B-CAS card etc. is not required.

For "The Software Based RMP System," contact the RMP Administration Center for Terrestrial Broadcasting Content.

Homepage: http://www.trmp.or.jp/

Copyright Protection

TV programs are protected under copyright. Do not use One Seg/Full Seg for any purpose other than watching TV.

Watching TV

One Seg/Full Seg is a service provided by TV broadcasters (broadcast stations), etc. Transmission charges are not incurred for receiving images, voice and sound. For details on NHK viewing fees, contact NHK.

Unable to Watch TV

In case of poor TV reception, the Wi-Fi router condition, etc., you may be unable to watch TV, or there may be interference with TV image and sound. For details, see "Unable to receive TV, TV images are disrupted, sounds are interrupted," "Unable to activate TV," "Unable to watch TV."


Enabling TV

Turn "テレビ視聴 " on Wi-Fi Router to " 有効 "

・This function is set to " 有効 " by default.

1

" テレビ "

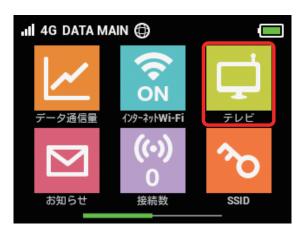

2

"テレビ視聴"

۴ı	テレビ	A
テレビ	視聴	有効 🔪
	視聴」を有刻 iで接続して	めにする いる端末から
専用アブ す。	リでテレビ	を視聴できま

3

Tap checkmark of " 有効 "



Watching TV on Android[™] Device


Install TV Application from Google $Play^{TM}$

Screenshots and steps described here are for installation on Android $^{\rm TM}4.4$ from Google Play $^{\rm TM}.$

To use Google Play[™], you need a Google account.

1

In Home screen or App list, "Play Store"

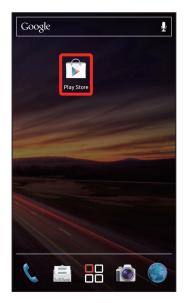

2

Input " テレビ視聴 " in search column → Tap "Search" or Search icon



🖳 (テレビ視聴)→ Tap Install icon in Software screen

Settings on Android[™] Device




In Home screen or App list, " テレビ視聴 "



Channel scan (searching) starts on the first startup only.

2

Channel scan starts

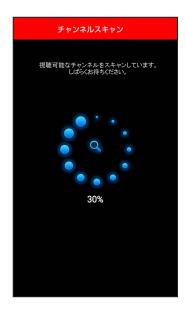

 Channel scan may fail depending on TV reception level or the condition between Wi-Fi router and smartphone. For details, see "Unable to watch TV."

In Channel scan completion screen, "次へ"



🔀 TV viewing screen appears.

- It may take about several minutes until channel scan is complete.
- ・ Tap " 再スキャン " to scan channels again.
- When Channel scan fails, retry in the place easy to receive TV signal, such as by a window.

Watching TV

1

In Home screen or App list, "テレビ視聴 "



🕺 TV screen is shown.

2

"選局"



Dhannel list appears in information area.

Tap any channel



Broadcast screen of selected channel appears.

Flick TV viewing screen left or right → Tap any channel or
 ✓ / ▷ on Channel name area to switch channel.

TV Viewing Screen (Vertical Screen)


I



Item	Description		
Received signal level	Show TV reception level		
2 TV viewing screen	Show TV image; Flick left or right → Tap a channel to switch channel		
3 Volume bar	Drag left or right to adjust volume		
Information area	Information selected with Switch operation button is shown		
5 Switch operation button	Tap to show each item		
6 Channel name area	Channel name appears; Tap		
7 Receiving One Seg/ Full Seg	Show present system (Full Seg/One Seg)		
Switch screen button	Tap to switch Full screen		

TV Viewing Screen (Full Screen)

When only TV viewing screen is shown, Tap screen to show other items.

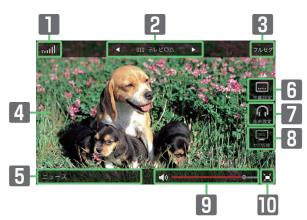

Item	Description	
Received signal level	Show TV reception level	
Channel name area	Channel name appears; Tap 🚺 / 📐 to switch previous or next channel	
3 Receiving One Seg/ Full Seg	Show present system (Full Seg/One Seg)	
TV viewing screen	Show TV image; Flick left or right → Tap a channel to switch channel; Tap to show/hide menu items such as Volume bar	
5 Title area	Program title appears	
6 Subtitles	Set subtitles	
Audio setting	Set audio	
8 Seg switching	Set Priority Full Seg/One Seg only	
9 Volume bar	Drag left or right to adjust volume	
OSwitch screen button	Tap to switch Vertical screen	

TV Operation

Show Program Table

In TV screen (vertical screen), " 番組表 "

- Program table of the channel currently watched is shown. Select program name to check detailed information.
- · Tap channel field on the top screen to switch channel.
- Check the program table of the day while watching One Seg.

Check the program table of several days while watching Full Seg. To switch a date, Tap \blacksquare / \blacktriangleright .

 \cdot To refresh program table, Tap C (Refresh button).

Subtitles

In TV screen (vertical screen), "設定 " → "字幕設定 " → Select each item

- ・Alternatively, in TV screen (full screen), "字幕設定."
- \cdot Programs which are not subtitled cannot be set.

Audio

In TV screen (vertical screen), "設定 " → " 音声設定 " → Select each item

- ・Alternatively, in TV screen (full screen), " 音声設定 ."
- Programs which do not have switchable audio cannot be set.

Priority Full Seg/One Seg Only

In TV screen (vertical screen), "設定 "→" ワンセグ/フルセグ 切替 "→ " フルセグ優先 "/" ワンセグ固定 "

・Alternatively, in TV screen (full screen), " セグ切替 ."

Scan Channel

How to scan channels manually is described.

In TV screen (vertical screen), "設定 " → " チャンネルスキャン" → " 手動設定 " → Select Area → " 次へ "

Channels available in selected area are scanned.

• When selecting "自動設定," channel available in present location is scanned.

Initialization

In TV screen (vertical screen), "設定 " → " 初期化 " → " 初期化 する " → "OK"

App Information and Help

In TV screen (vertical screen), "設定 " → " アプリ情報 "/" ヘル プ " → Check each item

Return to TV Screen

Return program table or setting screen to normal TV screen.

In TV screen (vertical screen), "視聴"

Watching TV on iPhone/iPod touch/iPad


Installing TV Application from App Store

Screenshots and steps described here are for installation on iPhone with iOS7.1 from App Store.

 \cdot For use of App Store, Apple ID is required.

1

In Home screen of iPhone/iPod touch/iPad, "App Store"

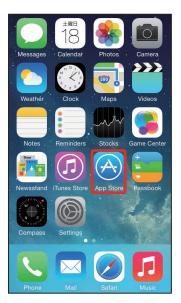

2

"検索"



3

Input "テレビ視聴 " in search column → " 検索 "

Q テレ	ビ視聴			8
テレビ	視聴			
\rightarrow	あ	か	さ	€
5	た	な	は	空白
ABC	ま	や	6	検索
⊕ ₽	^^	ゎ	、。?!	使彩

4	ļ	

- 😐 (テレビ視聴) → Tap Install icon in Software screen
- 🧏 Install TV application.

Settings on iPhone/iPod touch/iPad

Screenshots and steps described here are for on iPhone with iOS7.1.

1


In Home screen of iPhone/iPod touch/iPad, "テレビ視聴 "



Channel scan (searching) starts on the first startup only.

2

Channel scan starts

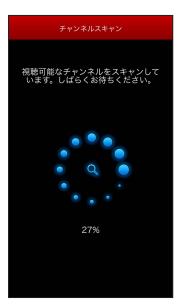

 Channel scan may fail depending on TV reception level or the condition between Wi-Fi router and smartphone. For details, see "Unable to watch TV."

3

In Channel scan completion screen, "次へ"



🔀 TV viewing screen appears.

- It may take about several minutes until channel scan is complete.
- ・ Tap " 再スキャン" to scan channels again.
- When Channel scan failed, retry in the place easy to receive TV signal, such as by a window.

Watching TV

1

In Home screen of iPhone/iPod touch/iPad, "テレビ視聴 "



3

Tap any channel



Broadcast screen of selected channel appears.

Flick TV viewing screen left or right → Tap any channel or
 / ▶ on Channel name area to switch channel.

🟁 TV screen is shown.


2

"選局"



Shannel list appears in information area.


TV Viewing Screen (Vertical Screen)

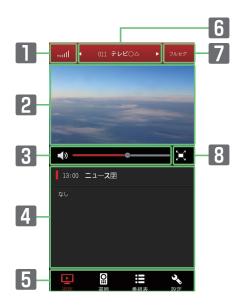

Item	Description	
Received signal level	Show TV reception level	
2 TV viewing screen	Show TV image; Flick left or right → Tap a channel to switch the channel	
3 Volume bar	Drag left or right to adjust volume	
Information area	Information selected with Switch operation button is shown	
Switch operation button	Tap to show each item	
6 Channel name area	Channel name appears; Tap 🛃 / 📐 to switch previous or next channel	
Receiving One Seg/ Full Seg	Show present system (Full Seg/One Seg)	
Switch screen button	Tap to switch Full screen	

TV Viewing Screen (Full Screen)

 \cdot When only TV viewing screen is shown, Tap the screen to show other items.

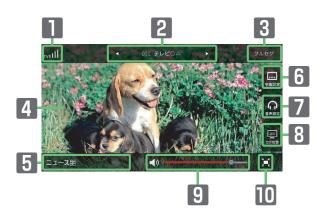

Item	Description	
Received signal level	Show TV reception level	
2 Channel name area	Channel name appears; Tap 🚺 / 🗖 to switch previous or next channel	
Receiving One Seg/ Full Seg	Show present system (Full Seg/One Seg)	
TV viewing screen	Show TV image; Flick left or right → Tap a channel to switch the channel; Tap to show/hide menu items such as Volume bar	
5 Title area	A program title appears	
6 Subtitles	Set subtitles	
7 Audio setting	Set audio	
8 Seg switching	Set Priority Full Seg/One Seg only	
9 Volume bar	Drag left or right to adjust volume	
Switch screen button	Tap to switch Vertical screen	

TV Operation

Show Program Table

- In TV screen (vertical screen), " 番組表 "
- Program table of the channel currently watched is shown. Select program name to check detailed information.
- Tap channel field shown at the top of screen to switch channel.
- Check the program table of the day while watching One Seg.

Check the program table of several days while watching Full Seg. To switch a date, Tap \checkmark .

Subtitles

In TV screen (vertical screen), " 設定 " → " 字幕設定 " → Select each item

- ・Alternatively, in TV screen (full screen), "字幕設定."
- \cdot Programs which are not subtitled cannot be set.

Audio

In TV screen (vertical screen), "設定 " → " 音声設定 " → Select each item

- ・Alternatively, in TV screen (full screen), " 音声設定."
- Programs which do not have switchable audio cannot be set.

Priority Full Seg/One Seg Only

In TV screen (vertical screen), "設定 "→ " ワンセグ/フルセグ 切替 "→ " フルセグ優先 "/" ワンセグ固定 " · Alternatively, in TV screen (full screen), " セグ切替 ."

Scan Channel

How to scan channels manually is described. In TV screen (vertical screen), "設定 " → "チャンネルスキャン " → " 手動設定 " → Select Area → "次へ "

Channels available in selected area are scanned.

 When selecting "自動設定," channel available in present location is scanned.

Initialization

In TV screen (vertical screen), "設定 " → "初期化 " → "初期化 する " → "OK"

App Information and Help

In TV screen (vertical screen), "設定 " → " アプリ情報 "/" ヘル プ " → Check each item

Return to TV Screen

Return program table or setting screen to normal TV screen.

In TV screen (vertical screen), " 視聴 "

Appendix

Troubleshooting	200
Specifications	204
Setting List	205
Glossary	213
Warranty & Service	214
Customer Service	214

Troubleshooting

Troubleshooting

Check the following Q & A. If problem persists, visit your nearest SoftBank Shop or contact Customer Service, General Information.

Symptoms

- Q. Unable to connect WLAN
- A. Make sure Wi-Fi router and WLAN device WLAN functions are activated. When five minutes elapse after no WLAN devices are connected and Display turns off, Wi-Fi router goes into Sleep mode and WLAN function of Wi-Fi router is disabled. Press Power Button to enable WLAN function. Change time before turning off in "スリーブ設定" in Wi-Fi router "設定." For details, see "Setting Sleep Mode."
- A. Confirm that Wi-Fi router SSID is selected and correct Security Key is set on WLAN device.
 If you forget SSID or WEP key, see "SSID" in Wi-Fi router Touch Menu or "LAN Wi-Fi" on WEB UI and change Security Key on WLAN device.
 For details, see "SSID and Security Key," "LAN Wi-Fi Basic Settings (SSID A)." Some WLAN devices do not support WPA/WPA2. See WLAN device user guide.
- A. If you are unable to connect with WPS function, see WLAN device user guide etc.
 If problem persists, set up WLAN manually. See each topic of "Connecting WLAN."
- A. Change Wi-Fi 通信規格設定 and retry. For details, see "Wi-Fi Communication Standard Setting."

- Q. PC does not recognize Wi-Fi router by USB connection
- A. Confirm that Wi-Fi router is properly connected to PC.
- A. Remove Wi-Fi router from PC, restart PC, then reconnect Wi-Fi router.
- A. For Windows 8.1, follow these steps to confirm proper Wi-Fi router installation.
 - Open Desktop window → Explorer → Right-click "PC" → "Properties" → "System Properties" → "Hardware"
 - → "Device Manager" → Confirm that the following is shown
 - Before driver installation: "HUAWEI Mass Storage USB Device" in "DVD/CD-ROM drives," "USB Mass Storage Device" in "Universal Serial Bass Controllers"
 - After driver installation: "Remote NDIS based Internet Sharing Device" in "Network adapters"
- For Windows 8, follow these steps to confirm proper Wi-Fi router installation.

Open Desktop window → Explorer → Right-click "Computer" → "Properties" → "System Properties" → "Hardware" → "Device Manager" → Confirm that the following is shown

- Before driver installation: "HUAWEI Mass Storage USB Device" in "DVD/CD-ROM drives," "USB Mass Storage Device" in "Universal Serial Bass Controllers"
- After driver installation: "Remote NDIS based Internet Sharing Device" in "Network adapters"
- A. For Windows 7, follow these steps to confirm proper
 Wi-Fi router installation.
 Start Explorer → Right-click "Computer" → "Properties"

→ "System Properties" → "Hardware" → "Device Manager" → Confirm that the following is shown

- Before driver installation: "HUAWEI Mass Storage USB Device" in "DVD/CD-ROM drives," "USB Mass Storage Device" in "Universal Serial Bass Controllers"
- After driver installation: "Remote NDIS based Internet Sharing Device" in "Network adapters"
- A. For Windows Vista, follow these steps to confirm proper Wi-Fi router installation.
 Right-click "Computer" → "Properties" → "System Properties" → In "User Account Control" window, "Continue" → "Hardware" → "Device Manager" → Confirm that the following is shown
 - Before driver installation: "HUAWEI Mass Storage USB Device" in "DVD/CD-ROM drives," "USB Mass Storage Device" in "Universal Serial Bass Controllers"
 - After driver installation: "Remote NDIS based Internet Sharing Device" in "Network adapters"

- Q. Installer does not automatically activate (Windows PC)
- A. It takes time to recognize new hardware. Wait for approximately ten seconds. If installer does not automatically activate, manually install the driver. For details, see "Manual Installation."
- A. When some security software is installed in your PC, stop security software before installing. For stopping security software, see security software user guide.
- Q. Charging time is long
- A. Charging via USB connection with PC takes longer. Do not use except for compatible AC Charger (optional accessory) or supplied Micro USB Cable to charge Battery. May cause malfunction.
- A. It takes longer to charge while using Wi-Fi router.
- Q. Internet connection fails
- A. Make sure you are within the service area.
- A. If signal reception is poor, move to where signal is strong, then reconnect.
- A. The access point might be busy depending on the time of day, wait a little while then reconnect.
- A. Activate WEB UI and confirm that Internet Wi-Fi setting and network settings are correct.
- Q. Unable to connect Internet Wi-Fi
- A. Confirm that access point to be connected is compatible with Wi-Fi router. For specifications of access point, see access point user guide.
- A. Confirm that Internet Wi-Fi settings such as Security Key are properly made. For settings, see "Setting Internet Wi-Fi."

- Q. Transmission fails
- A. Signal may be weak. Move to where signal is stronger.
- A. Check Battery of Wi-Fi router. If Battery is low, charge Battery with AC Charger (optional accessory) or PC using Micro USB Cable.
- A. Confirm that Wi-Fi router and WLAN device, PC, etc. are properly connected via WLAN or USB Cable.
- A. If Wi-Fi router is connected via WLAN, power off Wi-Fi router, then power on again.
- A. If Wi-Fi router is connected using Micro USB Cable, remove Wi-Fi router from PC, then reconnect.
- A. Some WLAN devices may stop when no data transfer is made for a certain period of time. See WLAN device user guide.
- A. If problem persists, restart PC, then reconnect to Wi-Fi router.
- Q. Transmission from WLAN device connected to Wi-Fi router fails
- A. Confirm that USIM Card is recognized.
- A. Confirm that Wi-Fi router is properly connected to the Internet. When connected to the Internet, Internet connection icon () appears in Home Screen.
- A. Data traffic is unavailable during Wi-Fi router software update. Try to connect after software is updated.
- Q. Transmissions are slow
- A. When *is shown on Status Bar, communication speed is reduced due to data traffic volume. For details, see "Notification for Setting Maximum Traffic."*
- A. Signal may be weak. Move to where signal is stronger.
- A. Connection may be poor. Try again later.
- A. Interference with nearby WLAN device etc. may occur.
 Change Wi-Fi router channel or connect with Micro USB Cable.
 - For changing WLAN channel, see "LAN Wi-Fi Advanced Settings."
- A. Using TV, radio or microwave oven may cause interference signal reception of Wi-Fi router. Use them apart from Wi-Fi router or turn them off to check if they interfere Wi-Fi router signal reception.
- A. If temperature of Wi-Fi router remains high for a long time, communication may be restricted. Try to connect after a while.
- A. If Wi-Fi router is covered with cover or case, remove it.
- Q. Forgot PIN/Unknown PUK Code/USIM Card is locked
- A. Contact Customer Service, General Information.

- Q. USIM Card is not recognized/recognized as an invalid USIM Card
- A. Make sure USIM Card is inserted correctly. For details, see "Install USIM Card."
- A. Check USIM Card for warping.
- A. Check USIM Card IC chip for scratches/corrosion.
- A. Debris on USIM Card (particularly on IC chip) may prevent recognition. Clean it with a soft cloth.
- A. Check above all. If problem persists, contact Customer Service.
- -----
- Q. Confirming Administrator logon
- A. For Windows 8.1, follow these steps to check.

Move the pointer into the upper-right or lower-right corner → charm → "Control Panel" → "Change your account type" in "User Accounts and Family Safety" → Make sure that the account type you are logging in as is "Administrator."

A. For Windows 8, follow these steps to check.

Move the pointer into the upper-right or lower-right corner → charm → "Control Panel" → "Change your account type" in "User Accounts and Family Safety" → Make sure that the account type you are logging in as is "Administrator."

A. For Windows 7 or Windows Vista, follow these steps to check.

"Start menu" → "Control Panel" → "User Accounts and Family Safety" → "User Accounts" → Confirm that account type is "Administrator."

- A. For Mac OS X (10.9), follow these steps to check.
 In Dock, "System Preferences" → "Users & Groups" →
 Confirm that account type is "Administrator."
- Q. Communication is not available with out of service indicated when moving from Japan to abroad
- A. Make sure that 自動接続設定 for 国際ローミング is enabled. For details, see "International Roaming."
- Q. Resetting factory defaults (Reset)
- A. Use Reset Button to reset. For details, see description of Reset button in "Wi-Fi Router."
- A. Use WEB UI to reset. For details, see "Resetting Wi-Fi Router."
- Q. Canceled phone number appears on WEB UI
- A. Phone number may appear on WEB UI screen depending on terms of contract or cancellation method.

- Q. Wi-Fi router operations are unstable
- A. Confirm that Wi-Fi router is not used in extreme temperatures/high humidity/direct sunlight/dusty areas. Read "Safety Precautions" beforehand for using under proper environment.

- Q. Wi-Fi router goes off
- A. Confirm that Wi-Fi router is not used in extreme temperatures/high humidity/direct sunlight/dusty areas. Read "Safety Precautions" beforehand for using under proper environment.
- A. Reboot Wi-Fi router and check battery level. If Battery is low, charge Battery, power on 10 minutes after charging starts, then check if Wi-Fi router works properly.

.....

- Q. Wi-Fi router is inoperative
- A. Operate as follows.

Remove Battery → Insert Battery → Power on after a while

For removing Battery, see "Battery Installation."

- Q. Connection for voice chat or video chat fails
- A. Make sure Wi-Fi router is within the service area.
- A. Signal may be weak. Move to where signal is stronger.
- A. For UPnP compatible applications, Enable UPnP.

Start WEB UI, "Settings" → "Router Setting" → Select "Enable" for "UPnP" and Click "Apply"

- Q. IP address error is shown
- A. If IP address of Internet Wi-Fi and IP address of Wi-Fi router are duplicated, IP address error is shown on Display of Wi-Fi router.

When using the Internet Wi-Fi function, and connect to the Internet through the access point of the public WLAN service, duplicating the IP address of the LAN Wi-Fi and Internet Wi-Fi may occur and Internet connection is unavailable in this situation. Activate WEB UI and change current IP address in "IP Address" field by selecting "Settings" → "Router Setting" (By default, IP address of Wi-Fi router is set to "192.168.128.1.") If an IP address error occurs in this setting, change the third portion of the "128" in the "192.168.128.1" from the left to another number.) Accordingly, change starting IP address/ ending IP address in "DHCP" and Click "Apply." When Wi-Fi router's IP address is changed, changing some settings of "Router Setting" for functions linked to the IP address may be required.

- Q. Unable to receive TV, TV images are disrupted, sounds are interrupted
- A. Move to a place with good TV reception.
- A. Adjust the direction of TV Antenna.
- A. Check area setting of Channel Scan.
- A. Put Wi-Fi router and mobile devices close.
- A. When " インターネット Wi-Fi" on Wi-Fi router is "ON," set to "OFF."
- Q. Unable to activate TV
- A. Battery may be low. Activate after charge.
- Q. Unable to watch TV
- A. Check reception. If reception is poor, move to a place with good reception. When the TV signal conditions are poor, connecting a commercially available antenna cable and the adapter plug such as 75 Ω (mini plug)
 ⇔ 75 Ω (type F) matching box may improve the signal conditions.
- A. Check Wi-Fi router is powered on.
- A. Check smartphone or tablet is connected to Wi-Fi router via WLAN. To watch TV, connect via WLAN.
- A. Check whether TV is already being viewed on another smartphone or tablet connected to Wi-Fi router via WLAN. Simultaneously watching is not available.
- A. Check "テレビ視聴 " is set to " 有効 ."
- A. If "インターネット Wi-Fi" set to "ON," receiving TV may be affected. Set " インターネット Wi-Fi" to "OFF" while receiving TV.
- A. Bluetooth function on mobile device may affect TV receiving. Set Bluetooth on mobile device to OFF while receiving TV.

Specifications

Wi-Fi Router

Item	Description		
Product Name	304HW		
Dimensions ¹	59.5mm (H) x 101mm (W) x 15.9mm (D)		
Weight ¹	130g		
Interface	USB 2.0 High Speed (Micro USB terminal)		
Power Consumption ¹	On standby: 0.015 W On communication: 1.3W *Power consumption varies by usage		
Operation Environment	Operating Temperature: 0°C to 35°C Humidity: 30% to 85%		
Compatible Networks	AXGP: 2.5GHz FDD-LTE: 1.7GHz W-CDMA: 1.5GHz, 1.7GHz, 2.1GHz Wi-Fi: IEEE802.11a/b/g/n (Internet Wi- Fi), IEEE802.11b/g/n (LAN Wi-Fi)		
Frequency	AXGP: Upstream: 2545 MHz to 2575 MHz Downstream: 2545 MHz to 2575 MHz FDD-LTE: Upstream: 1710 MHz to 1785 MHz Downstream: 1805 MHz to 1880 MHz 3G: Upstream: 1427.9 MHz to 1880 MHz 1920 MHz to 1980 MHz Downstream: 1475.9 MHz to 1495.9 MHz, 1844.9 MHz to 1879.9 MHz, 2110 MHz to 2170 MHz Wi-Fi: 2400 MHz to 2483.5 MHz (13ch all) 5180 MHz to 5320 MHz, 5500 MHz to 5700 MH		
Charging Time ¹	Using AC Charger (optional accessory) Current value 1.0A: Approx. 3.5 hours Current value 1.8A: Approx. 3 hours Micro USB Cable 6 hours Approximate value		
Continuous Standby Time ¹	700 hours Approximate value		
Continuous Communication Time ¹	9.0 hours Approximate value		

1 Approximate value

Charging time depends on ambient temperature, Battery usage, etc.

• Continuous standby time and continuous communication time depend on environment, signal conditions, etc.

Micro USB Cable

Description
Micro USB Cable (HWDAZ1)
lm
Standard USB Plug

Battery

Item	Description
Product Name	Battery (HWBBB1)
Voltage	3.8 V
Туре	Lithium-ion battery
Capacity	2400 mAh

Material List

Parts	Materials/Finishing
Wi-Fi router: Surface	Glass
Wi-Fi router: Lateral side	PC + 9% GF + Coating
Wi-Fi router: Power Button	PC + Coating
Wi-Fi Router: Bottom	PC + Coating
Wi-Fi router: USIM Card Stopper	Nickel copper alloy, Gold plating
Wi-Fi router: Battery connection terminals	Alloy/Gold plating, Stainless steel/ Nickel plating
Micro USB Cable: Outer case	PVC
Micro USB Cable: USB plug	Iron, Brass/Nickel based tin plating
Micro USB Cable: Micro USB plug	Stainless Steel, phosphor bronze
Battery: Main unit	PET
Battery: Terminal	Nickel plating + Gold plating
Battery: Outer Case (Upper/ Lower)	PC

GPL Written Offer

This product contains free software complying with GNU General Public License (Version 2). For details, refer to the following web page

http://consumer.huawei.com/minisite/copyright_notice/ or contact mobile@huawei.com.

Setting List

Setting list on Wi-Fi router and WEB UI are as follows. Value range and default values are shown for each setting item.

Wi-Fi Router Settings (Setting Range/Default Value)

Set from Touch Menu on Wi-Fi router.

・データ通信量

A to F) When " 自動 "/"Open"/"Shared key" is selected in 認証方式 ・ Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , ' ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F)		
ホーム画面に表示 ・ Default Value: 表示しない 最大通信量 ・ Default Value: 2 最大通信量の単位 ・ Options: 10 S99 number 意大通信量の単位 ・ Options: 10 S1 number ●Default Value: 31 ・ Options: 10 S1 number ●Default Value: 31 ・ Options: 10 S1 number • Options: 10 S1 number • Options: 10 S1 number • Options: 0N, OFF • Options: 0N, OFF • Options: 0N, OFF • Default Value: 0N • Default Value: 0N, OFF • Default Value: 0N • Default Value: 0N • Options: 0DOO to 9999 • Default Value: 0Nre • Options: 630, 高効 • Dutors: 1000 to 9299 • Default Value: 1000 • Options: 400, 高効 • Options: 400, - (hyphen), (underline), (half-width space) • Default Value: 30 • Options: 1000 • SSID • Options: 1000 to 92 alphanumerics. (period), - (hyphen), (underline), (half-width space) • Default Value: 1 • Options: 1000 SSID A • Options: Eight characters in half-width alphanumeric and hal	Item	Options (Range/Default Value)
読入通信型 · Default Value: 2 最大通信量の単位 · Options: CB/MB ● Options: 1 to 31 number · Options: 1 to 31 number 自動りセット日 · Options: 1 to 31 number · Options: 1 to 31 number · Options: 1 to 31 number · Options: 1 to 31 number · Options: 1 to 31 number · Options: 0 Number · Options: 0 Options: 0 Options · Options: 0 ODD to 9999 · Options: 0 O	ホーム画面に表示	
最大通信室の単位 ・ Default Value: GB 自動リセット目 ・ Options: 1 to 31 number ・ Default Value: 31 ・ インターネット Wi-Fi ・ Options: ON, OFF ・ Default Value: ON ・ Default Value: OFF ・ Default Value: OFF ・ Default Value: (None) ログインパスフード ・ Options: ON, OFF ・ Default Value: ON ・ Default Value: ON ・ Default Value: OFF ログインパスフード ・ Options: ONO 05 9999 ・ Default Value: (None) ・ Default Value: (None) • Options: (Range/Default Value) ・ Default Value: 4 30 • Options: (Range/Default Value) ・ Options: U to 32 alphanumerica, (period), - (nyphen), _ (underline), (half-width space) • Default Value: * ・ Options: Eigh characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding ,*:: ¥ & % + * <>?, or 064-digit hexadecimal number (0 to 2, A to F) 128-bit key; 13 characters in half-width alphanumeric and half-width symbols (excluding ,* * & % + * <>?, or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key; 13 characters in half-width alphanumeric and half-width symbols (excluding ,* *	最大通信量	
自動/セット目・ Default Value: 31インターネット Wi-Fi・ Options: ON, OFF • Default Value: ONインターネット Wi-Fi• Options: ON, OFF • Default Value: ONソフト/インク Wi-Fi spot• Options: ON, OFF • Default Value: OFFログイン/1スワード• Options: OOD to 9999 • Default Value: OFFログイン/1スワード• Options: OOD to 9999 • Default Value: (None)チレビ・ Options: ODD to 9999 • Default Value: (None)テレビ・ Options: ODD to 9999 • Default Value: (None)テレビ・ Options: ODD to 9999 • Default Value: (None)テレビ・ Options: ADD : EDESID・ Options: ADD : EDESID・ Options: ADD : EDESID A・ Options: Up to 32 alphanumerics, (period), - (hyphen), _ (underline), (half-width space) • Default Value: 'When "WPA2-PSK'/WPA/WPA2-PSK' is selected in 認証方式 • Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding, ': : ¥ & % + ' < > ?), or 64-digt hexadecimal number (0 to 2 A to F)When "自動 '/Open'/Shared key' is selected in 認証方式 • Options:• Options: Eight characters or more, up to 63 characters in half-width symbols (excluding, ': : ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding, ': : ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding, ': * & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding, ': * & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characte	最大通信量の単位	
Item Options (Range/Default Value) インターネット Wi-Fi - Options: ON, OFF - Default Value: ON - Options: ON, OFF - Default Value: OFF - Options: OOO to 9999 ログイン/ICマード - Options: OOO to 9999 - Default Value: (None) - Options: OOO to 9999 テレビ - Options: Ago, Ego, Ego, Ego, Ego, Ego, Ego, Ego, E	自動リセット日	
インターネット Wi-FiOptions: ON, OFF Default Value: ONソフトパンク Wi-Fi spotOptions: ON, OFF Default Value: OFFログインパスワードOptions: ON, OFF Default Value: OFFログインパスワードOptions: ODOD to 9999 Default Value: (None)テレビItemプレビ視聴Options: 有効, 無効 Default value: 有効SIDOptions: AD,	インターネット Wi-Fi	
インターネットWi-Fi ・ Default Value: ON ソフトパンク Wi-Fi spot ・ Options: ON, OFF ・ Default Value: OFF ・ Options: 0000 to 9999 ウレインパスワード ・ Options: 0000 to 9999 ・ Default Value: (None) ・ テレビ ・ ・ Item Options: Range/Default Value) ・ Options: イラカ、馬効、 ・ Options (Range/Default Value) テレビ視聴 ・ Options: イラカ、馬効、 SSID ・ Options: Up to 32 alphanumerics (period), - (hyphen) (underline), (half-width space) ・ Default Value: ' ・ Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , '': ' ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to 2 A to F) ・ Uter ** ・ Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , '': ' ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) ・ Uter ** ・ Options: ・ Options: Eight characters in half-width alphanumeric and half-width symbols (excluding , '': Y & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) ・ Default Value: ' ・ Options: Eight characters in half-width alphanumeric and half-width symbols (excluding , ': Y & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) ・ Default Value: ' ・ Options: Eight characters in half-width alphanumeric and h	Item	Options (Range/Default Value)
ソフドパンク Wi-Fi spot Default Value: OFF ログインパスワード Options: 0000 to 9999 Default Value: (None) テレビ Item Options: 有効, 無効 Default value: 有効 テレビ視聴 Options: 有効, 無効 テレビ視聴 Options: 行効, 無効 SSID Item Options: (Range/Default Value) SSID SSID SSID A Options: Up to 32 alphanumerics. (period), - (hyphen), _ (underline), (half-width space) Default Value: 1 Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , ": ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to 7 A to F) When "WPA2-PSK"/WPA/WPA2-PSK" is selected in 認証方式 Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , ": ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) When "B動 //Open'/"Shared key" is selected in 認証方式 Options: 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , ': ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding ,	インターネット Wi-Fi	
ログインパスワード Default Value: (None) テレビ 	ソフトバンク Wi-Fi spot	Default Value: OFF
Item Options (Range/Default Value) テレビ視聴 ・ Options: 有効, 無効, 上効, 上効, 上効, 上効, 上効, Default value: 有効 SSID ・ Default value: 有効 SSID ・ Options (Range/Default Value) SSID A ・ Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) • Default Value: ' SSID A ・ Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) • Default Value: ' When "WPA2-PSK"/WPA/WPA2-PSK" is selected in 認証方式 • Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , ": ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to 7 A to F) When " 自動 "/"Open"/"Shared key" is selected in 認証方式 	ログインパスワード	
テレビ視聴· Options: 有効, 無効 · Default value: 有効SSIDOptions (Range/Default Value)SSID A· Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) · Default Value: 1SSID A· Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) · Default Value: 1When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in 認証方式 · Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , "::; ¥ & % + ' <> ?), or 64-digit hexadecimal number (O to 1 A to F) When "自動"/"Open"/"Shared key" is selected in 認証方式 · Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , " : ¥ & % + ' <> ?), or 10-digit hexadecimal number (O to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , : ¥ & % + ' <> ?), or 26-digit hexadecimal number (O to 9, A to F) Default Value: 1 · Options: 自動, Open, Shared key, WPA2-PSK, WPA/WPA2-PSK	テレビ	
デレビ視聴 ・ Default value: 有効 SSID Item Options (Range/Default Value) SSID A • Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) · Default Value: 1 When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in 認証方式 • Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to 1 A to F) When "自動 "/"Open"/"Shared key" is selected in 認証方式 • Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , ' : ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , : ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , : ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , : ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 0pfault Value: 1 • Options: 自動 , Open, Shared key, WPA2-PSK, WPA/WPA2-PSK	Item	Options (Range/Default Value)
ItemOptions (Range/Default Value)SSID A· Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) · Default Value: 1When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in 認証方式 · Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , ": ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to a A to F)When " 自動 "/"Open"/"Shared key" is selected in 認証方式 · Options:64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric of to 9, A to F) · Default Value: 1認証方式	テレビ視聴	
SSID A • Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) • Default Value: 1 When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in 認証方式 • Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to a A to F) When " 自動 "/"Open"/"Shared key" is selected in 認証方式 • Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , " ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , " ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) 認証方式 認証方式	SSID	
SSID A ・ Default Value: 1 When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in 認証方式 ・ Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to 1 A to F) When "自動 "/"Open"/"Shared key" is selected in 認証方式 ・ Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , " ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) Default Value: 1 Options: 自動 , Open, Shared key, WPA2-PSK, WPA/WPA2-PSK	Item	Options (Range/Default Value)
 Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding, ":; ¥ & % + ' <> ?), or 64-digit hexadecimal number (O to A to F) When " 自動 "/"Open"/"Shared key" is selected in 認証方式 Options: 64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding, "; ¥ & % + ' <> ?), or 10-digit hexadecimal number (O to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding, ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (O to 9, A to F) Default Value: ¹ Options: 自動, Open, Shared key, WPA2-PSK, WPA/WPA2-PSK 	SSID A	
64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , ' ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , ; ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) · Default Value: 1 · Options: 自動 , Open, Shared key, WPA2-PSK, WPA/WPA2-PSK		 Options: Eight characters or more, up to 63 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?), or 64-digit hexadecimal number (0 to 9, A to F)
認計方式	セキュリティーキー	64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , " : ; $\neq \& \% + ' <> ?$), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , " ; $\neq \& \% + ' <> ?$), or 26-digit hexadecimal number (0 to 9, A to F)
	認証方式	

Item	Options (Range/Default Value)
	When " 自動 "/"Shared" is selected in 認証方式 ・ Options: WEP
	Default value: WEP
	When "Open" is selected in 認証方式
	Options: NONE, WEP Default value: WEP
暗号化方式	
	When "WPA2-PSK" is selected in 認証方式
	Options: AES
	Default value: AES
	When "WPA/WPA2-PSK" is selected in 認証方式
	Options: AES+TKIP
	Default value: AES+TKIP
SSID B	• Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space)
	· Default Value: 1
	When " 自動 "/"Open"/"Shared key" is selected in 認証方式
	• Options:
	64-bit key: Five characters in half-width alphanumeric and half-width symbols (excluding , " : $(2, 2, 2, 2, 3, 2, 3, 2, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3,$
セキュリティーキー	; $4 \& \% + < >$?), or 10-digit hexadecimal number (0 to 9, A to F)
	128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , ":
	; ¥ & % + ' < > ?), or 26-digit hexadecimal number (0 to 9, A to F) • Default Value: ¹
	・ Options: 自動, Open, Shared key
認証方式	Default Value: Open
	When " 自動 "/"Shared" is selected in Authorization method
	Options: WEP
	• Default value: WEP
暗号化方式	
	When "Open" is selected in Authorization method
	· Options: NONE, WEP
	Default value: WEP

1 For SSID (Network Name) and Security Key (WPA Key/WEP Key) by default, see "Check SSID and Security Key."

・設定

Item	Options (Range/Default Value)
国際ローミング設定:自動接続	Options: ON, OFF
	• Default Value: OFF
画面ロック設定:パスコードロック	• Options: ON, OFF
画面ロック設定・ハスコードロック	• Default Value: OFF
画面ロック設定:パスコード	Options: Four-digit number
回回ロック設定:ハスコート	· Default Value: (None)
ディスプレイ設定:画面の明るさ	• Options: Five levels
ティスノレイ 設定・画面の明るさ	Default Value: Intermediate
ディスプレイ設定:バックライト点灯時間	• Options: 15/30/60/90/120 seconds
ノイスノレイ設定:パッシンイト無灯时间	Default Value: 60 seconds
スリープ設定:スリープ設定	• Options: ON, OFF
スリーノ設定・スリーノ設定	Default Value: ON
スリーブ設定:無線 LAN 機能をオフにする	Options: 1/3/5/10/15 minutes
までの時間	Default Value: 5 minutes
Wi-Fi 通信規格設定	• Options: 802.11g/n, 802.11b/g/n
	· Default Value: 802.11g/n
・かんたん設定	

 Item
 Options (Range/Default Value)

 パスコード
 • Options: Four-digit number

 • Default Value: (None)

WEB UI Settings (Setting Range/Default Value)

Make advanced settings for each function. For accessing WEB UI from mobile device, some items or titles are changed or omitted.

· Quick Setup

Item	Options (Range/Default Value)
SSID A	 Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) Default Value: ¹
Authorization method	 Options: Auto, Open, Shared key, WPA2-PSK, WPA/WPA2-PSK Default Value: WPA/WPA2-PSK
	When "Auto"/"Shared key" is selected in Authorization method
	Options: WEP
	Default value: WEP
	When "Open" is selected in Authorization method
	Options: NONE, WEP
	Default value: WEP
Encryption method	
	When "WPA2-PSK" is selected in Authorization method
	Options: AES
	• Default value: AES
	When "WPA/WPA2-PSK" is selected in Authorization method
	Options: AES+TKIP
	Default value: AES+TKIP
	When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in Authorization method
WPA security key	\cdot Options: From 8 to 63 characters of single-byte alphanumerics and symbols (excluding , "
WFA security key	:; ¥ & % + ' $<>$?, or 64 hexadecimal digits (0 to 9, A to F)
	· Default Value: 1
	When "Auto"/"Open"/"Shared key" is selected in Authorization method
	· Options:
	64-bit key: 5 characters in half-width alphanumeric and half-width symbols (excluding , " : ;
WEP key 1	\pm & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F)
	128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , " :
	; ¥ & % + ' $<>$?), or 26-digit hexadecimal number (0 to 9, A to F)
	\cdot Default Value: The last five digits of WPA security key of SSID A ¹
	Options: Enable, Disable
SSID stealth	Default Value: Disable

1 For SSID (Network Name) and Security Key (WPA Key/WEP Key) by default, see "Check SSID and Security Key."

Mobile Network Setting → Mobile Network

Item	Options (Range/Default Value)
Mode for Network Search	 Options: Auto (4G/LTE/3G), Manual Default Value: Auto (4G/LTE/3G)
International Roaming	 Options: Enable, Disable Default Value: Disable

Mobile Network Setting → Profile Management

Item	Options (Range/Default Value)
Profile name	\cdot Options: Up to 32 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?)
APN	\cdot Options: Up to 32 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?)
User name	· Options: Up to 32 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?)
Password	· Options: Up to 32 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?)
Authorization method	Options: Auto, CHAP, PAP

Mobile Network Setting → PIN Management

Item	Options (Range/Default Value)
PIN verification	Options: Disable, ModifyDefault Value: Disable
PIN code	 Options: Four- to eight-digit numbers Default Value: (None) ¹

1 USIM PIN is "9999" by default.

Internet Wi-Fi → Internet Wi-Fi

Item	Options (Range/Default Value)
Internet Wi-Fi	Options: ON, OFF
	• Default Value: ON
SoftBank Wi-Fi spot	Options: ON, OFF
SUILBANK WI-FI Spol	Default Value: OFF
Password	• Options: 0000 to 9999
Password	· Default Value: (None)
Show Security Key	Options: Checkmarked (enable), Not checkmarked (disable)
	Default Value: Not checkmarked

Internet Wi-Fi → Priority Management

Item	Options (Range/Default Value)
Priority Management	 Options: 16 (including five pre-set) Default Value: 5 (Priority change is not available)

· LAN Wi-Fi → Basic Settings

Item	Options (Range/Default Value)
Show SSID and security key on LCD	 Options: Checkmarked (enable), Not checkmarked (disable) Default Value: Checkmarked
SSID (SSID A)	 Options: Up to 32 alphanumerics, . (period), - (hyphen), _ (underline), (half-width space) Default Value: ¹
Authorization method (SSID A)	 Options: Auto, Open, Shared key, WPA2-PSK, WPA/WPA2-PSK Default Value: WPA/WPA2-PSK
	When "Auto"/"Shared key" is selected in Authorization method • Options: WEP • Default value: WEP
	When "Open" is selected in Authorization methodOptions: NONE, WEPDefault value: WEP
Encryption method (SSID A)	When "WPA2-PSK" is selected in Authorization methodOptions: AESDefault value: AES
	When "WPA/WPA2-PSK" is selected in Authorization method Options: AES+TKIP Default value: AES+TKIP
WPA security key (SSID A)	 When "WPA2-PSK"/"WPA/WPA2-PSK" is selected in Authorization method Options: From 8 to 63 characters of single-byte alphanumerics and symbols (excluding , " :; ¥ & % + ' < > ?), or 64-digit hexadecimal number (0 to 9, A to F) Default Value: ¹
WEP key 1 to 4 (SSID A)	 When "Auto"/"Open"/"Shared key" is selected in Authorization method Options: 64-bit key: 5 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?), or 10-digit hexadecimal number (0 to 9, A to F) 128-bit key: 13 characters in half-width alphanumeric and half-width symbols (excluding , " : ; ¥ & % + ' <> ?), or 26-digit hexadecimal number (0 to 9, A to F) Default Value: The last five digits of WPA security key of SSID A¹

Item	Options (Range/Default Value)
Default Key (SSID A)	Options: WEP key 1 to 4
	• Default value: WEP key 1
Privacy Separator (SSID A)	Options: ON, OFF
	• Default Value: OFF
SSID stealth (SSID A)	Options: Enable, Disable
	• Default Value: Disable
SSID B	Options: ON, OFF
	· Default Value: OFF
SSID (SSID B)	(Same as the same item for SSID A)
Authorization method (SSID B)	Options: Auto, Open, Shared key
Authorization method (SSID B)	· Default Value: Open
	When "Auto"/"Shared key" is selected in Authorization method
	Options: WEP
	• Default value: WEP
Encryption method (SSID B)	
	When "Open" is selected in Authorization method
	Options: NONE, WEP
	• Default value: WEP
WEP key 1 to 4 (SSID B)	(Same as the same item for SSID A)
Default Key (SSID B)	(Same as the same item for SSID A)
Privacy Separator (SSID B)	(Same as the same item for SSID A)
SSID stealth (SSID B)	(Same as the same item for SSID A)
Show password	Options: Checkmarked (enable), Not checkmarked (disable)
	Default Value: Not checkmarked

1 For SSID (Network Name) and Security Key (WPA Key/WEP Key) by default, see "Check SSID and Security Key."

LAN Wi-Fi → Advanced Settings

Item	Options (Range/Default Value)
Country	Options: Country name Default Value: JAPAN
Channel	 Options: Auto (1-11), Auto (1-13), Channel 1 to 13 Default Value: Auto (1-11)
Communication standard	 Options: 802.11g/n, 802.11b/g/n Default Value: 802.11g/n
Multi-SSID AP isolation	 Options: Enable, Disable Default Value: Enable
Sleep Mode Settings	 Options: Enable, Disable Default Value: Enable
Sleep Mode Timer (Min)	 Options: 1/3/5/10/15 minutes Default Value: 5
Out of service Wi-Fi Automatic Disconnection	 Options: Enable, Disable Default Value: Disable
Frequency bandwidth	 Options: 20MHz, 20MHz/40MHz Default Value: 20MHz

· "LAN Wi-Fi" \rightarrow "MAC Address Filtering"

Item	Options (Range/Default Value)
MAC Address Filtering	· Options: Disable, Allow, Deny
	· Default Value: Disable
MAC Address	Options: MAC address (12-digit hexadecimal number)
	• Default Value: (Not set)

Appendix

· "LAN Wi-Fi" → "DHCP"

Item	Options (Range/Default Value)
IP address	Options: Four sets of 0 to 255
	• Default Value: 192.168.128.1
Subnet mask	Options: Four sets of 0 to 255
	• Default Value: 255.255.255.0
DHCP server	Options: Enable, Disable
	• Default Value: Enable
Start IP address	Options: Four sets of 0 to 255
	· Default Value: 192.168.128.100
End IP address	Options: Four sets of 0 to 255
	· Default Value: 192.168.128.200
DHCP lease time (s)	• Options: 60 to 86400
	Default Value: 86400

\cdot Router Setting \rightarrow Firewall

Item	Options (Range/Default Value)
Firewall	 Options: Checkmarked (enable), Not checkmarked (disable) Default Value: Checkmarked
IP address filtering	 Options: Checkmarked (enable), Not checkmarked (disable) Default Value: Not checkmarked
WAN port ping reply	 Options: Checkmarked (enable), Not checkmarked (disable) Default Value: Not checkmarked

· Router Setting \rightarrow IP Address Filtering

Item	Options (Range/Default Value)
LAN IP Address	 Options: Four sets of 0 to 255 Default Value: (Not set)
LAN Port	 Options: 1 to 65535 Default Value: (Not set)
WAN IP Address	 Options: Four sets of 0 to 255 Default Value: (Not set)
WAN Port	Options: 1 to 65535Default Value: (Not set)
Protocol	 Options: TCP/UDP, TCP, UDP Default Value: TCP/UDP
Status	 Options: ON, OFF Default Value: OFF
Options	OK, Cancel

Router Setting → Portmapping

Item	Options (Range/Default Value)
Name	 Options: Up to 40 characters in half-width alphanumeric and half-width symbols (excluding , ":; ¥ & % + ' <> ?) Default Value: (Not set)
WAN Port	 Options: 1 to 65535 Default Value: (Not set)
LAN IP Address	 Options: Four sets of 0 to 255 Default Value: (Not set)
LAN Port	 Options: 1 to 65535 Default Value: (Not set)
Protocol	Options: TCP/UDP, TCP, UDP Default Value: TCP/UDP
Status	Options: ON, OFF Default Value: OFF
Options	OK, Cancel

Router Setting → Special Applications

Item	Options (Range/Default Value)
	\cdot Options: Up to 40 characters in half-width alphanumeric and half-width symbols (excluding
Name	, " : ; ¥ & % + ' <> ?)
	Default Value: (Not set)
Status	Options: ON, OFF
	Default Value: OFF
Trigger Port	 Options: 1 to 65535 Default Value: (Not set)
	Options: TCP/UDP, TCP, UDP
Trigger Protocol	Default Value: TCP/UDP
	Options: TCP/UDP, TCP, UDP
Open protocol	Default Value: TCP/UDP
0	• Options: 1 to 65535
Open port	Default Value: (Not set)
Options	OK, Cancel
 Router Setting → DMZ 	
Item	Options (Range/Default Value)
	· Options: ON, OFF
DMZ	Default Value: OFF
	Options: Four sets of 0 to 255
DMZ IP address	• Default Value: 192.168.128.100
Router Setting → SIP ALG	
Item	Options (Range/Default Value)
	 Options: Checkmarked (enable), Not checkmarked (disable)
SIP ALG	Default Value: Not checkmarked
	Options: 1 to 65535
SIP port	Default Value: 5060
 Router Setting → UPnP 	
Item	Options (Range/Default Value)
	Options: Enable, Disable
UPnP	Default Value: Enable
 Router Setting → NAT 	
Item	Options (Range/Default Value)
	· Options: Cone, Symmetric
NAT	Default Value: Cone
Router Setting → Out Of Service	Notification
Item	Options (Range/Default Value)
	Options: Turn On, Turn Off
Out Of Service Notification	Default Value: Turn On
System → Device Information	
Item	Options (Range/Default Value)
Iteni	
	Show the following information Device name
	MAIN (Phone number MAIN)
	SUB Number (Phone number SUB)
	Hardware version
Device Information	Software version
	Firmware version
	Web UI version

· WAN IP Address

• IMEI

System → Change Login Password

Item	Options (Range/Default Value)
Current password New password Confirm password 1 Password is "admin" by default. • System → Factory Data Reset	 Options: Up to 15 characters in half-width alphanumeric and half-width symbols (excluding , ":; ¥ & % + ' <> ?) Default Value: (None) ¹
Item	Options (Range/Default Value)
Factory Data Reset	Restore Wi-Fi Router to defaults
 System → Reboot 	
Item	Options (Range/Default Value)
Reboot	Reboot Wi-Fi router

Glossary

Glossary	
Terms	Description
AXGP	Next generation high speed communication standard that accelerates XGP formulated as the next PHS standard. The transmission rate of max downstream is 110 Mbps. It is compatible with TD-LTE, one of the LTE standards which is an accelerated third generation (3G) communication standard.
DC-HSDPA (Dual Cell High Speed Downlink Packet Access)	An extended data reception standard, which is faster than W-CDMA used for mobile phones.
DHCP (Dynamic Host Configuration Protocol)	Function automatically assigns IP addresses to devices to be connected to the IP network and provides information necessary for connection. Settings for connection are simple, but since the assigned IP addresses change for each connection, identifying devices by IP address is not possible.
DMZ (DeMilitarized Zone)	Region isolated from the internal network via a firewall, referred to as a demilitarized zone. Since all of the ports are opened to the outside via devices that are set as DMZ host, server applications and online games do not need to be specially set to enable their use.
Firewall	System for monitoring access from an external network such as the Internet to an internal network (LAN) to prevent unauthorized intrusions.
Full Seg	Terrestrial TV broadcasting service in Japan.
HSDPA (High Speed Downlink Packet Access)	An extended data reception standard, which is faster than W-CDMA used for mobile phones.
HSPA+ (High Speed Packet Access +)	An extended data transmission/reception standard, which is faster than W-CDMA used for mobile phones.
HSUPA (High Speed Uplink Packet Access)	An extended data transmission standard, which is faster than W-CDMA used in mobile phones.
LTE (Long Term Evolution)	Next generation high speed communication standard that is faster than third generation (3G) communication standard used for mobile phones.
MAC Address (Media Access Control Address)	Six-byte ID number uniquely assigned to all network devices. Generally, a MAC address is a hexadecimal and is expressed as "XX:XX:XX:XX:XX:XX."

One Seg	Terrestrial TV broadcasting service for mobile devices in Japan.
PIN (Personal Identification Number)	Personal identification number required to use USIM Card on Wi-Fi router, Even if Wi-Fi router is lost or stolen use by others is prevented.
Port Number	Number for specifying applications and services to receive data via Internet communications. Numbers 0 to 65535 are specified. They are categorized into three: well-known port numbers that are determined for general applications (0 to 1023), saved port numbers that are used for specific applications, etc. (1024 to 49151), and dynamic/private port numbers that are freely available (49152 to 65535).
PUK (Personal Unblocking Key)	Key to unlock the PIN lock.
Roaming	Service which enables mobile phones to be used within the area networks of other providers based upon agreements between mobile phone providers.
SSID (Service Set Identifier)	Name used to identify a WLAN access point. If there are several WLAN access points in the communication range, use to specify the access point to be connected to.
USIM Card	Install in Wi-Fi router to use. Information such as your phone number is saved in USIM Card.
W-CDMA (Wideband- Code Division Multiple Access)	Translated as "Wideband-Code Division Multiple Access." Third-generation wireless communications system for performing broadband communications.
WEP (Wired Equivalent Privacy)	Encryption standard initially used in wireless communication. Encryption method that uses a shared key of either 5 or 13 characters is adopted.
WPA (Wi- Fi Protected Access)	Encryption standard that improves on WEP. Use a pre-shared key to log in and after login, encryption keys are automatically generated to be used. Also, two encryption methods are used, AES (Advanced Encryption Standard) for long encryption keys and TKIP (temporal Key Integrity Protocol) which dynamically changes the encryption keys, for conducting more secure communications
WPS (Wi- Fi Protected Setup)	Function for simplifying WLAN connection and security settings. Several connection methods such as push-button system and PIN code system are used.

Warranty & Service

Warranty

Wi-Fi router purchase includes Warranty.

- Confirm shop name and purchase date.
- \cdot Read contents of Warranty and keep it in a safe place.
- $\cdot\,$ The warranty period is found in the Warranty.

Precaution

Damages

SoftBank Mobile is not liable for any damages resulting from use of Wi-Fi router.

Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Mobile is not liable for damages resulting from loss or alteration of files or settings due to accident or repair.

Disassembling/Modifying Wi-Fi Router

Disassembling or modifying this Wi-Fi router may be a violation of the Radio Law. Note that SoftBank Mobile does not accept repair requests for modified products.

Services

Before submitting Wi-Fi router for repairs, contact Customer Service General Information or a SoftBank Shop; be prepared to describe problem in detail.

- During the warranty period, repairs are made under the terms and conditions described in the Warranty.
- After the warranty period, repairs are upon request; if said
 repairs are made, you are charged for them.

🖗 Further Inquiry

For more information, contact SoftBank Shop or Customer Service.

Customer Service

For application or service information, call SoftBank Technical Support Center. Please check on the number before dialing.

SoftBank Customer Support

General Information

From a SoftBank handset, dial toll free at 157 From a landline/IP phone, dial toll free at 0800-919-0157

For Customer Assistance

From a SoftBank handset, dial toll free at 113 From a landline/IP phone, dial toll free at 0800-919-0113 If you cannot reach a toll free number, use the number (charges apply) below for your service area: Hokkaido Area, Tohoku Area, Hokuriku Area, Kanto & Koshinetsu Area: 022-380-4380 (Charges apply) Tokai Area: 052-388-2002 (Charges apply) Kansai Area: 06-7669-0180 (Charges apply) Chugoku Area & Shikoku Area, Kyushu & Okinawa Area: 092-687-0010 (Charges apply)

SoftBank Technical Support Center
 Setup, Operations & Technical Issues: Service hours
 Weekdays 9:00 am - 7:00 pm
 Saturdays, Sundays, and holidays 9:00 am - 5:00 pm
 From a SoftBank handset, dial toll free at × 5525
 From a landline/IP phone, dial toll free at 0088-21-5525
 *Not available from outside Japan.

SoftBank Mobile Global Call Center
 From outside Japan or if 304HW is lost or stolen:
 +81-92-687-0025 (international charges apply, toll free from SoftBank handsets)

SoftBank Mobile web page (http://www.softbank.jp/mobile/support/product/304hw/)

Safety Precautions

Safety Precautions	5
General Notes	2
Specific Absorption Rate (SAR) Information for this Product	4

Safety Precautions

Read safety precautions before using Wi-Fi router.

Observe precautions to avoid injury to self or others, or damage to property.

SoftBank Mobile is not liable for any damages resulting from use of this product.

Labels & Symbols

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions
	Great risk of death or serious injury ¹ from improper use
	Risk of death or serious injury ¹ from improper use
	Risk of minor injury ² or damage to property ³ from improper use

- Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having side effects or requiring hospitalization or long-term treatment.
- 2 Injury includes: Physical burns, electric shock, and other conditions not requiring hospitalization or long-term treatment.
- 3 Damage to property includes: Incidental damage to structures and household property and/or to pets and livestock.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions
Prohibited	Prohibited actions
Do Not Disassemble	Disassembly prohibited
Avoid Liquids Or Moisture	Exposure to liquids prohibited
Do Not Use Wet Hands	Use with wet hands prohibited
Compulsory	Compulsory actions
Disconnect Power Source	Unplug Charger from outlet

Wi-Fi Router, USIM Card, Battery, Micro USB Cable charger

A DANGER



Use specified Battery, AC Charger (optional accessory) and Micro USB Cable only.

Non-specified accessory use may cause Battery to leak, overheat, burst or ignite, or cause AC Charger (optional accessory) and Micro USB Cable to overheat, ignite, malfunction, etc.



Do not disassemble, modify or solder.

May cause fire, injury, electric shock or malfunction. Battery may leak, overheat, burst or ignite. Modifying Wi-Fi router is prohibited by the Radio Law and subject to penalty.



Keep away from water.

Do not let liquid-exposed (water, pet urine, etc.) Wi-Fi router/related hardware remain wet; do not charge wet Battery. Doing so may cause overheating, electric shock, fire, injury or malfunction. Use Wi-Fi router/related hardware properly/where appropriate.



Do not charge Battery or use/expose Wi-Fi router/related hardware to extreme heat (e.g. near fire or source of heat, in direct sunlight, inside vehicles on hot days, etc.). Do not charge Battery or use, leave, or be carrying Wi-Fi router in a place where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc.

May cause warping/malfunction; Battery may leak, overheat, ignite or burst. Wi-Fi router or related hardware may become too hot to touch, leading to burn injuries, etc.

Do not force Battery Installation/AC Charger (optional accessory)/Micro USB Cable into Wi-Fi router. Confirm terminal/connector orientation; retry.

Battery may leak, overheat, burst, ignite, etc. The charging terminal may be broken or burnt out.

🕂 WARNING



Do not put Wi-Fi router, Battery, AC Charger (optional accessory), Micro USB Cable in cooking appliances such as a microwave or pressure cooker or on IH cooking heaters.

May cause Battery to leak, overheat, burst or ignite or cause Wi-Fi router, AC Charger (optional accessory) or Micro USB Cable to overheat, emit smoke, ignite or cause malfunction.

.....



Keep Wi-Fi router off and do not charge Battery near gas station or places with fire/ explosion risk (flammable gases (propane gas, gasoline, etc.) or fine particulates).

Wi-Fi router use near petrochemicals or other flammables may cause fire/explosion.



Do not drop, throw or otherwise subject to strong force or impact.

Battery may leak, overheat, burst, or ignite, and may result in fire, cause electric shock, malfunction, etc.



Take these actions in case of odd sound, odor, smoke or abnormalities, during use, charging, or storage:

- Grasp AC Charger (optional accessory)/Micro USB Cable (USB plug) to unplug it. Wi-Fi router may have high temperature.
- 2. Power off.
- 3. Remove Battery.
- Continued use may cause fire, electric shock, etc.



Keep liquids (water, refreshing beverage, sea water, pet urine, etc.) and conductive material (pencil lead, metal parts, necklaces, hairpins, etc.) away from External Device Port or External TV Antenna Slot. Do not put those materials inside Wi-Fi router.

May cause short circuit, resulting in fire, burn, malfunction, etc.



Do not place Wi-Fi router on unstable/uneven surfaces.

Wi-Fi router or related hardware may fall, resulting in injury, malfunction, etc. Failure to do so while charging may cause damage to the terminal.



Keep Wi-Fi router and related hardware out of infants' or pets' reach.

Infants may swallow Wi-Fi router or related hardware resulting in injuries.



A guardian should supervise use by children and insure Wi-Fi router is used as instructed.

Failure to do so may result in injuries.



Do not pull the cord with excessive force. Instead, hold the AC adapter (optional accessory) connector to remove.

Pulling the cord could damage it, possibly leading to electric shock or fire.

304HM

Wi-Fi Router

🕂 WARNING

Power off near electronic devices or equipment operating on high precision control or weak signals.

May cause electronic malfunctions, etc.

* Take added care near these devices: Hearing aids, implanted cardiac pacemakers, implanted cardioverter defibrillators, other electronic medical equipment, fire detectors, automatic doors, and other automatically controlled devices or equipment.

Compulsor

Power off before boarding aircraft to avoid possible radio wave interference with aircraft operations.

If Wi-Fi router use is allowed on board, follow airline or cabin crew instructions regarding Wi-Fi router use.

Compulso

If thunder is audible while outdoors, power off immediately and seek shelter.

.....

Lighting strikes or electric shock may occur.



Do not sit on Wi-Fi router in back pants pocket.

Excessive pressures may damage Display or Battery, resulting in overheating, ignition or injury.

Do not cover/wrap with clothing or bedding while charging. Do not go to bed with Wi-Fi router covered with cloth or bedding.

Heat may build up resulting in fire, burn, malfunction, etc.



Do not use Wi-Fi router when it may affect a vehicle's electronic equipment.

Wi-Fi router use may affect the equipment and lead to unsafe driving.



If you experience any skin irritation associated with Wi-Fi router use, discontinue Wi-Fi router use and consult a doctor.

Metal and other materials may cause skin irritation, rashes, or itchiness depending on your physical condition. (See "Material List")



In using Wi-Fi router for a long time while charging, Wi-Fi router and AC Charger (optional accessory) may become warm. Do not directly touch a hot part for a long time.

Failure to do so may result in low-temperature burns.



Keep Wi-Fi router away from magnetic cards, etc.

Data on bank card, credit card, telephone card, floppy disks, etc. may be lost.



Do not charge Battery or use/expose Wi-Fi router to extreme heat (e.g. near fire or source of heat, in direct sunlight, inside vehicles on hot days, etc.) while in use for a long time. Wi-Fi router may become hot in a place where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc.

Prolonged contact with skin may cause low-temperature burn injuries.

Compulsor

Do not lift, brandish Wi-Fi router with TV Antenna, or point TV Antenna at someone.

Failure to do so might cause damage or an injury.

Battery

Check battery type on label for use/disposal.

Mark Li-ion 00 Battery type

) Lithium-ion battery



Do not dispose of Wi-Fi router in fire.

Battery may leak, burst, ignite, etc.



Do not damage (nail, hammer, stomp, etc.) Wi-Fi router or subject it to strong impact.

Deformed Battery may leak, overheat, burst, ignite, etc. Check the status of Battery.



Do not contact Battery contacts with metal such as wire, etc. Do not carry or store Battery with conductive material (pencil lead, metal parts, necklaces, hairpins, etc.).

May cause Battery to leak, overheat, burst or ignite.



If battery fluid gets into eyes, do not rub; rinse with water and consult a doctor immediately.

May cause blindness.

A WARNING



If battery fluid contacts skin or clothes, discontinue Wi-Fi router use and rinse with clean water immediately.

May cause skin damage.



If Battery does not charge after specified time, stop charging.

Battery may leak, overheat, burst, ignite, etc.



Remove Battery and keep away from fire in case of abnormal odor, overheating, discoloring or deformation when Battery is used, charged or stored.

Continuing with abnormal condition may cause Battery to leak, overheat, burst or ignite.



Do not allow a pet to bite or chew on Battery. Do not use Battery bitten by a pet.

Battery may leak, overheat, burst or ignite. Wi-Fi router may malfunction or cause fire.



Do not dispose of an old Battery with ordinary refuse.

Tape on contacts and dispose separately or bring it to SoftBank Shop nearby. Dispose Battery according to your municipality rules for recycling.

USIM Card

CAUTION

Do not apply excessive force when inserting/ removing USIM Card.

May cause malfunction. Be careful not to injure your hands, fingers, etc. when removing USIM Card.

Prohibited

Do not use USIM Card other than specified card.

May cause data loss or malfunction.

Do not touch USIM card IC part. May cause data loss or malfunction. Avoid unnecessary touch to IC part.

USIM Card may become hot when using Wi-Fi router; this is not a malfunction.

Charger and Micro USB Cable

Do not cover/wrap with clothing or bedding while charging. Do not go to bed with Charger and Micro USB Cable covered with cloth or bedding.

Heat may build up resulting in fire, burn, malfunction, etc.

Compulso

Use specified power supply and voltage.

May cause fire, malfunction, etc.

AC Charger (optional accessory) : 100 V to 240 V AC (household AC outlet only)

Do not use commercially available voltage converter, as when traveling. Doing so may cause fire, electric shock or malfunction.

Compulso

Unplug AC Charger (optional accessory)/ Micro USB Cable if you are not going to use it.

If a foreign substance or a liquid adheres on AC Charger plug/Micro USB Cable plug while leaving plugged AC Charger (optional accessory)/Micro USB Cable, or AC Charger (optional accessory) plug/Micro USB Cable plug is trampled, it may cause fire, electric shock or malfunction.

Compulsory

If liquids (water, pet urine, etc.) seep inside AC Charger (optional accessory), grasp AC Charger/Micro USB Cable (USB plug) and unplug it immediately.

May cause electric shock, fire or malfunction.

0

If plug is dusty, grasp AC Charger (optional accessory)/Micro USB Cable (USB plug) to unplug it, then clean with a dry cloth.

May cause fire.

Compulsor

When plugging AC Charger (optional accessory)/Micro USB Cable (USB plug) into outlet/PC, keep conductive materials (pencil leads, metal parts, necklaces, hair pins, etc.) away from AC Charger plug/Micro USB Cable terminals and plug AC Charger (optional accessory)/Micro USB Cable firmly into outlet/PC.

May cause electric shock or short circuit, resulting in fire, burn, malfunction, etc.



Do not plug in/unplug AC Charger (optional accessory)/Micro USB Cable with wet hands.

May cause electric shock or malfunction.

Do not touch AC Charger (optional accessory)/Micro USB Cable if thunder is audible.

May cause electric shock, etc.



Supplied Micro USB Cable is dedicated accessory. Do not use to other manufacturer's product.

SoftBank Mobile Corp. is not liable for short circuit, fire, malfunction resulting from use to other manufacturer's product.



Grasp AC Charger (optional accessory)/ Micro USB Cable (USB plug) to unplug it before cleaning.

May cause electric shock, etc.



Always grasp AC Charger (optional accessory) (not Micro USB Cable)/Micro USB Cable (USB plug) to disconnect it.

Pulling the cord could damage it, possibly leading to electric shock or fire, etc.

Do not subject AC Charger (optional accessory)/Micro USB Cable to strong shock such as pulling while it is plugged into the outlet/PC.

.....

May cause injury or malfunction.

Do not pull, bend with excessive force or twist AC Charger (optional accessory)/Micro USB Cable.

Do not damage or modify Micro USB Cable. Do not place objects on Micro USB Cable. Do not expose Micro USB Cable to excessive heat.

May cause electric shock, overheating or fire.



Do not use AC Charger and Micro USB Cable if Power plug/Micro USB plug is damaged or the connection to outlet/PC is loose.



Do not touch the plug of AC Charger (optional accessory)/Micro USB Cable.

.....

May cause burns, electric shock, injury or malfunction.



While plugging AC Charger (optional accessory) to a table tap, do not give excessive force such as trample.

May cause fire or malfunction.

Wi-Fi Router Use & Electronic Medical Equipment

This section based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference) and "Report of Investigation of the Effects of Radio Waves on Medical equipment, etc." (Association of Radio Industries and Business, March 2001).

Compulsor

Persons with an implanted pacemaker or defibrillator should keep Wi-Fi router at least 15 cm away from the device.

Radio waves may interfere with implanted pacemakers or defibrillators.

Compulse

When using electronic medical equipment (other than implanted cardiac pacemakers/ defibrillators) outside medical facilities, check with the equipment manufacturer for information about the effects of radio waves.

Wi-Fi router radio waves may affect electronic medical equipment.

Compulse

Wi-Fi router radio waves may affect electronic medical equipment. Observe these guidelines in medical institutions:

- Do not take Wi-Fi router into operating rooms, or intensive or coronary care units.
- · Keep Wi-Fi router turned off in hospital wards.
- Even in lobbies or other places where Wi-Fi router use is permitted, keep Wi-Fi router off near electronic medical equipment.
- Follow medical facility rules and do not use or bring Wi-Fi router into prohibited areas.

Compulso

Power off Wi-Fi router when it is difficult to keep distance from others for at least 15 cm such as in a crowd because there may be someone who is wearing an implanted pacemaker or defibrillator.

Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.

General Notes

For Safety

- \cdot Do not disassemble, modify or solder.
- \cdot May cause fire, injury, electric shock or malfunction.
- Do not drop, throw or otherwise subject to strong force or impact.

May cause malfunction.

- Do not put Wi-Fi router in cooking appliances such as a microwave or pressure cooker or on IH cooking heaters. May cause malfunction.
- Do not use or expose Wi-Fi router to extreme heat (e.g. near fire or source of heat, in direct sunlight, inside vehicles on a hot day, etc.).

Doing so may cause device warping or malfunction. Wi-Fi router or related hardware may become too hot to touch, leading to burn injuries, etc.

 Wi-Fi router may become hot while in use or while charging for a long period, especially in high temperatures. Prolonged contact with skin may cause low-temperature burn injuries.

Do Not Disturb Others

- Keep Wi-Fi router turned off in aircraft.
 May cause radio wave interference with aircraft operations.
 The use of portable electronic devices such as cellular phones aboard aircraft is prohibited by law and subject to penalty.
- Do not use Wi-Fi router in a prohibited area such as a hospital or research laboratory. Medical equipment etc. might be affected.
- Do not use Wi-Fi router near courtesy seats in train or bus.
 Medical devices such as pacemaker etc. might be affected.
- Do not use Wi-Fi router if thunder is heard while outdoors (golf course, etc.).

General Use

- SoftBank 4G Service can be used with only dedicated models.
- Wi-Fi router supports Software Update. Use Wi-Fi router with the latest software updated.
- Wi-Fi router transmissions may be disrupted inside buildings, tunnels or underground, or in vehicles, or when moving into/out of such places.
- Use Wi-Fi router without disturbing others. Theaters and public transportation systems may or may not allow use of Wi-Fi router.
- Wi-Fi routers are radios as stipulated by the Radio Law.
 Under the Radio Law, Wi-Fi routers must be submitted for inspection upon request.
- Files may be lost or damaged in the following situations. SoftBank Mobile is not liable for damages incurred due to lost or altered information. To minimize damages, back up data and store separately.
- When using Wi-Fi router incorrectly
- When affected by static electricity or electrical noise.
- Powering Wi-Fi router off while in use.
- When Wi-Fi router breaks down or is submitted for repair.
- If Wi-Fi router is used abroad, changing settings according to the law of country is required. For settings, see "LAN Wi-Fi Advanced Settings."
- Communication may slow down or may become unavailable due to heavy traffic or under certain circumstances.
- Do not use Wi-Fi router in the proximity of areas where explosive materials are handled. An explosion may be induced. In addition, explosive devices might be affected.
- Wi-Fi router USIM Card cannot be used with some mobile devices (including SoftBank models).
- Wi-Fi router may become hot while charging or in use for a long time.
- Prolonged contact with skin may cause low-temperature burn injuries.
- AC Charger (optional accessory) may become hot while charging.

Handling

- Do not expose Wi-Fi router to rain, snow, or high humidity.
 Wi-Fi router is not waterproof.
- Avoid extreme temperatures/high humidity/direct sunlight/ dusty areas.
- · Do not drop or subject to strong impact.
- Clean Wi-Fi router with a soft dry cloth. Alcohol/solvent use may fade color/label.

Touchscreen

- Do not press Display surface with nail, sharp or hard object, etc. forcibly. May cause scratch or damage. Touch lightly with your finger. Do not push Display with your finger or press with sharp object (nail, ballpoint pen, pin, etc.).
 Touchscreen may not work in the following cases. Or, they may cause false operation.
- \cdot Operate with globes
- \cdot Operate with nail tip

may cause false operation.

- \cdot Operate with foreign object on Display
- \cdot Operate with protective sheet or sticker attached
- Operate with water drops or dew condensation on Display
 Operate with wet or sweat finger
- If conductive material such as metal gets close to Display when carrying Wi-Fi router in a pocket or bag, Touchscreen
- Touch with finger. Do not operate with sharp object such as ballpoint pen or pencil. May cause false operation, scratch or damage Display.
- Do not attach sticker or sheet (commercially available protective film, peep prevention sheet, etc.). May cause Touchscreen false operation.
- \cdot Do not touch with nail tip. May cause nail crack or injury.

Wi-Fi (Wireless LAN)

Wi-Fi router uses 2.4GHz frequency band WLAN between 2400MHz and 2483.5MHz.

Wireless Frequencies & Modulations information: On Wi-Fi router package.

2.4DS/OF4

2.4:2400 MHz range
DS/OF: DSSS or OFDM modulation
4: Maximum interference range of 40 m

2483.5 MHz band, and mobile identifier device bands are avoided.

- · Available channels vary depending on the country.
- · For use abroad aircraft, contact the airline beforehand.
- When using Wi-Fi in other countries, check local regulations beforehand.
- Do not use Wi-Fi router near magnetic devices such as electrical appliances or AV/OA devices.
- Magnetic/radio waves may hinder or disable communication. Avoid microwave ovens.
- Use near a TV or radio, etc. may cause interference; may affect TV reception.
- If there are multiple Wireless LAN access points using the same channel, search may fail.
- Wireless LAN device operates same frequency band used by industrial, scientific, consumer and medical equipment including microwave ovens, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (radio stations requiring a license).

1. Before using Wi-Fi router, confirm that premises radio stations for identifying mobile units, specified low power radio stations and amateur radio stations are not being operated nearby.

2. If Wi-Fi router causes disruptive radio interference with premises radio stations for identifying mobile units, immediately change frequency band, stop use, or move to another location to avoid crosstalk (e.g. wall partitions, etc.).

Since information is exchanged between terminals and the Wireless LAN access points, an advantage of Wireless LAN connections is that LAN connections can be freely enabled within the reachable range of the signals. However, if the security settings are not set, there is a possibility that security issues may arise from the interception of communication data and illegal intrusions. Wi-Fi router is configured to work with its security functions at the time of purchase. However, in consideration of security, it is recommended that the security settings at the time of purchase be changed.

For security function setting procedures, see this guide or the user's manuals for the Wireless LAN devices.

- Use Wi-Fi router with the understanding that the Wireless LAN specifications can be breached via special methods.
- Inquire with Customer Support to consult if you are unable to configure the security settings.
- SoftBank cannot be held liable for WLAN security issues.

Specific Absorption Rate (SAR) Information for this Product

Specific Absorption Rate (SAR) Information for this Product

This product "304HW" meets international guidelines on radio wave protection.

This product is designed to abide by permitted levels for radio wave protection as recommended by international guidelines. These international guidelines are set forth by the World Health Organization in cooperation with the ICNIRP**, and the permitted levels provide a sufficient safety margin regardless of age and health of the user.

International guidelines define the permitted levels of exposure for radio wave protection by an averaged Specific Absorption Rate, or SAR. The SAR limit for this communication terminal is 2.0 watts/kilogram (W/kg).The highest SAR value for this product is 0.475 W/kg when used in the following prescribed manner. While there may be differences between the SAR levels of individual products, all products meet the permitted levels.

Use close to the body

To use this product close to the body, maintain a separation of 1.5 cm from the body. This will ensure this product meets international guidelines on radio wave protection*.

The World Health Organization has announced that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

- * A method of measuring SAR when a mobile phone is used at positions other than at the ear is based on an international standard (IEC62209-2) established in March 2010 and MIC technical regulation (enactment on April 1st, 2014).
- ** International Commission on Non-Ionizing Radiation Protection.

For more information about SAR, see the following websites: - Ministry of Internal Affairs and Communications (MIC) http://www.tele.soumu.go.jp/e/sys/ele/body/index.htm - Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/index02.html (Japanese)

Electromagnetic Safety

For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the Wi-Fi router a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested on the body is 0.504 W/kg*. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body. *Please see Electromagnetic Safety for important notes

regarding body worn operation.

World Health Organization

http://www.who.int/emf

List of Specific Absorption Rates (SAR) for radio waves http://mb.softbank.jp/mb/support/sar/ (Japanese) 304HW User Guide Index

В

Ratterv	Installation
Dattery	115 tallation

C

Channel Scan on TV	193, 198
Charge	16
Check Help	92
Check Wi-Fi Router Information	91
Check WLAN Connected Device Information	75
Confirm Information	. 72, 170
Connect Android™ Device	26
Connect iPhone/iPod touch/iPad	28
Connect Mac	25
Connect Nintendo 3DS LL/3DS/DSi LL/DSi	32
Connect PlayStation®3	44
Connect PlayStation®4	43
Connect PlayStation® Vita/SP®	
(PlayStation® Portable)	38
Connect Wii U/Wii	36
Connect Windows PC	21
Connect with IEEE802.11b WLAN Device	48
Connect WPS Supported WLAN Device	47
Customer Service	

D

Device Recognition/Removal on Mac
Device Recognition/Removal on Windows PC

B

G

Blossary213

B

Home Screen

Install/Uninstall Driver (Mac)	59
Install/Uninstall Driver (Windows PC)	54
Introduction	4

M

11
1

N

Notification for Setting Maximum Traffic12

0

Operation for Setting Maximum Traffic	93
Other Settings	82
Overview of WEB UI	.102

P

Part Names and Functions	8
Parts & Functions	8
Power On/Off1	8

Q

Quick Setup	62, 108
-	

R

S

Set from Mobile Device	178
Set Internet Wi-Fi	
Set LAN Wi-Fi	128
Set Software Update	176
Set SSID or Authorization Method	75
Setting List	205
Show/Set Data Usage	
Specifications	204
Switch One Seg/Full Seg	
System	

T

Touch Menu	62
Troubleshooting	
TV Antenna	
TV Application	
TV Program guide	193, 198
TV Screen	192, 193, 197
TV Sound Setting	193, 198
TV Subtitles Setting	

U

USB Connection with Mac	58
USB Connection with Windows PC	
Use WPS	80
USIM Card	12

W

Warranty & Service	214
Watch TV	
Watch TV on Android™ Device	

Watch TV on iPhone/iPod touch/iPad	.194
WEB UI Window on PC	.104
WLAN (Wi-Fi)	20

SoftBank 304HW User Guide

August 2014, 1st Edition SoftBank Mobile Corp.

Visit SoftBank Shop for assistance

Product name: SoftBank 304HW Manufactured by: HUAWEI TECHNOLOGIES CO., LTD.