DIGNOケータイ3 User Guide

DIGNOケータイ3 User Guide Contents

Introduction

About	the	Online	Manual	3
-------	-----	--------	--------	---

Getting Started

Package Contents6
Parts & Functions
USIM Card Installation9
Handset Memory & SD Card11
Inserting & Removing Battery14
Charging Battery
Power On/Off
Importing Data from Other Mobile Phones
Display
Display-Top (Status Bar) Indicators
Checking Handset Status & Notifications (Notifications
& Settings Window)
Sub-display
Security Codes
USIM PIN

Basic Operations

Basic Operations with this Handset	30
Key Operation	30
How to Use Pointer	31
Main Menu	31
Accessing Applications	32
Using Manner Mode	34
Using Airplane Mode	35
Other Basic Operations	36

Operations in Common

Customizing Fonts	38
Changing Handset Response to Calls & Mail	38
Text Entry	.39
Phone Book	

Phone

Calling	. 44
Placing International Calls	.46
Optional Services	.48
Global Services	.52

Messaging

Messaging	. 56
Customizing Handset Address	. 56
Sending S! Mail	. 57
Sending SMS	. 58
Using PC Mail	.59

Internet Services

Browser	62	
One Seg	INC	22
One Seg Service	64	1
Using One Seg Service	65 V	Ľ
	 U	N

One Seg	
One Seg Service	
Using One Seg Service65	

Camera/Image Editing	
Capturing Photos & Recording Videos	68
Scanning QR Code (Bar code)	70

Music/Videos

Music Files72	
Viewing Movies72	

Data Folder

Handling Data	(Data	Folder)	
nanunny Data	Dutu	i uluci j	······································

Connectivity & File Backup

Using Infrared	Transmission8	0
----------------	---------------	---

Settings in Common

Wallpaper & Display Settings	84
Sound & Notification Settings	85
Lock & Security Settings	86
Wireless & Network Settings	88
Data Communication Settings	. 89
Auto Communication & Synchronization Settings	91
Battery Settings	92
Custom Key Settings	93
Device Info & Settings	. 94
More settings	94

Appendix

Updating Software	104
Specifications	105
Materials	106
General Notes	107
Warranty & After-Sales Service	109
Customer Service	109

Safety Precautions

Safety Precautions112	2
General Notes 122	2
Water & Dust & Shock Resistance125	5

About the Online Manual

Thank-you for purchasing this product.

Before You Begin

Read "クイックスタート (Quick Start)" (Japanese) and "お願いと ご注意 (Safety Precautions)" (Japanese) thoroughly beforehand for proper use.

Accessible services may be limited by contract conditions.

Guide Usage Notes

In the Online Manual, most operation descriptions are based on handset at time of purchase.

Unless noted otherwise, descriptions are from Standby. "Confirmation" refers to a window that appears after

operation, such as authentication prompt window, selection window or caution window.

Operation descriptions may be abbreviated.

Screenshots & Key Labels

Screenshots in the Online Manual may differ in appearance with actual Display. Key labels in the Online Manual are simplified for description purposes and differ with actual Display.

Other Notations

In the Online Manual, the product is referred to as "handset." microSD™/microSDHC™ Card is referred to as "SD Card." Introduction

Getting Started

Package Contents	6
Parts & Functions	6
USIM Card Installation	9
Handset Memory & SD Card	11
Inserting & Removing Battery	.14
Charging Battery	15
Power On/Off	
Importing Data from Other Mobile Phones	18
Display	21
Display-Top (Status Bar) Indicators	22
Checking Handset Status & Notifications (Notification	าร
& Settings Window)	23
Sub-display	24
Security Codes	25
USIM PIN	27

Package Contents

Package Contents

- ・Handset (DIGNO® ケータイ3 (Keitai3))
- · Battery (KYBAQ1)
- \cdot AC Charger (KYCAV1)
- ・お願いとご注意 (Japanese)
- ・クイックスタート (Japanese)

Parts & Functions

Handset Parts	
	3
Name	Description
1 Earpiece/ Speaker	Hear other party's voice, sound of music/ video/One seg through this.
2 Display	Screens appear here.
Pressure Holes	
4 Mic	Talk to other party through this.



Name	Description
1 Straphole	Attach a strap.
2 Incoming/ Charging LED	Illuminates while charging or for notifications (missed calls, new messages, etc.).
3 Sub- display	Clock and Notification Indicators for new calls, mail, etc. appear.
4 Infrared Port	Use for infrared transmission.
5 Capture Light/ Flashlight	Use as lighting when capturing images or as a flashlight.
InternalCommunicationsAntennas	Used for calling, using Internet, etc. Avoid covering with stickers or fingers.
7 Camera	Capture photos and videos.
8 Back Cover	To attach/remove USIM Card, SD Card, and Battery.
9 External Device Port (only for USB Type-C) 1	Connect AC Charger, etc.

1 External Device Port (only for USB Type-C) Connecting a micro USB (Type-B) cable forcibly may cause damage or malfunction.

👸 Attaching Strap

Remove Back Cover, put the strap through Straphole (1), hook it on the strap pin (2), and then pull out the strap. Attach Back Cover after attaching the strap.



Incoming/Charging LED

Light up or flash to notify handset status such as charging or receiving call or mail.

Indicator color/status	Handset status
Lights up in red	Charging is in progress.
Flashes red	Handset cannot be powered on due to low battery or problem on charging occurs.
Flashes blue	Handset received missed call or mail.
Flashes blue rapidly	Handset receives incoming call.

Settings for Incoming/Charging LED

You can change settings for Incoming/Charging LED. For details, see "Sound & Notification Settings."

Getting Started

Handset Keys



Key (Name)	Description
1 ⊡ (Multi Selector (up))	Show item selection cursor in Standby.
2 ⊡ (Multi Selector (left))	Show incoming call history.
3 🗹 (Mail Key)	Open mail menu. Long Press to open S! Mail composition window.
4 ∰ (TV/ Character Key)	Activate TV. Long Press to turn on Flashlight.
5 (Multi Selector (down))	Open Phone Book. Long Press to save to Phone Book.
6 🖍 (Start Key)	Activate Link Now. Long Press to activate Fake call ¹ .
7 0 to (Dial Keys)	Enter phone numbers. Activate Write now ¹ . Long Press to search Phone Book.
8 X	Enter ★ . Activate Write now ¹ . Long Press to enter int'l access number.
9 I / I / II / (Custom Keys)	Activate saved functions, open history (Long Press I), and open Notifications Window (Long Press I).
10 ■ (Center Key)	Open Main Menu. Long Press to lock/ unlock Tr-/>+>>> (Side Key) when handset closed.
11 • (Multi Selector (right))	Show outgoing call history.
12 (Browser Key)	Activate Browser. Long Press to open browser menu.
13 🛛 🖓 -/>+>9-) (Side Key)	Activate manner mode menu. Long Press to activate/cancel Manner mode.
14 回 (Camera Key)	Activate Camera (Video). Long Press to open Data Folder.
15 7720 (Clear/Back Key)	Open Answer Memo List. Long Press to toggle Auto answering on/off.

16 💽 (Power/End Key)	Show/hide information in Standby. Long Press for Power Off screen.
17	Activate Write now ¹ . Long Press to toggle Bluetooth® on/off.

1 Operates when setting enabled.

🍯 Multi Selector

In this Online Manual, Multi Selector operations are indicated as follows:

- Press 🗖 or 📮 : 📮
- · Press 💶 or 🗅 : 🕩
- Press 📋 , 📮 , 🗖 , or 📭 : 🔹

Handset Keys (Handset Closed)



Key (Name)

Description

Show Sub-display. Long Press to enter/ exit Manner mode.

Handset Position

Handset Closed

Handset is folded. Fold handset when you carry it.



Handset Opened

Handset is opened. Open handset when you operate keys or make a call.



USIM Card Installation

USIM Card is an IC card containing customer and authentication information, including handset number.

Inserting USIM Card

Always power off beforehand.

1

Remove Back Cover



 \cdot Gently lift Back Cover by notch in direction shown with finger.



Remove Battery



• Put fingertip on Battery from the notch of handset and gently lift Battery by upper part in direction shown.

3

Lift the tab in direction shown



4

Pull up the tab and lift the stopper in direction shown



5

Slide USIM card in direction shown and push the card into USIM Card Slot until it clicks locked



 \cdot Note location of notch.

6

Push down the stopper until it clicks locked



7

Insert Battery



 Slide Battery in direction 1 onto metal terminals in handset, and press into handset in direction 2.

8

Fit Back Cover on handset, and press Back Cover in directions shown



9

Work way around Back Cover in directions 1 holding down in direction 2 to install completely



🟁 USIM Card is inserted.

Removing USIM Card

Always power off beforehand.

1

Remove Back Cover



 \cdot Gently lift Back Cover by notch in direction shown with finger.

2

Remove battery



 \cdot Put fingertip on Battery from the notch of handset and gently lift Battery by upper part in direction shown.

3

Lift the tab in direction shown



4

Pull up the tab and lift the stopper in direction shown



5

Push USIM Card until it clicks ($oxed{1}$) and pull it straight (2)



6

Push down the stopper until it clicks locked



7





· Slide Battery in direction 1 onto metal terminals in handset, and press into handset in direction **2**.

8

Fit Back Cover on handset, and press Back Cover in directions shown



9

Work way around Back Cover in directions 1 holding down in direction 2 to install completely



🟁 USIM Card is removed.

SIM Unlocking

Handset supports SIM unlocking. After SIM-unlocking handset, other companies' SIM cards can also be used on handset.

- \cdot Services and applications may have limitations with use of an other-company SIM card. SoftBank Corp. makes no guarantees whatsoever regarding the proper operation of handset.
- \cdot For details on SIM unlocking, see SoftBank Website.





Handset Memory & SD Card

Handset supports SD Card up to 32 GB. Some SD Cards may not operate properly.

When you use a SD Card on market for the first time, be sure to format it with handset.

Handset memory is available for saving system data, applications, captured photos and movies, and other data.

Handset Memory/SD Card Cautions

Content Saved to Handset Memory/SD Card Files

Content in handset memory/SD Card may be lost/altered due to accidents, malfunctions, repairs, handset upgrade/ replacement, or other handling. Back up important content regularly. SoftBank Corp. is not liable for any damages resulting from loss/alteration of content.

- \cdot Do not forcefully install or remove SD Card.
- \cdot Do not touch terminals with hands or metal.
- \cdot Never power off while files are being accessed.
- Be careful that data does not become erased or overwritten.

microSDHC Cards

Handset supports SDHC SD cards (microSDHC cards). microSDHC cards can only be used with SDHC devices.

Save Location

By default, photos and videos captured with handset are saved to handset memory.

SD Card Precaution

Keep SD Card away from infants; may cause choking if swallowed.

Inserting SD Card

Always power off beforehand.

1

Remove Back Cover



 \cdot Gently lift Back Cover by notch in direction shown with finger.

2

Remove battery



• Put fingertip on Battery from the notch of handset and gently lift Battery by upper part in direction shown.

3

Lift the tab in direction shown





Pull up the tab and lift the stopper in direction shown





Slide SD card with metal terminal downward in direction shown and push the card into SD Card Slot



 \cdot Be careful about the direction for inserting SD card.



Push down the stopper until it clicks locked



7

Insert Battery



• Slide Battery in direction 1 onto metal terminals in handset, and press into handset in direction 2.

8

Fit Back Cover on handset, and press Back Cover in directions shown



9

Work way around Back Cover in directions 1 holding down in direction 2 to install completely



🏁 SD Card is inserted.

Removing SD Card

Always power off beforehand.

1

Remove Back Cover



• Gently lift Back Cover by notch in direction shown with finger.



Remove Battery



• Put fingertip on Battery from the notch of handset and gently lift Battery by upper part in direction shown.

3

Lift the tab in direction shown



4

Pull up the tab and lift the stopper in direction shown



5

Slide SD card in direction shown and remove the card from SD Card Slot



Push down the stopper until it clicks locked



7

Insert Battery



• Slide Battery in direction 1 onto metal terminals in handset, and press into handset in direction 2.

8

Fit Back Cover on handset, and press Back Cover in directions shown



9

Work way around Back Cover in directions 1 holding down in direction 2 to install completely



🟁 SD Card is removed.

Formatting SD Card 1 ■ Settings Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings 2 [Storage] More setting Pointer Storage Apps Location Accounts Languages & input Date & time Accessibility 3 Select SD card ラ 🗹 (Erase) Storage Internal storage x.xx GB / 8.00 GB SD card x.xx GB / X.XX GB Erase Unmount 4 Yes Confin Erase the SD card? You will lose all data on the SD card!

14



MII SD Card files are deleted.

Cautions on Formatting SD Card

Observe the following when formatting SD Card. • Formatting deletes all SD Card files. Carefully check SD Card used on another device before formatting it.

• When formatting, keep handset charged or charge it adequately beforehand.

Inserting & Removing Battery

Inserting

1

Remove Back Cover



 \cdot Gently lift Back Cover by notch in direction shown with finger.



Insert Battery



• Slide Battery in direction 1 onto metal terminals in handset, and press into handset in direction 2.

3

Fit Back Cover on handset, and press Back Cover in directions shown



4

Work way around Back Cover in directions 1 holding down in direction 2 to install completely



🏁 Battery is inserted.

Removing

Always power off beforehand.

1

Remove Back Cover



• Gently lift Back Cover by notch in direction shown with finger.

2

Remove Battery



 Put fingertip on Battery from the notch of handset and gently lift Battery by upper part in direction shown.

3

Fit Back Cover on handset, and press Back Cover in directions shown



4

Work way around Back Cover in directions 1 holding down in direction 2 to install completely



Battery is removed.

Charging Battery

Charge Battery inserted in handset.

Incoming/Charging LED

Lights red during charging, and goes out once charging completes.

 Incoming/Charging LED flashing while charging indicates an abnormality with Charger, Battery, or that equipment has reached the end of its service life, and that Battery is not charging properly. Check that Charger and other equipment are SoftBank-specified items. If you are using specified products only, contact a SoftBank Shop or Customer Service, General Information.

Charging Cautions

Water Resistance

The Desktop Holder and AC Charger (Sold Separately) are not waterproof. Refer to User Guide for AC Charger and check on water resistance. Never connect USB Type-C plug while handset or AC Charger is wet.

Handset is water resistant; however, if USB Type-C plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or USB Type-C plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.

Handling Cables

Do not pull, bend, or twist cable; may damage the cable.

Charging Abroad

SoftBank Corp. is not liable for problems resulting from charging handset abroad.

USB Type-C Plug

External Device Port is only for USB Type-C. Connecting a micro USB (Type-B) cable forcibly may cause damage or malfunction.

Charging with AC Charger

For details on AC Chargers and other peripheral equipment, see SoftBank Website.

This section describes charging method using AC Charger [KYCAV1].

 \cdot Never connect USB Type-C plug while handset or AC Charger is wet.



1

Insert USB Type-C plug of AC Charger into External Device Port



- External Device Port is only for USB Type-C. Connecting a micro USB (Type-B) cable forcibly may cause damage or malfunction.
- \cdot When Inserting USB Type-C plug, check for deformation or damage and insert the plug into External Device Port.
- \cdot USB Type-C plug supports insert on both orientation.

2

Insert plug on AC Charger into AC outlet



Charging starts, and Incoming/Charging LED lights.

 \cdot Incoming/Charging LED goes out once charging completes.

3

After charging, remove USB Type-C plug from External Device Port, then unplug AC Charger

Charging completes.

Charging with Desktop Holder (Sold Separately)

Desktop Holder is an optional accessory. Use SoftBankspecified Desktop Holder.

For details on Desktop Holder, AC Chargers and other peripheral equipment, see SoftBank Website. This section describes charging method using AC Charger

[KYCAV1] and Desktop Holder [KYEAY1] (sold separately).

- \cdot Refer to User Guide for Desktop Holder.
- Never connect USB Type-C plug while Desktop Holder or AC Charger is wet.
- \cdot Do not place handset in Desktop Holder if wet.



1





- Device Port is only for USB Type-C. Connecting a micro USB (Type-B) cable forcibly may cause damage or malfunction.
- When Inserting USB Type-C plug, check for deformation or damage and insert the plug into Device Port.
- \cdot USB Type-C plug supports insert on both orientation.



Insert plug on AC Charger into AC outlet





Place handset in Desktop Holder with handset closed



Charging starts, and Incoming/Charging LED lights.

- Place handset in direction shown. Check for orientation of handset and Desktop Holder and insert handset straight into External Device Port securely.
- \cdot Incoming/Charging LED goes out once charging completes.

4

After charging, remove handset from Desktop Holder, then unplug AC Charger

Remove AC Charger from Desktop Holder

Charging completes.

Power On/Off

Powering On

Image: Second standby appears after a while.





Yes



🏁 Handset shuts down.

Importing Data from Other Mobile Phones



2

Align infrared ports on handset and sending device



 Put handset close to sending device so that infrared port is opposite to the other straight.





🏁 Ready screen appears.

4

Commence sending on the other device

🏁 File is received.

 \cdot If confirmation appears, follow onscreen prompts.

 \cdot Operation steps very by receiving data format.

🖗 Receiving Mail Data by Infrared

- For received mail data: PRIVATE/MYFOLDER/Mail/Inbox/ Inbox.BCK
- For sent mail data: PRIVATE/MYFOLDER/Mail/Sent Messages/Sent Messages.BCK
- For draft/unsent mail data: PRIVATE/MYFOLDER/Mail/ Drafts/Drafts.BCK



Troubleshooting

- Q. Cannot Activate Bluetooth® Function
- A. Is Airplane Mode enabled? If you enable Airplane Mode with Bluetooth® function ON, Bluetooth® function is disabled.



Standby

Standby appears as follows. Add widgets and applications with Standby settings.



1 Status Bar
2 Widgets/applications ¹
3 Custom Keys
Show functions saved on Custom Keys

1 Add with Edit menu.

Information Window

Information for missed calls, new mail, etc. appears at bottom of Standby when handset is opened. Type of information (e.g., "New mail") and number are shown.



Checking Notification

Select notification and press $\hfill\blacksquare$.

· Pressing 202 m/100 m hides notification temporarily.

Display Saving

Display goes completely dark after a certain period of no operation to save power.

• Press any key other than v=-/2++y=> (except o during a call) to reilluminate Display.



Before Display goes completely dark, Backlight turns off and Display darkens.

 \cdot Press any key to illuminate Backlight. Key press also activates assigned function.

Display-Top (Status Bar) Indicators

Indicators (new message notification, handset status, etc.) appear on Status Bar.

Status Bar Layout



 Notifications, warnings, etc. appear here. (Notification Indicators)

2 Handset status and other information appear here. (Status Indicators)

Notification Indicators

Notification Indicators appear on the left.



Indicator	Description
¥ 1	Urgent News
ل	Call Arriving/Calling/in Progress
۲	Call on Hold
ň	Missed Call
R	New Answer Memo
<u>مە</u>	New Voicemail
	New S! Mail/SMS
@	New PC Mail
Ö	Alarm Ringing
Ē	Calendar Notification
	Reserved One Seg Viewing Time
	Approaching/in Progress
æ	FM Radio Playing in the Background
Ŧ	Data Downloading
*	Bluetooth® File Reception Request
	SD Card Mounted
_	Screenshot Captured
<u></u>	Screenshot Failed
• •	Hidden Notifications
0	ブラウザ保護 (Browser Hogo Protection)
	On
8	Blocked call to/from nuisance caller
ß	Software Update Notifications

Status Indicators

Status Indicators appear on the right.



Indicator	Description
	Battery Strength
5	Charging
ĭ	Battery Care Mode
.11	Signal Strength
il ⁱ	No Signal
?	No SIM Card
4G	4G Data Connectable
R	Roaming
ታ	Airplane Mode
	Wi-Fi Network Connected
*	Bluetooth [®] On
Ŷ	Manner Mode
కో	Silent Mode
a	Drive Mode
R	Answer Phone Set
٩	Call Set to Speaker
*	Call Mic Off
Ö	Alarm Set
ព្	Secret Phone Book Entry Temporarily Viewable
2	Secret Mail Temporarily Viewable
â	Secret Phone Book Entry and Mail Temporarily Viewable
K	Pointer Off
X	Pointer On
Ŕ	Ringtone Volume 0
0	Locationing

Checking Handset Status & Notifications (Notifications & Settings Window)

Open notifications and check handset status.

Using Notifications Window

1



Notifications Window opens.



Select notification to delete on Notifications Window ☑ (Menu) → Delete all → YES

 \cdot Some notification cannot be deleted.



- Manner mode to set Manner mode. Select the mode and Press
 .
- Press $\boxed{0}$ / $\frac{2}{\sqrt{3/2}}$ to close Quick Settings Window.

Sub-display

View signal, battery, and time as well as missed calls, and new mail. Information appears for missed voice calls, new mail, etc.

Using Sub-display

Press v-//// (Side Key) when handset is closed to light Subdisplay.





🛐 Sub-display Indication

While Sub-display is lighting, press (Side Key) to change indications for time/signal and battery strength/ steps.

Indicators

The following Indicators appear in Sub-display.





Indicator	Description
.1	Signal Strength
4G	4G Data Connectable
<u>к</u>	Airplane Mode
	Wi-Fi Network Connected
X	No Signal/No SIM Card
	Battery Strength
Ø	Charging
Ĭ	Battery Care Mode
~	Manner Mode
57	Silent Mode
8	Drive Mode
Ϋ́	Missed Calls
\sim	New S! Mail/SMS
∑≰	S! Mail/SMS Send Failure
(d))	Urgent News Notification

[•] When 24-hour format is off in Date & Time , AM/PM appears to right of time indications.

Information on Sub-display

Information appears for voice call, mail, and other notifications. Appearing information:

Information	Description
Saved name	Call/S! Mail/SMS from caller/sender in Phone Book
Phone number	Call/SMS from caller/sender not in Phone Book
Email address	S! Mail from sender not in Phone Book
"Calling"	Call/Fake call arriving when Sub display in Wallpaper/Display settings is disabled
"Mail Received"	S! Mail/SMS arrives when Sub display in Wallpaper/Display settings is disabled
"Auto answering"	Handset auto-answering call
"Manner mode was set"/"Silent mode was set"/"Drive mode was set"	Handset placed in Manner mode/Silent mode/Drive mode
"Manner mode was canceled"	Handset exited from Manner mode/Silent mode/Drive mode
Time alarm name/task	Alarm/timer ringing
"Please charge"	Battery low
"Key Locked Not available"	Long Pressing 🖅-12479-) (Side Key) when 🔍 (Side Key) operation locked and handset closed
"E-mail You have mail on the server"	Mail on mail server
"TV Reservation"	Reserved One Seg Viewing Time Approaching/in Progress

Security Codes

Code Types

The following codes are required for handset use. Operation Password can be user-set and changed on handset.

Code	Description
Operation Password	Code for applications and functions requiring a security setting. By default, not set.
PIN/Password	Code for unlocking screen. By default, not set.
Center Access Code	4-number code set at time of subscription. Used when changing subscription details and optional services from a landline telephone.

🖉 If Security Code is Unsaved

If a code is required by an application or function, a prompt to save a code appears.

Operation Password/Center Access Code

The Center Access Code is required for handset use. The Center Access Code is a 4-number code set at time of subscription used when changing subscription details and optional services from a landline telephone.

- Please be forewarned that you do not forget the Center Access Code. If you should forget it, handset must be serviced. Contact Customer Service.
- Please be forewarned that you do not let any other person know the Codes. SoftBank Corp. is not responsible for damages from Codes being known by another person or being abused.

Getting Started



 \cdot If confirmation appears, follow onscreen prompts.



Enter Operation Password to set 🄿 🔳



3

Re-enter Operation Password \bigcirc 🔳



🧖 Operation Password is set.

 \cdot If confirmation appears, follow onscreen prompts.

Entering Operation Password

Changing Operation Password

In screen for entering Operation Password to activate All Reset, locks for function, and settings, Password change → Follow onscreen prompts

• Current Operation Password must be entered to change Operation Password.

Resetting Operation Password

In screen for entering Operation Password, PASSWORD RESET → OK → Follow onscreen prompts

• My SoftBank authentication is required to reset Operation Password. Set My SoftBank authentication from My SoftBank Website.

USIM PIN and USIM Card Lock

When USIM card lock is enabled, PIN (a code for USIM Card) is required for handset use each time handset is powered on; helps prevent unauthorized use by others.

- · Enable USIM card lock by enabling PIN.
- \cdot PIN is 9999 by default.

PIN Entry Cautions

PIN entry is required when changing PIN, when powering handset on with USIM card lock enabled, etc.

- Entering incorrect PIN 3 consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; For details about PUK, contact Customer Service.
- Entering incorrect PUK 10 consecutive times activates PUK Lock, disabling handset. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).





Basic Operations

Basic Operations with this Handset	30
Key Operation	30
How to Use Pointer	31
Main Menu	31
Accessing Applications	32
Using Manner Mode	34
Using Airplane Mode	35
Other Basic Operations	36

Basic Operations with this Handset

Handset Keys

Almost all operations can be performed by pressing the keys.



Pointer Operation

Operate Multi Selector to use the onscreen pointer. Available when Pointer is activated (🔀 is shown on Status Bar).



Key Operation

Cursor Operation with Keys

Operate cursor in screen with $\mathbf{\Phi}$.





Function/operation labels appear at bottom of Display; see key assignments below.

 \cdot Some key assignments may vary with window content.



How to Use Pointer

Turn Pointer on in a Pointer-capable application such as Browser and OfficeSuite to use the onscreen 🔪 (pointer) with Multi Selector.

Pointer Operations

Setting a description to appear when Pointer turned on

 ➡ Settings ⇒ More settings ⇒ Pointer ⇒ Startup confirm Startup confirm to toggle on (♥)/off (□).
Changing Pointer size
Changing Pointer speed
 ■ Settings More settings Pointer Slow / Normal / Fast

Enabling Pointer

When Pointer-capable application is activated, **N** appears in Status Bar.

1

In Pointer-capable application, III (Long Press)

🏁 Pointer turns on, and 📐 appears.

• Pointer does not turn on in non-capable applications.

· III (Long Press) again to turn Pointer off.

Using Main Menu

Use the following applications and services.

Item	Description
Mail	Exchange S! Mail, SMS, and PC Mail.
Browser	Access the Internet. Browser is a Pointer- capable application.
Calendar	Check the calendar or manage your schedule.
Alarm	Use Alarm, Countdown Timer, or Stopwatch.
Camera	Capture or edit photos and videos. For details, see "Capturing Photos & Recording Videos."
Calculator	Four basic operations of arithmetic (addition, subtraction, multiplication, and division) and percentage calculation are available.
Tool	Notepad, Pedometer, etc.
Data	Check photos, videos, music, and other files saved to handset/SD Card from Data Folder. For details, see "Handling Data (Data Folder)."
Service	Access あんしんバックアップ (Anshin
	Backup), Urgent News, and other services.
TV	Backup), Urgent News, and other services. View terrestrial digital TV for mobiles. For details, see "One Seg Service."
TV Phone	View terrestrial digital TV for mobiles.

1





🏁 Main Menu opens.



Accessing Applications

Access applications in one of several ways. Use as convenient.

Key Long Press

Long Press keys to access the following pre-saved applications and functions.

 \cdot Functions may not be available depending on handset usage when accessed.

Operation	Description
In Standby, ⊠ (Long Press)	Create new S! Mail.
In Standby, (Long Press)	Lock/unlock operation (key lock) of v=-v=v=- (Side Key) when handset closed.
In Standby, (Long Press)	Open Browser menu.
In Standby,	Save new entry to Phone Book.
In Standby, (Long Press)	Turn on Flashlight.
In Standby, (Long Press)	Activate Data Folder.
In Standby,	Auto answering on/off.
In Standby, $\boxed{0}_{kk}^{2D}$ - $\boxed{9}_{wkrz}^{5D}$ (Long Press)	Search Phone Book.
In Standby, ★☆☆ (Long Press)	Make international call (open menu to add "+" and make call).
In Standby, (Long Press)	Bluetooth® on/off.
In Standby, (Long Press)	Activate Fake call.
In Standby,	Enter/exit Manner mode.

Custom Key

Assign frequently used phone numbers or favorite applications on Custom Keys to quickly open them by pressing Custom Key from any screens.

1



- Assigned application/function activates.
- Pedometer is set on I and Alarm is set on I by default.
- \cdot When no function is assigned on a pressed key, assignment screen appears.

Custom Key Operations

Assigning a function on Custom Key

■ ◆ Settings ◆ Custom key ◆ Select a Custom
 Key ◆ ■ ◆ Select an application or a function to assign ◆ ■

 \cdot Select further items depending on the selected application/function.

Cancel a function from Custom Key

■ Settings Custom key Select a Cus	tom
Key ラ 🔳 ラ OFF	

From Current Function

Access applications from history of recent applications. Activate several applications and operate while switching between applications.

1

I (Long Press)



History opens.

2

Select application 🗦 🔳



Application opens.





Basic Operations

Using Manner Mode

Mute ringtones and other handset sounds to avoid disturbing others around you.

Cautions on Activating Manner Mode

Ringtones, operation tones, etc. do not sound in Manner mode. Place handset in Silent mode/Drive mode to also stop handset from vibrating for new calls or mail.

• Camera shutter and video record start/stop beeps continue to sound in Manner mode.

Activating Manner Mode



🏁 Manner mode activates.

- Alternatively, in Standby, → → Manner mode / Silent mode / Drive mode .
- · If set to OFF , handset does not enter Manner mode.

Canceling Manner Mode

In Manner mode, T+-/5+79- (Long Press)

Setting Auto Manner Mode

Set Manner mode to change automatically at a set time.



マナー/シャッター







(AutoMode)



🏁 Auto manner mode screen opens.



Select time to set \bigcirc \blacksquare (\bigcirc)



Settings are enabled.

• To disable Auto manner mode, select the set time \bigcirc • (••••).

 Operations on Setting Auto Manner Mode

Selecting manner mode

Select time to set in auto manner mode screen, 🗦 🌐
(Edit) ラ Manner mode type ラ Manner mode /
Silent mode / Drive mode ラ 🗉 ラ 🌐 (Done)
• Selecting OFF disables manner mode at the set time.

Changing time to switch to manner mode
Select time to set in auto manner mode screen, </td <td>Activ</td>
● (Set)
Changing day to enable manner mode
Select time to set in auto manner mode screen, $\Rightarrow \bigoplus$ (Edit) \Rightarrow Set repeat \Rightarrow Select item \Rightarrow \blacksquare (\checkmark)
 (Done) Select an item Into toggle check (✓)/uncheck (□).
Creating new auto manner
In auto manner mode screen, ☑ (Menu) ⋺ Add ⋺ Specify each item ⋺ 團 (Set)
Deleting one set time
Select time to set in auto manner mode screen, ▶ ▶ ■ (Menu) > Delete > Delete one > Yes
Selecting a set time to delete
In auto manner mode screen, ☑ (Menu) ☑ Delete ② Delete multiple ③ Select a set time to delete ④ ■ (☑) ④ ④ (Delete) ④ Yes
 Select a set time ⇒ ■ to toggle check (✓)/uncheck (□).
 In Delete multiple screen, ☑ (Menu) → Check all / Uncheck all can check (☑)/uncheck (□) all items.

Airplane Mode

wer on, suspend signal-transmitting functions.

ating Airplane Mode



Settings)



Settings Window opens.

3			
Airplane mo	ode ()	
Quick settings			
Airplane mode			
Wi-Fi			
Bluetooth			
Battery saver			
Location			
Manner mode			
OFF			
		^{activates.} Airplane Mode	
In Airpland	e mode,	in Settings Window, Airpla	ine mode) (
Airplane	e mode	to toggle on (🗹)/off (🔲).

📙 Airplane Mode Caution

Activating Airplane mode disables Wi-Fi and Bluetooth[®], interrupting corresponding transmissions. Wi-Fi and Bluetooth[®] connections can be used even in Airplane mode by enabling Wi-Fi or Bluetooth[®] after activating Airplane mode ; make sure that such connection/transmission is permitted in your current location before use.

Other Basic Operations

Checking Your Phone Number

1





Handset phone number appears in profile window.

Operations on Checking Profile

Editing profile

In Profile window, 🖄 (Menu) 🔿 Edit 🔿 Select item
to edit ⋺ 🔳 ⋺ Edit content ラ 🔳 ⋺ 🌐 (Set)
Sending profile
In Profile window, 🖾 (Menu) ラ Attach to mail /
[Send Infrared] / [Send Bluetooth] ラ Follow onscreen
instructions
Deleting saved content
In Profile window, 🖾 (Menu) ラ Reset ラ Yes
· Contents saved beforehand are not deleted.

Capturing Screenshots

Long Press \blacksquare and $\fbox{}_{2+7/2+79-}$ at the same time to capture a screenshot of the current screen.

- \cdot Available for all but some applications.
- · View captured screenshots in Pictures in Data Folder.

Operations in Common

Customizing Fonts	38
Changing Handset Response to Calls & Mail	38
Text Entry	39
Phone Book	41

Customizing Fonts

	Calls & Mail
Changing Text Size	Set ringtone, vibration, Incom
Change the size of text in menus, when entering text, etc.	Making Settings fo
1	
 Settings Settings (Settings) (S	Image: Constraint of the second state of the second sta
Font size Sample ABCDabod 012345 small O Normal O Large Done Done Xext size changes.	Sound/Notification Volume Manner mode orr Phone ringtone OFF V Data Folder V Data Folder Natima Incoming LED Court Notification sound abliget (Mini) Done
	Follow onscreen prompts
	Setting is complete.
	 Incoming Call Set
	Setting Whether Hand Call
	In Sound/Notification windo
	Setting Vibration Patt
	In Sound/Notification windo
	Select pattern ラ 🔳 · Select pattern ⋺ 👜 (Con
	Setting Color of Flash Arriving Call
	In Sound/Notification windo color

Changing Handset Response to

ning LED etc. for each function.

Making Settings for New Calls
1
Settings Sound/Notification Phone
Sound/Notification Volume Manner mode Fre Pohner ingtone XdFr2(0 (kell Pisno) Also vibrate for calls Vibration pattern Toroming LED Soler 1 Notification sound
DFF / Preset / Data Folder
ollow onscreen prompts Setting is complete.
 Incoming Call Settings Operations
Setting Whether Handset Vibrates for Arriving Call
In Sound/Notification window, Also vibrate for calls · Also vibrate for calls to toggle on (☑)/off (□).
Setting Vibration Pattern for Arriving Call
In Sound/Notification window, Vibration pattern → Select pattern → Select pattern → (Confirm) to make handset vibrate.
Setting Color of Flashing Incoming LED for Arriving Call
In Sound/Notification window, Incoming LED → Select color → ■ · Select color → ● (Confirm) to make Incoming LED flash.

Image: Section Section 1 For that key. Image: Section Section 1 To enter characters assigned to the same key, Press □ Image: Section Section 1 Image: Section 2 Image: Section 2 Image: Section	Making Settings for New Mail	Text Entry
Image: Second Secon		
Use Dial Keys to enter characters. Multiple characters are assigned to each key. Press & key to toggle character option for that key. • To enter characters assigned to the same key. Press first. • To enter characters assigned to the same key. Press first. • To enter characters assigned to the same key. Press first. • To enter characters assigned to the same key. Press first. • To enter characters assigned to the same key. Press first. • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters assigned to the same key. Press • To enter characters window. (I) • In a text entry window. (I) • Spaces can be entered with character types other than numbers. • Adding Quoted Information in Currently Entering Katakana, Alphabet, and Numbers while in Hiragana • (I) • Katakana, alphabet, and numbers appear in conversion candidates. • Changing Conversion Modes In a text entry window, enter hiragana • (I) • (Normal/		Text Entry Basics
Image: Construction of the second of the	Volume Manner mode ore Phone ringtone x127+702 (belf home) Also vibrate for calls Also vibrate for calls Vibration pattern Pattern 1 Incoming LED Color 1 Notification sound	assigned to each key. Press a key to toggle character options for that key. • To enter characters assigned to the same key, Press 🕞
In a text entry window, ♀ In a text entry window, entry ♀ In a text entry window, entry ♀ In a text entry window, enter hiragana ♀ In a te	2	Text Entry/Conversion Operations
Image: Setting and Setting within Line Image: Setting and Se	OFF) / Preset) / Data Folder)	Line-Breaking at End of Line
Line-Breaking within Line In a text entry window, K: Confirmed Text Line-Breaking within Line In a text entry window, K: Line-Breaking within Line In a text entry window, Interpretent Line In a text entry window, Interpretent Line In a text entry window, enter hiragana Repare In conversion candidates. Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window, enter hiragana Repare In conversion Changing Conversion Modes In a text entry window	Volume	In a text entry window, 📮
In a text entry window, ★::::::::::::::::::::::::::::::::::::	OFF O	Line-Breaking within Line
Image: Section of the sectin of the section of the section of the section of th	V Data Folder O Patten 1 Incoming LED Color 1	In a text entry window, $\chi_{+AM}^{+\alpha}$
Follow onscreen prompts Follow onscreen prompts Setting is complete. • If setting notification sound from Prese, select sound ② ④ (Confirm) to check notification sound. • Spaces can be entered with character types other than numbers. • Adding Quoted Information in Currently Entered Line In a text entry window, ◎ (Menu) ② Quotation ③ Select quote item Entering Katakana, Alphabet, and Numbers while in Hiragana-Kanji Mode () In a text entry window, enter hiragana ③ ④ (A.1.7) • Katakana, alphabet, and numbers appear in conversion candidates. Changing Conversion Modes In a text entry window, enter hiragana ④ ⑨ (Normal/	通知音09 (Mild)	Entering a Space at End of Line
 Setting is complete. If setting notification sound from Preset, select sound Preset, select In a text entry window, Ref. / Harrow Internet setting a space in Middle of Already- Confirmed Text In a text entry window, Ref. / Harrow Internet setting a space in Middle of Already- Confirmed Text In a text entry window, Ref. / Harrow Internet setting a space in Middle of Already- Confirmed Text In a text entry window, Ref. / Harrow Internet setting a space in Middle of Already- Confirmed Text In a text entry window, Ref. / Harrow Internet setting a space in Middle of Already- Confirmed Text In a text entry window, Ref. / Harrow Internet setting a space in the setting setting a space in the setting setting and the setting setting a space in the setting setting a space in the setting setting a specific setting setting a specific setting setting a specific setting a specific setting setting a specific setting setting a specific setting setting setting a setting setting	3	In a text entry window, 🕞
 If setting notification sound from Presset, select sound ② ● (Confirm) to check notification sound. Spaces can be entered with character types other than numbers. Adding Quoted Information in Currently Entered Line In a text entry window, ◎ (Menu) ② Quotation ③ Select quote item Entering Katakana, Alphabet, and Numbers while in Hiragana -Kanji Mode () In a text entry window, enter hiragana ③ ● (A.1.7) Katakana, alphabet, and numbers appear in conversion candidates. Changing Conversion Modes In a text entry window, enter hiragana ③ ● (Normal/ 	~	
Entered Line In a text entry window, (Menu)	· If setting notification sound from Preset , select	In a text entry window, O ☆ / ∰ ☆ ● until space appears · Spaces can be entered with character types other than
Select quote item Entering Katakana, Alphabet, and Numbers while in Hiragana-Kanji Mode () (A.1.7) · Katakana, alphabet, and numbers appear in conversion candidates. Changing Conversion Modes In a text entry window, enter hiragana		Entered Line
while in Hiragana-Kanji Mode () In a text entry window, enter hiragana () (A.1.7) · Katakana, alphabet, and numbers appear in conversion candidates. Changing Conversion Modes In a text entry window, enter hiragana () (Normal/		
• Katakana, alphabet, and numbers appear in conversion candidates. Changing Conversion Modes In a text entry window, enter hiragana 📀 🖾 (Normal/		
In a text entry window, enter hiragana ラ 🖂 (Normal/		· Katakana, alphabet, and numbers appear in conversion
		Changing Conversion Modes
		1
Adjusting Range of Text to Convert		Adjusting Range of Text to Convert
In a text entry window, enter hiragana ⋺ 📼 to adjust conversion range		In a text entry window, enter hiragana ᅙ 🖻 to adjust conversion range



Using Wildcard Input

In a text entry window, enter hiragana \bigcirc \square \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc

- · Available when Wildcard input is set.
- Replace end of a text string with "O" (wildcard) to narrow down prediction conversion candidates.
- \cdot The number of "O"s specifies the length of the word. Add "O"s with $\hfill \blacksquare$.

Setting Input Method

 In a text entry window,
 ☑
 (Menu)
 Input settings

 ○
 Input method

 Kana method
 /
 2-touch method

Changing the Character Type

Settable input modes are the following.

Indicator	Description
漢	Hiragana-kanji
AB	1-byte alphabet
12	1-byte numbers
P1	1-byte katakana
А	2-byte alphabet
1	2-byte numbers
<i>P</i>	2-byte katakana

1

In a text entry window, 🚆



🏁 Character type changes.

- Press 🛱 to change character types.
- Press rot to toggle 1-byte/2-byte characters.

Entering Letters

In 12-key Keyboard, to enter "Mail":

• Entry in 1-byte alphabet is described.



In a text entry window, $6 \frac{\text{M}}{\text{M}}$ (four times: M) $\Rightarrow 2 \frac{\text{M}}{\text{M}}$ (a) $\Rightarrow 4 \frac{\text{R}}{\text{GH}}$ (three times: i) $\Rightarrow 5 \frac{\text{K}}{\text{M}}$ (three times: I) \Rightarrow

<u>/lail</u>		
red. AB	Select	Back
Mail	Mailing	Mails
Mailor	A b	failman
ivialiev		A 4 - 10
	rder	Malibox
Mail-or		Mailbox Maillot

🏁 "Mail" is entered.

Phone Book

Save phone numbers and email addresses. In addition, save birthdays and other information. Set ringtones for incoming calls/messages for each contact.

Phone Book Caution

Contacts may be altered/lost if handset is left uncharged or without a Battery, or due to accidents malfunctions, repairs, handset upgrade/replacement, mishandling, etc. Back up important contacts and other data regularly. SoftBank Corp. is not liable for any damages resulting from loss/alteration of contacts.

Adding New Contacts

Saving a contact's name, number, email address (at least one of which must be saved), and group is described.

1

(Long Press)



🏁 Phone Book edit window opens.



Reading is entered automatically.

3 In Phone fields, Phone number 🔿 Enter number 🔿 🔳 Phone n)90-xxxx-xxxx 4 In Email fields, Mail address 🔿 Enter email address 🔿 •••@xx.xx.xx red. 漢 AB 12 7イ 🦰 5 In Groups field, Group name → Select group → (☑) ラ 🌐 (Set) Set aroups 01:Friends Menu Unchk Set 6 (Set) Edit Phone book dat Taro Sato Sato Taro Phone Mobile 090-XXXX-XXXX Mobile Contact is saved. **Operations on Saving Contact** Saving photo DIGNOケータイ3 In Edit Phone book data window, 🖷 🔿 Data Folder / Take photo 🔿 Follow onscreen prompts ' If you select None , no pictures are saved.

Operations in Common

Changing phone (amail (address (website type
Changing phone/email/address/website type
In Edit Phone book data window, Mobile / Home in Phone/Email/Address/Website field > ■ > Select the type to save > ■
Saving address
In Edit Phone book data window, Postcode / Country / Region / City / Street in Address field → Fill in each item → ■
Saving birthday
In Edit Phone book data window, Date in Birthday field ⋺ Enter birthday ⋺ 團 (Done)
Saving company/title
In Edit Phone book data window, Company / Title in Company/Title field
Saving website
In Edit Phone book data window, URL in Website field → Enter URL → ■
Saving memo
In Edit Phone book data window, Notes in Notes field → Fill in item
Setting ringtone for voice call
In Edit Phone book data window, Incoming settings → Ringtone → Default setting / Preset / Data Folder → Follow onscreen prompts
 If you select Default setting, operates according to common settings. If you set ringtone from Preset, select
ringtone → ∰ (Confirm) to check selected ringtone. • If you select OFF, ringtone is disabled.
Setting vibration pattern for voice call
In Edit Phone book data window, Incoming settings ⋺ Vibration pattern ⋺ Select pattern ⋺ ■
 If you select Default setting, operates according to common settings.
· If you select OFF , vibrator is disabled.

Setting color of flashing incoming LED for voice call In Edit Phone book data window, Incoming settings Incoming LED Select color If you select Default setting, handset operates according to common settings. If you select OFF, incoming LED does not light up. Hiding contact in normal mode (Secret setting) In Edit Phone book data window, Secret setting (Secret setting to toggle check ()/uncheck ()

42

Phone

Calling	44
Placing International Calls	46
Optional Services	48
Global Services	52

Calling

How to place calls, answer calls, and options available when a call is arriving or in progress are described.

👸 Telephone Function

Emergency Location Report

Making emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.). This system is referred to as Emergency Location Report, and notifies location based on positioning from base stations.

- Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy.
 Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report.
 However, corresponding agency may obtain location information in life threatening situations.
- \cdot Location Report is not sent for calls made while outside Japan.

VoLTE Compatibility

Handset is compatible with VoLTE and HD Voice, making it possible to use voice calls with higher sound quality. For details, see "Using VoLTE."

? Troubleshooting

- Q. Difficult to talk on handset
- A. Talking on handset may be difficult in a place with too much noise.
- A. When you talk on handset using Speaker, check the volume level. Talking on handset may be difficult if you increase the volume level.
- Q. Click noise during a call
- A. Are you moving anywhere during a call? Click noise may be heard when switching to another area due to weak signal reception. This is not a malfunction.

Cautions on Emergency Calls

Areas where You Can Use Emergency Calls

You can use emergency calls only within a SoftBank service area.

Airplane Mode

While Airplane Mode is enabled, please be forewarned that you cannot use emergency calls.

Placing Calls

1

Dial number





- \cdot Include area code for landline numbers.
- To correct number, Press ()) to delete digit(s), then enter correct number.
- In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.
 In dial window, ☑ (Menu) Phone Book to select contact.

2
~
nput Dial
090XXXXXXXX
X Hold:* # Hold:Pause
Menu Call Register

- 🏁 Handset dials the number.
- Alternatively, 🔳 ラ Call .
- \cdot Call begins when other party answers.



To end call, 🕤



🟁 Call ends.

- · Alternatively, close handset to end call.
- While earphones are connected or you are talking on handset using Speaker, closing handset does not end call.

Operations on Placing Calls



A. Is signal reception good? Move to where signal reception is good and re-dial the number.

(beginning with "0").

Answering Calls

When call arrives, / (Answer)





🏁 Proceed with call.

• Press 🚺 as a call is arriving to change the ringtone volume.

2



🏁 Call ends.

· Alternatively, close handset to end call.

Operations on Answering Calls

Holding Incoming Call

when a call is arriving

· A fee is charged to other party while holding.

• Press	~	/ 🔳	(Answer	r) to	answer	a call	while	holding.
• Press	U	to e	nd call w	vhile	holding			

Stopping Ringtone or Vibration

(Silent) when a call is arriving

Rejecting Incoming Call

(Reject) when a call is coming

Answering with SMS

\square	(Menu)	€	Quick responses	€	Select message
€	where	n a c	all is arriving		

Phone

Auto Answering

Menu) → Answer memo when a call is arriving

- Press real to answer a call while playing back/recording auto answering.
- Select whether to output recorded content from
 Earpiece by pressing (ON/OFF) while recording auto answering.

Forwarding Incoming Call (Menu) Forwarding when a call is arriving

· Specify the destination beforehand. For details, see "Call Forwarding."

Answering Calls with Earphone Mic (Sold Separately)

Press the switch on earphone mic when a call is arriving.

Press the switch on earphone mic again to end call.
 Handset is compatible only with USB Type-C analog earphones/conversion cable.

Using VoLTE

VoLTE (Voice over LTE) is an LTE-based voice call system. Compared to voice calls with conventional 3G networks, higher-quality sound and shorter time until ringback tones sound are benefits.

- VoLTE is available between compatible SoftBank/Y!mobile handsets. Handset and other device must be in a SoftBank
 4G LTE (FDD-LTE) service area and both "4G voice call" and
 4G service in "Cellular networks" settings must be enabled.
- For details on the countries/regions where VoLTE international roaming, see "Service Page (https:// www.softbank.jp/mobile/service/global/overseas/volte/)."

Setting Handset not to Use VoLTE ● Phone ● Call Settings ● 4G voice call (

• 4G voice call to toggle on (\checkmark)/off(\square).

VoLTE Cautions

VoLTE requires 4G service. VoLTE is not available when 4G service is disabled. To enable 4G service:

● Settings ● Wireless/Network ● Cellular
 networks ● Select Network ● 4G/3G/GSM or
 4G/3G

Placing International Calls

Calling to Countries Outside Japan

1

Dial number







3

Intl Call



🟁 Country code list opens.



Select country code of other party ⋺ 🔳

Intl Call
United States(USA)
Virgin Islands, U.S.(VIR)
American Samoa(ASM)
Anguilla(AIA)
Antigua and Barbuda(AT
Virgin Islands, British(VG
Canada (CAN)
Northern Mariana Islands
Guam(GUM)



Deleting Multiple Prefix No.

■ 🔿 Phone 🔿 Call Settings 🔿 Prefix setup 🔿
☑ (Menu) 🤿 Delete multiple 🔿 Select prefixes to
delete ラ 🔳 (🗹) ラ 🌐 (Delete) ラ Yes
• While selecting prefix, 🗹 (Menu) 🔶 Check all
/ Uncheck all to select (🗹)/cancel (🗌) all the
prefixes.

Optional Services

Optional Services

Use these SoftBank Optional Services:

 \cdot Call Forwarding and Voicemail cannot be used at the same time.

Service	Description
Notify Caller ID	Send or hide your number when placing calls.
Call Barring	Restrict incoming/outgoing calls by conditions.
Voicemail	Divert all/unanswered calls to Voicemail Center; access messages via handset/ touchtone phones.
Call Forwarding	Divert all/unanswered calls to a preset number.
Call Waiting ¹	Answer calls during a call.
Group Calling ¹	Merge multiple calls.

1 Requires separate subscription



Call Barring

Restrict outgoing/incoming calls and SMS messages.

• When attempting to place/send a call/SMS while calling is restricted, a message appears. Message may take time to appear in some areas.

Restriction	Description
All outgoing calls	Restrict all outgoing calls.
Outgoing international calls	Restrict international calls; while outside Japan, calls within current country are allowed.
Outgoing international roaming calls	Restrict international calls; while outside Japan, calls within current country and to Japan are allowed.
All incoming calls	Reject all calls.
Incoming calls when roaming	Reject calls while outside Japan.

 Image: Contract of the contrac

🟁 Call service settings window opens.

2
Outgoing Call Barring) / Incoming Call Barring → Select restriction → ■
Outgoing Call Barring Outgoing Call Barring All outgoing calls O Outgoing internation. O Outgoing internation. O Stop all outgoing cal. ©
Call Barring is set.
 Canceling All Outgoing/Incoming Call Restrictions
In Call barring window, Outgoing Call Barring / Incoming Call Barring 🔿 Stop all outgoing calls / Stop all incoming calls

Troubleshooting

- Q. Calling is not barred.
- A. Are you using Call Forwarding or Voicemail? Calling may not be barred even if All outgoing calls and Restrict all incomings are set.

V	oicemail
1	
_	Phone 🔿 Call Settings Ə Call service settings
	/oicemail/Call forwarding
Call serv Accept (/ice settings Caller ID
Notify call p number whe	arty of your phone 🗹 en calling.
	g Call Barring g Call Barring
Cellunai	iil/Call forwarding
Answer inco	uny gail during call
S V	/oicemail/Call forwarding window opens.
2	
A	
	ys forward / When Busy / When unanswered /
wher	
Always t	ail/Call forward forward
When B	incoming calls USY Oming calls Galls
When un Forward unit	nanswered answered calls
	nreachable oming calls during out of
Play voicem	
1	all service settings window opens.
3	
In set	tings for each service, Always forward / When
	/ When unanswered / When unreachable
Always	forward
Always 1	
Number	
	Done
🏁 F	orwarding screen appears.
4	
Voice	email
Always	forward
Always t	
Number	s forward
Voicer Forwa	mail O rding O
OFF	©
	Done
× 🕅	/oicemail is set.

Phone

DIGNOケータイ3











Global Services

Handset is Global Roaming Service eligible. Use the same handset number outside Japan.

Calling Japan

 \cdot Print out roaming area/rate information to carry while traveling abroad as needed.

1

Dial number



 \cdot To call landline, enter starting with area code.





Intl Call



🟁 Country code list opens.



[Japan(JPN)]

Inti Call
New Caledonia(NCL)
Tuvalu(TUV)
French Polynesia(PYF)
Tokelau Islands(TKL)
Micronesia, Federated St.
Marshall Islands(MHL)
Kazakhstan(KAZ)
Russian Federation(RUS)
Japan(JPN)

5	3

Phone



5

~

6

nput Dial

Messaging

Messaging	56
Customizing Handset Address	56
Sending S! Mail	57
Sending SMS	58
Using PC Mail	59

Messaging

S! Mail

Exchange long text messages with S! Mail-compatible SoftBank handsets, other mobile providers' terminals, computers/other email-compatible devices. Attach media files for multimedia messaging.

SMS

Exchange text messages (up to 1530 single-byte characters) using handset phone numbers as addresses. (Equivalent to 10 messages)

 One message can contain 160 single-byte characters, and if the message contains 161 to 306 characters, it is equivalent to 2 messages. As the number of characters increases every 153 single-byte characters, the number of messages also increases up to 10 within the maximum 1530 characters.

PC Mail

Use email (POP3/IMAP4) on handset.

- \cdot Set up a PC Mail account beforehand.
- Exchanging PC Mail on handset syncs handset and mail server; exchanged messages (in the POP protocol, received messages only) are also accessible from PCs.

Customizing Handset Address

Changing and saving a mail address for exchanging S! Mail is described.

Changing Address

Changing Address

Common Settings
Send/Receive
Number/Address Settings
Reset
Open Licenses

🏁 Number/Address Settings open.

	2	
L.	_	

Visit My SoftBank

er
x
bank

Handset accesses My SoftBank.

 \cdot Follow onscreen prompts.

Saving Address

When handset address is changed, SoftBank Corp. sends new address confirmation to handset. To save handset address to handset:



2

New mail



Select message from SoftBank Corp. 🔿 🔳 🔿 🔿

🏁 Handset address is saved to handset.

Sending S! Mail

Sending S! Mail

1

☑ (Long Press)



🏁 Window for creating S! Mail opens.

2



- Address book / Receive history / Send history to select a recipient from Phone Book or receive and send histories.
- Mail group to select a mail group and send to recipients in the group.
- · Profile to select a recipient from the profile.
- · Direct input to enter address manually.

3

Select/enter recipient 🔿 🔳



- To add recipients, select Recipient field ⇒ ⇒ ADD
 DESTINATIONS .
- To change recipients to Cc or Bcc, select Recipient
 field
 ● Select a recipient
 (Menu) Change
 to CC / Change to BCC . To return them to the To field,
 Change to .
- To delete a recipient, select Recipient field → Select
 a recipient → 図 (Menu) → Delete one → Delete .

4 Select Subject field ラ 🔳 ⋺ Enter subject ⋺ 🔳 inter subject Good morning ad. 漢 🗚 12 77 🦰 e 5 Select Message field 🗦 🔳 ラ Enter message ラ 🔳 If you have nothing goin on tonight, how about dinner? red. 🮘 AB 12 77 🛹 em/en Menu Done 🙄 · Sv 6 (Send) Poichi Suzuki Sub Good morning Select files If you have nothing goin g on tonight, how about di Menu Send 🟁 S! Mail is sent. · Confirmation appears before message is sent if Prompt before sending enabled in send settings. · If message could not be sent, it is saved to Draft/Unsent as an unsent message. • To attach a file, select Attachment field \Rightarrow 🔳. 🍯 Draft While creating S! Mail, ☑ (Menu) ラ Save to save mail in preparation as a draft. The draft is saved to Draft/Unsent . Select a draft <> ■ <> ☑ (Menu) <> Edit to resume the draft and send.



Sending SMS

Sending SMS
1
☑ 🔿 Create New SMS
Mail Inbox Create new Sent Draft/Unsent Spam Mail Create New SMS Settings Menu Receive
🧖 Window for creating SMS opens.
2
Select Recipient field 🔿 🔳 🔿 Address book / Receive history / Send history / Mail group / Profile / Direct input
Creato Mail Creato Mail Creato Mail Constraints elect Address book Receive history Mail group Profile Direct input
• Address book / Receive history / Send history to select a recipient from Phone Book or receive and send histories.
• Mail group to select a mail group and send to recipients in
the group. • Profile to select a recipient from the profile.
• Direct input to enter address manually.
3
Select/enter recipient 🔿 🔳
Phone Book Q. Search by number keys 4 I I I I I I I I I I I I I I I I I I I
• To add recipients, select Recipient field already filled in \bigcirc \blacksquare \bigcirc Add destinations .
• To delete a recipient, select Recipient field 😔 🔳 😔 Select
a recipient 🔿 🖂 (Menu) 🔿 Delete one 🔿 Delete .



Using PC Mail

L	Setting an Account
1	
	Ə Mail 🔿 PC Mail
Mail Mail PC M	ai
۰lf	no account is set, a setup window opens.
	confirmation appears, follow onscreen instructions.
2	
Foll	ow onscreen instructions to set up account
Email Passw	Ind Setup sodress ord now password anual setup Edit
8	Account is set up.
!	Caution on PC Mail Setting
	neck information such as user ID, password, and serv me used for your PC Mail (Email).

Internet Services

Browser......62

Browser

Enter search words or a URL to use the Internet. Browser is a Pointer-capable application.

🍯 TLS

Transport Layer Security (TLS) is an encryption protocol that secures Internet transmissions of important/sensitive information such as credit card numbers and corporate secrets, providing protection against online threats (eavesdropping, falsification, impersonation, etc.).

Notes on TLS

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of SSL/TLS. SoftBank Corp. and the Certification Authorities Symantec Website Security G.K. and Cybertrust make no guarantees whatsoever to users regarding security of SSL/TLS.

Using Browser

1



Homepage opens.

 \cdot If confirmation appears, follow onscreen instructions.

Opening New Tabs

Open multiple webpages in different tabs to switch between them easily.

Intro-Viru vahoo co. I Image: Image
🟁 Webpage opens.
2
🗹 (Menu) ᅌ New tab
Menu Bookmarks/History Homepage Search/Enter URL New tab Save to bookmarks Send Page operation Refresh Forward Downloads Settings Keypad shortcut
Mew webpage opens.
• When multiple tabs are open, ⊠ (Menu) 🔿 Tab list ⋺ Create new tabs .
• Operations on Using Tab
Switching Tabs
In Browser window, ☑ (Menu) <a> Tab list Select tab ■
· Alternatively, 7 [#] /9 ⁵ /9 ⁵ /vive to switch tabs.
Closing Tab
In Browser window, ⊠ (Menu) 🤿 Tablist 🔿 Select tab ラ 働 (Close)
Closing All Tabs Other Than Selected Tab
In Browser window, ☑ (Menu) → Tab list → ☑ (Menu) → Close other tabs

One Seg

One Seg Service	64
Using One Seg Service	65
Data Broadcast (Japanese)	65

One Seg Service

Use One Seg service for mobiles (only in Japan).

Troubleshooting

- Q. One Seg service does not activate.
- A. Does not activate when the battery level is low. Activate after handset is charged sufficiently.
- A. Does not activate when the internal temperature is high. Shuts down automatically if handset is used with internal temperature high.
- Q. Cannot use One Seg service.
- A. Check the reception. Cannot use One Seg service if signal reception is poor. Move to where signal reception is good.

Precautions for Using One Seg Service

Viewing Environments

Viewing may not be possible where signal reception is poor, such as indoors, underground, and in tunnels. Viewing may be interrupted when moving to where signal reception is poor.

Signal reception depends on where handset is used; viewing may not be possible in some regions. Use where good reception is available.

Using while Outside Japan

One Seg service is not available outside in Japan due to difference in broadcasting format or frequencies.

Channel Settings

If frequency of broadcasting station has been changed, channels may not be saved correctly by area selection depending on your area. In this case, set channel list again.



Do not use One Seg service while riding a bicycle or motor cycle, driving a car, or while walking.

Antenna for One Seg Service

Handset has a built-in Antenna for One Seg service. To use One seg service, open and orient handset in direction with best reception while checking with the onscreen Antenna Indicator.

 \cdot Reception is more favorable as more bars appear in the Antenna Indicator.

Widescreen

One Seg service is available in widescreen. Note that screen layout changes in widescreen.



Setting Channels





- 38) 1 Window for creating channel list opens.
- · If confirmation appears, follow onscreen prompts.

2

Select area (Area) 🗦 🔳 ⋺ Select area (Prefecture) ⋺ ■ 🔿 Select area (Locality) 🔿 🔳



🏁 Channel scan starts. When completed, confirmation appears.







Using One Seg Service

Using One Seg Service

Viewing is described for handset after channels have been set.

1

Ŭ X#



🏁 One Seg screen (vertical) appears.



Press $0^{\frac{1}{6}}_{\frac{1}{6}}$ to $9_{\frac{1}{6}}$, $\underline{X}_{+\lambda/3}^{+\circ (i)}$, $\underline{\#}_{0}^{\circ}$ to select channel.



Screen for selected channel appears.

• Press ⊡ to switch channels. Long Press ⊡ to automatically select a channel with good reception.



Data Broadcast (Japanese)

Data Broadcast (Japanese)

Data broadcast with program information appears at bottom of Display in One Seg screen (vertical).

 \cdot Not available in widescreen.

1

Ìڭ ۲





🌐 (Data)



3

[] to select information \Rightarrow



🏁 Data broadcast information appears.

 \cdot If confirmation appears, follow onscreen prompts.

🖗 Data Broadcast Fees

Data broadcast information viewing is free; using ensuing Internet services incurs connection fees.



Camera/Image Editing

Capturing	Photos	& Red	cording	Videos	68
Scanning	QR Code	(Bar	code)		70

Capturing Photos & Recording Videos

Capture photos and videos in portrait or landscape views. Unless described otherwise, capture in portrait view is described for photos, and in landscape view for videos.

📒 Camera Cautions

When Using Camera

Mind etiquette when using Camera.

Before capturing an important scene, take some test shots and view results to ensure the scene will be captured properly.

Do not use Camera where prohibited.

Images taken with Camera are intended for personal use, and may not be used or forwarded without the permission of the copyright holder (photo subject), etc.

If Lens Becomes Dirty

Fingerprints/smudges may hinder handset imaging. Clean Lens with a soft cloth beforehand.

Avoid Direct Sunlight Exposure

Do not expose Lens area to direct sunlight for extended periods; may damage color filter, altering images.

Maximum Continuous Shooting Time

Up to 4 GB can be captured continuously for one file. Shooting stops once this size is exceeded. To continue shooting, commence shooting again.

S Important when Shining Capture Light

Do not shine Capture Light near someone's eyes or look directly into Light when shining. Do not shine Light at someone's eyes. May affect eyesight, etc.

Capturing Photos

1

Ô





2

Aim Camera at subject



• Press 🚺 to zoom in or out.



■ (Shoot)/ ▼+-/シャッター (Side Key)



Shutter clicks; photo is captured and saved to handset memory.

Troubleshooting

- Q. Camera does not activate/shuts down automatically.
- A. Does not activate when the battery level is low. Charge handset sufficiently beforehand when you use Camera.
- A. If handset is used with internal temperature high, a warning screen appears, data is saved, and then camera shuts down automatically.
- If no operation is done after Camera activates, it shuts down automatically.
- Q. Image is dark/blocky.
- A. There is a strong light around the subject or strong light source is on the screen. Avoid capturing photos with a strong light source such as sun or lamp. In addition, image may be deteriorated if handset is left in a warm place for a long time or camera is exposed to direct sunlight for a long time.
- Q. Image looks whitish when taken with Capture Light.
- A. If you put a finger or cover around the lens, captured image may look whitish due to reflection of Capture Light.

Recording Videos





(Stop)



Tone sounds and recording stops; video is saved to handset memory.

Troubleshooting

- Q. Camera does not activate/shuts down automatically.
- A. Does not activate when the battery level is low. Charge handset sufficiently beforehand when you use Camera.
- A. If handset is used with internal temperature high, a warning screen appears, data is saved, and then camera shuts down automatically.
- A. If no operation is done after Camera activates, it shuts down automatically.

- Q. Image is dark/blocky.
- A. There is a strong light around the subject or strong light source is on the screen. Avoid capturing photos with a strong light source such as sun or lamp. In addition, image may be deteriorated if handset is left in a warm place for a long time or camera is exposed to direct sunlight for a long time.
- Q. Image looks whitish when taken with Capture Light.
- A. If you put a finger or cover around the lens, captured image may look whitish due to reflection of Capture Light.

Scanning QR Code (Bar code) can QR code or JAN code for web search, etc. Conservations (Menu) Coar QR Codes Conservations Conservations (Menu) Coar QR Codes Conservations Conservations Coar QR code (bar code) scanning function activates. Aim at a QR code (bar code) to appear it on handset display. Coar QR code (bar code) to appear it on handset display.

QR code (bar code) is scanned automatically and the result appears on handset display.

 \cdot QR code or JAN code may not be scanned correctly depending on its type or size.

Operations on Scanning QR Code (Bar code)

Searching by Scanned Data

Menu Shoot Record



Copying Scanned Data

In scanning result window, Copy \bigcirc Follow onscreen prompts

Checking Scanned Data

In scanning result window, Scan data

Closing Scanning Result Screen

In scanning result window, Close
Music/Videos

Music F	-iles	72
Viewing	Movies	72

Music Files

Play back music files and create playlists of favorite songs.

Playing Music

Selecting and playing back a music file in Data Folder is described as an example.

1
🙆 (Long Press) 🔿 Music
Data Folder A Pictures Movies Music Documents File manager
🏁 Folder list opens.
2
Select music file 🔿 🔳
Music Image: An and Annal
Menu Menu

🏁 Music Playback window opens and playback starts.

Viewing Movies

Play back movies.

Playing Movies
1
(Long Press) → Movies
Data Folder A Pictures Movies Music Documents PiM File manager
polder list opens.
2
Select movie 🔿 🔳 ラ 🔳

🏁 Movie plays.

' Press $\frac{2977223}{1692}$ to stop playback and return to file window.

Data Folder

Handling Data (Data Folder).....74

Handling Data (Data Folder)

Handset files are managed in Data Folder. Files created with Apps or received with mail or from the Internet are automatically saved to the appropriate folder.

Data Folder

The following folder types appear in Data Folder.

Folder type	Files contained
Pictures	Photos captured with handset Camera and other still image files.
Movies	Videos captured with Camera and other movie files. For details on video playback, see "Playing Movies."
Music	View music and sound files. For details on music playback, see "Playing Music."
Documents	Text and other document files.
PIM	View backup files for Phone Book, Calendar, etc.
File manager	Activate File manager.



Menu

out.

+

🏁 File opens (plays back).

• Press 🗩 / 🕩 to open next image/previous image. · Press $7_{\text{Pers}}^{\text{*}} / 9_{\text{WXZ}}^{\text{5}}$ to turn image to the left/right 90°. ' Press $(\texttt{H}_{0}) / (\texttt{X}_{+A,0})$ while image is opened to zoom in/zoom

 \cdot If confirmation appears, follow onscreen instructions.

Operations on Using Data Folder

Setting a File as Phonebook or Wallpaper

Select and show a file to set in File list/File display window ラ 🖂 (Menu) 🔿 Set as ラ Wallpaper /

Contact photo ⋺ Follow onscreen prompts

(Long Press)
🏁 Data Folder opens.
• Alternatively, to open Data Folder, 🔳 ラ Data .
2
Select folder type 🔿 🔳
Data Folder A Pictures Movies Music Documents PIM File manager
🏁 Folder list opens.
3
Select file 🗦 🔳
Pictures



Changing File Name

 Select a file to change in File list window
 ☑

 (Menu)
 ③ Rename

 ○ Enter file name
 ○ ●

 (Done)

DIGN0ケー

Using File Manager	• Operations on Using File Manager
1	Switching Destination of Data Shown
(Long Press)	In File list window, 👜 (SD card/Phone)
12:34 Mon, Roy 10 Days	Setting a File as Wallpaper or Phonebook Select and show a file to set in File list/File display window → ☑ (Menu) → Set as → Wallpaper / Contact photo → Follow onscreen prompts
Data Folder opens.	Setting a File as Phone Ringtone or Notification Sound Select a music file to set in File list window 🔿 🖂
2	(Menu) → Set as ringtone
Data Folder Pictures Movies Ousic Documents PiM File manager	Sending One File Select a file to send in File list window ☑ (Menu) Image: Send Image: Select application Image: Select application Image: Select a
🏁 File manager opens.	Sending Selected File
Select folder Image: Select folder Image: Select folder Phone Adroid Adroid Download Movies <	In File list window, ☑ (Menu) ◆ Send ◆ Send multiple ◆ Select file to send ◆ ■ (☑) ◆ ④ (Send) ◆ Select application ◆ ● ◆ Follow onscreen prompts · Select file ◆ ● to toggle check (☑)/uncheck (□). · When a file is selected, ☑ (Menu) ◆ Play to play back the file. · When a file is selected, ☑ (Menu) ◆ Select all / Deselect all to select (☑)/deselect (□) all files on File list window.
File/folder list opens.	 When a file is selected, ☑ (Menu) → Details to view the details of the file.
4	Copying/Cutting One File/Folder
Select file	Select a file/folder to copy/cut in File/Folder list window ⇒ ☑ (Menu) ⇒ Copy / Cut ⇒ Copy one / Move one ⇒ Show file/folder list to paste ⇒ ☑ (Menu) ⇒ Paste
Menu SD card File opens.	
 If confirmation appears, follow onscreen instructions. 	

.

Copying/Cutting Selected File/Folder

copying, catching beleeted i he, i olaci
In File/Folder list window, ☑ (Menu)
 Select file/folder Image: The select file of the select fi
• When a file is selected, ☑ (Menu) ⋺ Play to play back the file.
 When a file/folder is selected, ☑ (Menu) Select II / Deselect all to select (☑)/deselect (□) all files on File list window. When a file/folder is selected, ☑ (Menu) Details
to view the details of the file/folder.
Deleting One File
Select a file to delete in File list window
[•] Alternatively, in File display window, ⊠ (Menu)) Delete
Deleting Selected File
In File list window, ☑ (Menu) → Delete → Delete multiple → Select file to delete → ■ (☑) →
 Select file ■ to toggle check ()/uncheck (). When a file is selected, (Menu) Play to play back the file.
 When a file is selected, ☑ (Menu) Select all / Deselect all to select (☑)/deselect (□).
• When a file is selected, ☑ (Menu) <a>> Details to view the details of the file.
Searching a File
In File list window, ☑ (Menu) <a> Search <a> Input characters to search <a> ∰ (Search)
 If no file is found, "Not found" appears. If any file is found, corresponding files appear on the file list.
Sorting Files
In File list window, 🖾 (Menu) ラ Sort ⋺ Select item ⋺ 🔳
Changing File Title
In File list window, ⊠ (Menu) ラ Rename ラ Enter title ラ 💽 ラ 🚇 (Done)

 \cdot If confirmation appears, follow onscreen instructions.

Adding a Folder

Adding a rolder
In File list window to add a folder, ☑ (Menu) <a> Add folder <a> Enter folder name <a> ■ <a> ∰ (Done)
· If confirmation appears, follow onscreen instructions.
Switching Display Method
In Folder/File list window, ☑ (Menu) <a> View mode Layout Grid / List (Simple) / List
Viewing File/Folder Details
Select and show a file/folder to view details in File/Folder list or File display window ⋺ ⊠ (Menu) ⋺ Details
Creating a Shortcut on Data Folder to Folder in File Manager
Select a folder to create a shortcut in File/Folder list window � ☑ (Menu) � Add shortcut

Connectivity & File Backup

Using Infrared Transmission......80

Using Infrared Transmission

Exchange data (profile, Phone Book entries, Notepad entries, photos, videos, music, etc.) with mobile phones and other devices.

Infrared Transmission Version

Handset infrared transmission conforms to IrMC version 1.1.

Troubleshooting

- Q. Cannot exchange files
- A. Are the infrared ports aligned? Make sure there are no objects between the ports while transmitting. Do not move the ports until files are received.

Infrared Transmission Notes

It may not be possible to use infrared transmission or to transmit properly depending on the other device or on the files. Another function activating during transmission will also cause transmission to end.

🔕 Do Not Point Infrared Port at Eyes

Do not point Infrared Port at eyes while transmitting. May affect vision.

Receiving Data

For details, see "Receiving Data by Infrared."

Sending Profile (Phone Number, Etc.)

With handset and other device close together, align their infrared ports in a straight line.

• Also send image and music files (operation may differ depending on the type of file being received).

■ 🔿 Tool 🔿 Infrared

Tool	
Pedometer	
Weather	
FM radio	
Kanji Check	
Sound Recorder	
OfficeSuite	
Battery care mode	
Auto assist	
Infrared	

🏁 Infrared window opens.

2
Send
Infrared
Receive
Send
Received files

Window for selecting file opens.



Profile



To send other files, select corresponding category
 Press

 and follow onscreen prompts.

Align infrared ports on handset and receiving device



 $\,$ Screen for sending in progress appears.

5

Commence receiving on other device

🏁 File is sent.

Settings in Common

Wallpaper & Display Settings	84
Sound & Notification Settings	85
Lock & Security Settings	86
Wireless & Network Settings	88
Data Communication Settings	89
Auto Communication & Synchronization Settings	91
Battery Settings	92
Custom Key Settings	93
Device Info & Settings	94
More settings	94

Wallpaper & Display Settings

Wallpaper & Display Settings

Set Wallpaper, Display brightness, etc. Settable items are the following.

Item	Description
Wallpaper	Set Preset wallpapers, Live wallpapers, or Data Folder for Standby.
Brightness level	Set Display brightness.
Backlight time	Set period of inactivity after which Display turns off automatically.
Key backlight	Toggle key backlight on/off.
Font size	Set the size of displayed text.
Sub-display	Set whether caller/sender appears in Sub- display.

1



🏁 Wallpaper/display window opens.



More settings

Set each item Wallpaper/Display Wallpaper Brightness level Backlight time Key backlight ~ Font size Sub display Setting is complete. Operations on Using Wallpaper/Display + 1 Setting Display Brightness In Wallpaper/Display window, Brightness level 🔿 📮 to adjust brightness ラ 🔳



Sound & Notification Settings

Set Manner mode as well as make settings for ringtone, operation tones, etc. Settable items are the following.

Item	Description
Volume	Set volume for ringtone, operation tones, etc.
Manner mode	Set Manner mode.
Phone ringtone	Set ringtone. For details, see "Changing Handset Response to Calls & Mail."
Also vibrate for calls	Set vibration for new calls on/off.
Vibration pattern	Set vibration pattern.
Incoming LED	Set LED for new calls and mail. For details, see "Changing Handset Response to Calls & Mail."
Notification sound	Set ringtone for new mail. For details, see "Changing Handset Response to Calls & Mail."
Pulse notification light	Set whether Incoming LED flashes for new mail and notifications.
Other sounds	Set operations sounds, handset opening/ closing sounds, etc.

1





Set each item

Sound/Notification	
Volume	
Manner mode OFF	
Phone ringtone メロディ 02 (Bell Phone)	
Also vibrate for calls	\checkmark
Vibration pattern Pattern 1	
Incoming LED Color 1	
Notification sound 通知音09 (Mild)	

🏁 Setting is complete.

Operations on Using Sound/Notification

Setting Volume for Ringtone, Operation Tones, etc.

In Sound/Notification window, Volume 🌖 Select item

 \bigcirc \blacksquare \bigcirc \bigcirc \bigcirc to select volume level \bigcirc \blacksquare .

 \cdot When manner mode is set, volume level cannot be selected for some item depending on the mode.

Activating Manner Mode

In Sound/Notification window, Manner mode

Manner
Mode / Silent mode / Drive mode .

• If OFF is selected, handset does not enter Manner mode.

Setting whether Incoming LED Flashes for New Mail and Notifications.

In Sound/Notification window, Pulse notification light .

Pulse notification light to toggle check (☑)/uncheck
 (□).

Setting Operations Sounds, Handset Opening/ Closing Sounds, etc.

In Sound/Notification window, Other sounds \bigcirc Select item \bigcirc

Select an item ■ to toggle check ()/uncheck
 (□).

Lock & Security Settings

Lock & Security Settings

Make security settings including Screen lock and security codes. Settable items are the following.

Item	Description
Operation password setting	Set Operation Password for using applications and functions. For details, see "Setting Operation Password."
Lock screen	Set method for unlocking screen.
Lock screen preferences ¹	Set automatic lock, close then lock, showing notification on lock screen, and lock screen message.
Application lock	Set usage restrictions for individual functions.
Usage restriction	Restrict outgoing/incoming call to/from contacts not in phone book or changing PC mail account.
Show passwords	Set whether to show characters when entering password.
Device admin apps	Set device admin apps.
SIM card lock	Set SIM card lock.
Encryption & credentials	Set encryption and credentials of handset/SD card.
Trust agents	Manage trust agents
Screen pinning	Set to pin specific application on display.
Apps with usage access	Set apps with usage access

1 Displayed when Lock screen is activated.



Lock/Security window opens.



Set each item ock/Security Operation password setting Lock screen Application lock Usage restriction Show passwords Display characters briefly as you type Device admin apps Encryption & credentials Setting is complete. Operations on Using Lock/Security Setting Usage Restriction In Lock/Security window, Usage restriction \supset Select item ラ 🛞 (Edit) ラ Enter password ⋺ Set each item Setting whether to Display Password Characters In Lock/Security window, Show passwords · Show passwords to toggle check (☑)/uncheck (□) Set whether to Activate Device Administrator of Apps In Lock/Security window, Device admin apps \Rightarrow Select app ラ 🔳 (🗹) 🔿 Activate this device admin app] • Select each app 🔿 🔳 🔿 Activate this device admin app / Deactivate this device admin app to toggle check (☑)/uncheck (□). Encrypting Data in Handset In Lock/Security window, Encryption & credentials \Rightarrow Encrypt phone 🔿 NEXT 🔿 Enter Lock No./password 🔶 (ENCRYPT)

- If None is selected for Lock screen, entering Lock No. password is not required.
- Charge handset sufficiently beforehand and perform procedure with handset kept charged.
- \cdot Please be forewarned that all data in handset will be deleted if encryption is interrupted.

Encrypting Data in SD Card



Encrypt SD card NEXT Enter Lock No./ password \Rightarrow [ENCRYPT]

- · Charge handset sufficiently beforehand and perform procedure with handset kept charged.
- · Set Lock No./password for unlock screen beforehand.
- · If SD card does not have sufficient free space, encryption/decryption cannot be performed.
- · Data in encrypted SD card cannot be used with another device.
- · Encrypted SD card can be used with another device by decrypting SD card.
- · If all reset is performed with SD card encrypted, please be forewarned that data in SD card cannot be used. Decrypt SD card before performing all reset.
- · If you insert a SD card into a device by which encryption is performed, files saved in the SD card will be encrypted.
- · It may take some time for SD card to be encrypted/ decrypted. Do not stop charging while encryption is in progress. Data in SD card may be lost if encryption is interrupted.

Checking Storage Type

In Lock/Security window, Encryption & credentials 🔿 Storage type

Setting whether to permit app to access to safe certificate and other credentials

In Lock/Security window, Encryption & credentials 🔿 Select SYSTEM / USER for Trusted credentials Image: Select certificate
Image: Image: Select ce bottom part of confirmation screen \Rightarrow Disable / Enable 🔿 Yes

Setting Saved User Credentials

In Lock/Security window, [Encryption & credentials] \ominus User credentials 🔿 Follow onscreen prompts

Installing Encrypted Credentials

In Lock/Security window, Encryption & credentials 🔿 [Install from SD card) ⇒ Follow onscreen prompts

Deleting All Credential and Resetting Password for Credential Storage

In Lock/Security window, [Encryption & credentials] \ominus Clear credentials 🔿 Yes



Setting Apps with Usage Access

In Lock/Security window, Apps with usage access 🔿 Follow onscreen prompts

Lock/Security Cautions

Caution on Screen Lock

Take a note of specified Lock No./password to unlock screen so that you do not forget it. If you should forget it, handset must be serviced at a SoftBank Shop. Please be forewarned that files and settings are lost if handset is serviced.

Caution on Encrypting Handset

Note the following when encrypting handset.

· To decrypt handset, perform "Reset Settings."

- · If PIN is specified for unlocking screen, the screen for entering storage decryption password appears when handset activates. Enter PIN to unlock.
- · If you enter wrong PIN/Password 10 or 20 times consecutively when decrypting storage, restart handset and try again. Please be forewarned that handset will be initialized if you enter wrong PIN/Password 30 times consecutively.
- · If you change method for unlocking screen to PIN / Password after handset is encrypted, the screen for entering storage decryption password appears when handset activates.

Wireless & Network Settings

Wireless & Network Settings

Set network functions such as Airplane mode. Settable items are the following.

Item	Description
Wi-Fi	Make settings for Wi-Fi connection.
Bluetooth®	Make settings for Bluetooth [®] connection. For details, see "Enabling Bluetooth [®] ."
Airplane Mode	Leaving power on, suspend signal- transmitting functions.
Cellular networks	Make settings such as access point and network.
Data usage	Make settings for cellular data and amount of data usage. For details, see "Limiting & Alerting Data Usage."
Restrict data	Set whether data communication is enabled for individual applications. For details, see "Restricting Data Communication for Individual Applications."
VPN	Make VPN function settings.

1

■ 🔿 [Settings] 🔿 [Wireless/Network] ettinas Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings 🯁 Wireless/Network window opens. 2 Set each item





Operations on Network Settings

Setting Whether to Stop Radio Communication with Power On In Wireless/Network window, Airplane mode · Airplane mode to toggle check (☑)/uncheck (□) Selecting Network Mode In Wireless/Network window, Cellular networks Select Network 🔿 (4G/3G/GSM) / (4G/3G) / (3G/ GSM / 3G Adding Access Point In Wireless/Network window, Cellular networks 🔿 Access Point Names 🔿 🗹 (Menu) 🔿 New APN 🔿 Set each item ラ 團 (Save) · To use access point you added, Select the added access point 🦻 Press 🔳 . (🔘) · Select the added access point → Press 👜 (Edit) to edit the access point. Deleting Added Access Point and Resetting Handset to Factory Default In Wireless/Network window, Cellular networks 🔿 Access Point Names 🔿 🗹 (Menu) ଚ Reset to default) Adding VPN Destination In Wireless/Network window, VPN 🔿 🖂 (Menu) 🔿 Add profile \Rightarrow Set each item \Rightarrow 🖂 (Save) · To use VPN, set PIN/Password. · Select added VPN ⇒ Press ■ to connect/disconnect. **Editing VPN Profile** In Wireless/Network window, VPN 🔿 Select VPN 🔿 Menu) → Edit profile → Set each item → (Save) **Deleting VPN Profile** In Wireless/Network window, VPN 🔿 Select VPN 🔿 Menu) → Delete profile → Yes

Data Communication Settings

Check your amount of cellular data usage (per month) and restrict usage.

Data usage is only as tracked by handset, and may differ from actual data usage statement.

Checking Data Usage

Check data usage.

Check data usage.
1
■ 🔿 [Settings] 🔿 [Wireless/Network]
Settings Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings
Wireless/Network window opens.
Data usage
Wireless/Network Wi-Fi Bluetooth Airplane mode Cellular networks Data usage Restrict data VPN Data usage window opens.
Set each item
Setting is complete.
• Mobile data usage to open Mobile data usage window.
• Operations on Using Data Usage
Setting Whether to Activate Mobile Data
In Data usage window, 🛛 Mobile data 🔿 OK
• Mobile data to toggle check (🗹)/uncheck (🗌)
Setting Cycle to Reset Data Usage
In Data usage window, Data warning & limit ⋺ App data usage cycle ⋺ Select the day ⋺ 👜 (Set)

Data Usage Window Layout



Data usage cycle Show cycle for checking data usage/set cycle reset date¹

- 2 Data communication limit line
- 3 Data communication alert line
- 4 Data usage
- Data usage cycle is reset on the same day of every month (at time of purchase, day before first handset activation) (Reset date settable).

Checking Data Usage for Individual Applications

Select app in Mobile data usage window 😔 🔳

Limiting & Alerting Data Usage

Set an upper limit and alert position on data usage beforehand to receive alerts and notifications of limited usage when the upper limit is approached.

Settings			
Wallpaper/Display			
Sound/Notification			
_ock/Security			
Wireless/Network			
Battery			
Custom key			
About phone			
More settings			



[Data usage]



🏁 Data usage window opens.



Data usage limit line (orange) appears.

Operations on Limiting/Alerting Data Usage

Setting Data Communication Limit

- In Data usage window, 🛛 Data warning & limit) ⋺ Data
- limit ラ Set data usage limit ラ 働 (Set)
- · Settable when Set data limit is enabled.
- If data usage reaches the upper limit, **()** appears on display top (Status Bar), and message to notify data communication has been disabled appears. If this happens, follow onscreen prompts.

Setting Data Usage Warning

In Data usage window, Data warning & limit → Data warning → Set data usage warning → ∰ (Set)

• If data usage reaches the upper limit, 🛕 appears on display top (Status Bar).

Limit the data communication possible per application.

1	
■ Settings Wireless/Network	
Settings Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings	
Wireless/Network window opens.	
2	
Restrict data	
Wireless/Network Wi-Fi Bluetooth Airplane mode Cellular networks Data usage Restrict data VPN	
Data transmission restriction window opens.	
Select application \bigcirc (BLOCK)	. I
Restrict data Turn button to 'BLOCK' to restrict data AddressBook Deliv Cone PAPUDManager Cone BizBrowser Cone Bownloads Cone Downloads Cone	
Data communication is restricted for the application.	
 Releasing Restrictions on Data Transmission 	
In data transmission restriction window, select application ラ 🔳 (፻፬০০০০০০০০০০০০০০০০০০০০০০০০০০০০০০০০০০০	

 \cdot If confirmation appears, follow onscreen prompts.

Auto Communication & Synchronization Settings

Changing Auto Communication & Synchronization Settings

Change settings to suppress communication volume of auto communication.

Change the followings.

Item	Description
Location	Disable Location information. For details, see "Location Information Settings."
Auto synchronization background data	/ Disable application or data auto synchronization set for account.
communication	
Overseas communication	Turn Data roaming off to disable communication in overseas. For details, see "Changing Data Roaming Setting."
+ Disablin	g Auto Communication/

Disabling Auto Communication/ Synchronization

Disabling Location Information Acquisition

- Settings More settings Location ●
 Location (□)
- · Location to toggle on (☑)/off (□).
- \cdot If confirmation appears, follow onscreen prompts.

Disabling Auto Synchronization/Background Data Communication

🔳 🔿 [Settings] ラ [More settings]	ngs ଚ Accounts ଚ
Automatically sync data (🔲)	

Automatically sync data to toggle on (☑)/off (□).
 If confirmation appears, follow onscreen prompts.

Disabling Packet Communication in Overseas



- · Data roaming to toggle on (☑)/off (□).
- \cdot If confirmation appears, follow onscreen prompts.

Battery Settings



Setting Battery Care Mode

Set the upper limit of battery charge at 85 % to extend the battery life.





Battery care mode screen appears.



ON (🔘)



🏁 Battery care mode is set.

Custom Key Settings

Set action when I / I / II is pressed or is Long Pressed.

low.	
1	
Settings <> Battery	•
Settings	1
Wallpaper/Display Sound/Notification	• 🔿
Lock/Security Wireless/Network	Settings
Battery	Wallpape
Custom key About phone	Sound/No Lock/Sec
More settings	Wireless/
	Battery Custom k
	About ph More sett
2	
Battery saver	
	🚧 Ci
Battery Battery level 100%: Chaging	
Battery care mode	2
Battery saver App usage since full charge (0m ago)	Set ea
Battery usage data isn't a	
	Custom k
	You can cho
	for a long pr can change at 「Setting:
🏁 Battery saver screen appears.	
3	Fake call You can set w
Battery saver (🗹)	×3
Battery saver	🚧 Se
Battery saver	
Turn on automatically Never	+ (
	Set
	In Cu
Check	Selec
Battery saver is set.	
	Set
· Selecting Turn on automatically activates battery saver	Act
automatically when the battery remaining level reaches the	
level you set.	In Cu
	·Fa
	Set
	to (
	In Cu

Using Battery Saver

Battery consumption can be reduced when the battery level is

Custom Key Settings 1 🗉 ⋺ [Settings] ⋺ [Custom key] Setting Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings 🏁 Custom key settings open. 2 Set each item n key ----You can choose what the keys of for a long press.At any time you can change the key assignment at "Settings—Custom key」. 🔳 🚶 Pedometer 🔳 🔞 Alarm

🧖 Setting is complete.



Device Info & Settings

Device Info & Settings

Check handset status.

 Image: Settings (a) Settings (b) About phone

 Settings

 Vallpaper/Display

 Sound/Notification

 Lock/Security

 Wireless/Network

 Battery

 Custom key

 About phone

 More settings

 Image: Ima

 \cdot See "Updating Software" for details on software updates.

Operations on Device Info

Checking Handset Status such as Battery Status or Phone Number

In About phone window, Status

Checking Legal Information

In About phone window, Legal information → Select item → ■

 \cdot This handset complies with technical standards based on Radio Law and Telecommunications Business Law.

Displaying Developer Options

 In About phone window, select
 Build number
 →
 Press

 7 times
 →

 →
 More settings
 →
 Developer

 options

Developer options window opens.

More settings

More settings

Make settings for other functions. Settable items are the following.

Item	Description
USB	Make settings for operations when connected to PC via USB.
Pointer	Set Pointer activation indicator on/off and Pointer Size.
Storage	Check handset memory/SD Card space, mount an SD Card, and erase SD Card data.
Apps	Check information for installed and running applications.
Location	Make settings for location information.
Accounts	Add accounts. Make settings for synchronizing accounts.
Languages &	Set displayed language, character entry,
input	etc.
Date & time	Make settings for date and time.
Accessibility	Make user accessibility settings for increased handset convenience such as captions and large text.
Reset options	Reset settings or erase all data (reset to factory default).

1

■ 🔿 (Settings) 🔿 (More settings)



🏁 More settings open.



Set each item

More settings
USB
Pointer
Storage
Apps
Location
Accounts
Languages & input
Date & time
Accessibility

🏁 Setting is complete.

USB Settings

Make settings for operations when connected to PC via USB.

Item	Description
Charge this device	Charge handset.
Transfer files	Transfer files saved on handset.
Transfer photos (PTP)	Transfer photos saved on handset.

1
■
Settings Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings More settings open.
 [USB]
More settings USB Pointer Storage Apps Location Accounts Languages & input Date & time Accessibility USB window opens.
3
Set charging/transferring method
USB Charge this device O Transfer files O Transfer photos (PTP) O
Setting is complete.

Storage Settings

Check handset and SD Card memory space, mount or unmount SD Card, erase SD Card files, and use other options. Settable items are the following.

Item	Description
Total space	Check total handset memory/SD Card space.
Available	Check free handset memory/SD Card space.
Unmount SD card	Unmount SD Card to remove it safely.
Mount SD card	Mount SD Card for use on handset.
Erase SD card	Format SD Card. For details, see "Formatting SD Card."

 \cdot Items appearing depend on state of SD Card.

1	
■ 🔿 (Setting	ıs ⊖ [More settings]
Settings	
Wallpaper/Display	
Sound/Notification	·
Lock/Security	
Wireless/Network	
Battery	
Custom key	
About phone	-
More settings	
More setti	ngs open.
2	
Storage	

More settings USB Pointer Storage Apps Location Accounts Languages & input Date & time Accessibility

Storage window opens.

/ SD card

3	
Internal	storage
Internal storage	9
Photos & videos	X.XX GB
Music & audio	X.XX GB
Games	X.XX GB
Movie & TV apps	X.XX GB

95

96

Operations on Using Storage
Unmounting SD Card
In Storage window, SD card → ⊕ (Unmount) → Yes
Mounting SD Card
In Storage window, SD card ⋺ ⊕ (Mount) ⊖ Yes
Erasing Data on SD Card
In Storage window, SD card → (Erase) → Yes → ERASE & FORMAT → DONE

Application Settings Check information for installed and running applications. 1 ■ 🔿 [Settings] 🔿 [More settings] Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings 🏁 More settings open. 2 [Apps] More se Pointer Storage Apps Location Accounts Languages & input Date & time Accessibility 🏁 Apps window opens. 3 App info → Select application → ■ 🏁 Application details appear. 4 Set each item Setting is complete. + Operations on Application Settings Setting Function to Use for Individual Functions In Apps window, App permissions \supset Select function ラ 🔳 ラ Select application ラ 🔳 \cdot Select an application to toggle check (\blacksquare)/uncheck (🗌).

Making Settings for Special App Access

In Apps window, Special app access → Select function → Set each item

Location Information Settings

Make settings for location information.

Item	Description	
Location	Set usage of location information.	
Mode	Set the mode for obtaining location information.	
App-level	Set whether to permit usage of location	
permissions	information for individual applications.	
Scanning	Set to detect Wi-Fi or Bluetooth® devices to improve accuracy of location information.	
Recent location requests	Lists applications that have requested location information.	

1	_	
1		

Settings More settings

Settings
Walpaper/Display
Sound/Notification
Lock/Security
Wireless/Network
Battery
Custom key
About phone
More settings

🏁 More settings open.



[Location]

USB	
Pointer	
Storage	
Apps	
Location	
Accounts	
Languages & input	
Date & time	
Accessibility	

Location window opens.

3

Location (🗹)
Location
Mode Lastien off App-level permissions
Scanning Recent location requests
No apps have requested location recently
Check
Setting is complete.
• Location to toggle check (🗹)/uncheck (🔲).
\cdot If confirmation appears, follow onscreen prompts.
_
 Operations on Device Info
Changing Accuracy for Obtaining Location Information
In Location window, Mode 🔿 Select location mode 🔿
· Available when Location is ON.
Setting whether to Permit Usage of Location Information for Individual Applications
In Location window, App-level permissions 🔿 Select
app name
· Select an application toggles (☑)/(□).
Setting to Detect Wi-Fi or Bluetooth® Devices
to Improve Accuracy of Location Information
In Location window, Scanning 🔿 (Wi-Fi scanning) /
Bluetooth scanning 🔿 🔳 (🗹)
• Wi-Fi scanning / Bluetooth scanning to toggle check
(☑)/uncheck (🔲).

98



Operations on Languages & Input

Setting the User Language

In Languages & input window, Language (言語) → 日本 語 / English → Yes · You cannot change user language during a call.

Setting Input Method

In Languages & input window,	iWnn IME	ଚ Input
method 🔿 Select input metho	od ଚ 🔳	

Date & Time Settings

Make settings for date and time. Settable items are the following.

Item	Description	
Automatic	Set whether to use the time provided by	
date & time	the network.	
Automatic	Set whether to use time zone provided by	
time zone	network.	
Set date	Set date manually.	
Set time	Set time manually.	
Select time	Set time zone manually.	
zone	Set time zone manuary.	
Use 24-hour		
format	Set whether to use 24-hour format.	

1

■
Settings

More settings

Settings	
Wallpaper/Display	
Sound/Notification	
Lock/Security	
Wireless/Network	
Battery	
Custom key	
About phone	
More settings	

🏁 More settings open.



Date & time

More sett	ings
USB	
Pointer	
Storage	
Apps	
Location	
Accounts	
Language	s & input
Date & tin	ne
Accessibi	lity

🏁 Date & time window opens.



Set each item

	Itomatic date & time
	Itomatic time zone
Se	t date
Oct	ober 29, 2019
Se 10:	t time
Se	lect time zone
GM	T+09:00 Japan Standard Time
Us 13:	e 24-hour format 🛛 🗹

C	Dpe	ratio	ons (on l	Jsir	ng D	ate	& T	ime	
	0	whe work		to	Use	the	Time	e Pr	ovide	ed b

99

In Date & time window, Automatic date & time · Automatic date & time to toggle check (☑)/uncheck (□) Setting whether to Use Time Zone Provided by Network

n Date & time window,	Automatic time zone
Automatic time zone	to toggle check (🗹)/uncheck

(□)

Setting Date Manually

E

In Date & time window, Set date ⋺ Enter date ⋺ ∰ (Done)

· Settable when Automatic date & time is disabled.

Setting Time Manually

In Date & time window, Set time
→ Enter time
→
(Done)

• Settable when Automatic date & time is disabled.

Setting Time Zone Manually

In Date & time window, Select time zone → Select country/region/city name → ■ · Settable when Automatic time zone is disabled.

Setting whether to Use 24-Hour Format

In Date & time window, Use 24-hour format · Use 24-hour format to toggle check (☑)/uncheck (□)

🧖 Setting is complete.

Accessibility Settings

Make user accessibility settings for increased handset convenience such as captions and large text.

Item	Description
Color inversion	Inverts displayed colors.
Color	Make detailed color correction settings.
correction	
Captions ¹	Set captioning.
High contrast	Set whether to make text easier to read
text	by outlining, etc.

1 Available when supporting application is installed.





Accessibility Settings open.



Set each item









Appendix

Updating Software	104
Specifications	105
Materials	106
General Notes	107
Warranty & After-Sales Service	109
Customer Service	109

Updating Software

Software Updates

At specified time, handset automatically checks for and downloads firmware updates as required.

I Software Update Cautions

Applications

New applications may be updated or added, or names, icons, operation, and user interfaces may be changed.

• While an application or function is being used, software update will not be performed.

During Update

Handset cannot be used until Software Update completes; it may take some time to complete.

 \cdot You can update software manually.

Data Backup

Saved data may be lost depending on condition of handset (malfunctioning, damaged, water exposure, etc.). It is recommended that you back up important data before updating software. SoftBank Corp. is not responsible for damages from loss of data.

Updating Software Manually

Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during an update may cause an update failure.

· An update failure may disable handset.

1
■ Settings About phone
Settings Wallpaper/Display Sound/Notification Lock/Security Wireless/Network Battery Custom key About phone More settings
2
Software Update Software update Software update アブリアップデータ Status Phone number display.etc. Legal information Model Neverable Baseband version 0.03.1002131 Kernel Jurgeion
Apps window opens.
3 Software Update → Yes → Follow onscreen prompts
Software Update starts.
• Operations on Updating Software
Setting whether to Update Software Automatically
In Software Update window, Automatic Update Settings → ■ (ON)/ ■ (OFF)
Changing Time to Start Updating Software Automatically
In Software Update window, Update Schedule Settings → Select time → ● (Done)

DIGNO® ケータイ3 (Keitai 3)

Handset specifications are as follows.

Item	Description
Weight	Handset: Approx. 100 g Battery installed: Approx. 131 g
Continuous Talk Time¹	4G LTE: Approx. 650 minutes 3G: Approx. 910 minutes GSM: Approx. 420 minutes
Continuous Standby Time²	4G LTE: Approx. 600 hours 3G: Approx. 740 hours GSM: Approx. 650 hours (handset closed)
Charging Time (powered off)	AC Charger: Approx. 140 minutes
Dimensions (W × H × D)	Approx. 51 × 112 × 17.9 mm (handset closed, without protruding parts)
Maximum Output	4G (LTE: FDD-LTE network):0.2 W 3G:0.25 W GSM (900 MHz):2 W GSM (1800 MHz, 1900 MHz):1W

1 Average measured with handset fully charged, in strong signal conditions at rest.

2 Average measured with handset fully charged, without calls or operations, in strong signal conditions at rest, and with data communication and Urgent News disabled. May vary with battery strength, ambient temperature, settings, etc.

About Specifications

Times on the table above vary depending on the environment where you are using handset or handset settings.

Although the LCD display is produced using extremely highprecision technology, please be forewarned that there might be missing pixels or pixels which light up at all times.

Battery (KYBAQ1)

Item	Description
Voltage	3.8 V
Battery	Lithium-ion
Capacity	1700 mAh
Dimensions (W	Approx. 42.2 \times 64.2 \times 5.2 mm (without
\times H \times T)	protruding parts)

AC Charger (KYCAV1)

Item	Description
Input	AC 100 V-240 V 0.3 A 14-20 VA 50-60 Hz
Output	DC 5.0 V 1.2 A
Charging Temperature Range	From 5°C to 35°C1
Dimensions (W × H × D)	Approx. $30 \times 45 \times 71$ mm (without protruding parts and cord)

1 Charging may be stopped by usage, as handset gets warm.

DIGNO® ケータイ3 (Keitai 3)

Outer Case (LCD Case)	PC + GF resin + SUS sheet metal/UV cured acrylic coating
Outer Case (Key Case)	PC + GF resin/UV cured acrylic coating
Outer Case (Hinge Cover)	PC resin/UV cured acrylic coating
Back Cover	PC resin + silicon rubber/UV cured acrylic coating + polyurethane print
Rear side of Back Cover (black sheet)	PET resin
Outer Case (LCD Rear Plate)	PMMA resin (in-mold)/UV cured acrylic coating
Infrared Port Window	PMMA resin
Camera Window	PMMA + PC resin/hard coating
Upper part of vibrator on lower left of camera (black sheet)	PET resin
Multi Selector (Key Top)	PET resin/UV cured resin
Key Sheet	PET resin/UV cured resin
Cushion (Under Numeric Keypad)	PET resin/UV cured resin
Window Panel (Main), Camera Plate	PMMA + PC resin/hard coating
Side Key	PC resin/UV cured acrylic coating
Key Gasket	Silicon rubber + SUS sheet metal
Main Antenna	PC + ABS resin + LDS
Sub Antenna	PC + ABS resin + LDS
Screws	SWCH/trivalent chromate
SD Card Slot Cover	SUS sheet metal
SD Card Slot (Terminal Portion)	Copper alloy/Ni + Au plating
SD Card Slot (Resin	LCP resin
Portion)	

USIM Card Slot (Terminal Portion)	Copper alloy/Ni + Au plating
USIM Card Slot (Resin Portion)	LCP resin
Battery Terminal (Resin Portion)	LCP resin
Battery Terminal (Metal Portion)	Copper alloy/Ni + Au plating
Charging Terminal (USB Type- C Connector Resin Portion)	LCP resin
Charging Terminal (USB Type- C Connector Metal Portion)	Copper alloy/Ni + Au plating
Black part next to Battery Terminal	PC resin
Holder Card	PP resin
Shield Case	SUS sheet metal/Sn plating
Water Wetting Sensing Sheet	PET resin
Name Plate	PET resin

Battery (KYBAQ1)

Outer Casing (Resin Portion)	PC resin
Outer Casing	
(Metal	Aluminum
Portion)	
Print Label	PET resin/matte coating
Terminals	Copper alloy/Ni + Au plating
Water	
Wetting	PET resin
Sensing Sheet	
AC Charger (KYCAV1)

Main Unit (Outer Casing)	Polycarbonate
Print Label	PET resin
Cord	PVC
Power Plug	Zinc/Nickel
Terminals	Stainless steel/Nickel

General Notes

[902KC] here refers to this mobile phone [DIGNO® ${\ensuremath{\mathcal{T}}}\xspace{--1.5ex} - {\ensuremath{\mathcal{T}}}\xspace{--1.5ex} - {\ensuremath{\mathcal{T}}}$

Specific Absorption Rate (SAR) for This Product (for Japan)

This mobile phone [902KC] meets Japanese technical regulations* and international guidelines for exposure to radio waves.

The Japanese technical regulations for exposure to radio frequency energy established permitted levels of radio frequency energy, based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The regulations employ a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit is 2 watts/kilogram (W/kg) averaged over ten grams of tissue.

The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the value given in international guidelines recommended by ICNIRP**, which is in collaboration with the World Health Organization (WHO). The highest SAR value for this mobile phone is 0.675 W/kg***

when tested for use at the ear, and 0.530 W/kg*** when worn on the body in the below manner****.

While there may be differences between the SAR levels of various phones and at various positions, all phones meet the Japanese technical regulations.

Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

* The technical regulations are provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

** International Commission on Non-Ionizing Radiation Protection

*** The value is under simultaneous transmission use conditions.

**** Use at positions other than at the ear

This mobile phone may be used at positions other than at the ear. By using an accessory such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body and the mobile phone, this mobile phone will comply with international guidelines for radio wave protection.

The World Health Organization has announced that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk.

To date, no adverse health effects have been established as being caused by mobile phone use."

They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

For more information about SAR, see the following websites: Ministry of Internal Affairs and Communications (MIC) http://www.tele.soumu.go.jp/e/sys/ele/body/index.htm

Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/01denpa/denpa02-02.html (Japanese) World Health Organization http://www.who.int/emf List of Specific Absorption Rates (SAR) for radio waves by smartphone/3G model https://www.softbank.jp/mobile/support/sar/ (Japanese)

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 1.14 W/kg, and when worn on the body in a holder or carry case, is 1.35 W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/ after searching on FCC ID JOYDB62.

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at

https://www.fcc.gov/general/radio-frequency-safety-0.

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different
- from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC Compliance Information

The product is certified by Federal Communications Commission (FCC). The FCC ID of this product is JOYDB62. Or you can check as follows. How to check: In standby, ■ ♦ Settings ♦ About phone ♦ Compliance information

Warranty

- The warranty period is 1 year from the date of newly purchase.
- Repairs will be done based on terms of free repair service. Terms of free repair service is referred to SoftBank Website. (Japanese)

https://cdn.softbank.jp/mobile/set/common/pdf/legal/ spguide/common/warranty.pdf (Japanese)

 Warranty covers handset and AC Charger. Accessories such as cables are not covered by terms of free repair service.

Cautions

Damages

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files (contacts/images/sound etc.) or settings due to accident or repair.

Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

After-Sales Service

To request repairs, contact Customer Service or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms of free repair service.
- After the warranty period, if handset can be repaired, repairs will be made at cost. The functional parts necessary to repair the handset will be available for 6 years generally after the manufacture is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.

🍯 Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or Customer Service.

Customer Service

Please feel free to contact one of the following numbers with any questions or problems.

SoftBank Customer Support

Direct all inquiries to SoftBank, from charges to service information, here.

- · From a SoftBank handset, dial toll free at 157
- From a landline/IP phone, dial toll free at 0800-919-0157
- Hours of service: 9 am to 8 pm (Chat/Call)

Safety Precautions

Safety Precautions1	12
General Notes 1	22
Water & Dust & Shock Resistance1	25

Safety Precautions

For proper handset use, carefully read Safety Precautions beforehand. Keep this guide for future reference. Observe these safety precautions to prevent injury or damage to property.

Labels

Risks of injury or damage from improper use are categorized by levels.

Mark	Descriptions
	Great risk of death or serious injury ¹ from improper use
	Risk of death or serious injury ¹ from improper use
	Risk of injury ² or damage to property ³ from improper use

- 1 Serious injury: Refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.
- 2 Minor injury: Refers to injuries, burns (high- and lowtemperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.
- 3 Damage to property: Refers to extended damage to buildings, furniture, livestock, pets, etc.

Symbols

Mark	Descriptions
Prohibited	Action prohibited
Do Not Disassemble	Disassembly prohibited
Avoid Liquids Or Moisture	Exposure to liquids prohibited
Do Not Use Wet Hands	Handling with wet hands prohibited
Compulsory	Action compulsory
Disconnect Power Source	Unplug power cord

Handset, Battery, USIM Card, AC Charger, Desktop Holder (Sold Separately), Conversion Cable (Optional) (Common)

🕂 DANGER

Prohibited

Do not use, store, or leave handset or related hardware in places subject to high temperatures or where heat collects (near an open flame or heating equipment, under a kotatsu or blanket, in direct sunlight, or inside a car on a hot day).

May cause fire, burns, injury, electric shock, etc.

Do not place handset or related hardware in or near a microwave oven, induction cooktop, etc. or pressure cooker.

May cause fire, burns, injury, electric shock, etc.



Do not place handset or related hardware directly on or get soiled with sand, dirt or mud. Do not touch if hands are dirty with sand, etc.

May cause fire, burns, injury, electric shock, etc. For details on water and dust resistance, see "Water & Dust & Shock Resistance."



Do not charge while handset or related hardware are wet with water or other liquid (beverage, sweat, sea water, pet urine, etc.).

Also, do not charge handset in a place exposed to water such as bathroom.

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water & Dust & Shock Resistance."

Do not apply excessive force to or break handset. Particularly when carrying handset in your clothes pocket, do not bump it or place it between objects.

Internal Battery may ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.

* Examples of where to be careful

-Sitting or squatting with handset in your pants or skirt pocket

-Handset becoming caught in a sliding door or vehicle door when in a jacket pocket

-Stepping on handset when it is on something soft such as a sofa, bed, or futon or on the floor



Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



Do not get wet with water or other liquid (beverage, sweat, seawater, pet urine, etc.).

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water & Dust & Shock Resistance."



Keep water and other liquids (beverage, sweat, seawater, pet urine, etc.) away from Charging Terminals and External Device Port.

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water & Dust & Shock Resistance."

Compulsory

Use optional accessories specified by SoftBank Corp.

Using non-specified optional accessories may cause fire, burns, injury, electric shock, etc.

A WARNING



Do not drop, step on, throw, or otherwise subject to strong force or impact, or to vibration.

May cause fire, burns, injury, electric shock, etc.



Be careful that conductive objects (metal, pencil lead, etc.) do not come in contact with Charging Terminals or External Device Port and that dust does not get in them.

May cause fire, burns, injury, electric shock, etc.



Do not cover or wrap with a blanket, etc. during use or while charging.

May cause fire, burns, etc.



If charging does not complete even after specified charging time, stop charging.

Overcharging or other conditions may cause fire, burns, injury, etc.



Turn handset off and stop charging before entering a place such as a place where there is a possibility of flammable gases being generated or a place where there is a possibility of dust being generated.

Ignition of flammable gas may cause explosion or fire, etc.



When using in some facilities such as gas station, follow the instructions from each facility.

Do not charge in gas station, etc.

When using handset in a gas station, etc. be careful not to drop it, especially during refueling. Ignition of flammable gas may cause explosion or fire, etc.

Compulsor

If you notice an unusual odor, unusual sound, smoke, overheating, discoloration, deformation, etc. while using, charging or storing handset, do the following.

- Unplug from outlet.
- Turn handset power off.
- Remove Battery from handset.

Not doing the above may cause fire, burns, injury, electric shock, etc.

▲ CAUTION



Do not use damaged.

May cause fire, burns, injury, etc.

Do not place on an uneven or unstable surface. Be particularly careful while vibrator is activated.

May fall, leading to injury, etc.



Do not store in a humid or dusty location or any place that reaches a high temperature.

May cause fire, burns, electric shock, etc. For details on water and dust resistance, see "Water & Dust & Shock Resistance."

Prohibited

A parent/guardian should provide instruction and ensure proper usage for a child and do not allow him/her to use handset in a wrong way.

May cause injury, etc.



Do not leave handset within reach of infants.

May result in small parts being accidentally swallowed or may cause injury, electric shock, etc.



Exercise caution for a high temperature when using handset continuously for a long time or while charging. Also be careful not to unintentionally be in contact with handset for a long time (putting handset in a pocket, falling asleep, etc.).

Handset, Battery, and AC Charger may become hot with long-period use (calling, data communication, TV/movie viewing, etc.) and charging. Long contact with hot parts may cause redness, itchiness, rash, low-temperature burns, etc. depending on the individual.

A DANGER

\bigcirc

Do not put handset in a fire or attempt to heat it.

May cause fire, burns or injuries, etc.

\bigcirc

Do not pierce, hammer, step on, or otherwise subject to excessive force.

May cause fire, burns, injury, etc.

0

If the substance inside handset gets into your eyes or mouth, etc., rinse with clean water and receive medical care from a doctor immediately.

The substance inside the product may cause loss of sight or poor health, etc.

🕂 WARNING

\bigcirc

Do not look into Infrared Port when sending data by infrared.

May affect eyesight.

Prohibited

When using infrared transfer, do not point Infrared Port at an appliance or other apparatus having infrared capability.

May cause appliance, etc. to misoperate and cause an accident, etc.



Do not shine Light near or photograph with Light close to someone's eyes. Especially, do not photograph infants up close.

May affect eyesight, etc. May also temporarily affect eyesight or startle, leading to injury or other accident.



Do not shine Light at or use Light to photograph the driver of a vehicle, etc.

May interfere with driving, leading to accident, etc.



Do not look at a repeatedly flickering screen for a long period.

May cause convulsions, loss of consciousness, etc.



Do not allow water or other liquid (beverage, sweat, sea water, pet urine, etc.) or foreign matter (metal, burnable material, etc.) to get in USIM Card/SD Card Slot.

Do not mistake orientation of USIM Card and SD Card or where to insert.

May cause fire, burns, injury, electric shock, etc.

\bigcirc

Do not allow direct sunlight, etc. to shine on Camera Lens for long period.

Concentration of light by the lens may cause fire, burns, injury, etc.

Before boarding an aircraft, power off handset or place handset in Airplane mode.

Restrictions are in place for use aboard aircraft; follow airline instructions.

Radio waves may affect aircraft instrumentation. Prohibited use aboard an aircraft may be punishable by law.

Follow instructions of each medical institution for use in a hospital.

Power off handset where use is prohibited. Radio waves may affect electronic devices and electric medical equipment.

Compulso

Keep handset away from your ears when using hands-free calling, the ringtone is loudly sounding, or when waiting for a call.

If an earphone-microphone, etc. is attached for gaming or video/music playback, adjust to a moderate volume.

When using hands-free call, handset sounds loudly. Even in standby, ringtone and vibrator may work suddenly. Hearing excessively high volume for a prolonged period may damage your hearing.

Also, it may prevent you from hearing ambient sounds and cause an accident.

Compulso

Individuals with a weak heart should take care with handset vibration and ringtone settings for new calls/mail.

Sudden vibration or ringtone may affect heart.

Compulsor

Individuals with an electric medical device should consult with the device manufacturer or distributor regarding any effects from electronic signals before using handset.

Radio waves may affect the electric medical device.

Compulsor

Keep handset power off near high precision electronic devices or devices using weak signals.

Radio waves may cause devices to misoperate, etc. Devices that may be affected:

Hearing aids, implanted cardiac pacemakers and implanted defibrillators, other electric medical equipment, other automatically controlled equipment, etc. Individuals using an implanted cardiac pacemaker, implanted defibrillator, or other electric medical equipment should consult with the device manufacturer or distributor regarding any effects from electronic signals.



Be careful of broken glass and any internal components that become exposed if Display or Camera Lens breaks.

Touching broken portions or exposed components may cause burns, injury, electric shock, etc.



Keep handset away from pets.

Pets biting Battery may cause Battery to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.

Do not swing handset by strap.

May cause injury or other accident.

If Display breaks and internal matter leaks, do not allow it to get on face, hands or other part of your skin, or on clothing, etc.

May cause blindness, harm to your skin, etc. If internal matter should get in your eyes or mouth or on your skin or clothing, immediately rinse with clean water. If in your eyes or mouth, immediately seek medical attention after rinsing.

To open Back Cover, use only as much strength as necessary.

Back Cover may break, causing injury, etc.



Do not pinch a part of your body such as fingers when attaching Back Cover.

May cause injury, etc.



Do not use with Back Cover removed.

May cause burns, injury, electric shock, etc.



Before using handset in a vehicle, consult with the vehicle manufacturer or distributor regarding any effects from electronic signals.

Due to radio waves, some makes of car may have onboard electronic devices that can be affected. Immediately discontinue use if such devices are onboard.



If any skin abnormality occurs with use of handset, immediately discontinue use and seek medical attention.

Failing to so may cause itchiness, rash, etc. depending on the individual.

For details on materials used in handset, see "DIGNO® ケー タイ3 (Keitai 3)."



When opening or closing handset, be careful not to let a part of yourself (fingers, etc.) get caught in it.

Failing to do so may cause injury, etc.



Handset Speaker (including exterior case) and parts around the Camera Key use magnetic components; check that metal objects (cutter blades, staples, etc.) are not attached to it.

Attached objects may cause injury, etc.



When viewing Display, view in a sufficiently bright place with Display at an adequate distance.

Viewing in a dark place too closely may affect vision, etc.

Battery

A DANGER

Do not allow metal objects (necklaces, hairpins, etc.) and conductive materials to come in contact with connection terminals. Do not carry or store such objects or materials with Battery.

May cause fire, burns, injury, etc.

Do not force Battery if difficult to install in handset or difficult to remove from handset.

May cause fire, burns, injury, etc. For details on how to insert/remove battery, see "Inserting & Removing Battery."



Do not throw Battery in fire or heat Battery.

May cause fire, burns, injury, etc.

Do not pierce, hammer, step on, or otherwise subject to excessive force.

May cause fire, burns, injury, etc.

Compulso

Check the orientation of Battery Pack before installing it in handset.

Installing in the wrong orientation may cause Battery Pack to catch fire, explode, overheat, or leak, causing fire, burns, injury, etc.

For details on how to insert/remove battery, see "Inserting & Removing Battery."

Compulso

If matter from inside Battery gets into eyes, immediately rinse with clean water, and consult a doctor.

Matter from Battery may result in loss of eyesight or illness, etc.

If you notice an unusual odor, overheating, discoloration, deformation, etc., do not use Battery.

May cause fire, burns, injury, etc.

Compulsor

If matter from inside Battery is leaking or has an unusual odor, immediately discontinue use and keep it away from open flames.

Leaking fluid may ignite, causing ignition, rupturing, etc.



Keep Battery away from pets.

Pets biting Battery may cause Battery to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.



If matter from inside Battery leaks, do not let it get on skin (face, hands, etc.), clothing, etc.

May cause harm to your vision, skin, etc. If matter gets in eyes/mouth or on skin/clothing, immediately rinse with clean water. If matter gets in eyes/mouth, first rinse and then promptly seek medical attention.



Do not dispose of with ordinary refuse.

May cause fire, burns, injury, etc., and it is also destructive to the environment. Tape terminals on old Battery to insulate them and take to a SoftBank Shop or other location where accepted, or dispose of according to local regulations.



Do not use or charge a wet Battery.

May cause fire, burns, or injury.

AC Charger, Desktop Holder (Sold Separately)



Do not use AC Charger if cord is damaged.

May cause fire, burns, electric shock, etc.

If thunder is audible, do not touch AC Charger.

May cause electric shock.

Prohibited

Do not short-circuit Charging Terminals while plugged in. Do not touch Charging Terminals with hands, fingers, etc.

May cause fire, burns, electric shock, etc.

Do not subject AC Charger cord to excessive force (placing heavy objects on it, pulling, etc.).

May cause fire, burns, electric shock, etc.

When plugging in/unplugging AC Charger, do not allow anything metal (metal strap, etc.) to come in contact.

May cause fire, burns, electric shock, etc.

Do not use a travel converter with AC Charger.

May cause ignition, overheating, electric shock, etc.

Do not apply excessive force to where AC Charger is connected to handset or Desktop Holder.

May cause fire, burns, injury, electric shock, etc.



Do not touch AC Charger cord, Charging Terminals, power plug, or Desktop Holder with wet hands.

May cause fire, burns, electric shock, etc.



Use with the specified power source at the specified voltage.

If charging while abroad, charge with an AC Charger compatible with use abroad.

Use with an incorrect power source or voltage may cause fire, burns, electric shock, etc.

AC adapter: 100V AC (Connect only with a household AC outlet) $% \left({\left({{\rm{Connect}}} \right)} \right)$

AC Chargers compatible with use abroad: 100 V to 240 V AC (be sure to connect only to household AC outlet)



Wipe away dust on power plug.

Using with dust on plug may cause fire, burns, electric shock, etc.



When plugging in AC Charger, plug in firmly.

Failing to do so may cause fire, burns, electric shock, etc.

When unplugging, hold by AC Charger and do not pull by cord or otherwise subject to excessive force.

Pulling by cord can damage cord, causing fire, burns, electric shock, etc.

Compulsor

When connecting/disconnecting AC Charger to/ from handset, insert/remove straight to/from terminal without bending, and without pulling by cord or otherwise subjecting to excessive force.

Failing to do so may cause fire, burns, injury, electric shock, etc.

Compulsor

If Charging Terminals are bent or otherwise deformed, immediately discontinue use. Do not try to return to original shape and resume use.

Short-circuiting of Charging Terminals may cause fire, burns, injury, electric shock, etc.

Disconnec Power Sour

If not using AC Charger, unplug from outlet.

Leaving plugged in may cause fire, burns, electric shock, etc.



If water or other liquid (beverage, sweat, seawater, pet urine, etc.) gets on, immediately unplug from outlet.

Failing to do so may cause fire, burns, electric shock, etc.



Before caring for equipment, unplug from outlet.

Failing to do so may cause fire, burns, electric shock, etc.



Do not be touching AC Charger for a long period while plugged in.

May cause burns, etc.

Conversion Cable (Optional)



Do not use Conversion Cable if cord is damaged.

May cause fire, burns, electric shock, etc.



Do not subject Conversion Cable to excessive force (placing heavy objects on it, pulling, etc.).

May cause fire, burns, electric shock, etc.

Prohibited

Do not apply excessive force to where Conversion Cable is connected to handset.

May cause fire, burns, injury, electric shock, etc.

Prohibited

If thunder is audible, do not touch Conversion Cable.

May cause electric shock.

When plugging in/unplugging Conversion Cable, do not allow anything metal (metal strap, etc.) to come in contact.

May cause fire, burns, electric shock, etc.



5

Do not touch Conversion Cable with wet hands.

May cause fire, burns, electric shock, etc.



If Terminals are bent or otherwise deformed, immediately discontinue use. Do not try to return to original shape and resume use.

Short-circuiting of Charging Terminals may cause fire, burns, injury, electric shock, etc.

Compulsory

When connecting/disconnecting Conversion Cable to/from handset, insert/remove straight to/from terminal without bending, and without pulling by cord or otherwise subjecting to excessive force.

Failing to do so may cause fire, burns, injury, electric shock, etc.



Do not use damaged.

May cause fire, burns, injury, etc.

Do not store in a humid or dusty location or any place that reaches a high temperature.

May cause fire, burns, electric shock, etc.

Do not leave Conversion Cable within reach of infants.

May result in small parts being accidentally swallowed or may cause injury, electric shock, etc.

A parent/guardian should provide instruction and ensure proper usage for a child and do not allow him/her to use Conversion Cable in a wrong way.

May cause injury, etc.

USIM Card



When handling USIM Card, be careful not to scratch fingers, etc. on cut surfaces.

Sharp cut surfaces may cause injury, etc.

Handset Use & Electronic Medical Equipment



When carrying handset, keep a minimum of 15 cm from implanted cardiac pacemaker, implanted defibrillator, etc.

Radio waves may interfere with the operation of electric medical devices.



When using electronic medical equipment (other than implanted cardiac pacemaker/defibrillator) outside of medical institutions, consult device manufacturer about the influence of radio waves.

Radio waves may interfere with the operation of electric medical equipment.



Set handset to not emit radio waves (power off or place in Airplane mode) if you will be in a packed location and cannot maintain a distance of 15 cm from those around you.

Persons with an implanted pacemaker, defibrillator, etc. may be around you. Radio waves may affect operation of electric medical devices.



Follow instructions of each medical institution for use of handset in a hospital.

Radio waves may affect electric medical equipment.

General Notes

Observe the following for optimal performance. Please use handset after reading carefully.

[902KC] here refers to this mobile phone [DIGNO® ${\ensuremath{ {\rm T}}} - {\ensuremath{ {\rm 7}}} + {\ensuremath{ {\rm 7}}} 3$] .

Usage Basics

Read battery label to confirm battery type; use/dispose of Battery accordingly.

Label	Battery Type	
Li-ion00	Lithium-ion	

- Content saved on handset (Phone Book, mail, music, photos, videos, etc.) may be altered or erased due to accident, malfunction/repair, or other handling. Keep a copy of important content. SoftBank Corp. is not liable for any damages or lost profit resulting from alteration or loss of content.
- \cdot Do not use in places with much dust or vibration.
- \cdot Use of handset near a landline phone, TV, or radio may affect the image and sound quality of the equipment.
- Depending on conditions of use (in call, using Internet or mail, charging, etc.), handset and USIM Card may become warm. This is not a defect or malfunction.
- Be sure to charge Battery before using handset for the first time or if handset has not been used for a long time.
 (During charging, Battery may become warm. This is not a defect or malfunction.)
- Depending on usage, bulges may appear on Battery near end of battery life. This is normal for lithium-ion batteries and does not affect safety.
- Sticker on handset bearing the manufacture number (in Battery Compartment) is certification that your SoftBank handset is licensed under the Radio Law and Telecommunications Business Law. Do not remove.
- Mail saved on handset, downloaded content (whether paid for or free), etc. cannot be transferred to an exchange
 SoftBank handset (replacing old handset, submitting handset for repairs, etc.).
- When using handset in public places, take care not to annoy other people around you.
- Wearing polarized sunglasses may cause Display to appear dark or distorted at certain angles.
- Be sure to center Earpiece over ear to hear Earpiece sound. Your ear may block Earpiece (sound hole) and prevent clear sound.
- Trying to use keys during content playback may cause content to stop or other abnormal operation.
- Keeping Viewfinder open or shooting videos, operating Browser, etc. repeatedly for a continuous and extended period causes handset to become warm. Skin contact for extended period when handset is warm may cause lowtemperature burns.
- Handset may become warm depending on usage and where used, and some functions (charging, etc.) will stop as a precaution. Handset powers off if use is continued while warm.

- External Device Port is designed to use USB Type-C plug only. Inserting microUSB (Type-B) plug forcibly may cause damage or malfunction.
- If a message appears indicating error due to temperature while External Device Port is in use, immediately disconnect cable.
- SD Card may feel warm when removed from handset after prolonged use. This is not a defect or malfunction.
- \cdot Do not use or store SD Card in place where static electricity or electrical noise occurs easily.
- Back up content on an SD Card to a PC or other media. SoftBank Corp. is not liable for any damages resulting from loss of content due to SD Card breakage or other failure.
- Do not forget lock number/password for unlocking screen. If you do forget it, take handset to a SoftBank Shop to reset it. This will erase all handset information and settings.
- \cdot Never use a modified handset.
- Using a modified handset is a violation of the Radio Law and the Telecommunications Business Law.
- Handset is certified as compliant with technical regulations as specific radio equipment based on the Radio Law and technical regulations for handset based on the Telecommunications Business Law, indicated by a technical

Compliance information.

Such certification is nullified if handset interior is modified. Using handset with certification nullified is a violation of the Radio Law and the Telecommunications Business Law and should never be used in such state.

Precautions

- Excess weight on handset may damage Display or internal parts, resulting in malfunction. Do not sit with handset in pocket or place at bottom of bag with other heavy objects. Even without exterior damage, it will not be covered under warranty.
- \cdot Do not use the following items in extreme temperatures or high humidity (use in temperatures between 5°C 35°C and humidity within 35% 85%).
- -AC Charger
- -Desktop Holder (sold separately)
- \cdot Do not use the following items in extreme temperatures or high humidity. Use in temperatures between 5°C – 35°C and humidity within 35% – 90% (limited use in temperatures between 36°C – 40°C).
- -DIGNO® ケータイ3 (Keitai 3)
- -Battery
- Clean Port/Terminals with a dry cotton swab, etc. occasionally. If dirty, may cause poor connection. Do not apply force and deform or scratch terminals.
- To clean handset, wipe it with a dry, soft cloth. Do not use benzene, thinner, alcohol, soap, or other solvents. Doing so may discolor or remove exterior features or print.
- Before removing Battery, power off handset and wait for Display to dim. Not doing so may cause saved content to be altered or erased.
- \cdot Do not remove sticker from Battery.
- Usable battery time decreases in extreme temperature conditions (left in car with closed windows on a hot day, etc.). Battery life also shortens. Using handset at room temperature is recommended.
- Before extended period of disuse, remove Battery and store in battery case away from high temperature and humidity (battery case supplied with spare Battery (sold separately)).
 Note that not charging handset for extended period may cause content in handset to be erased.
- Battery is near end of its life when charging no longer restores handset functionality or bulges appear. Purchase a specified Battery. Life depends on conditions of usage.
- Do not dispose of old Battery with other waste. For environmental and recycling reasons, please take old Battery to a SoftBank Shop or recycling center.
 - Li-ion00
- Handset Display pixels may be missing or remain lit. This is not a defect or malfunction.
- Do not subject Display to strong shock such pressing forcefully or hitting it. May cause scratches or breakage.
- Do not rub or scratch Display or Camera Lens with a hard object.
- When placing handset in a pocket or bag, ensure that metal or other hard materials do not contact Display. Be careful with handset strap having metal or other hard parts, which may cause scratches or breakage.
- Water forms inside handset (called condensation) if moved from a cold to hot place (outdoors to indoors) or used in high humidity. May cause malfunction.
- Do not leave near air conditioning vent. Condensation from sudden temperature changes may corrosion of handset interior and malfunction.

- Be careful not to drop handset and scratch surface finish. Remaining water, etc. may cause surface finish to peel.
- Display may be difficult to view in bright conditions (outdoors, under fluorescent lighting, etc.). This is not a defect or malfunction.
- · If not using AC Charger, unplug from outlet.
- \cdot Do not wrap cable of AC Charger around plug. May cause electric shock, ignition, or fire.
- USIM Card remains the property of SoftBank Corp.. If lost or damaged, it is replaced at cost. If it seems to be malfunctioning or if lost/stolen, visit a SoftBank Shop or contact Customer Service. Take old USIM Card (after subscription cancelation, etc.) to a SoftBank Shop.
- \cdot Do not use excessive force to insert/remove USIM Card.
- \cdot Malfunction due to inserting USIM Card in another IC Card reader/writer, etc. is at your own risk.
- \cdot Keep IC (metal) portion clean for use.
- \cdot Do not adhere labels, etc. on USIM Card.
- \cdot Do not disassemble or modify USIM Card. May cause content to be erased or malfunction.
- Insert SD Card properly. Cannot be used if not inserted properly.

Camera

- \cdot Do not leave Camera Lens under direct sunlight. May burn or fade colors of elements.
- Shooting photos or storing handset in a warm place for extended period may affect image quality.
- Camera is high-precision, including pixels which always appear bright or dark. Blue, red, white, etc. dots will appear when shooting in extremely dark conditions.
- When shooting indoors under fluorescent lighting, flickering (extremely faint and not visible) may appear as stripes in image. This is not a defect or malfunction.
- Camera may make sound during operation, such as when being activated. This is not a defect or malfunction.
- Keeping Viewfinder open or shooting videos, operating Browser, etc. repeatedly for a continuous and extended period causes handset to become warm. Skin contact for extended period when handset is warm may cause lowtemperature burns.
- · Observe proper etiquette when using Camera.
- \cdot Creating a public nuisance with Camera may be punishable by law.
- Practice taking and previewing pictures, videos, and audio before using Camera on important occasions like wedding ceremonies.
- Photo files (below, content) may be altered or erased due to repairs or other handling. SoftBank Corp. is not liable for any damages or lost profit resulting from content alteration/erasure or its restoration.
- \cdot Do not use Camera in locations where shooting photos or videos is prohibited.

 \cdot A strong magnet nearby may cause malfunction.

Music & Video & TV Functions

- Do not listen to music or watch videos/TV while driving a vehicle or riding a motorcycle or bicycle. Such use of a mobile phone is prohibited by law (use while riding a bicycle may also be punishable). Also be alert while walking; if surroundings are difficult to hear or attention is on Display, a traffic accident may result. Be careful especially at railway crossings, on station platforms, and at intersections.
- Listening at loud volume for an extended period may affect hearing.
- Take care not to disturb those around you (on train, etc.) with earphone or other noise.

Urgent News

- · Urgent News Setting is enabled by default.
- By default, an alert tone sounds at the highest volume when an alert is received, even in Silent mode.
- Alerts are not received during calls/transmissions or in poor signal conditions.
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- Standby Time may decrease when Urgent News Setting is enabled.
- SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.

Bluetooth®

Frequencies

Handset Bluetooth® function uses 2.402 GHz – 2.480 GHz frequencies in the 2.4 GHz band.

2.4FH1/XX1: Uses 2.4 GHz band, FH-SS and other

modulation, with a maximum interference range of 10 m.

mobile device bandwidth differentiation.

2.4FH1/XX1

· Bluetooth® Cautions

• Handset Bluetooth® function is certified as conforming to Japanese domestic and FCC regulations. Use is restricted in some countries/regions. Confirm local laws before use abroad.

• The 2.4 GHz band used by handset Bluetooth® function is shared by other devices. Handset Bluetooth® function tries to minimize effects of other devices using the same bandwidth, but connection speed and distance may be reduced or function may be disconnected.

 \cdot Connection speed and distance vary depending on distance between connected devices, obstacles, and Bluetooth® devices.

· Before Using Bluetooth®

Bluetooth® operating frequency band is used by industrial, scientific, consumer and medical equipment including microwave ovens, other similar radio stations, premises radio stations for identifying mobile units used in manufacturing lines (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereafter, "other radio stations").

1. Before handset use, be sure "other radio stations" are not in use nearby.

2. If handset radio waves interfere with "other radio stations", promptly move or power off.

3. For further information, visit a SoftBank Shop or contact Customer Service.

 All handset operations when connected with a Bluetooth®compatible device are not verified and therefore not guaranteed.

 Handset supports the Bluetooth®-standard security function for secure radio communication. However, be careful when using Bluetooth®, as security may be insufficient depending on conditions of usage or settings.
 SoftBank accepts no liability for data/information leaks during communication using Bluetooth®.

Wi-Fi

Frequencies

Handset Wi-Fi function uses 2.402 GHz – 2.480 GHz frequencies in the 2.4 GHz band.

2.4DS4/OF4: Uses 2.4 GHz band and DSSS/OFDM modulation with a maximum interference range of 40 m.

mobile device bandwidth differentiation.

2.4DS4/0F4

• Wi-Fi Cautions

 Handset wireless function is certified as conforming to Japanese domestic and FCC regulations. Use is restricted in some countries/regions. Confirm local laws before use abroad.

• The 2.4 GHz band used by handset Wi-Fi function is shared by other devices. Handset Wi-Fi function tries to minimize effects of other devices using the same bandwidth, but connection speed and distance may be reduced or function may be disconnected.

 Connection speed and distance vary depending on distance between connected devices, obstacles, and Wi-Fi devices.
 Before Using Wi-Fi

Wi-Fi operating frequency band is used by industrial, scientific, consumer and medical equipment including microwave ovens, other similar radio stations, premises radio stations for identifying mobile units used in manufacturing lines (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereafter, "other radio stations").

1. Before handset use, be sure "other radio stations" are not in use nearby.

2. If handset radio waves interfere with "other radio stations", promptly move or power off.

3. For further information, visit a SoftBank Shop or contact Customer Service.

 All handset operations when connected with a Wi-Ficompatible device are not verified and therefore not quaranteed.

• Handset supports the Wi-Fi-standard security function for secure radio communication. However, be careful when using Wi-Fi, as security may be insufficient depending on conditions of usage or settings.

• SoftBank accepts no liability for data/information leaks during communication using Wi-Fi.

Water & Dust & Shock Resistance

Handset has IPX5-equivalent and IPX8-equivalent water resistance as well as IP5X-equivalent dust resistance with Back Cover completely attached. Handset is also provided with shock resistance complying with military standards (SoftBank testing).

Specifically, handset can be used in rain (less than 20 mm per hour) without an umbrella. Handset can also be used in bathrooms, kitchens, at poolside, and other places with water. * For details, see "In Various Environments."

However, failure to observe precautions given here may allow water, sand, foreign particles, etc. to enter handset and may cause overheating, ignition, electric shock, scratches, malfunction, etc. For safe handset use, first read precautions here.

IPX5 equivalent

Handset continues to function as a phone after being sprayed from all directions with 12.5 L of water per minute from a 6.3 mm diameter nozzle for at least 3 minutes, from a distance of approximately 3 m.

IPX8 equivalent

Handset continues to function as a phone without water intrusion after being slowly immersed in still tap water of room temperature to a depth of 1.5 m, and left there for approximately 30 minutes before being removed again.

IP5X equivalent

Handset will maintain a certain level of functionality and safety even after particulates in dustproof testing (dia. 75 μm or less) have entered handset.

Compliance with Military Standards

Although drop testing in compliance with MIL-STD-810G Method 516.7 : Shock-Procedure IV as stipulated by the US Department of Defense (product dropped in 26 directions onto plywood (lauan) from a height of 1.22 m), this is not a guarantee with regard to all types of shock.

* As handset is designed with shock resistance in everyday usage, handset may break if subjected to excessive impact such as being thrown against something. Dropping may produce scratches, etc. even if handset performance is unaffected.

Before Use

- Attach Back Cover firmly to prevent water intrusion.
 Confirm that Covers are completely secure so that there are no gaps.
- Particles (lint, hair, sand, etc.) lodged between joining surfaces may allow water intrusion.
- · DO not attach/remove Back Cover if hands/handset is wet.
- Do not place handset directly on beach sand, etc. Exposing Mic/Earpiece/Speaker/etc. to sand may reduce volume.
- \cdot Do not use submersed (including key operation).
- Do not expose to or immerse in liquid other than room temperature fresh water or tap water (soap/detergent/bath salt water, hot spring water, hot water, muddy water, sea water, pool water, alcohol, etc.).



In Various Environments

• Rain

• Do not use in heavy rain (20 mm or more per hour).

 \cdot DO NOT open/close Back Cover while exposed to rain or if hands are wet. May cause malfunction, etc.

• Bath room

 \cdot Do not immerse or drop in bathtub. Do not use submersed.

 \cdot Do not immerse in soap/detergent/bath salt water or hot spring water.

- \cdot Do not expose directly to warm shower.
- \cdot Do not expose to hot water.
- \cdot Avoid prolonged use in bath room.
- \cdot Use handset in temperatures between 5°C 35°C and humidity within 35% 90% (limited use in temperatures between 36°C 40°C).
- Kitchen

 \cdot Do not expose to or immerse in liquid other than fresh water or tap water (water with soap/detergent or spices, or beverage).

 \cdot Do not expose to or immerse in hot water or in chilled water.

• Do not leave handset in extremely hot/cold locations, (e.g., near ovens/stoves or in refrigerators).

 \cdot Do not subject handset to strong water pressure (more than 6 L per minute).

• Poolside

 \cdot Do not immerse or drop in pool water. Do not use submersed.

 \cdot Pool water is chlorinated. If wetted with pool water,

promptly wash off with room temperature tap water. Do not use a brush.

* Somewhat low water pressure (6 L or less per minute)

Shared Precautions

- Attach Back Cover firmly. Lodged particles (lint, hair, sand, etc.) may allow water intrusion.
- Do not remove or attach Back Cover while wearing gloves. Lodged particles (lint, hair, sand, etc.) from glove may allow water intrusion.
- Check handset and hands for moisture, sand, grime, etc. before attaching/removing Back Cover. May enter handset or become lodged in Back Cover, resulting in malfunction or water intrusion. If moisture, sand, grime, etc. is visible, no matter how small, first wipe handset and hands with a lintfree clean, dry cloth before handling.
- Do not leave handset wetted. Water may enter from gaps. May also reduce volume. If wetted, shake handset, and promptly remove as much water as possible with a lint-free clean, dry cloth. In cold regions, handset may freeze and cause malfunction.
- Handset is waterproof for only for fresh water/tap water. Not waterproof for hot water, salt water, soap water, chemicals, sweat, etc. If exposed to other types of moisture or sand/mud/etc., promptly wash off with room temperature tap water. Hand-wash without using a brush, etc. and holding Back Cover closed.

* Somewhat low water pressure (6 L or less per minute) • Not designed to withstand water pressure. Do not expose to

- strong water flow more than prescribed (IPX5/IPX8) (e.g., water from a tap or shower that is painful to the skin) or submerse in water for a long time.
- Do not wash in a washing machine, ultra-sonic washing machine, etc.
- \cdot Do not subject to strong shock while submersed (e.g., drop into basin, toilet, washing machine with water).
- Optional products besides handset are not water-/dust-/ shockproof.
- Do not poke Mic, Earpiece/Speaker, External Device Port, or Air Pressure Holes with a pointed object.
- Do not drop or otherwise subject handset to strong shock. May degrade water, dust, or shock resistance.
- Handset is designed to be airtight to provide water resistance (IPX8). Handset may make a noise from Earpiece/ Speaker if pressed forcefully, and does not indicate a problem with functionality or performance.
- Handset will not float.
- Do not immerse in hot water, use in a sauna, or subject to hot air from a hair dryer, etc.
- Use handset in temperatures between 5°C 35°C and humidity within 35% – 90% (limited use in temperatures between 36°C – 40°C). Use in extremes beyond these ranges may degrade water, dust, and shock resistance.
- Sudden temperature change results in condensation. Let handset reach room temperature before moving from cold to hot places (e.g., shower/bath) to prevent condensation. Handset has no anti-condensation features.
- * If condensation forms inside Display, leave at room temperature until condensation dries.
- · Do not put tap water directly on External Device Port.
- Do not leave handset wet. External Device Port may shortcircuit.
- \cdot Do not leave water droplets in External Device Port.
- \cdot Confirm that there are no foreign particles in External Device Port before use.

 Handset fulfills performance requirements for assumed usage. However, handset is not guaranteed for any and all conditions of actual usage. Malfunction determined to be due to mishandling is not covered under warranty.

If Exposed to Water

If handset is used while wet, water may collect in Mic, Earpiece/Speaker, Air Pressure Holes, or hinge, and may temporarily affect audibility or wet clothing, carry bag, etc. Follow steps below to drain water.

1

Wipe handset with a lint-free clean, dry cloth



2

Shake handset as shown until there is no more wetting

- \cdot Before shaking, check around you for safety.
- \cdot Hold handset firmly so as not to drop it.



3

Gently push handset against a lint-free dry, clean cloth and wipe water away from Mic, Earpiece/Speaker, Air Pressure Holes, hinge, etc.



4

After removing as much water as possible, leave handset at room temperature for at least 1 hour

- 🏁 Draining water is complete.
- Some water may still remain in handset. Do not leave handset beside/in items that you do not want to get wet (clothing, bag, etc.).

When Charging

Accessories are not waterproof. Check the following before and after charging.

- Check that handset is not wet. If wet, drain water and then wipe with a lint-free dry, clean cloth before opening External Device Port Cover, etc.
- If charging after becoming wet, drain well and then wipe with a lint-free dry, clean cloth before opening External Device Port Cover, etc.
- \cdot DO NOT charge wet handset. Charging while wet may result in malfunction, overheating, etc.
- Do not touch AC Charger or Desktop Holder (sold separately) with wet hands. May cause electric shock.
- Do not use AC Charger or Desktop Holder (sold separately) where exposed to water. May cause fire or electric shock.
- Do not use AC Charger or Desktop Holder (sold separately) in a bathroom, shower, kitchen, near a sink, or other place where water is used. May cause fire or electric shock.

A

About the Online Manual	. 3
Accessing Applications	32
Auto Communication & Synchronization Settings) 1

В

Bar code	70
Basic Operations with this Handset	
Battery Settings	
Browser	

C

Calling	
Capturing Photos & Recording Videos68	
Changing Handset Response to Calls & Mail	
Charging Battery15	
Checking Handset Status & Notifications (Notifications	
& Settings Window)23	
Customer Service109	
Customizing Fonts	
Customizing Handset Address56	
Custom Key Settings93	

D

Data Broadcast (Japanese)	65
Data Communication Settings	89
Data Folder	74
Device Info & Settings	94
Display	21
Display-Top (Status Bar) Indicators	22

G

General Notes	107
General Notes	122
Global Services	52

B

Handling Data (Data Folder)	74
Handset Memory & SD Card	11
How to Use Pointer	31

0

Importing Data from Other Mobile Phones
Inserting & Removing Battery14

DIGNOケータイ3 User Guide Index



J)



Key Operation 30	i.



Lock & Security Settings86	_ock & Secu	ity Settings		86
----------------------------	-------------	--------------	--	----

M

Main Menu	
Materials	106
Messaging	56
More settings	94
Music Files	72



Notifications & Se	ettings Wind	ow23
--------------------	--------------	------

0

One Seg Service64	4
Optional Services4	8
Other Basic Operations	6

P

Package Contents	6
Parts & Functions	6
Phone Book	41
Placing International Calls	46
Power On/Off	17

S

Safety Precautions	112
Scanning QR Code (Bar code)	70
Security Codes	
Sending S! Mail	57
Sending SMS	58
Sound & Notification Settings	
Specifications	105
Status Bar	
Sub-display	

T

U

Updating Software	104
USIM Card Installation	9
USIM PIN	27
Using Airplane Mode	35

Using	Infrared Transmission8	0
Using	Manner Mode 3	4
Using	One Seg Service 6	5
Using	PC Mail5	9



W

Wallpaper & Display Settings	84
Warranty & After-Sales Service	109
Water & Dust & Shock Resistance	125
Wireless & Network Settings	.88

DIGNOケータイ3 User Guide

January 2020, First Edition SoftBank Corp.

Visit SoftBank Shop for assistance

Model : DIGNOケータイ3 Manufacturer : KYOCERA Corporation