

# About the User Guide

---

Most operation descriptions are based on default settings.

Unless noted otherwise, descriptions are for Home Screen. Some operation descriptions may be omitted.

---

↓ [Before You Begin](#)

---

↓ [Data Communication](#)

---

↓ [Screenshots & Key Labels](#)

---

↓ [Other Notations](#)

---

## Before You Begin

- Read "Safety Precautions" and this guide thoroughly beforehand for proper usage.
- Accessible services may be limited by contract conditions.
- Unauthorized copying of any part of this guide is prohibited.
- Guide content subject to change without prior notice.

## Data Communication

- Handset is designed to be always connected to the Internet. Some functionality, such as data syncing, initiate transmission automatically.
- Large-volume data communication (application downloads, video viewing, etc.) incur expensive transmission fees. Subscription to a flat-rate data plan is strongly recommended.
- Depending on applications and services used, transmission fees may be incurred even while connected by Wi-Fi®.

## Screenshots & Key Labels

Screenshots and Key labels are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.



## Other Notations

- Xperia 1 III is referred to as "handset" in this guide.
- In this guide, microSD™/microSDHC™/microSDXC™ Card is referred to as "SD Card."
- In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.



# Parts & Functions

 
↓ Handset (Front)

↓ Handset (Back/Side)

↓ Handset Keys

↓ FCC ID


## Handset (Front)

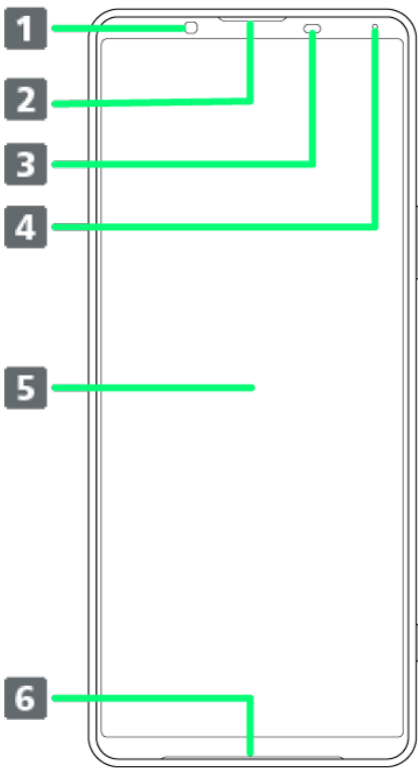

| Part                            | Description                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>1 Front Camera</b>           | Use to shoot still images, videos of yourself, etc.                                                                             |
| <b>2 Earpiece/Speaker</b>       | Hear the other party's voice here.                                                                                              |
| <b>3 Proximity/Light Sensor</b> | Detects surrounding brightness to automatically adjust Display or backlight and prevent Touchscreen misoperation during a call. |
| <b>4 Notification Lamp</b>      | Flashes for notifications while Display is off. Lights while charging.                                                          |
| <b>5 Display</b>                | Touchscreen-type display, operate with your fingers on Display.                                                                 |
| <b>6 Speaker</b>                | Listen to music as well as video, etc. audio.                                                                                   |



## Handset (Back/Side)

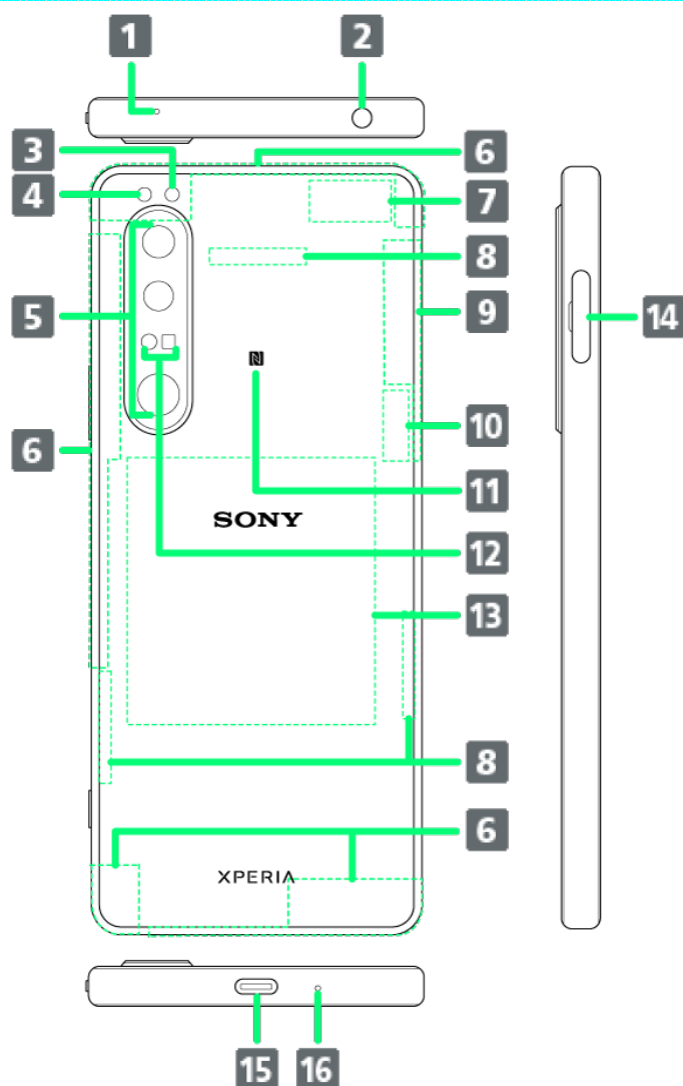 

| Part                                                     | Description                                                                                                          |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>1 Second Mic</b>                                      | Reduces noise for calling. Also picks up audio when capturing videos.                                                |
| <b>2 Headphone Port</b>                                  | Connect commercially available headphones. This port supports tetrapolar headset that conforms to the CTIA standard. |
| <b>3 RGB-IR Sensor</b>                                   | Detects surrounding light sources when shooting.                                                                     |
| <b>4 Flash/Photo Light</b>                               | Use as camera flash when taking photos, etc.                                                                         |
| <b>5 Main Camera</b>                                     | Capture still images and videos.                                                                                     |
| <b>6 5G/4G Antenna Area</b>                              | Internal Antenna for calls and data communication.                                                                   |
| <b>7 5G/4G Antenna/Wi-Fi Antenna Area</b>                | Internal Antennas for calls, data communication, and Wi-Fi.                                                          |
| <b>8 5G Antenna Area</b>                                 | Internal Antenna for data communication.                                                                             |
| <b>9 5G/4G Antenna/Wi-Fi/GPS/Bluetooth® Antenna Area</b> | Internal Antennas for calls, data communication, and Wi-Fi, GPS, and Bluetooth features.                             |
| <b>10 Wi-Fi/Bluetooth Antenna Area</b>                   | Internal Antennas for Wi-Fi and Bluetooth features.                                                                  |
| <b>11 NFC/Osaifu-</b>                                    | Hold up to a                                                                                                         |



|  |                                      |                                                         |
|--|--------------------------------------|---------------------------------------------------------|
|  | <b>Keitai® Detection Area</b>        | reader/writer to use NFC/Osaifu-Keitai®.                |
|  | <b>12 Laser AF Sensor</b>            | Autofocuses for shooting based on subject distance.     |
|  | <b>13 Wireless Charging Position</b> | Position wireless charger.                              |
|  | <b>14 SIM Card/SD Card Slot</b>      | Insert SIM Card/SD Card.                                |
|  | <b>15 USB Type-C™ Port</b>           | Connect USB Type-C cable (commercially available), etc. |
|  | <b>16 Mic</b>                        | Speak here.                                             |



## Using USB Type-C Port

Connect DisplayPort-compatible USB Type-C cable (commercially available) and show handset screen on a TV or computer monitor. Also, use a USB-LAN adapter (commercially available) and connect to the Internet with a wired LAN cable. Your USB Type-C cable, USB-LAN adapter, or access point device might not work in some instances.



## Handset Keys



| Part                                  | Description                                                                                 |
|---------------------------------------|---------------------------------------------------------------------------------------------|
| <b>1 Volume/Zoom Up/Down Key</b>      | Adjust Volume.<br>Adjust Zoom while using Photo Pro.                                        |
| <b>2 Power Key/Fingerprint Sensor</b> | Long Press for power on/off.<br>Turn Display on/off.<br>Or, use Fingerprint authentication. |
| <b>3 Google Assistant Key</b>         | Launch the Google Assistant.                                                                |
| <b>4 Camera Key</b>                   | Use as Camera shutter.<br>Long Press to launch Photo Pro.                                   |

## FCC ID

To view the regulatory compliance mark

- Find and tap **Settings** → **About phone** → **Certificates**

Regulatory compliance mark such as FCC ID is displayed on the screen.



# SIM Card

SIM Card is an IC card containing phone number and other customer information.

---

↓ [Inserting SIM Card](#)

---

↓ [Removing SIM Card](#)

---

 
↓ [SIM-Unlocking Handset](#)

---



## Handling SIM Card

For SIM Card handling, see following items.

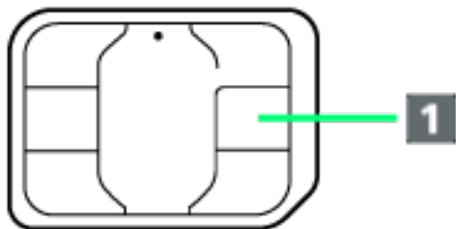

### ① IC chip

For SIM Card handling, see SoftBank Website.

<https://www.softbank.jp/mobile/support/protect/usim/> (Japanese)

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM Card.



## SIM Card Cautions

Observe the following when using SIM Card.

- Customer is responsible for any damage caused by inserting SIM Card in an other-brand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- SIM Card is the property of SoftBank Corp.
- SIM is replaceable (at cost) in case of loss/damage.
- Return SIM Card to SoftBank Corp. when cancelling subscription.
- Returned SIM Cards are recycled for environmental purposes.
- Note that SIM Card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on SIM Card. SoftBank Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact Customer Service.

 


# Inserting SIM Card

Always unmount SD Card beforehand. For details, see "Unmounting SD Card."

1


Pull Tray out from handset

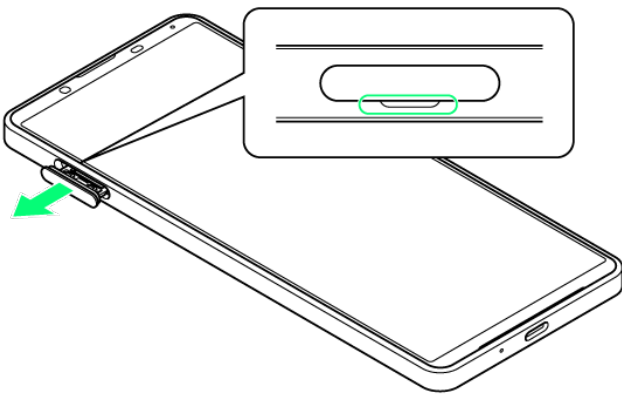

- Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

2

  
Set SIM Card into Tray with IC chip (metal) facing down

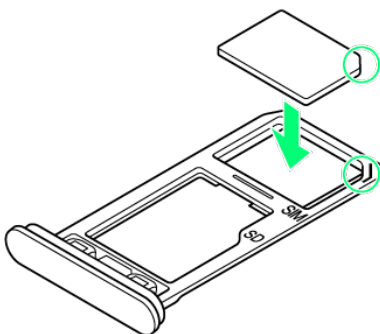


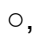
- Check SIM Card orientation by notch.
- Make sure SIM Card is in Tray securely.



Holding handset held level, press Tray in straight

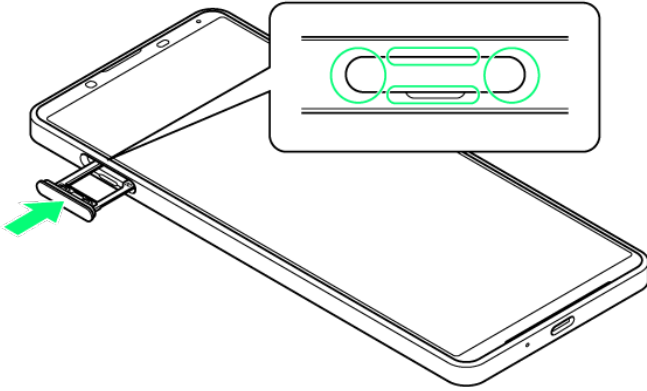


 SIM Card is inserted.

- Check Tray orientation.
- Press firmly where circled , and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.

## Removing SIM Card

 Always unmount SD Card beforehand. For details, see "Unmounting SD Card."

Pull Tray out from handset

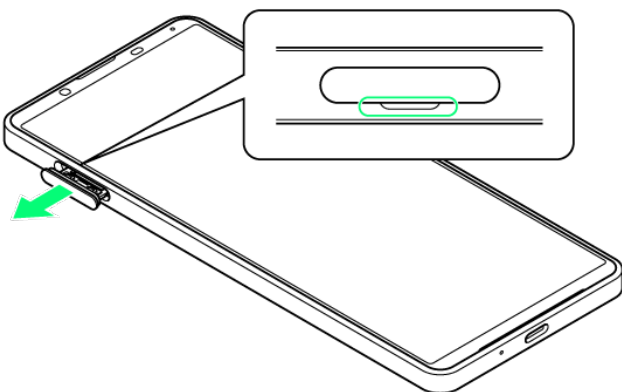




- Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.


2


## Remove SIM Card from Tray

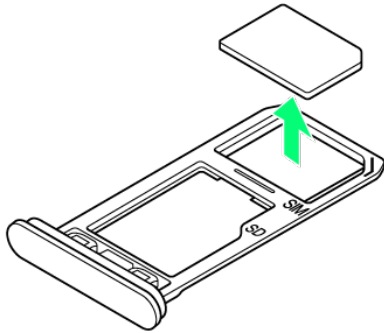 

3

## Holding handset held level, press Tray in straight

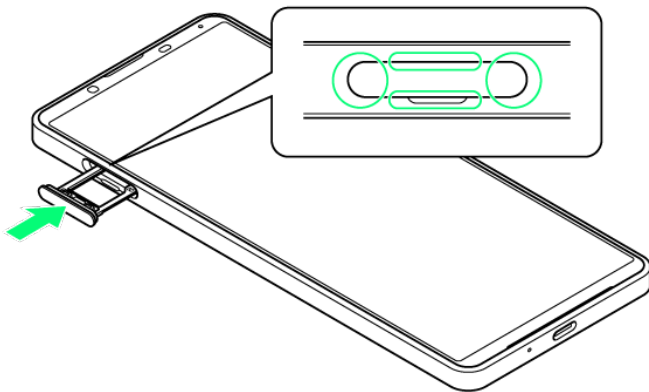 

 SIM Card is removed.

- Check Tray orientation.
- Press firmly where circled ○, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.



## SIM-Unlocking Handset

Handset can be SIM-unlocked. SIM-unlocking handset allows other-carrier SIM cards to be used with it.

- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. SoftBank Corp. does not guarantee operation whatsoever.
- For details, see SoftBank Website.



# SD Card

---

Handset supports SD Cards up to 1 TB. Some SD Cards may not operate properly. When using a new SD Card for the first time, always format it on handset.

---

↓ [Inserting SD Card](#)

---

↓ [Formatting SD Card](#)

---

↓ [Unmounting SD Card](#)

---

↓ [Removing SD Card](#)

---

## SD Card Cautions

### Data

Information stored on SD Card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. SoftBank Corp. is not responsible for damages from data that is lost or changed.

### Reading/Writing Data

Never power off while reading or writing data.

### Battery Level

A low battery charge may prevent reading/writing to SD Card.

## Handling SD Card

Use/store SD Cards away from the reach of infants. May cause choking if swallowed.

 
## Inserting SD Card

1

---

Pull Tray out from handset




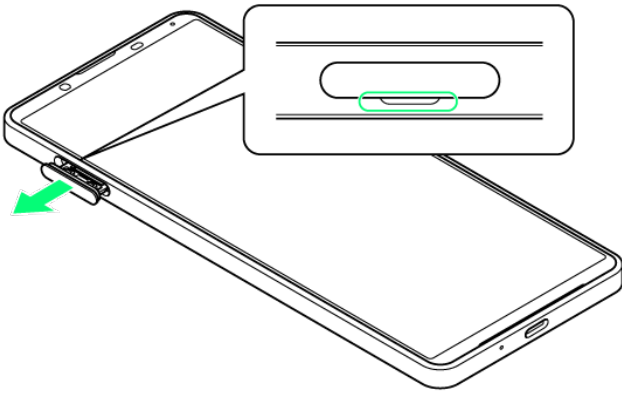

- Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

2

 Set SD Card into Tray with metal terminals facing down

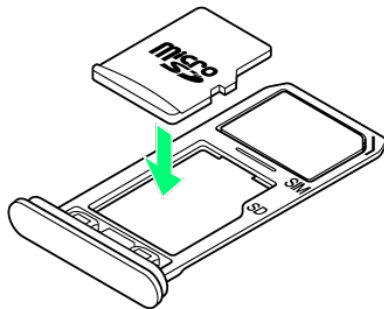



- Make sure SD Card is in Tray securely.

3

 Holding handset held level, press Tray in straight



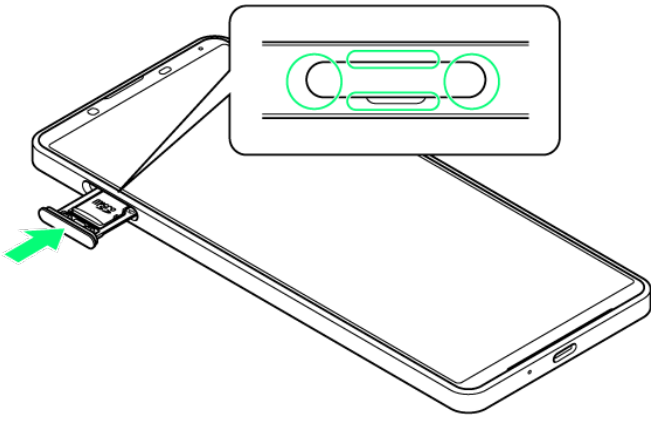


 SD Card is inserted.

- Check Tray orientation.
- Press firmly where circled ○, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.

## Formatting SD Card

1

In Home Screen,  (Settings)

 




2

Storage




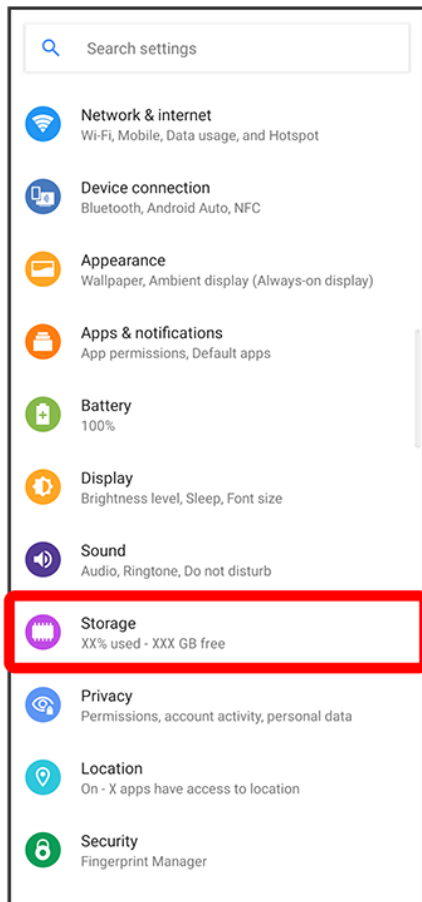

3

 SD card



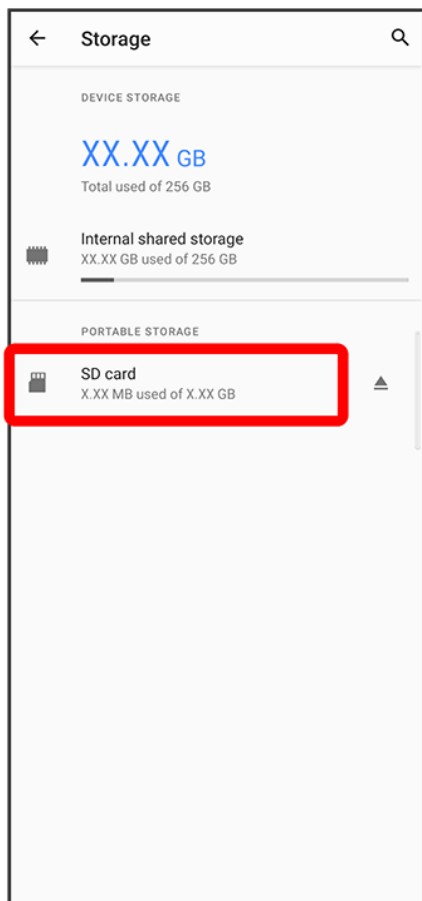


- If confirmation appears, follow onscreen instructions.

 4






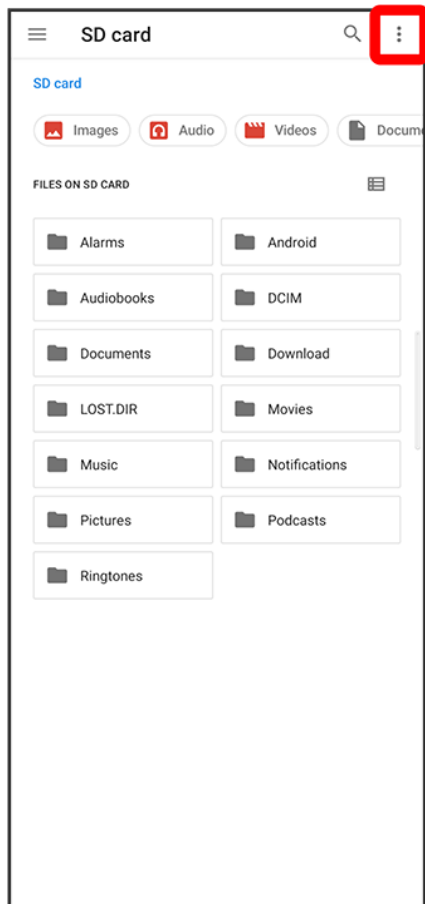

5

## Storage settings



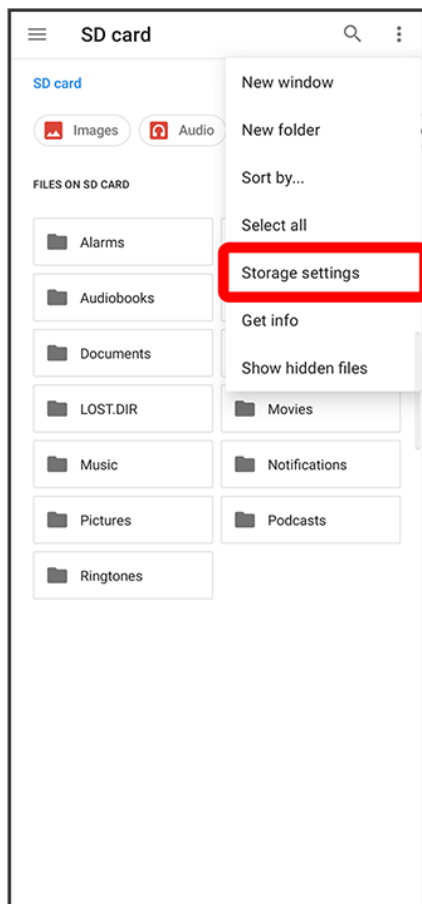 

6

Format






7

## FORMAT SD CARD



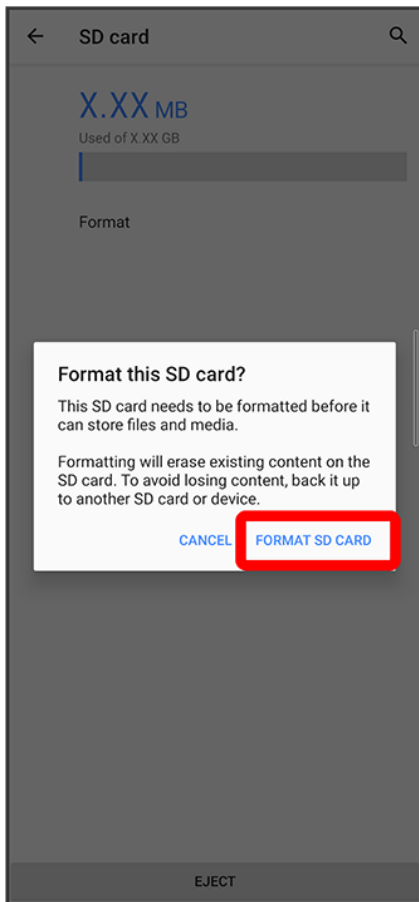 

8

Done

 All data on SD Card is erased.

### **Cautions when Formatting SD Card**

Observe the following when formatting SD Card.


- Formatting erases all data on SD Card. Carefully check any SD Card that was used on another device before formatting.
- Charge Internal Battery while formatting, or format with adequate battery charge.

 
## Unmounting SD Card

Always unmount SD Card before removing.



1


In Home Screen,  (Settings)

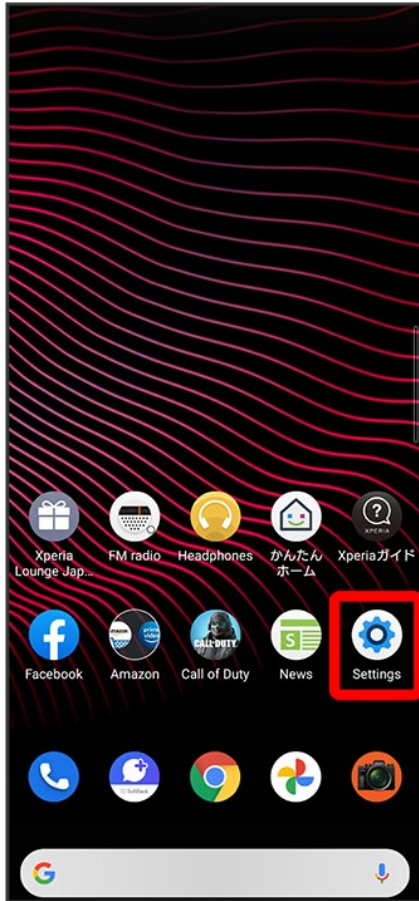

2

 
Storage



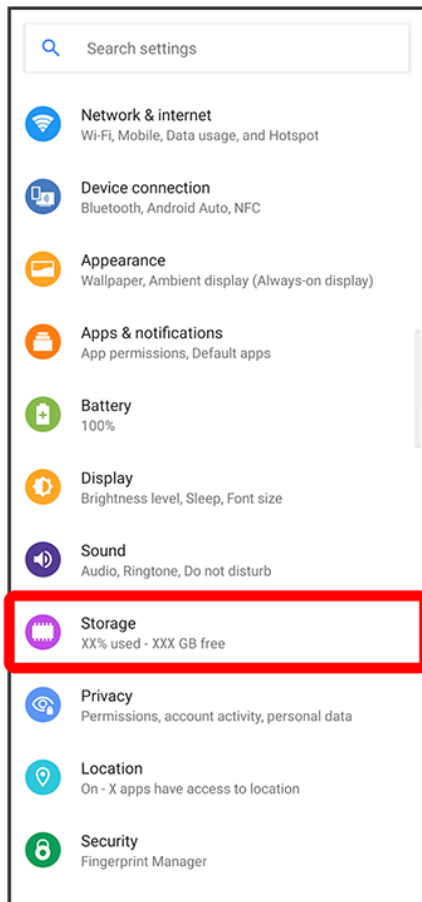


 for "SD card"



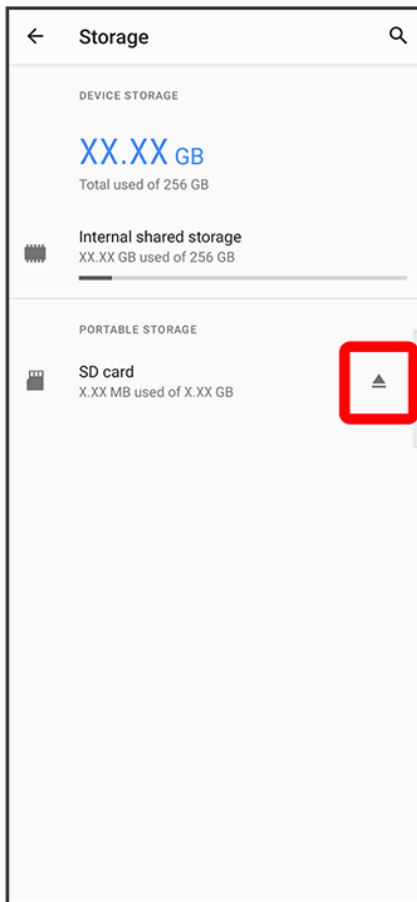 

 "Ejected" appears. SD Card is unmounted.

## Removing SD Card

 
Always unmount SD Card beforehand. For details, see "Unmounting SD Card."

1

---

Pull Tray out from handset



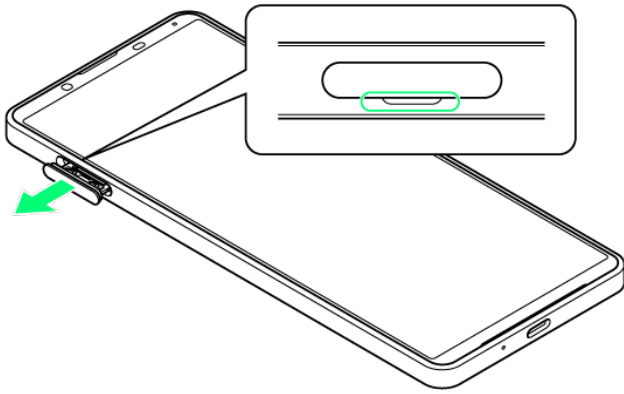


- Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

2

---

 Remove SD Card from Tray

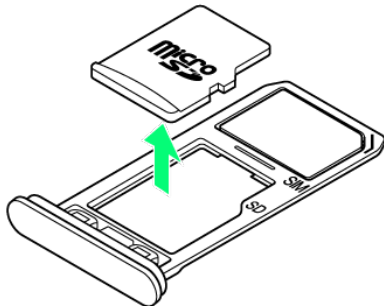


3

---

 Holding handset held level, press Tray in straight



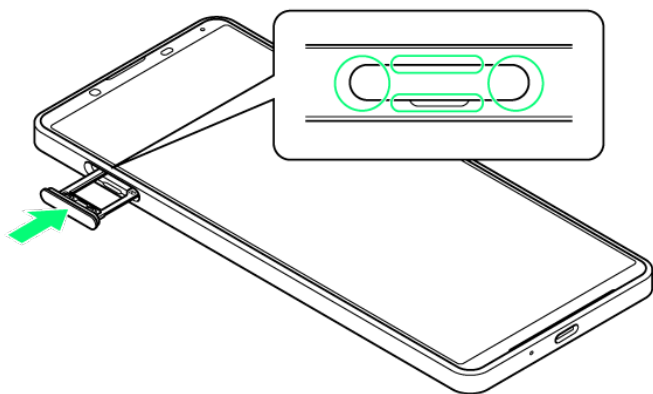

🚩 SD Card is removed.

- Check Tray orientation.
- Press firmly where circled ○, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.



# Charging Internal Battery

---

↓ [Charging with AC Charger](#)

---

## **Charging Cautions**

Never connect USB Type-C plug while handset or peripheral equipment is wet.

 
## Charging with AC Charger

Be sure to use an AC Charger specified by SoftBank. For information on AC Charger and other peripheral devices, see SoftBank Website.

Charging with AC Charger (USB Type-C™ rapid charging AC Charger with USB PD capability [ZSDBAS] (SB-AC20-TCPD)) is described as an example.

1


Insert USB Type-C connector of AC Charger straight into USB Type-C Port

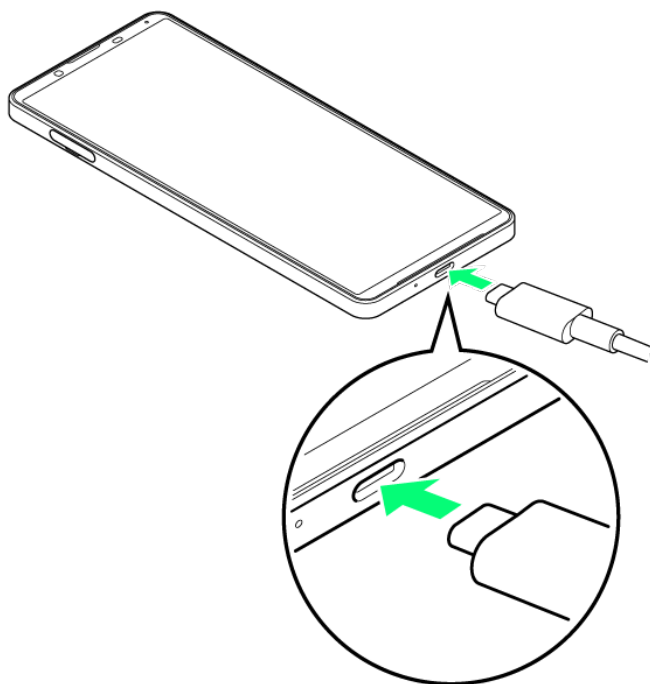



2

 
Unfold power plug of AC Charger and plug into household AC

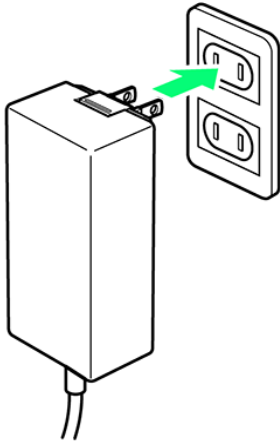

🚩 Charging start sound sounds and Notification Lamp on handset lights up when charging starts.

3

 When charging is complete, unplug AC Charger and remove USB Type-C connector of AC Charger straight from handset

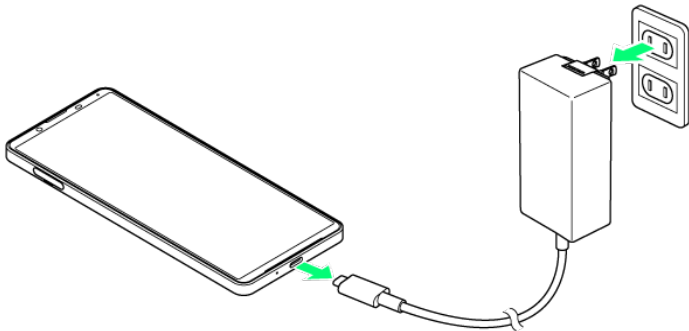

🚩 Charging ends.



# Power On/Off

---

 
↓ Powering On


↓ Powering Off

## Powering On

1

Long Press Power Key until handset vibrates

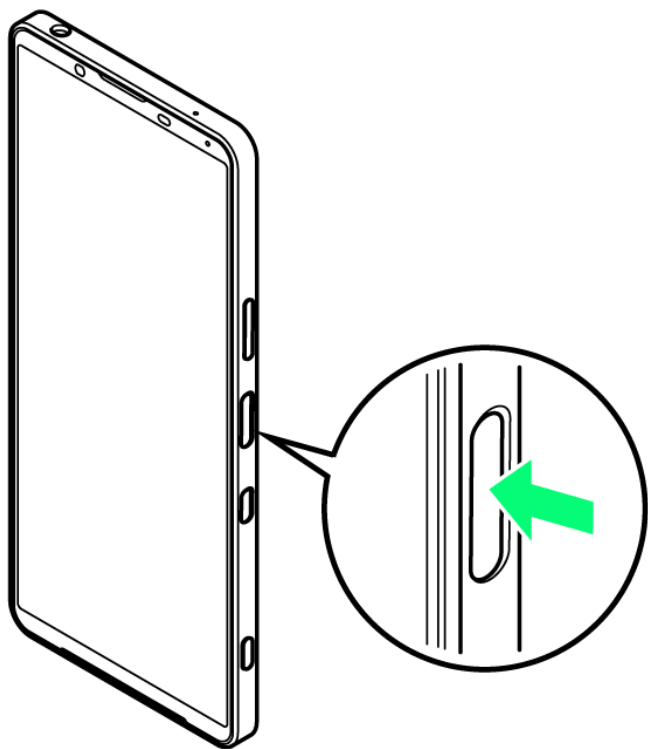

 Lock Screen appears.


- For details on unlocking screen, see "Unlocking Screen."
- Startup wizard appears for the first time handset is powered on. For details on initial settings, see "Making Initial Settings."
- Battery level is not sufficient if low battery indicator appears when Power Key is Pressed with handset powered off. Charge Internal Battery.



# Powering Off

 1

Long Press Power Key

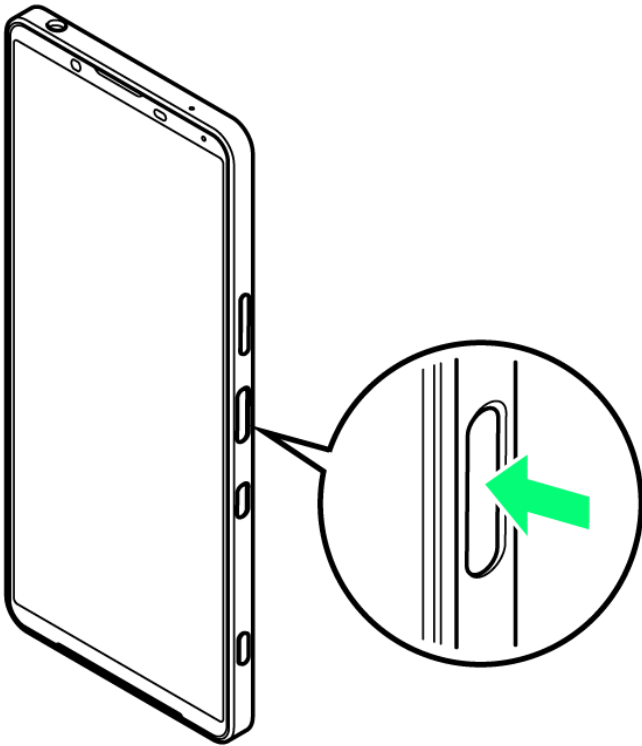

2

Power off





🚩 Handset powers off.



# Making Initial Settings

 
When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google™ account, and other settings. Follow onscreen instructions to set items.

↓ Making Initial Settings

## Making Initial Settings

1


日本語 → English → United States → GET STARTED

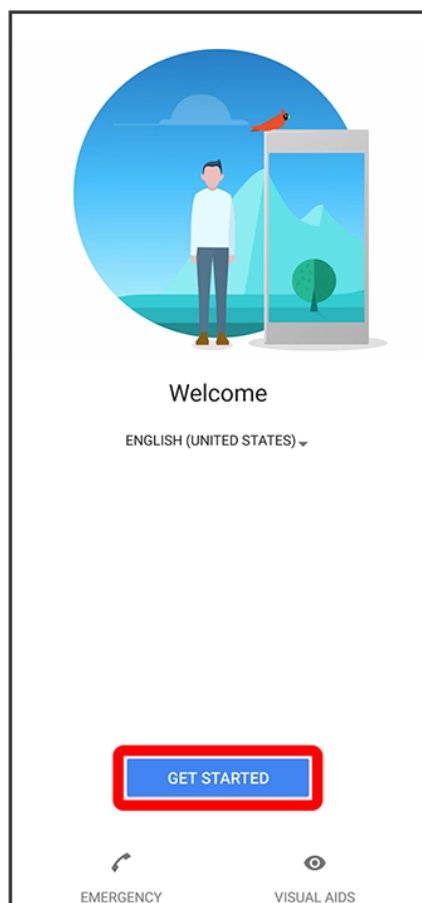



2

Set Important information → Accept



Important information

☒

I am aware that [Data charges](#) may apply

☒

Yes, I want to help improve Xperia by sharing [Detailed Diagnostics](#).

 
This personal data will be handled appropriately according to the Xperia [Privacy Policy](#).

Accept

3

Follow onscreen instructions to set Wi-Fi



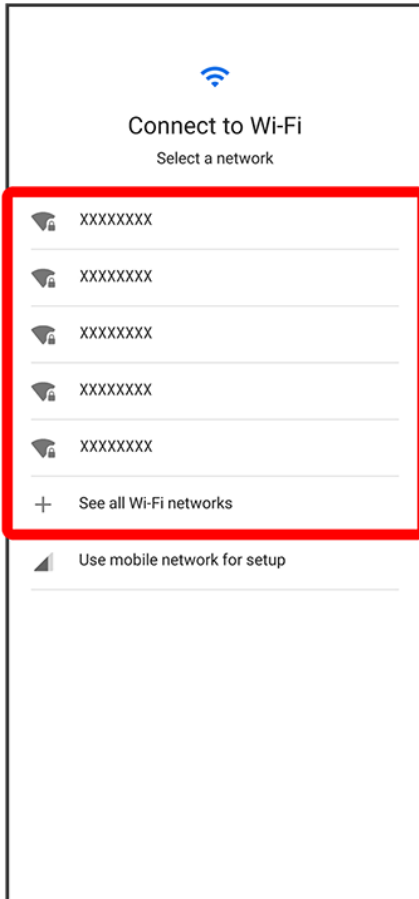

- To skip Wi-Fi settings, Tap **Use mobile network for setup**. Continue by following onscreen instructions.

4

Follow onscreen instructions to transfer data






- To set up handset new, Tap **Don't copy**.
- To copy data from another handset on which a Google account is set, Tap **Next**, then follow onscreen instructions.

## 5

 ---

Follow onscreen instructions to set a Google account



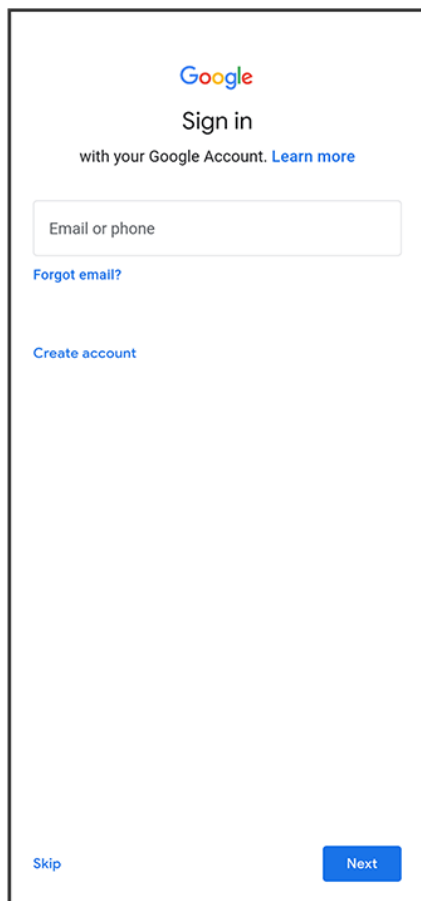

- For details on Google accounts, see "Setting a Google Account."
- If not making Google account settings, Tap **Skip**.

6

---

Select items to set ➔ **Accept**



Use location

▼

Allow apps and services with location permission to use your device's location. Google may collect location data periodically and use this data in an anonymous way to improve location accuracy and location-based services.

☒

Allow scanning

▼

Allow apps and services to scan for Wi-Fi networks and nearby devices at any time, even when Wi-Fi or Bluetooth is off.

☒

Device maintenance

Send usage and diagnostic data

▼

Help improve your Android device experience by automatically sending diagnostic, device, and app usage data to Google. This will help battery life, system and app stability, and other improvements. Some aggregate data will also help Google apps and partners, such as Android developers. If your additional Web & App Activity setting is turned on, this data may be saved to your Google Account.

☒

Install updates & apps

▼

By continuing, you agree that this device may also automatically download and install updates and apps from Google, your carrier, and your device's manufacturer, possibly using cellular data. Data rates may apply. Some of these apps may offer in-app purchases.

 
☒

Tap "Accept" to confirm your selection of these Google services settings.

Accept

Follow onscreen instructions to set screen lock / unlocking using fingerprint



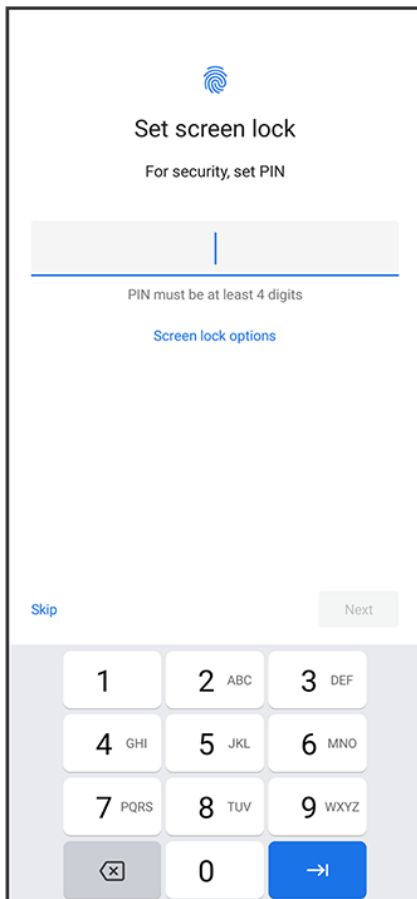


- To not set, Tap **Skip**.
- A screen lock is required after restarting handset, fingerprint is not recognized, etc. Do not forget to set.

8

---



Follow onscreen instructions to set Google Assistant/Voice Match/Google Pay





# Google Assistant

The new way to talk to Google




Tell me about my day

---

Help your Assistant customize your experience by turning on these settings.


●●●●●@gmail.com



**App info from your devices**

Saves information about the apps installed on your signed-in devices to make them easier to interact with when using your Assistant or Google Search

▼



**Contact info from your devices**

Saves information about your contacts from your signed-in devices, including whether you contact them often, to make them easier to interact with across Google services regardless of which device you're using

 
▼

---

This data may be saved and used in any Google service where you are signed in to give you more personalized experiences.

[No thanks](#)[Turn on](#)



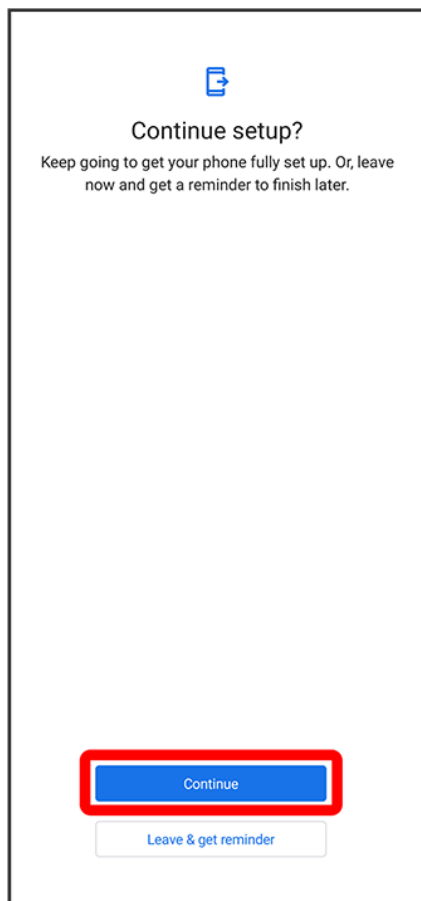

- To complete setup later, Tap **Leave & get reminder**.

10

OK

 




11

Next



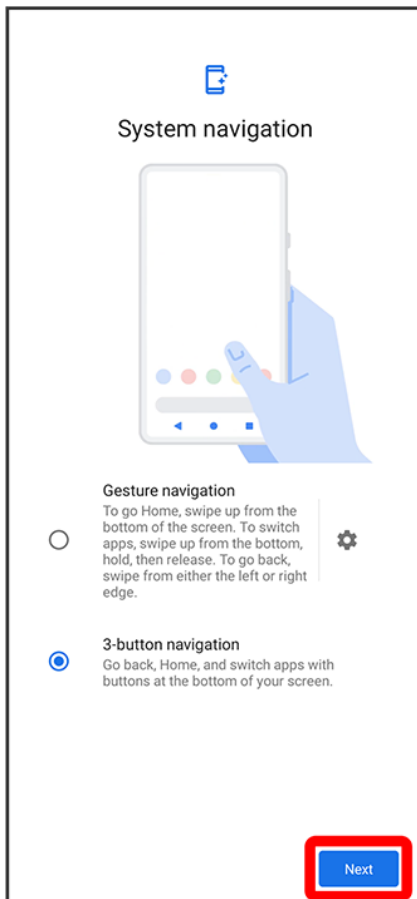


- To use gesture action, Tap **Gesture navigation**.

12

---

 Follow onscreen instructions make other settings



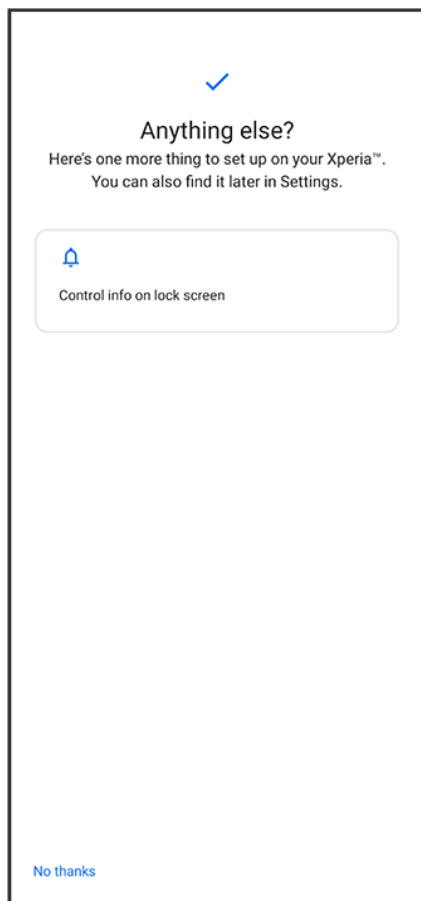


- To not make other settings, Tap **No thanks**.

13

---

**FINISH**



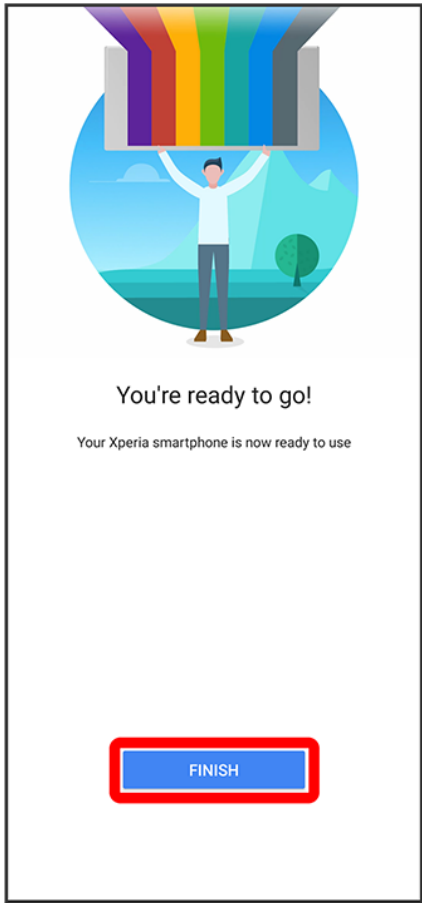 

🚩 Settings are complete.



# Setting a Google Account

---

Use a Google account and get more convenience with Google services. A Google account is required to use some services or fully use some applications.

---

↓ [Creating a Google Account](#)

---

↓ [Logging In with a Google Account](#)

---


## Google Account Cautions

Be careful not to forget your Google account mail address or password.

## Creating a Google Account

1

---

In Home Screen,  (Settings)

 




2

## Accounts




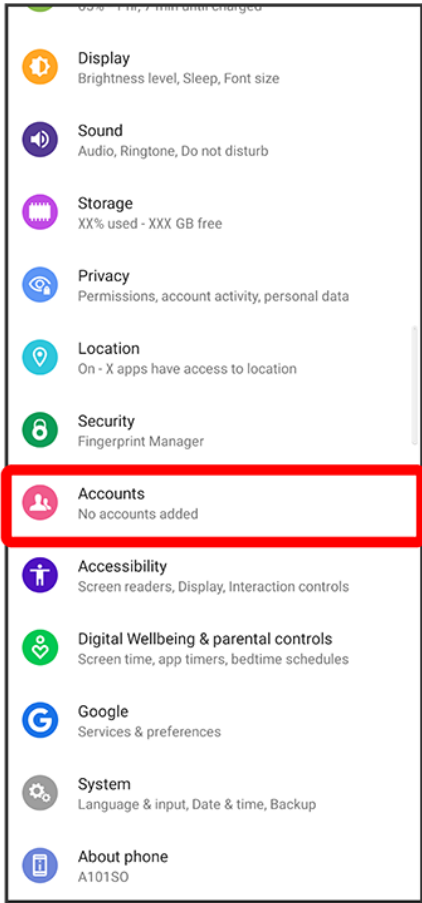

3

 Add account




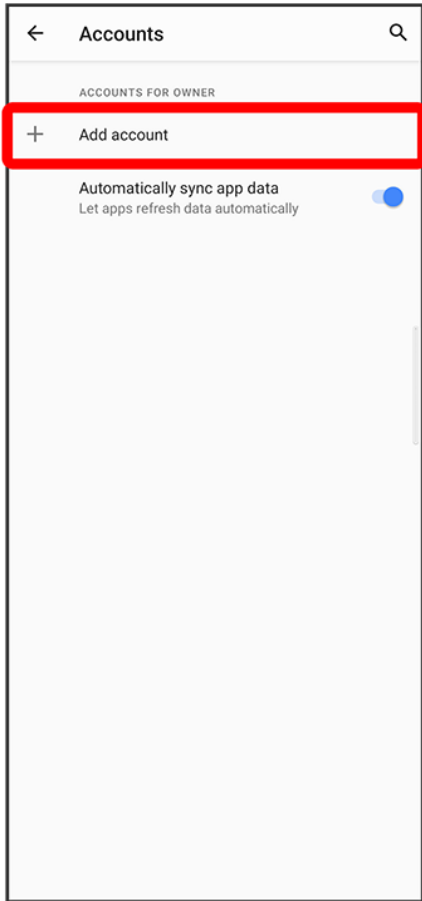


4

 Google



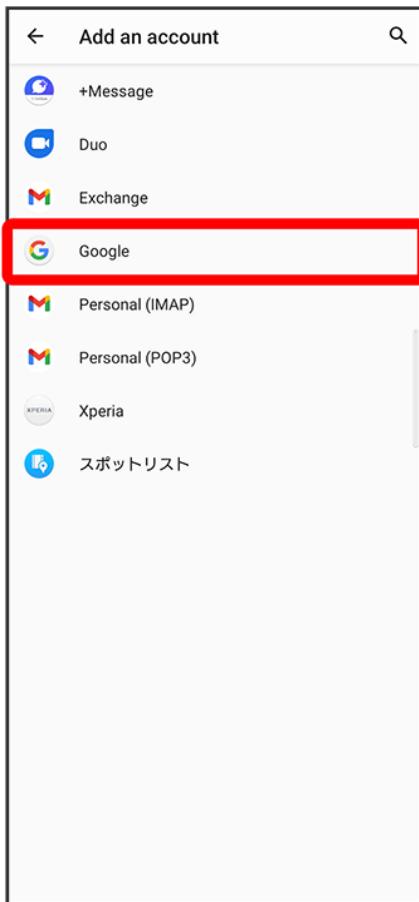

 Window for logging in to a Google account opens.

 
- If fingerprints are already saved, screen for fingerprint authentication may appear. Hold finger to sensor to authenticate fingerprint.
- If method for unlocking screen is "Pattern" / "PIN" / "Password," screen for unlocking screen lock may appear. Enter method for unlocking screen.

5

---

Create account




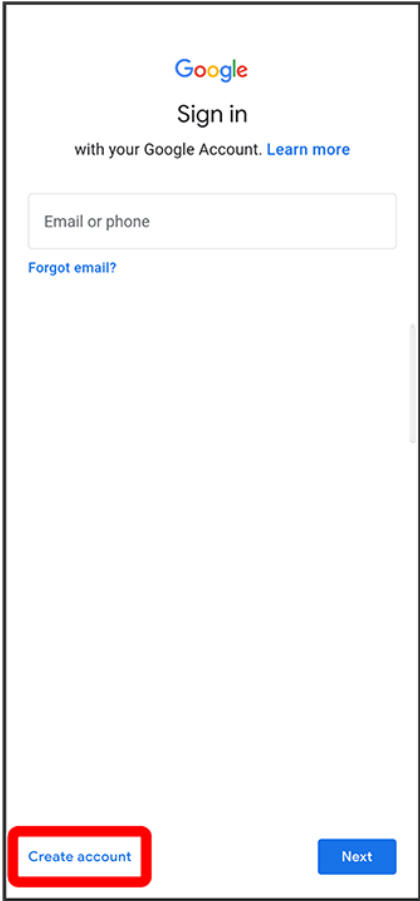

6

 For myself



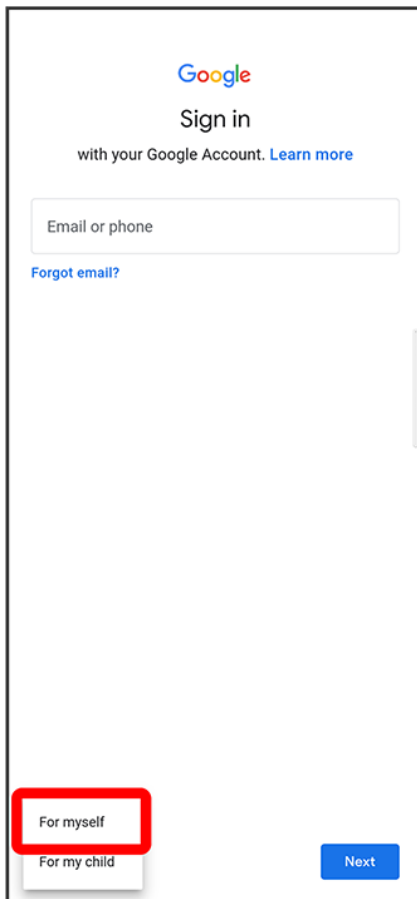

- To create a child's account, Tap **For my child** then follow onscreen instructions.

7

Enter First name ➞ Last name ➞ **Next**



Google

Create a Google Account

Enter your name

First name

XXXX

Last name

XXXX

Next

q w e r t y u i o p  
a s d f g h j k l  
z x c v b n m  
?123 , .

8

Enter date of birth → Select gender → Next



Google

Basic information

Enter your birthday and gender

Month

January

Day

1

Year

19XX

Gender


Male

Next

9

Select Gmail™ address➡Next



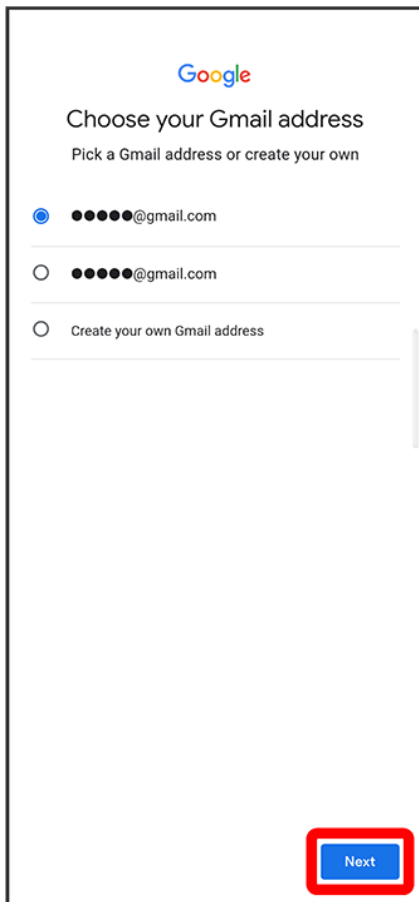


- To create a Gmail address, **Create your own Gmail address** → Enter username (mail address) → **Next**.

10

 Enter password → **Next**



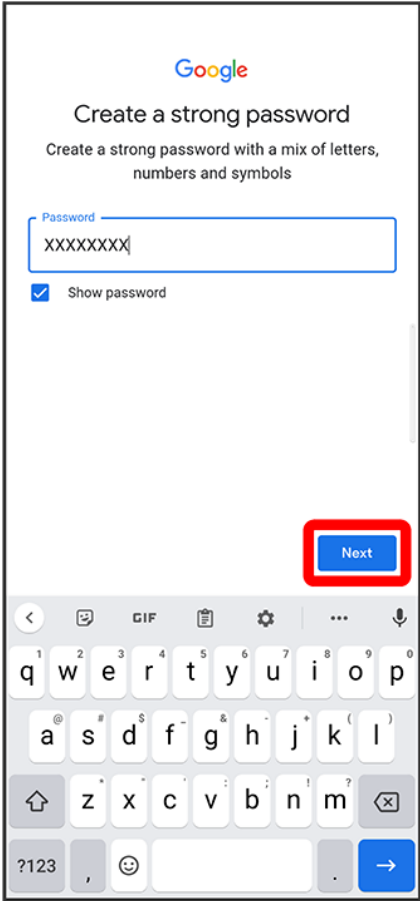




11

Yes, I'm in





If you like, you can add this phone's number to your account for use across Google services. [Learn more](#)



For example, your number will be used to

-  Reset your password if you forget it
-  Receive video calls & messages
-  Make Google services, including ads, more relevant to you

How it works

-  Google will occasionally verify your number by exchanging your device info with your carrier or via SMS (charges may apply)
-  Any number verified on this device will be added to your Google Account

You're in control

-  This won't make your number public
-  You can always change your number, control how it's used, or remove it in your Google Account ([account.google.com/phone](#))

[More options](#)

 
[Skip](#) [Yes, I'm in](#)

- To not add a phone number, Tap **Skip**.
- To add a phone number only for security protection, Tap **More options**. Continue by following onscreen instructions.

12

Next



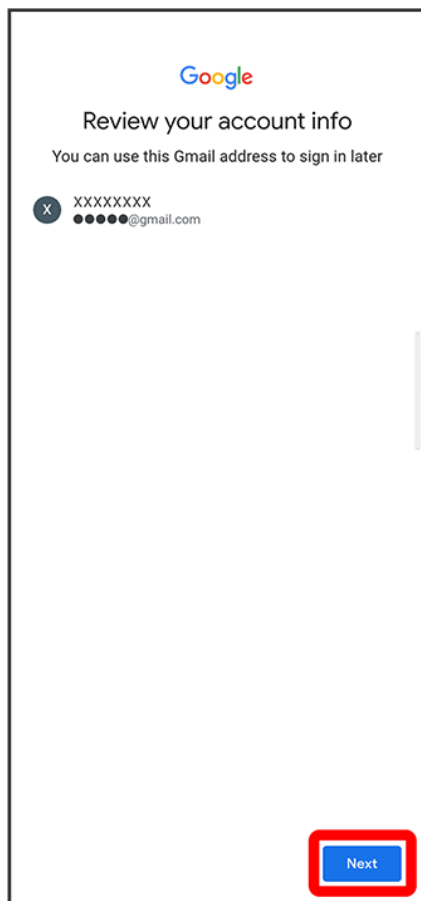

13

---

Check the privacy policy and terms of usage, **I agree**



Why we process it

We process this data for the purposes described in [our policy](#), including to:

- Help our services deliver more useful, customized content such as more relevant search results;
- Improve the quality of our services and develop new ones;
- Deliver personalized ads, depending on your account settings, both on Google services and on sites and apps that partner with Google;
- Improve security by protecting against fraud and abuse; and
- Conduct analytics and measurement to understand how our services are used. We also have partners that measure how our services are used. [Learn more](#) about these specific advertising and measurement partners.

Combining data


We also combine this data among our services and across your devices for these purposes. For example, depending on your account settings, we show you ads based on information about your interests, which we can derive from your use of Search and YouTube, and we use data from trillions of search queries to build spell-correction models that we use across all of our services.

You're in control


Depending on your account settings, some of this data may be associated with your Google Account and we treat this data as personal information. You can control how we collect and use this data now by clicking "More Options" below. You can always adjust your controls later or withdraw your consent for the future by visiting My Account ([myaccount.google.com](#)).

More options

I agree

 
 A Google account is created.

14

Set Google service  Accept

56/67  
Getting Started



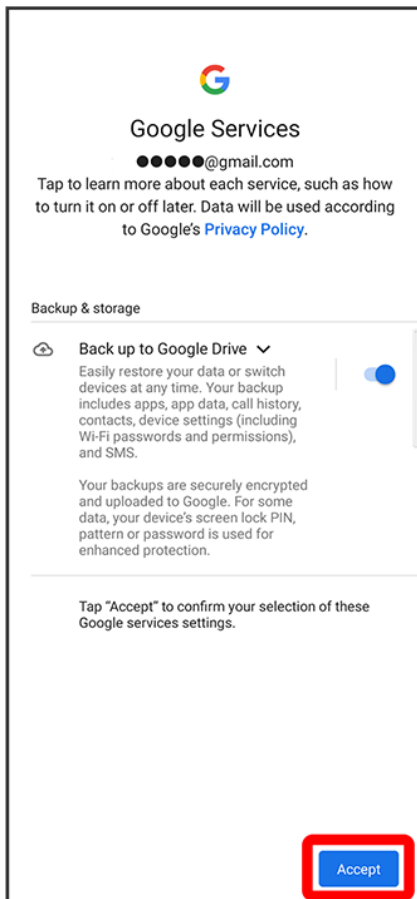

🚩 Account is created.

## Logging In with a Google Account

1

In Home Screen, ⚙️ (Settings)

 




2

## Accounts



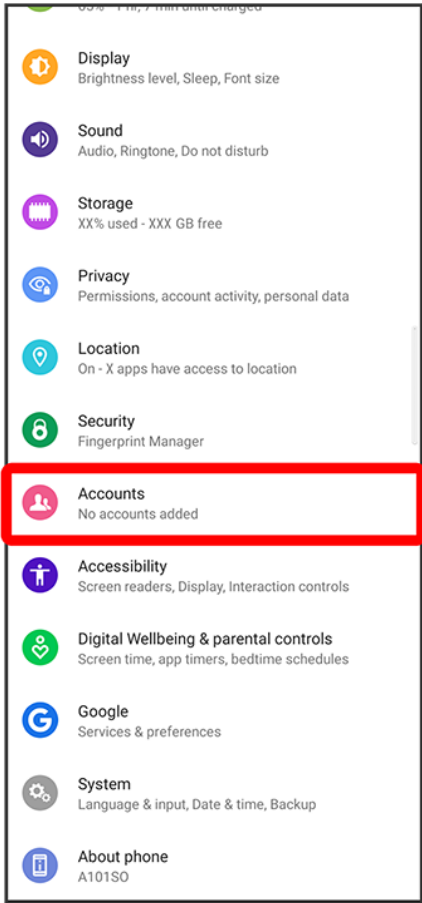

3

Add account

 





4

Google



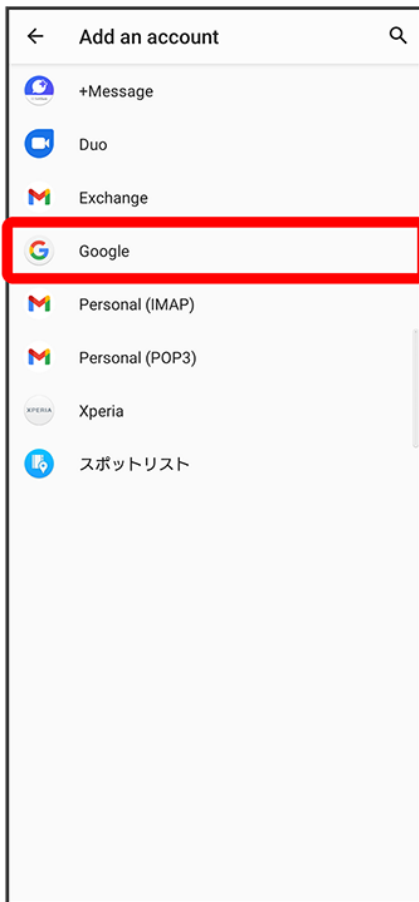


 Window for logging in to a Google account opens.

 
- If fingerprints are already saved, screen for fingerprint authentication may appear. Hold finger to sensor to authenticate fingerprint.
- If method for unlocking screen is "Pattern" / "PIN" / "Password," screen for unlocking screen lock may appear. Enter method for unlocking screen.

5

---

In window for logging in to Google account, enter mail address  **Next**




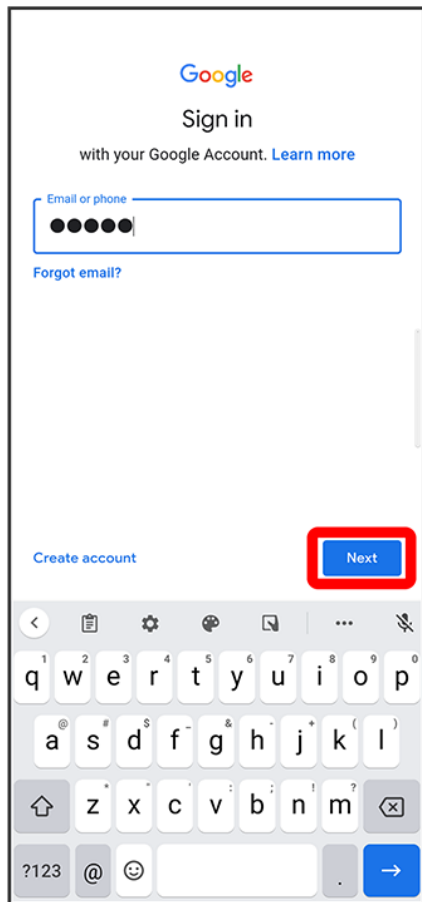

6

 Enter password➡Next




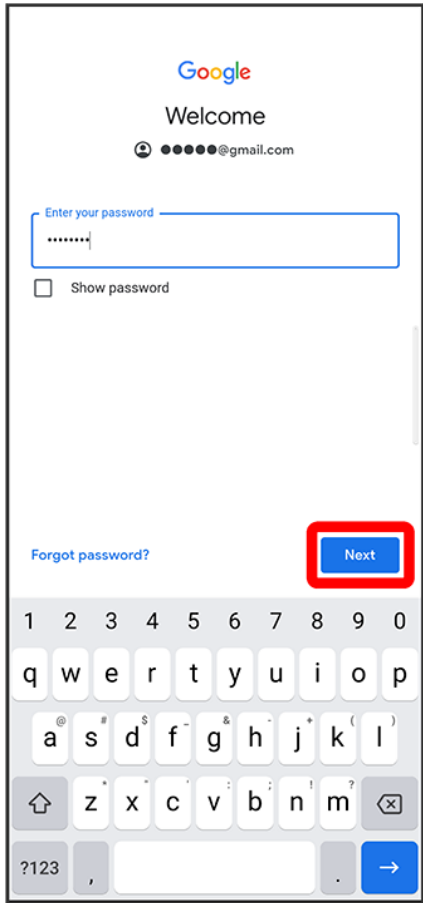


7

 Follow onscreen instructions



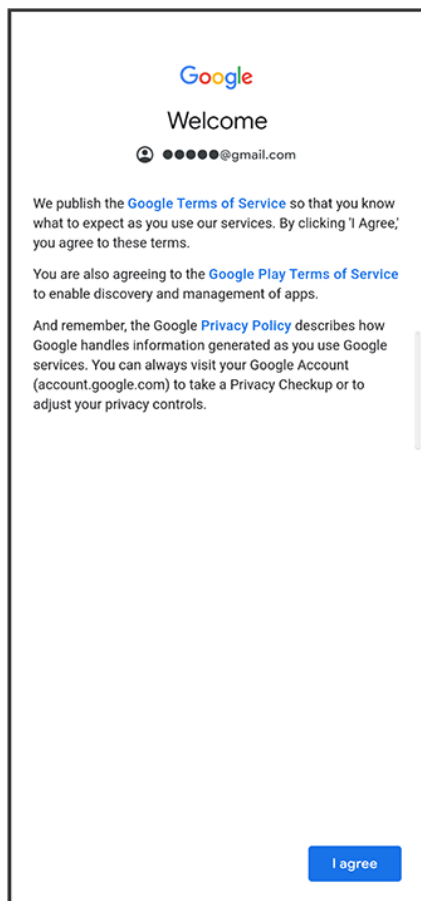

 You are logged in to your Google account.



# Locking Screen

↓ Screen Lock

 
↓ Unlocking Screen

## Screen Lock

Display goes out after a set period of inactivity to save battery power (screen lock).

This also prevents accidental Touchscreen operation.

While Display is off (screen is locked), Press Power Key for Lock Screen.

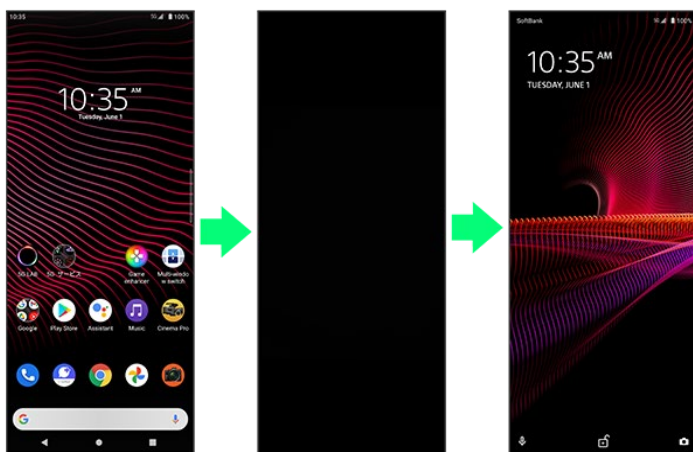

- To activate Screen lock manually, Press Power Key when Display is turned on.



### When Screen Locks during Music Playback

 
Music playback continues. While Display is off (screen is locked), Press Power Key for music panel in Lock Screen. Use pause, next song, etc. (operation may differ with application).


## Unlocking Screen

1

While Display is off (screen is locked), Press Power Key



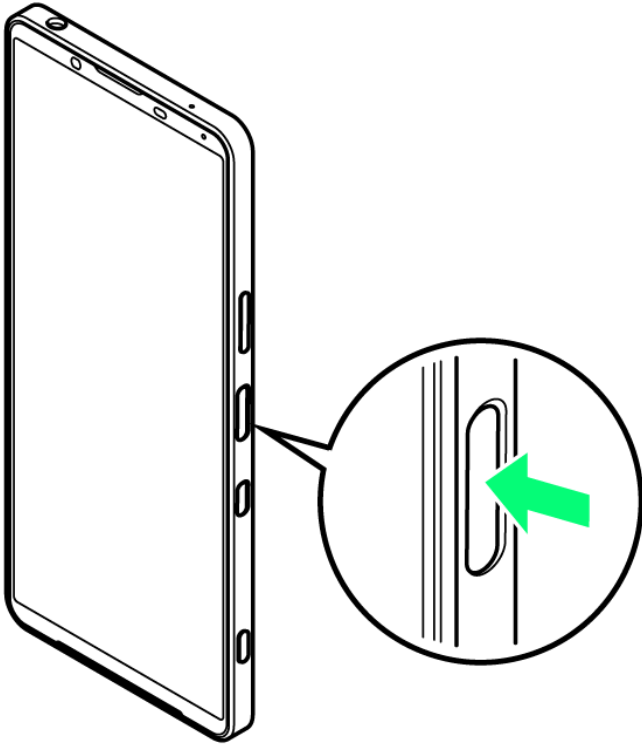

 Lock Screen appears.

 
- Alternatively, if Ambient display is enabled, Double-Tap Ambient screen or Press Power Key. For details on Ambient display, see "Appearance Settings."

2

---

Flick screen up



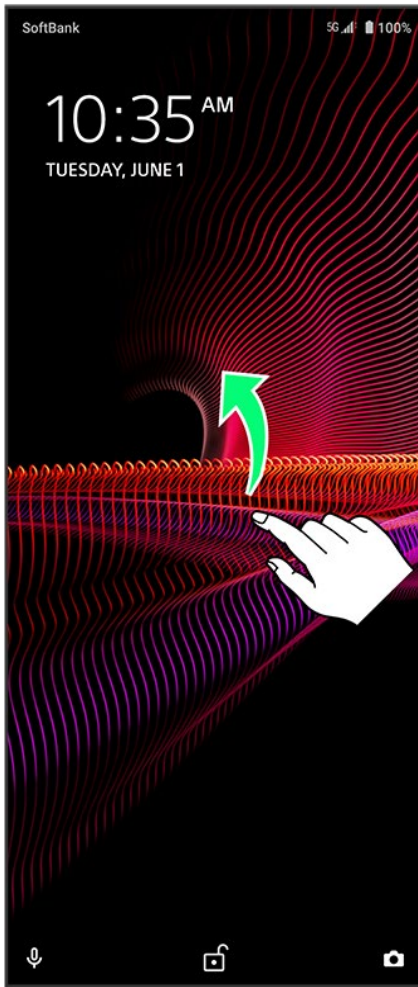

Screen is unlocked.

- The method for unlocking the screen can be changed.
- For fingerprint authentication, Touch Fingerprint Sensor with authentication finger to unlock screen.



# Basic Operation

 
↓ Selecting Options and Navigating Screens

↓ Menu Operations

## Selecting Options and Navigating Screens

Tap items, icons, onscreen keys, etc. to open assigned items.


■ Tap  to go back to previous screen.

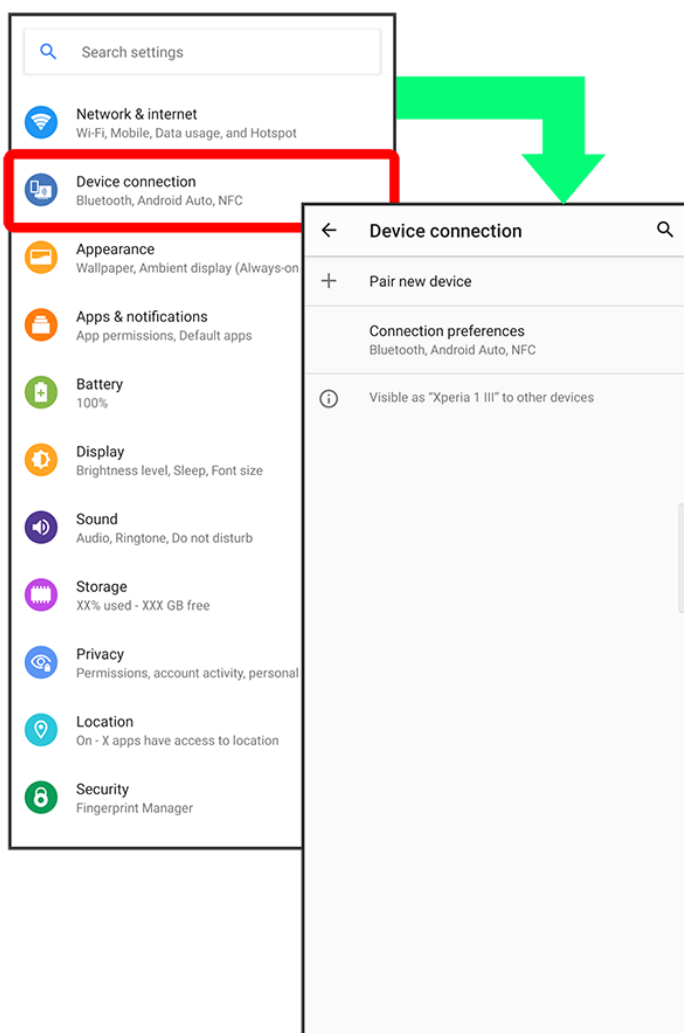




# Menu Operations

1

 
Tap  for available settings and items.

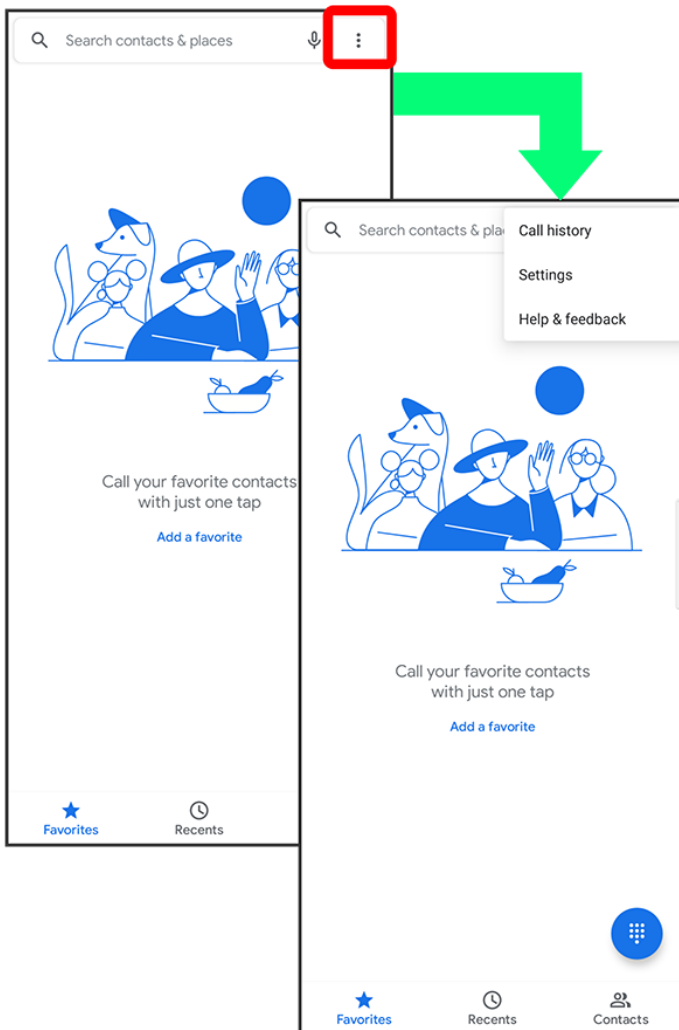

2

 Screens may also have settings and items that are available by Touching & Holding Display.



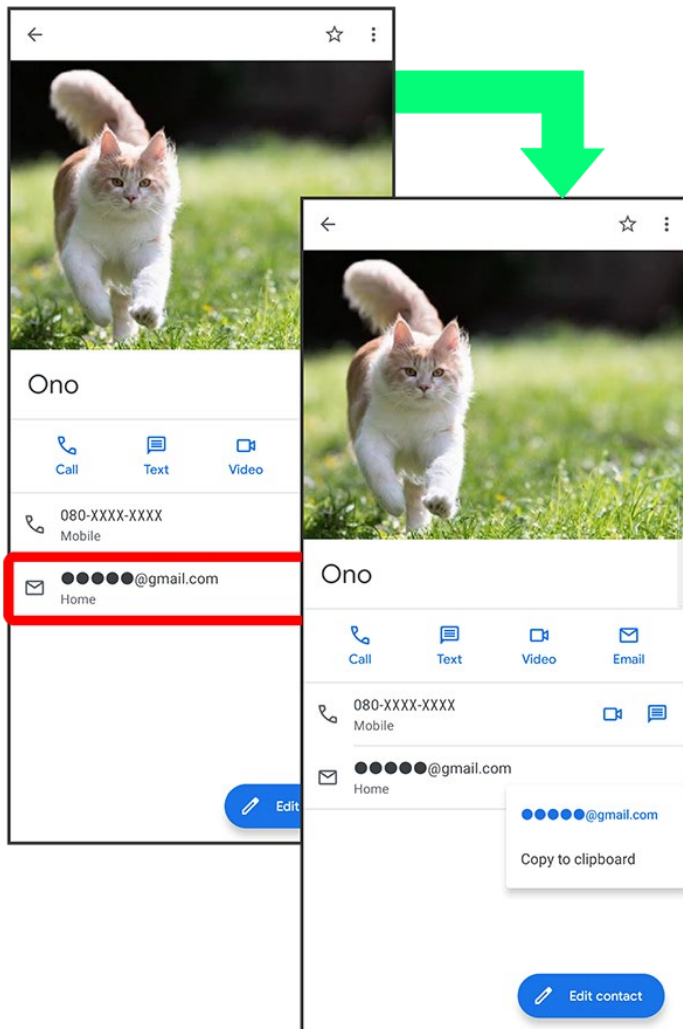



# Using Touchscreen

 
---

Handset uses a touchscreen-type Display. Operate with your fingers on Display.

- ↓ Tap
- ↓ Touch & Hold
- ↓ Drag
- ↓ Swipe/Flick
- ↓ Pinch/Spread

## Tap


Contact Display lightly and briefly.

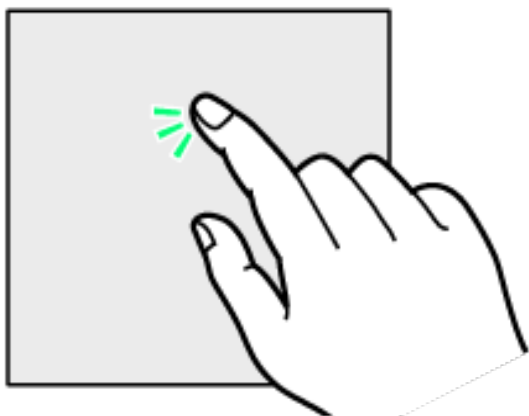

## Touch & Hold

 
Touch screen lightly and hold it for a while. When the screen changes, release finger.



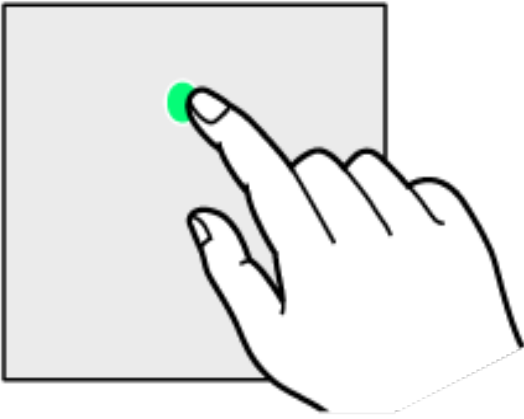

## Drag

 
Touch icon or other item lightly, move it where desired, and release finger.

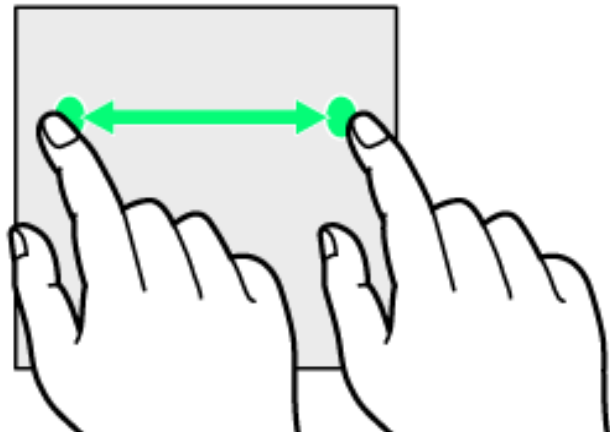

## Swipe/Flick

 
Contact Display lightly, then brush screen up/down or left/right.



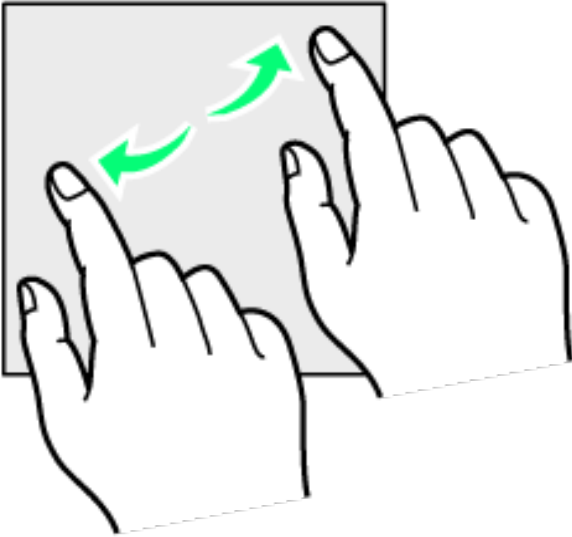

## Pinch/Spread

 Contact Display lightly, then close/widen fingers.

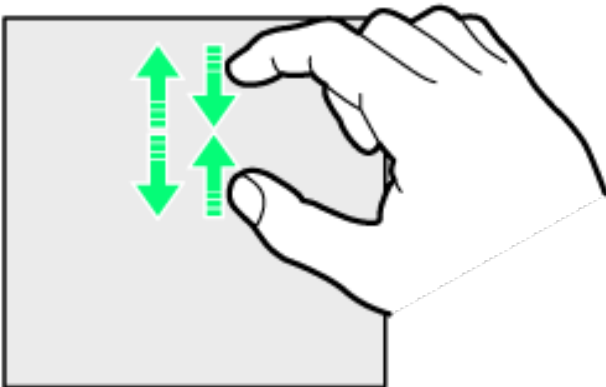



# Silent Mode

---

Set ringtone, operation sounds, etc. not to sound to avoid disturbing others around you.

---

↓ [Entering Silent Mode \(Vibrate\)](#)

---

↓ [Entering Silent Mode \(No Vibrate\)](#)

---

## Silent Mode Cautions

 
Camera shutter, video start/stop tones, Alarm, etc. sound even in Silent mode.

## Entering Silent Mode (Vibrate)

 
1

---

Press Volume Up or Down Key

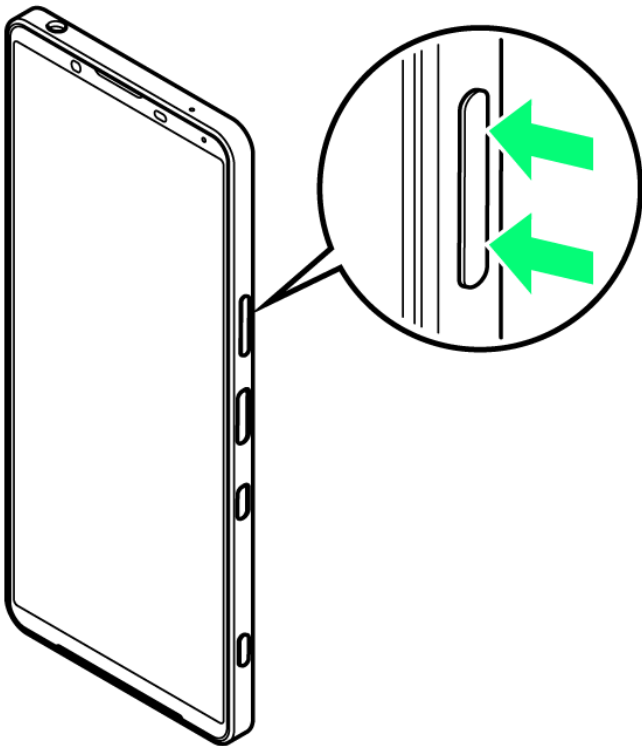



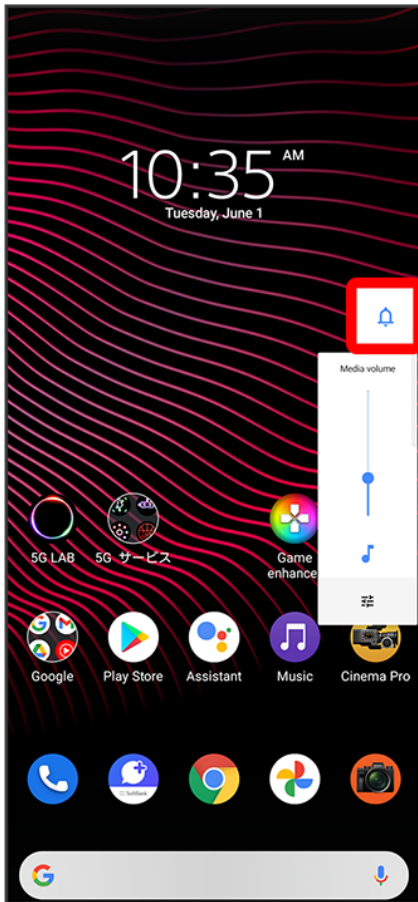




Icon changes to , and handset enters Silent mode (vibrate).

- Tap Silent mode icon to toggle between , , and .

### **Entering from Quick Settings**

 
Also use Quick Settings to enter Silent mode (vibrate).

Flick Status Bar down   ()

## Entering Silent Mode (No Vibrate)




Press Volume Up or Down Key

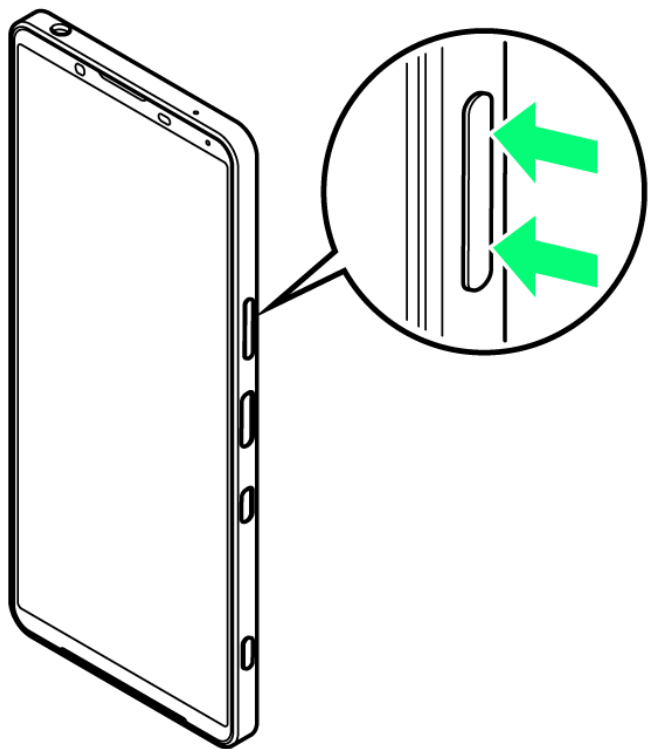

2





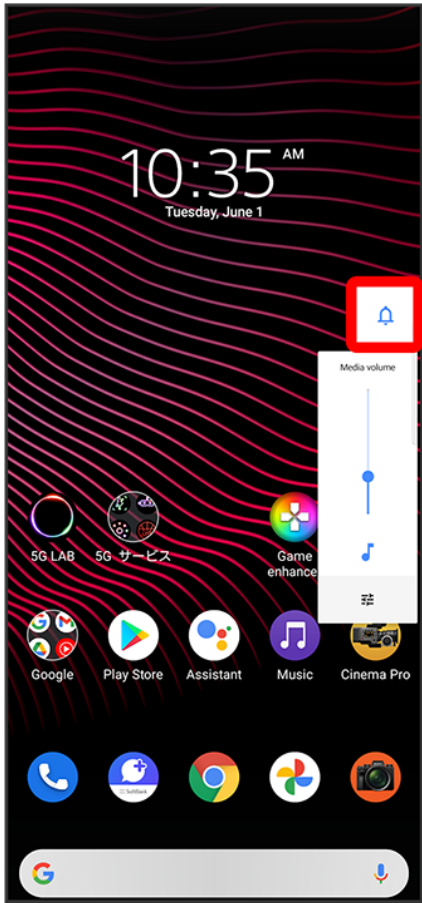 


 Icon changes to  , and handset enters Silent mode (vibrate).

3

 While volume adjustment bar is shown, 



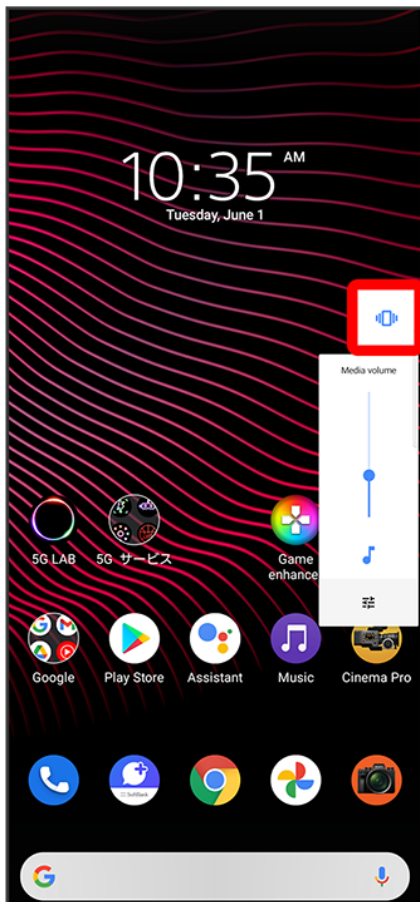






Icon changes to , and handset enters Silent mode (no vibrate).

- Tap Silent mode icon to toggle between , , and .

## **Entering from Quick Settings**

Also use Quick Settings to enter Silent mode (no vibrate).

Flick Status Bar down     ()



# Airplane Mode

---

Disable all functions that emit signals. Handset stays powered on.

---

 
↓ [Using Airplane Mode](#)

---

 
## Using Airplane Mode


1

Flick Status Bar down

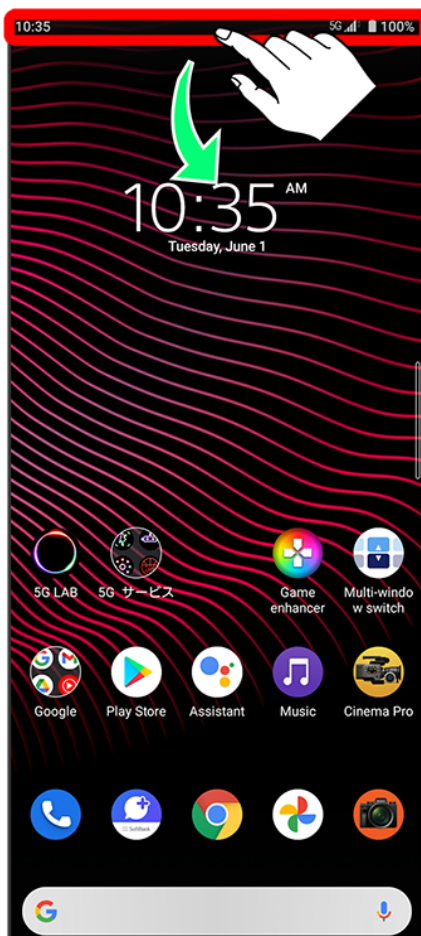



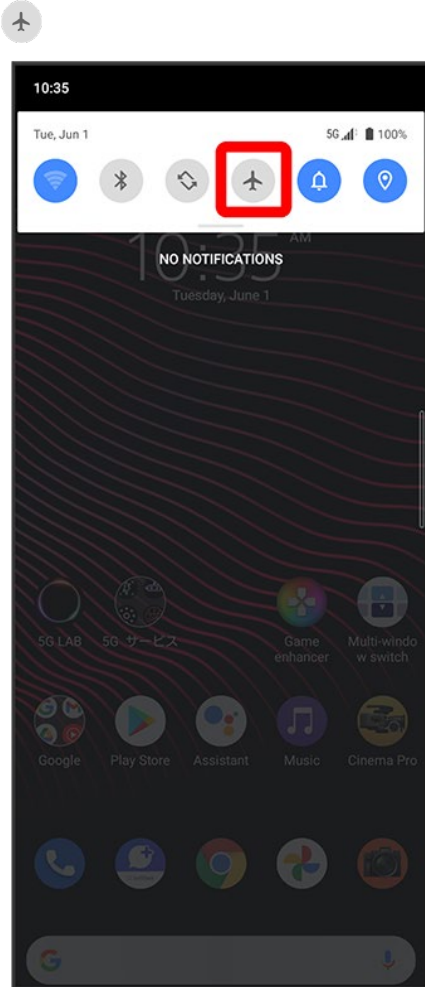

 Handset is in Airplane mode.

- Use same operation again while in Airplane mode to cancel.



# Text Entry

---


↓ [Keyboards](#)

↓ [QWERTY Keyboard Layout](#)

↓ [Switching Character Types \(Entry Modes\)](#)

## Keyboards

Enter text with onscreen QWERTY keyboard by Tapping each character individually, or by using Glide typing feature and sliding finger from character to character (on by default). Touch & Hold each character for extended characters.

- Tap  to hide keyboard.

### **Keyboard Operations**

#### **Setting Keyboard to Use**

In a text entry window,  →  →  →  → 

- Set several keyboards.

#### **Switching Keyboards**

 
Set several keyboards to switch between.







In a text entry window, 

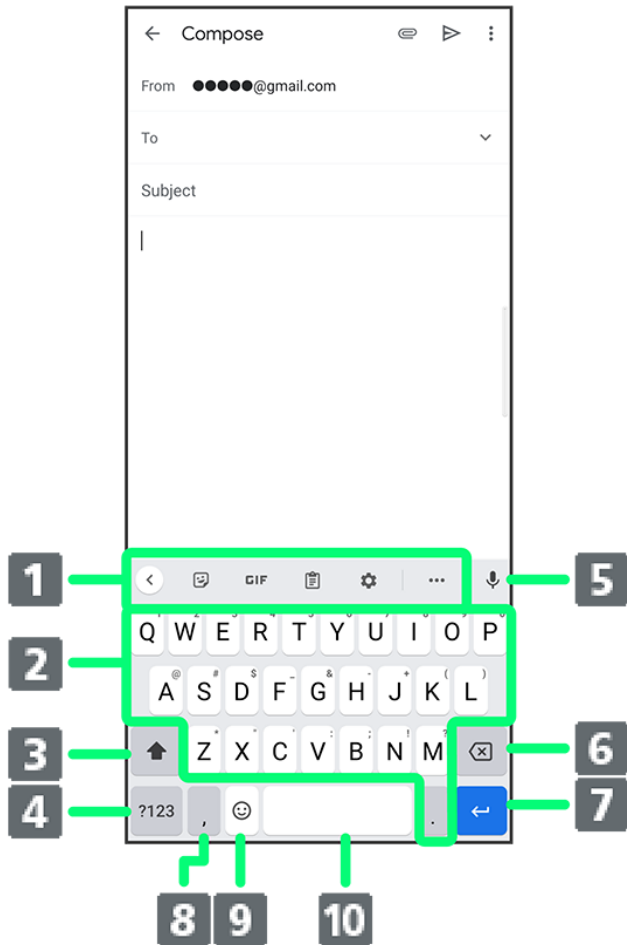- Alternatively, Long Press  →  Tap keyboard to switch to.



# QWERTY Keyboard Layout



 
- ① Use the keyboard option menu.
- ② Enter a character.
- ③ Switch between all lower case and sentence case. Double-Tap for all upper case.
- ④ Toggle entry modes.
- ⑤ Use voice input.
- ⑥ Delete a character before cursor.
- ⑦ Confirm text input or enter line break. , , , or  appears depending on application.
- ⑧ Enter a comma. Touch & Hold for text entry settings or to set one-handed mode. With several set keyboards, Touch & Hold  for emoji, emoticons, etc.
- ⑨ Show emoji, emoticons, etc. With several set keyboards,  to switch between keyboards.
- ⑩ Enter a space.






# Switching Character Types (Entry Modes)

1

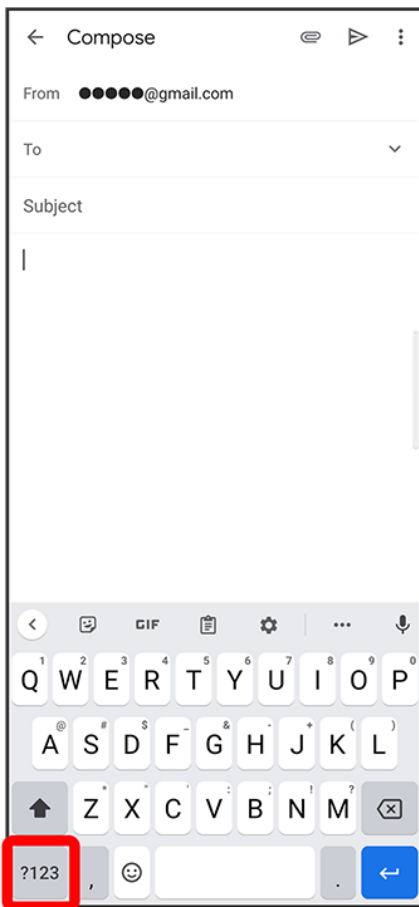In QWERTY keyboard, Tap 



 Entry mode is changed to number and symbol mode.

- To enter more symbols, Tap .
- Tap  to back to alphabet mode.



# Updating Software

---

Steps to update software depend on what is being updated in the software.  
Checking/updating does not incur transmission fees.

---

↓ [Updating Software Automatically](#)

---

↓ [Updating Software Manually](#)

---

## Software Update Cautions

### Signal Reception

Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Internal Battery becoming low during an update may cause an update failure. An update failure may disable handset.

### Saved Data/Settings

Saved data may be lost depending on condition of handset (malfunctioning, damaged, water exposure, etc.). SoftBank Corp. is not responsible for damages from loss of data.  
Updating software may revert some settings to their defaults.

### SIM PIN

If SIM PIN is enabled, a SIM PIN entry window appears after software is updated. Enter SIM PIN.

## Updating Software Automatically

Update software automatically.


When the update is complete, Tap the notification in the Notifications Window and restart handset.

 
## Updating Software Manually

Tap the software update notification in the Notifications Window and follow onscreen instructions.  
Alternatively:

1



In Home Screen,  (Settings)  System  Advanced

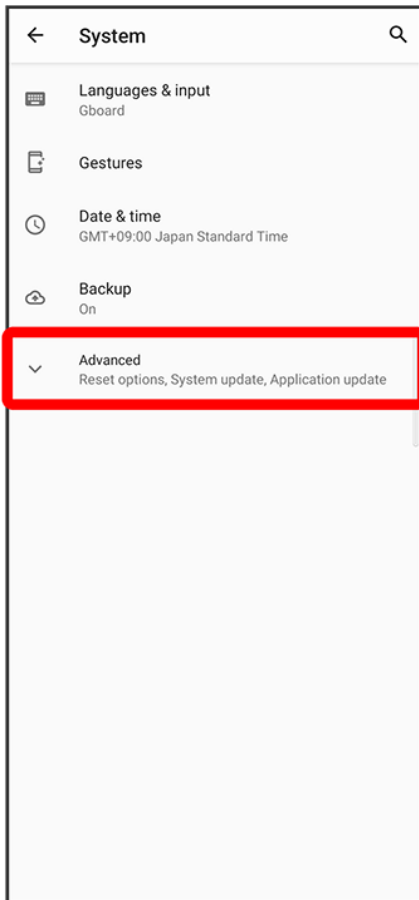


2

---

 System update



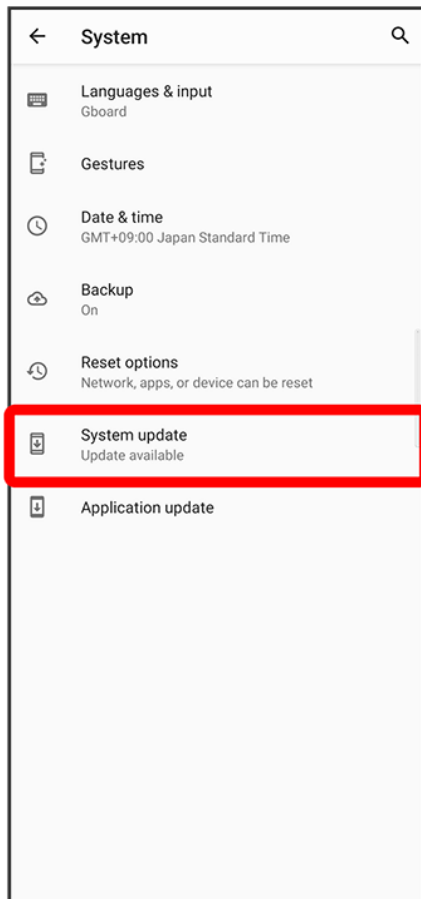

3

---

Follow onscreen instructions





## System update available

【更新内容】（ビルド番号：XX.X.X.X）

セキュリティの向上

※その他の更新も含まれております。

※インストール中は本機の電源を切らないでください。

注意事項に関する詳細は弊社ホームページをご確認ください。

Update size: XXX kB



Downloading updates over a cellular network, metered Wi-Fi, or while roaming may cause additional charges.

Download and install



Software update starts.



# Handset Screens


- Layout
- Toggling Home Screen Sheets
- Navigation Bar
- Portrait Orientation & Landscape Orientation

## Layout



| Item             | Description                                                                                 |
|------------------|---------------------------------------------------------------------------------------------|
| 1 Status Bar     | Flick down for Notifications Window. Continue and Flick screen down for Quick Settings.     |
| 2 Customize Area | Place application shortcuts, folders, widgets freely.                                       |
| 3 Dock           | Place shortcuts (applications), folders, etc. Appears even when Home Screen sheets toggled. |
| 4 Navigation Bar | Tap icons to access functions. For Navigation Bar, see "Navigation Bar."                    |

 


|                           |                                                                                                                                                              |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>5 Side Sense Bar</b>   | Open Side Sense menu, return, open Multi Window menu, etc.                                                                                                   |
| <b>6 Quick Search Box</b> | Search for applications or search  (Google) with entered words and phrases. |

## Toggling Home Screen Sheets

Customize each Home Screen sheet with application shortcuts, widgets, etc. to make handset more convenient. Flick Home Screen left/right to toggle sheets.


■ In any Home Screen sheet, Tap  to return to Home Screen top sheet.

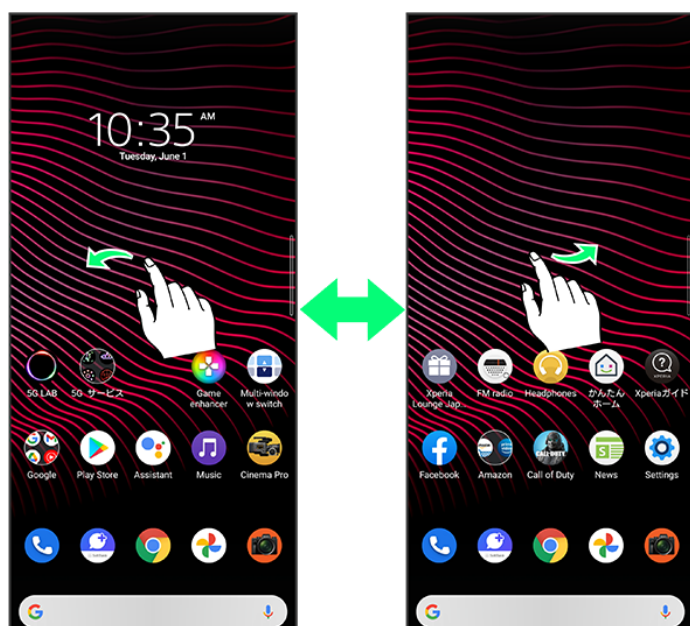

## Navigation Bar

Tap icons on Navigation Bar (Display bottom) for the following functions/operations. Also use gesture action. For details, see "System Settings."



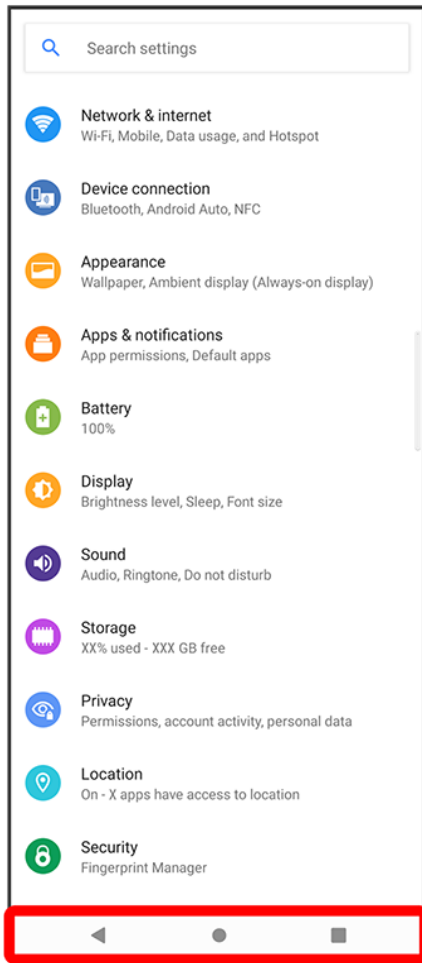 

| Item                                                                 | Description                                                                                                                                                      |
|----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>(Back)</b>                                                        | Return to previous screen. Appears as  for onscreen keyboard; Tap to close keyboard.                                                                             |
| <b>(Home)</b>                                                        | Tap for Home Screen.<br>Touch & Hold for Google Assistant.                                                                                                       |
| <b>(History)</b>                                                     | Show history of used applications to activate/exit them. Also capture screenshot of shown application, view in a pop-up window, or activate multi-window switch. |
| <b>(To landscape orientation) /</b> <b>(to portrait orientation)</b> | Appears when handset and screen orientations are different. Tap  for horizontal orientation, and  for vertical orientation.                                      |


# Portrait Orientation & Landscape Orientation

 appears on Navigation Bar when handset is rotated sideways. Tap to change screen to landscape orientation. To change to portrait orientation, rotate handset vertically and Tap . Set "Auto-rotate screen" to on to change screen to landscape orientation automatically when



handset is rotated horizontally. For details on Auto-rotate screen, see "Display Settings."

- Depending on the current screen, the orientation may not change even by changing handset orientation.

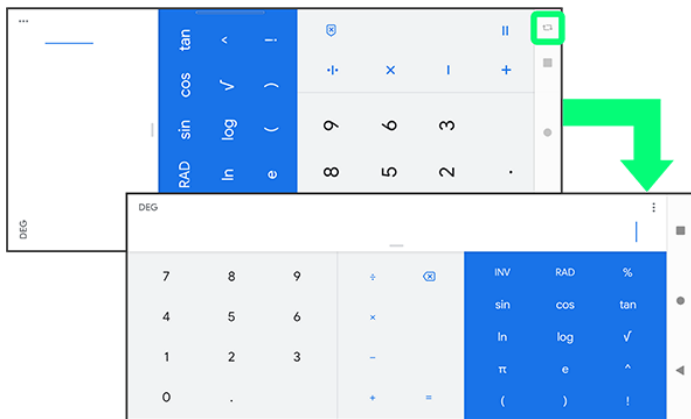




# Status Bar

Status Bar appears at the top of Display. Notification Indicators for new mail, etc. and Status Indicators for handset appear here.

- ↓ [Status Bar Layout](#)
- ↓ [Main Notification Indicators](#)
- ↓ [Main Status Indicators](#)

## Status Bar Layout



① Notification Indicators























② Status Indicators

## Main Notification Indicators

Notification Indicators appearing in Status Bar include the following.











| Indicator | Description |
|-----------|-------------|
|-----------|-------------|










|                                                                                    |                                                         |
|------------------------------------------------------------------------------------|---------------------------------------------------------|
|    | Missed Call                                             |
|    | Call Arriving/Calling/Dialing                           |
|    | Call on Hold                                            |
|    | New Answering Machine Message / Voicemail               |
|    | New Gmail                                               |
|    | New Text Message (SMS) / S! Mail / +Message             |
|    | Urgent News / Alert / etc.                              |
|    | Wi-Fi Open Network Available                            |
|    | USB Device Connected                                    |
|    | Sharing File via Bluetooth                              |
|    | Data Uploading                                          |
|    | Data Downloading                                        |
|    | Application Update Available                            |
|    | Linked to Dynamic Vibration                             |
|    | Calendar Event Reminder                                 |
|    | Alarm Sounding/Snoozing/Unchecked Alarm/Next Alarm      |
|   | Stopwatch in Use                                        |
|  | Timer in Use                                            |
|  | Battery Share Function Notification                     |
|  | Low Battery Alert (15% or less)                         |
|  | SD Card Detected/Mounting/Unmounting                    |
|  | Software Update Notice, Waiting to Restart after Update |

## Main Status Indicators

Status Indicators appearing in Status Bar include the following.

| Indicator                                                                          | Description                        |
|------------------------------------------------------------------------------------|------------------------------------|
|  | Battery Full (100%)                |
|  | Battery Charging                   |
|  | Battery Low                        |
|  | STAMINA® Mode                      |
|  | Signal Strength                    |
|  | 5G Data in Use <sup>1</sup>        |
|  | 4G LTE/4G Data in Use <sup>2</sup> |
|  | 3G Data in Use                     |
|  | No Signal                          |
|  | Airplane Mode                      |



|                                                                                  |                                                                          |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|  | Wi-Fi Connected                                                          |
|  | Wi-Fi Connected without Internet Accessibility, or Unstable Wi-Fi Signal |
|  | Bluetooth Connected                                                      |
|  | Silent Mode (vibrate)                                                    |
|  | Silent Mode (no vibrate)                                                 |
|  | Do Not Disturb <sup>3</sup> On                                           |
|  | Obtaining Current Location                                               |

- 1 Although "5G" may appear in standby (top of Display), this may change to "4G" with data communication then being by the 4G network.
- 2 Handset supports FDD-LTE (SoftBank 4G LTE) and AXGP (SoftBank 4G); indicator appears when handset is connected to either. Handset connects to SoftBank 4G first.
- 3 For details on Do Not Disturb, see "Sound Settings."



# Using Notifications Window

Check Notification Indicators and the details in Notifications Window.

 
↓ [Opening Notifications Window](#)

↓ [Notifications Window Layout](#)

## Opening Notifications Window

1

Flick Status Bar down

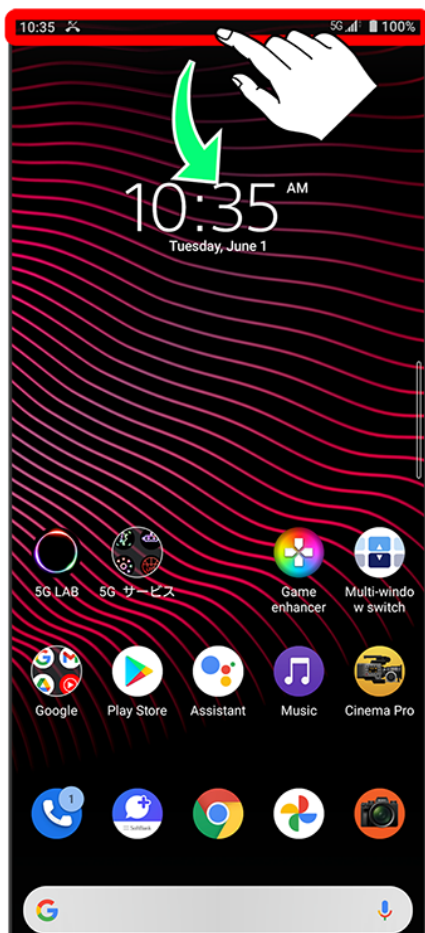


🚩 Notifications Window opens.




## + Closing Notifications Window

Flick screen up

- Alternatively, Tap  to close Notifications Window.

## Notifications Window Layout

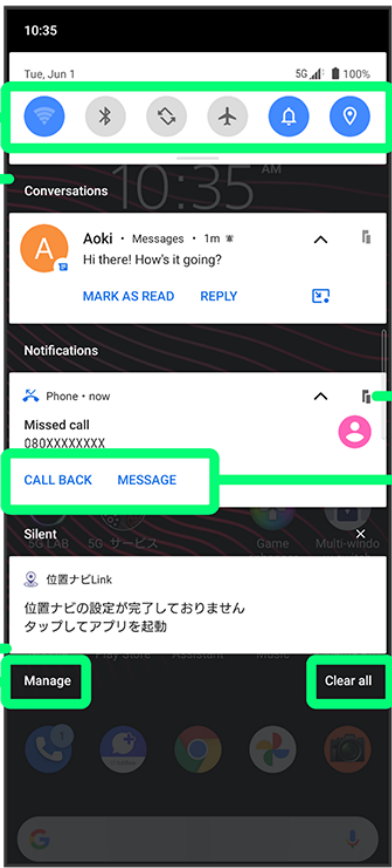

The screenshot shows the Notifications Window layout with the following callouts:





- 1: A green box highlights the top status bar area containing icons for Wi-Fi, Bluetooth, Airplane mode, and Location services.
- 2: A green box highlights the 'Conversations' section, which lists incoming messages from 'Aoki'.
- 3: A green box highlights the 'Notifications' section, which lists a missed call from '080XXXXXXX'.
- 4: A green box highlights the 'CALL BACK' and 'MESSAGE' buttons for the missed call notification.
- 5: A green box highlights the 'Manage' button at the bottom of the notifications list.
- 6: A green box highlights the 'Clear all' button at the bottom right of the notifications list.

- ① Show portion of Quick Settings
- ② Show notifications (incoming calls, etc.) and active functions<sup>1</sup>
- ③ Manage notifications<sup>2</sup>
- ④ Show in pop-up window<sup>3</sup>
- ⑤ Use notification details<sup>4</sup>
- ⑥ Delete all notifications<sup>5</sup>

- 1 Show categorized as "Conversations", "Notifications", "Silent", etc.
- 2 Notification may not be manageable depending on application or function.
- 3 Icon may not appear depending on notification details.
- 4 Available applications depend on notification. Example: with call notification, dial/send SMS to phone number that call was from.
- 5 Deletion may not be possible depending on notification details.

## + Notifications Window Operations



### Setting Notifications Not to Appear

In Notifications Window, Touch & Hold notification to set  Turn off notifications   
() for item not to show notification  Apply

- Some notifications are not changeable.

### Changing Notification Types



In Notifications Window, Touch & Hold notification to change  Priority/Default/Silent   
Apply

- Notification type is not changeable for some notifications.
- Shown types depend on the notification.



# Using Quick Settings

---

Tap icons to toggle functions on/off, etc.

---

↓ [Opening Quick Settings](#)

---

 
↓ [Quick Settings Layout](#)

---

## Opening Quick Settings


1

Flick Status Bar down

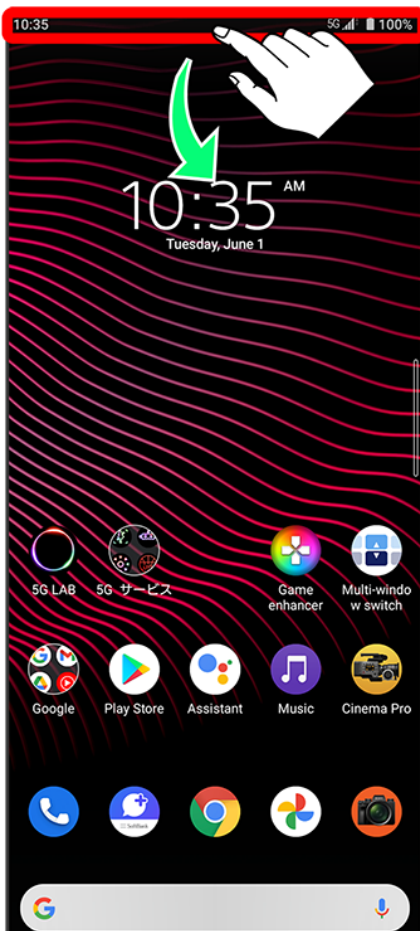



Flick screen down

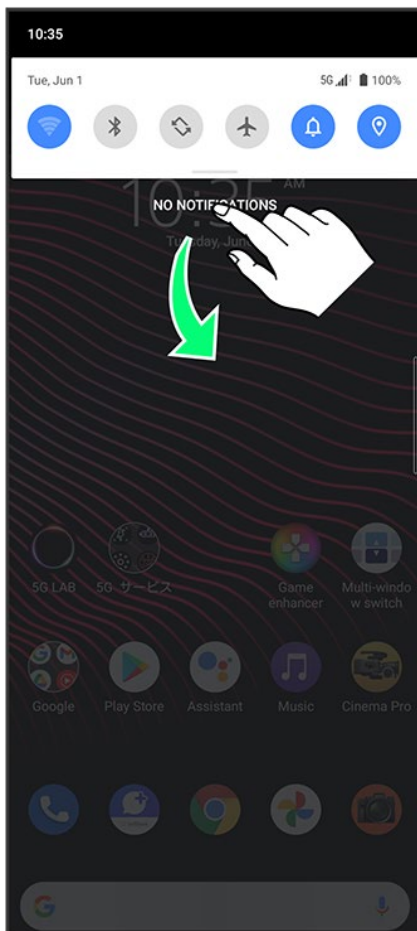 

Quick Settings opens.

- Alternatively, Flick Status Bar down using two fingers.



## Screen while Music Playing

When playing back music with Music or other application, control panel appears in Quick Settings. Play, pause, etc. and change where to output audio.



## Quick Settings



### Closing Quick Settings

Flick screen up

- Alternatively, Tap  to close Quick Settings.

 
### Arranging Quick Settings

Add, delete, and change order of functions in Quick Settings.

In Quick Settings,   Follow onscreen instructions and Drag icon



# Quick Settings Layout

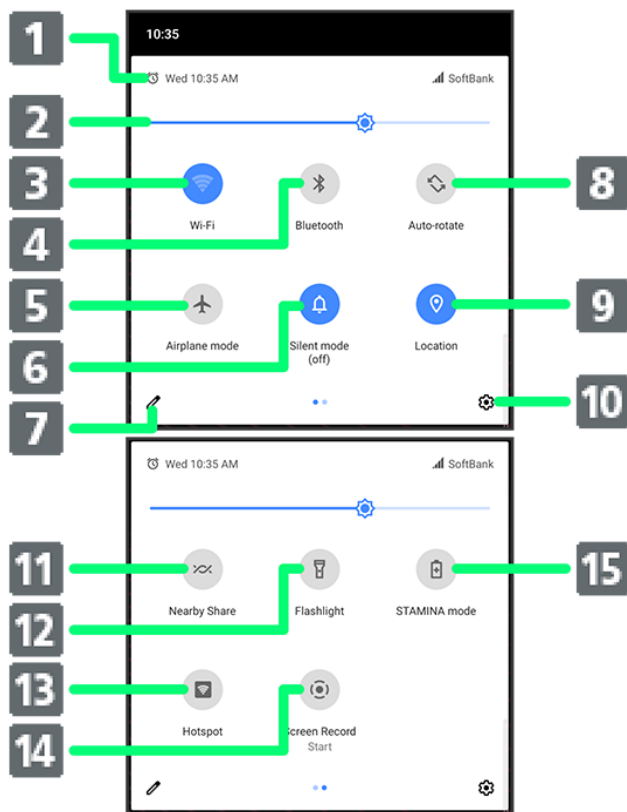

- ① Show current alarm setting, Silent mode, etc.
- ② Adjust brightness
- ③ Wi-Fi on/off
- ④ Bluetooth on/off
- ⑤ Enter/exit Airplane mode
- ⑥ Silent mode (vibrate) / Silent mode (no vibrate) / Silent mode (off)
- ⑦ Add, delete, and change order of Quick Settings
- ⑧ Auto-rotate screen on/off
- ⑨ Location on/off
- ⑩ Show handset settings
- ⑪ Nearby Share on/off
- ⑫ Flashlight on/off
- ⑬ Tethering on/off
- ⑭ Screen Record Start
- ⑮ STAMINA mode on/off



# Placing/Answering Calls

---

---

↓ [Placing Calls](#)

---

↓ [Answering Calls](#)

---

↓ [In-Call Screen Layout/In-Call Operations](#)

---



## Phone Function

### Emergency Location Report

Making emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.). This system is referred to as Emergency Location Report, and notifies location based on positioning from base stations.

- Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy. Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report. However, corresponding agency may obtain location information in life threatening situations.
- Location Report is not sent for calls made while outside Japan.

### VoLTE/VoLTE (HD+) and HD Voice

Handset supports VoLTE/VoLTE (HD+) and HD Voice for higher voice call quality.



## Hints

**Q** Difficulty during call

**A** It may not be possible to make a call properly in a noisy location.

**A** When calling using Speaker, check the call volume. Raising the call volume may make calling difficult.

---

**Q** Sound pops momentarily during a call

**A** Are you changing location while calling? Sound pops when signal is weak and handset switches to a different area.




## Emergency Call Cautions

 
Emergency calls from handset can be made only in SoftBank service areas.



# Placing Calls

1

In Home Screen,  (Phone)

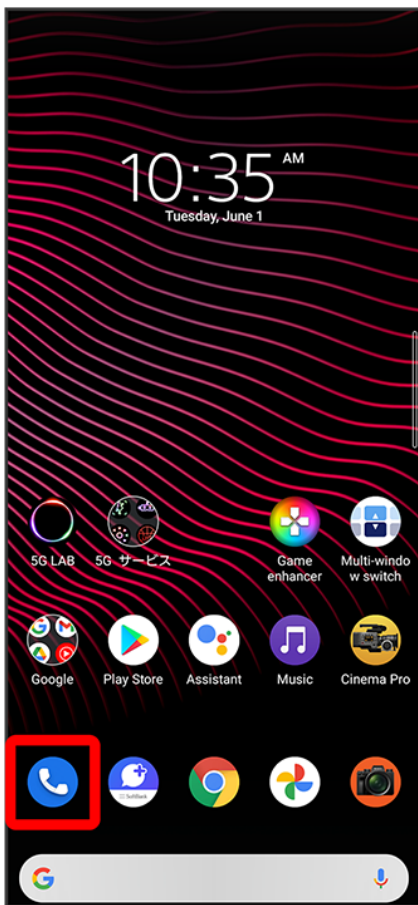


Phone opens.

 2





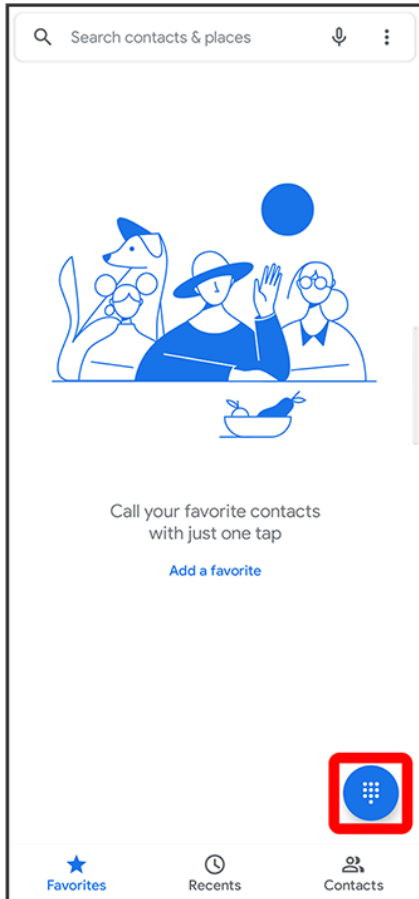


🚩 Dialing screen opens.

3

---

 Tap dialpad to enter the other party's number



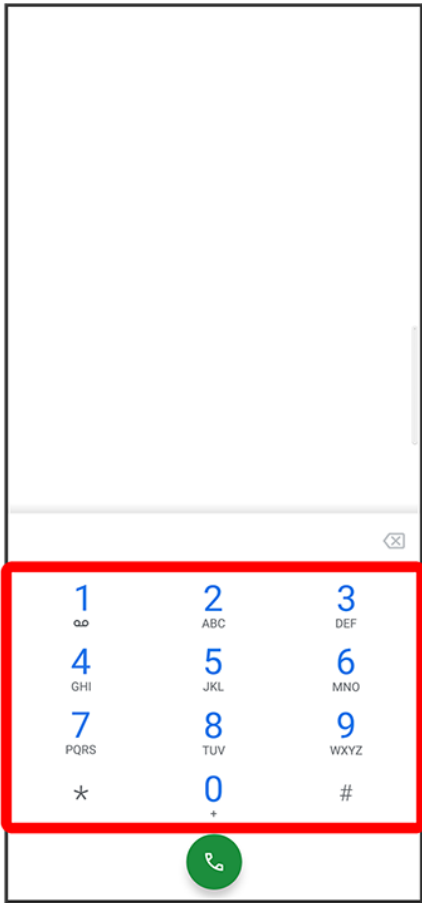



- Enter area code first for calling landline numbers.

 4





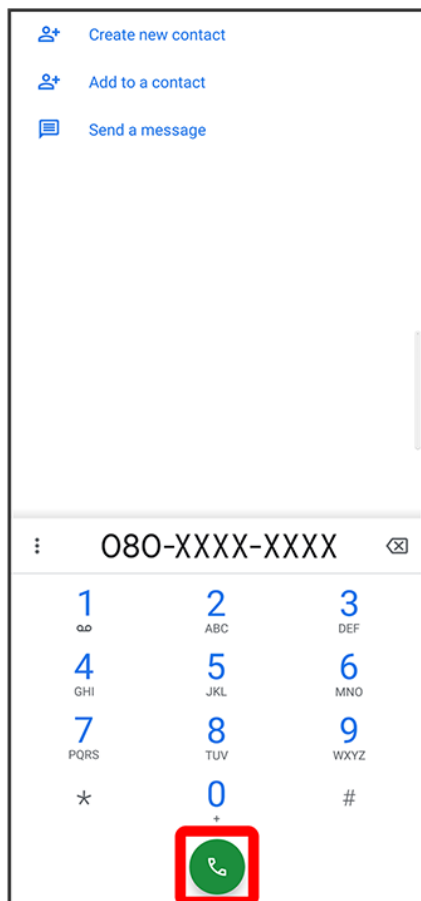



 Handset dials number. Call begins when other party answers.

5

 To end the call, 



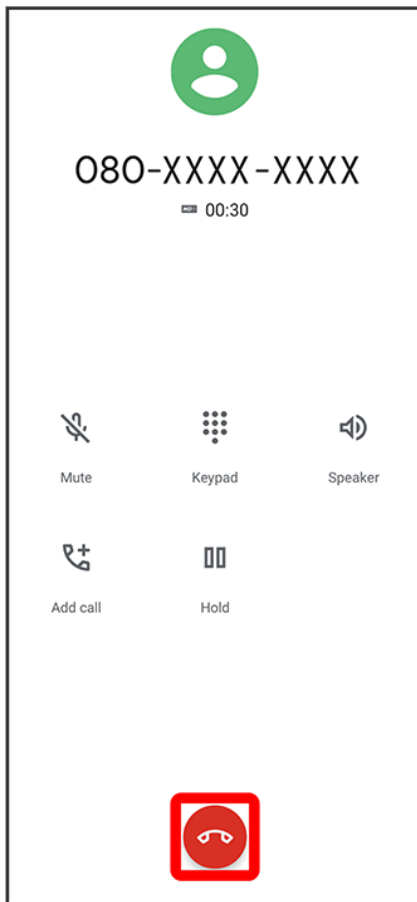

 Call ends.

## Calling the Emergency Number When the Phone's Screen is Locked

Flick Lock Screen up  **EMERGENCY**  Enter number for emergency service  

■ Available only when screen lock is set to "Pattern," "PIN," or "Password."

## Hints

**Q** Call does not connect


**A** Was the number dialed using the area code? Dial the number starting with "0."

 
**A** Are conditions for calling poor? Call again after moving where signal is good.


# Answering Calls

1



Swipe (Flick)  up when call is arriving

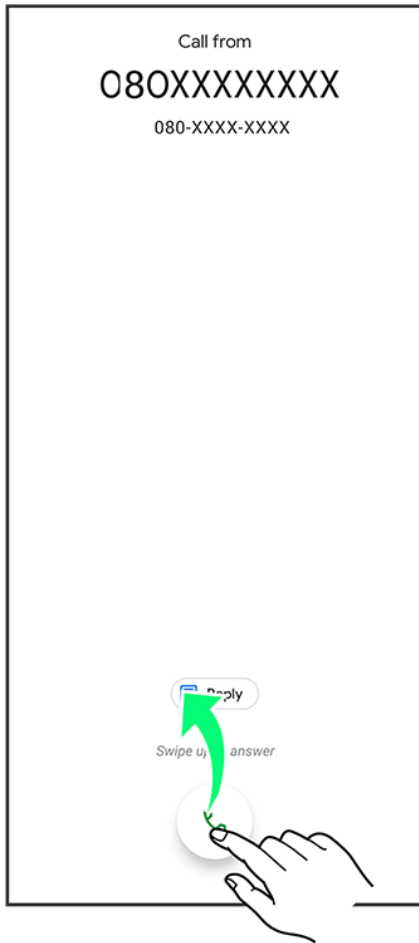


 Call begins.


2

---

 To end the call, 



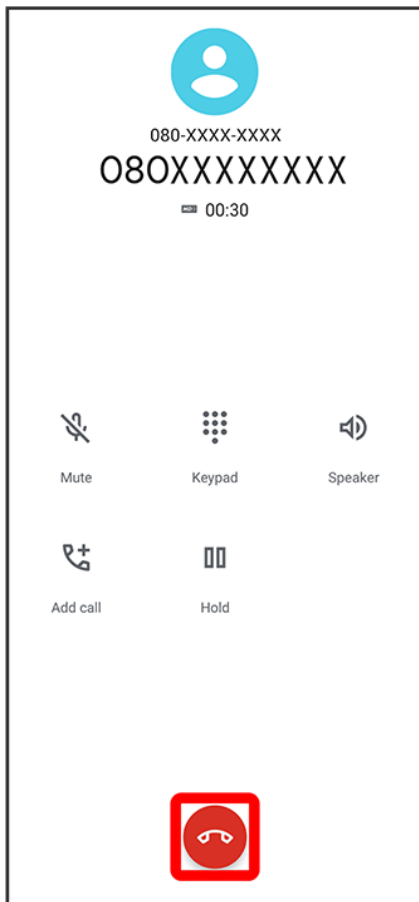


 Call ends.

## Arriving Call Operations

### Cancelling Ringtone

 
Press Volume Key or Power Key when call is arriving

### Rejecting Arriving Calls

Swipe (Flick)  down when call is arriving



# In-Call Screen Layout/In-Call Operations

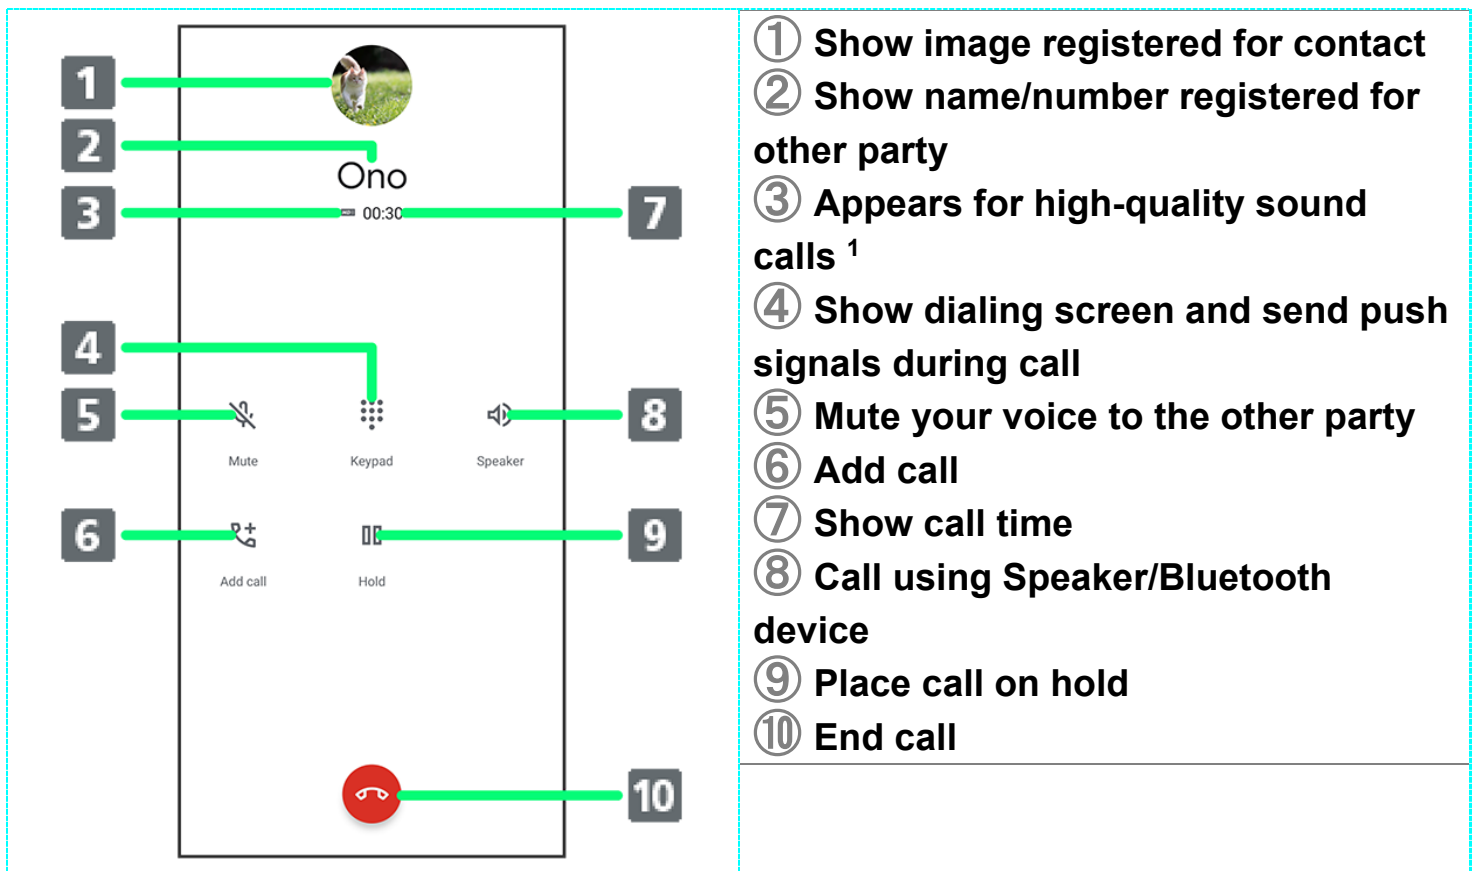

- ① Show image registered for contact
- ② Show name/number registered for other party
- ③ Appears for high-quality sound calls <sup>1</sup>
- ④ Show dialing screen and send push signals during call
- ⑤ Mute your voice to the other party
- ⑥ Add call
- ⑦ Show call time
- ⑧ Call using Speaker/Bluetooth device
- ⑨ Place call on hold
- ⑩ End call

1 Appears **HD** for calls with HD Voice, and **HD+** for calls with VoLTE (HD+).



# Optional Services

Use the following optional services.

- Optional Services
- Using Call Forwarding
- Using Voicemail
- Using Call Waiting
- Using Group Calling
- Using Caller ID Notification
- Using Outgoing Call Barring
- Using Incoming Call Barring

## Optional Services

Use the following optional services.


| Service                                       | Description                                                                                       |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------|
| Call Forwarding                               | Divert calls to a preset number when out of service area or unable to answer.                     |
| Voicemail                                     | Divert calls to a Voicemail Center to take messages when out of service area or unable to answer. |
| Call Waiting <sup>1</sup>                     | Answer calls during a call.                                                                       |
| Group Calling <sup>1</sup>                    | Merge multiple calls.                                                                             |
| Caller ID notification / display              | Send or hide your number when placing calls.                                                      |
| Outgoing Call Barring / Incoming Call Barring | Restrict incoming/outgoing calls by conditions.                                                   |

 
<sup>1</sup> Requires separate subscription.



# Using Call Forwarding

1

In Home Screen,  (Phone)

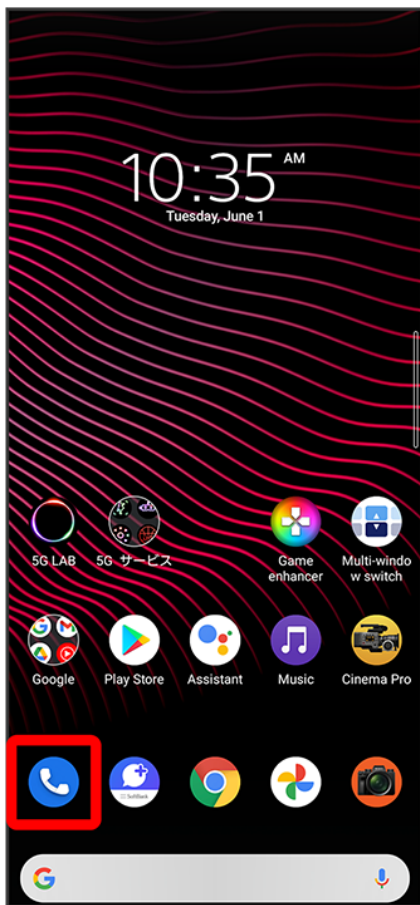

2

⋮ → Settings → Calls → Call service settings



←

Call settings

Calling accounts

Answering Machine

Reject call with message

Call Blocking

Call service settings


Caller ID

Show my number in outgoing calls

3

 Voice Mail / Call Forwarding



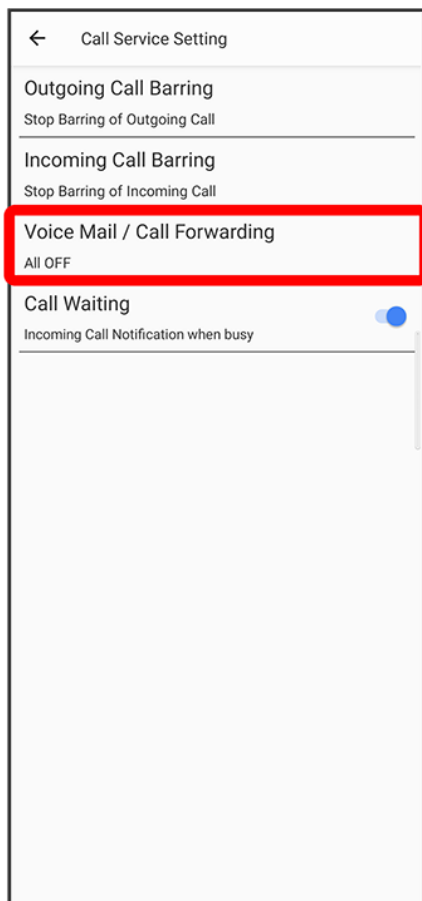


 Voice Mail / Call Forwarding settings open.

4

---

 Voice Mail / Call Forwarding  Call Forwarding ON




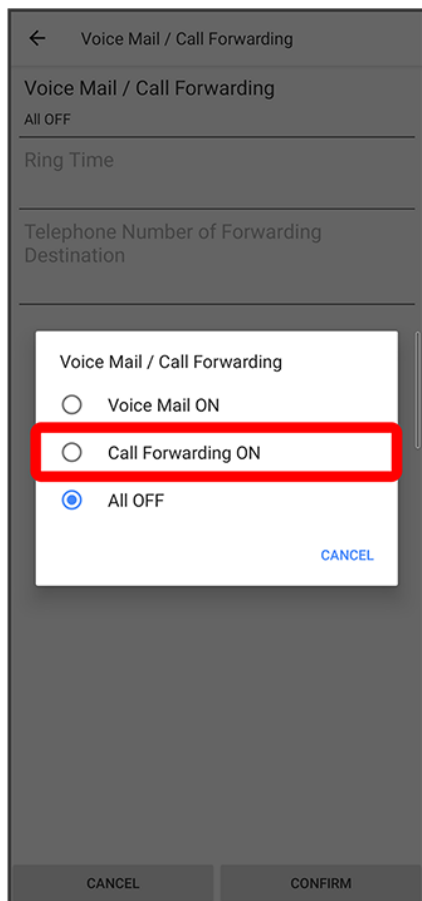

5

 Ring Time → Select ring time




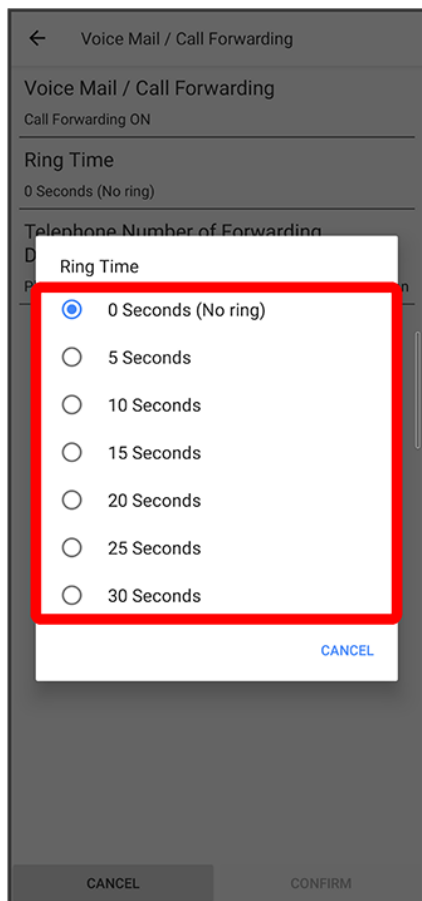

6

 Telephone Number of Forwarding Destination ➡ Enter phone number to forward to ➡  
REGISTER



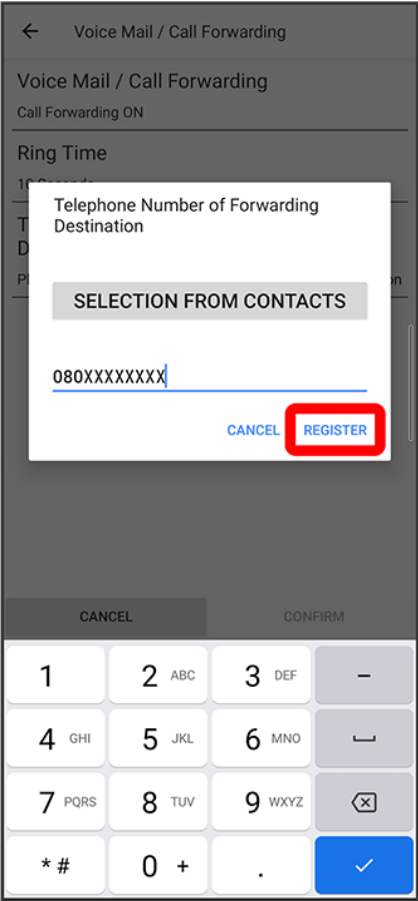

7

CONFIRM



←

Voice Mail / Call Forwarding

Voice Mail / Call Forwarding

Call Forwarding ON

Ring Time


10 Seconds

Telephone Number of Forwarding Destination

080XXXXXXX

CANCEL

CONFIRM


 Call Forwarding is activated.

## Using Voicemail

 1

In Home Screen,  (Phone)



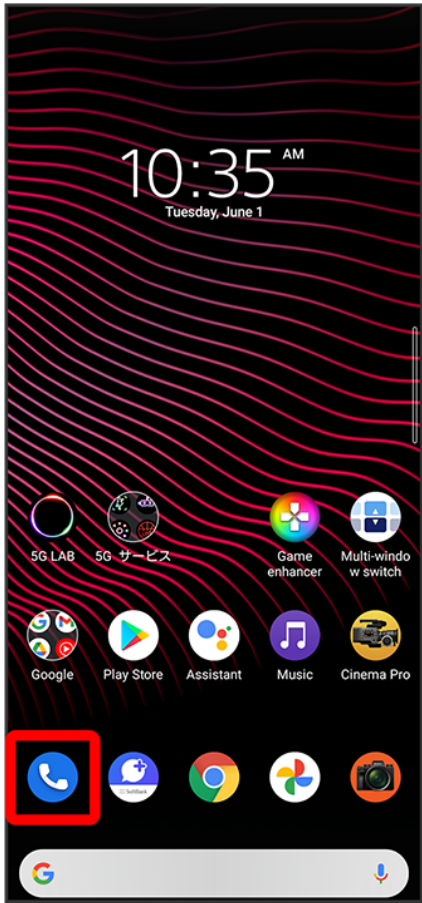

2

⋮ → Settings → Calls → Call service settings



←

Call settings

Calling accounts

Answering Machine

Reject call with message

Call Blocking

Call service settings


Caller ID

Show my number in outgoing calls

3

 Voice Mail / Call Forwarding



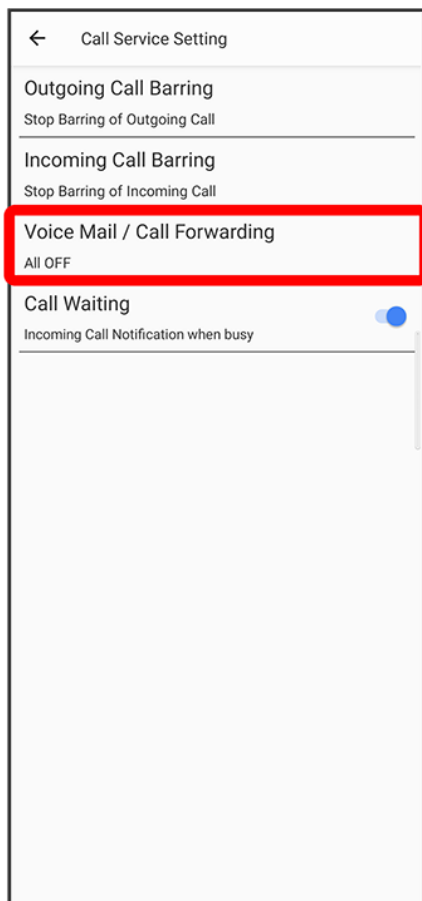


 Voice Mail / Call Forwarding settings open.

4

---

 Voice Mail / Call Forwarding  Voice Mail ON




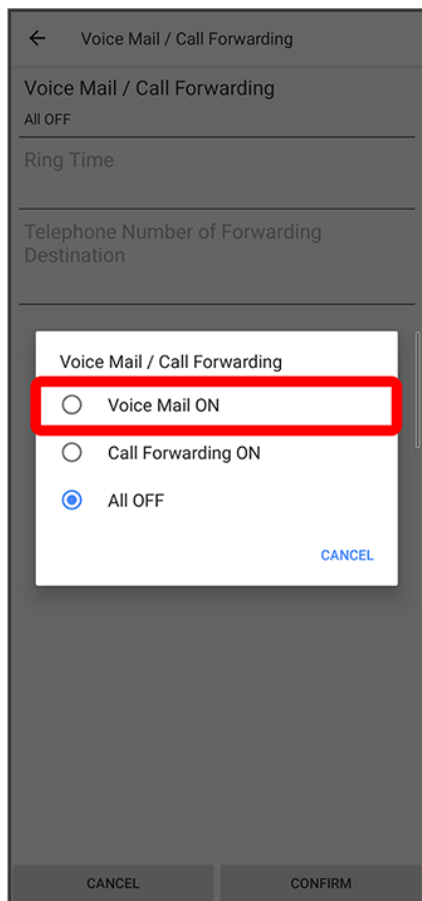

5

 Ring Time ➡ Select ring time



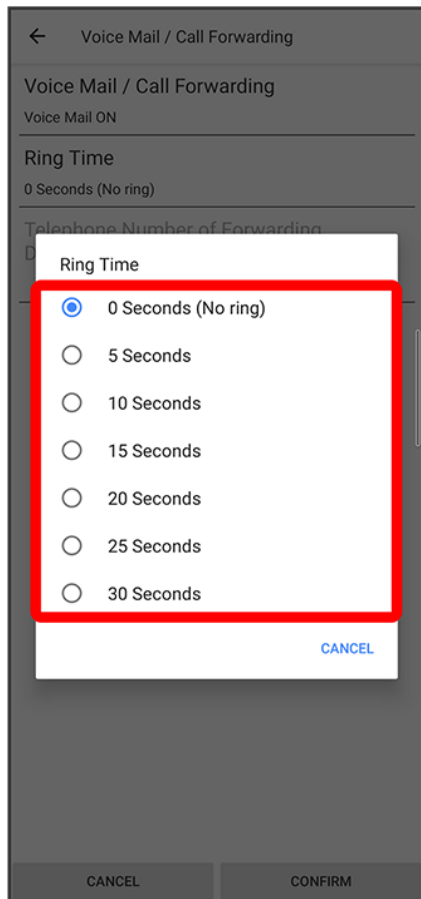

6

CONFIRM



← Voice Mail / Call Forwarding

Voice Mail / Call Forwarding


Voice Mail ON


Ring Time

10 Seconds

Telephone Number of Forwarding Destination

CANCEL CONFIRM

 Voicemail is activated.

-  appears in Status Bar for new message. Flick Status Bar down and Tap Voicemail notification, then follow the voice prompts.


## Using Call Waiting

 This service requires subscription.

1

In Home Screen,  (Phone)




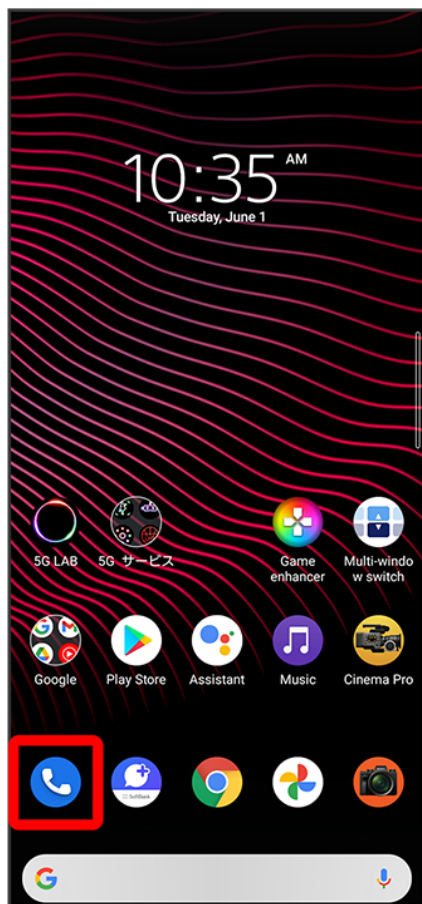

2

 ⋮ → Settings → Calls → Call service settings




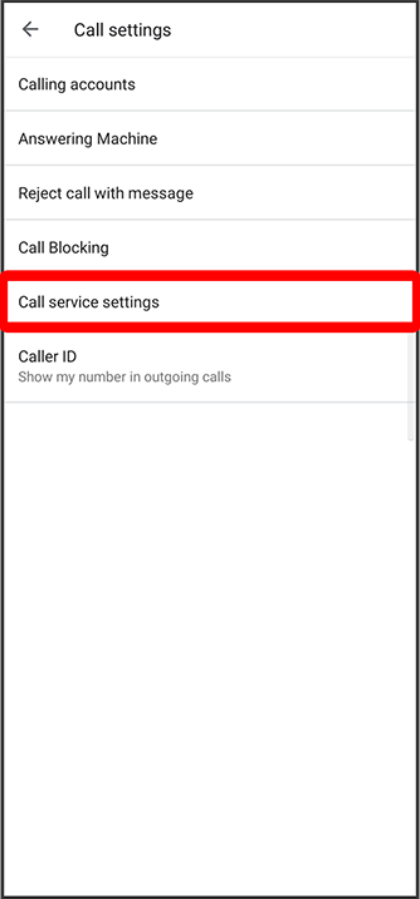




3

 ☐ for Call Waiting (☒)

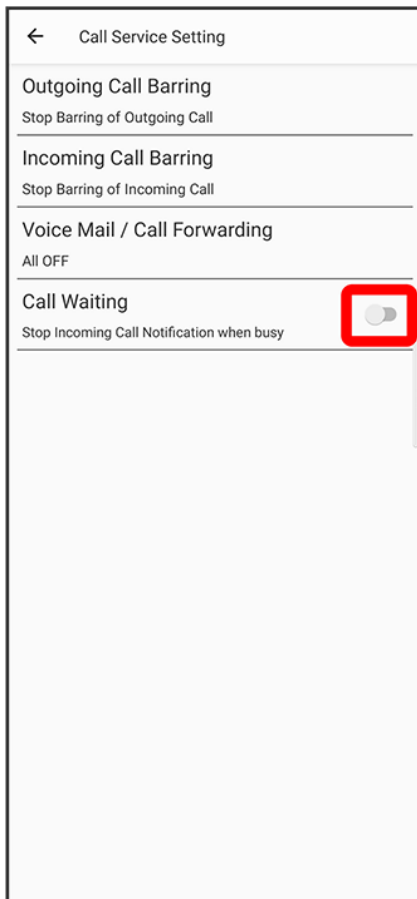



 Call Waiting is set.

- Tap icons to toggle set () / cancel (.
- If Call Waiting is set and a second call arrives during a call, Call Waiting tone is heard. Swipe (Flick)  up to begin call.


## Using Group Calling

 
This service requires subscription.

1



During a call, **Add call**

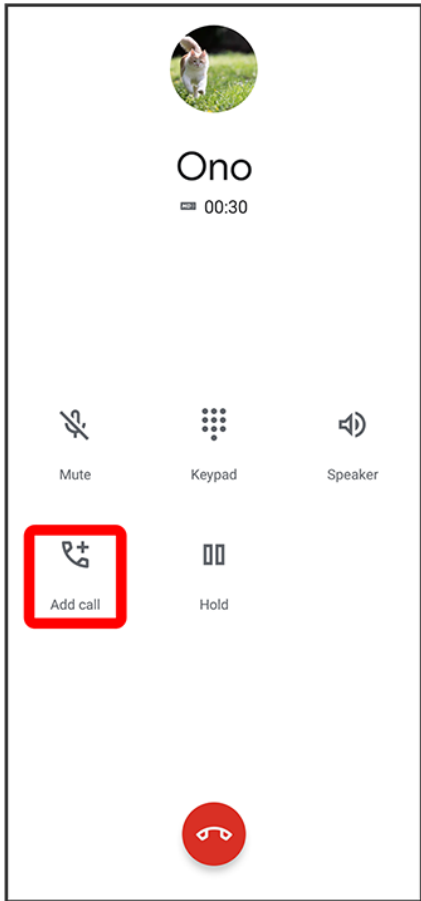




 Dialing screen opens.

2

 Enter phone number  



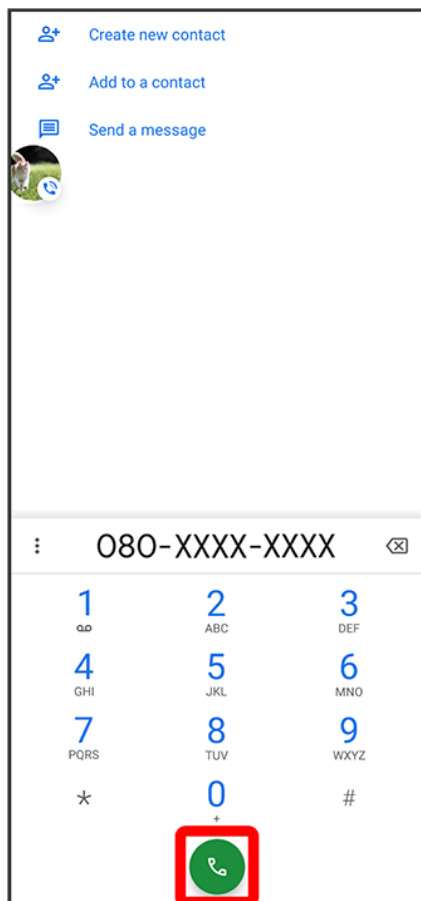



🚩 Call is added.

3

 When the other party answers, Merge



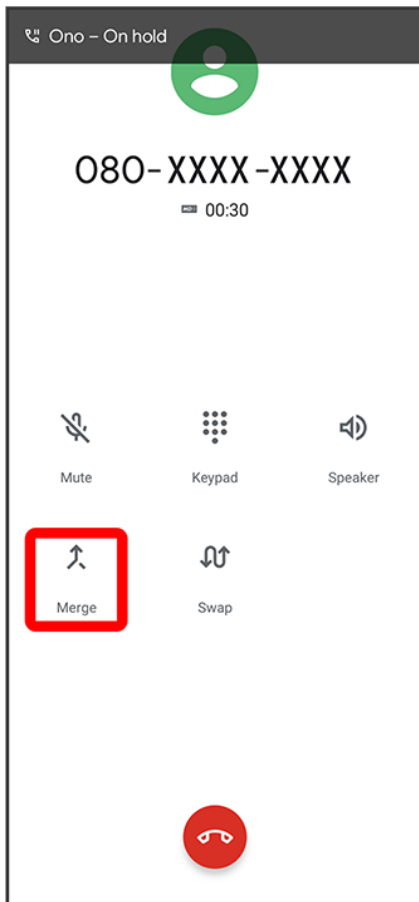


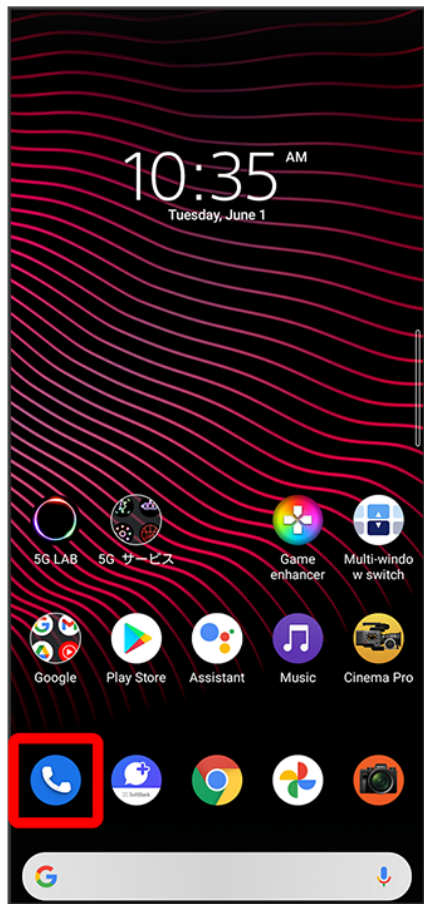 
 Group Calling starts.

## Using Caller ID Notification

1

In Home Screen,  (Phone)

 




2

⋮ → Settings → Calls



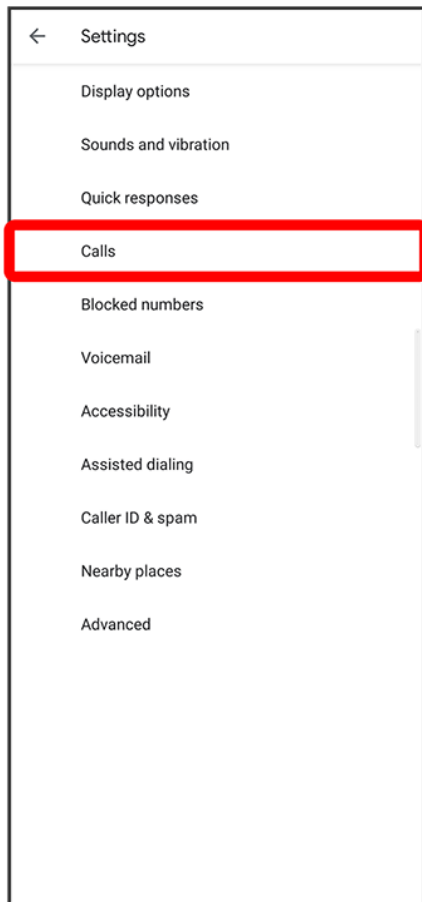


 Call settings open.

3

---

 Caller ID  Hide number/Show number



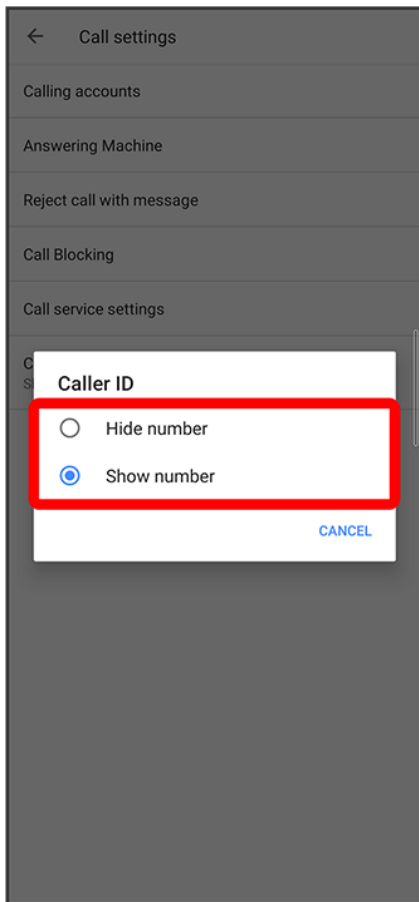


 Caller ID notification is set.


## Using Outgoing Call Barring

 Restrict calling/SMS.

1

In Home Screen,  (Phone)




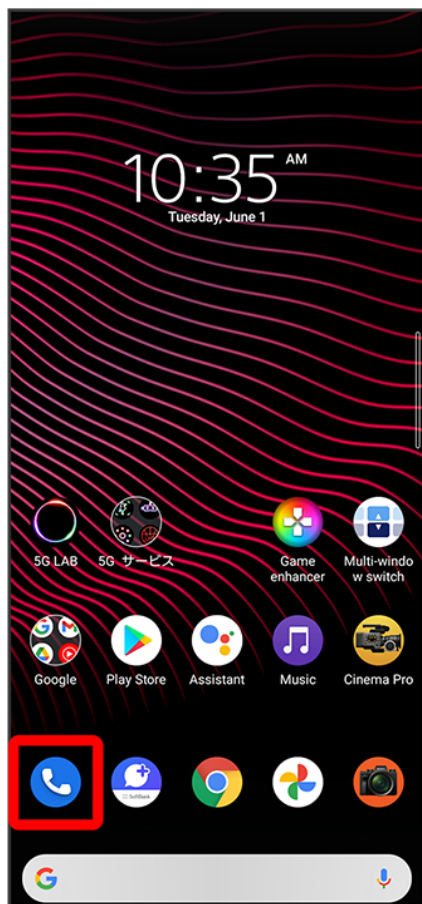

2

 ⋮ → Settings → Calls → Call service settings



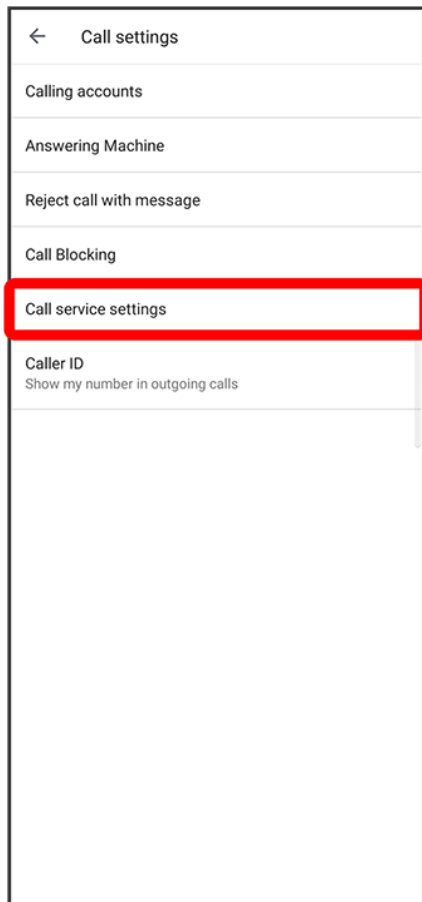


3

---

## Outgoing Call Barring



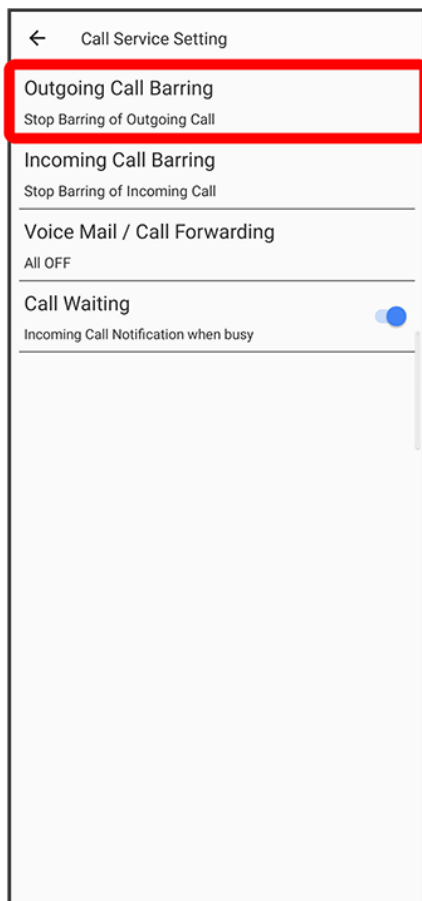 



4

---

 Tap outgoing restriction



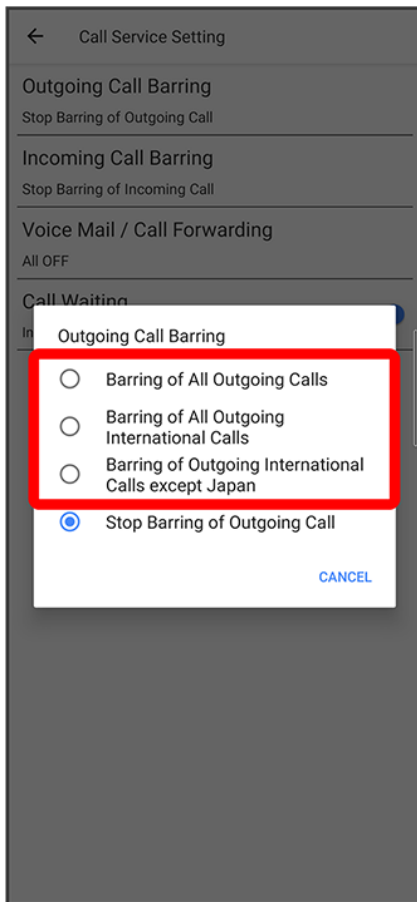


 Outgoing Call Barring is set.

- To disable Outgoing Call Barring, Tap **Stop Barring of Outgoing Call**.


## Using Incoming Call Barring

 Restrict incoming calls.

1

In Home Screen,  (Phone)




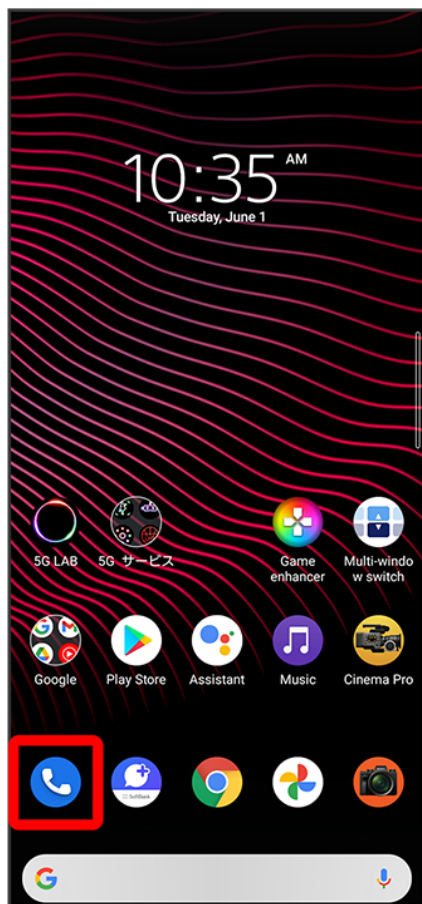

2

 ⋮ → Settings → Calls → Call service settings



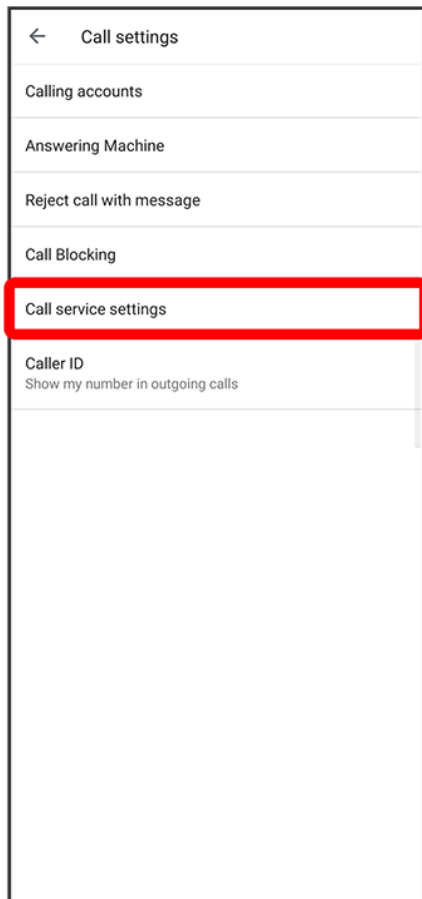


3

---

## Incoming Call Barring



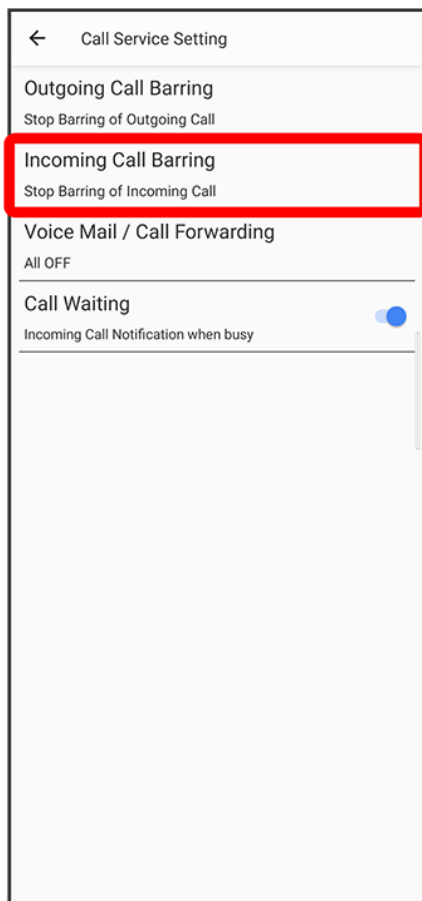 



4

---

 Tap incoming restriction



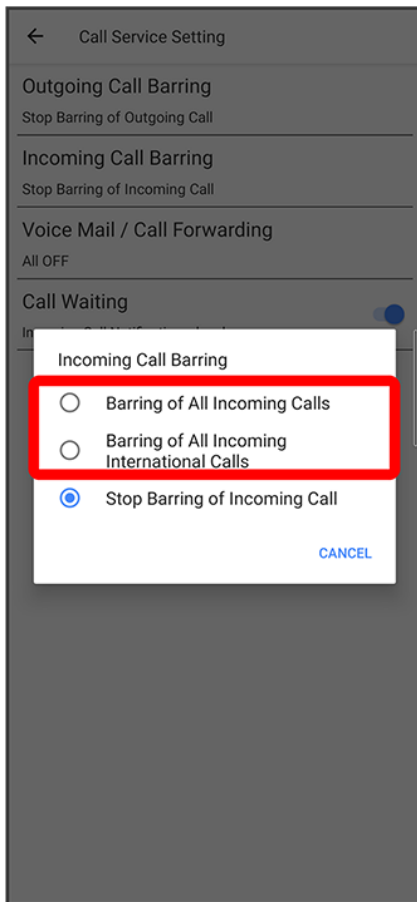

 Incoming Call Barring is set.

- To disable all Incoming Call Barring, Tap **Stop Barring of Incoming Call**.



# Phone Number

---


↓ [Checking Your Phone Number](#)

 
---

## Checking Your Phone Number

1

---

In Home Screen,  (Settings)

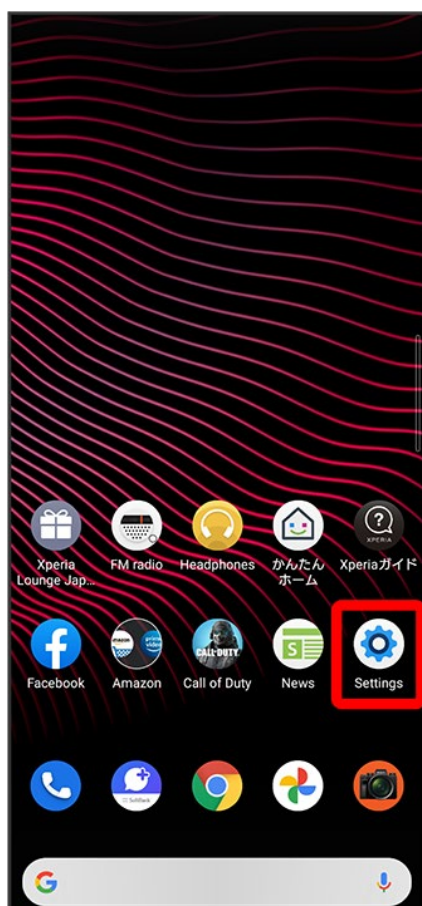


2

---



 About phone

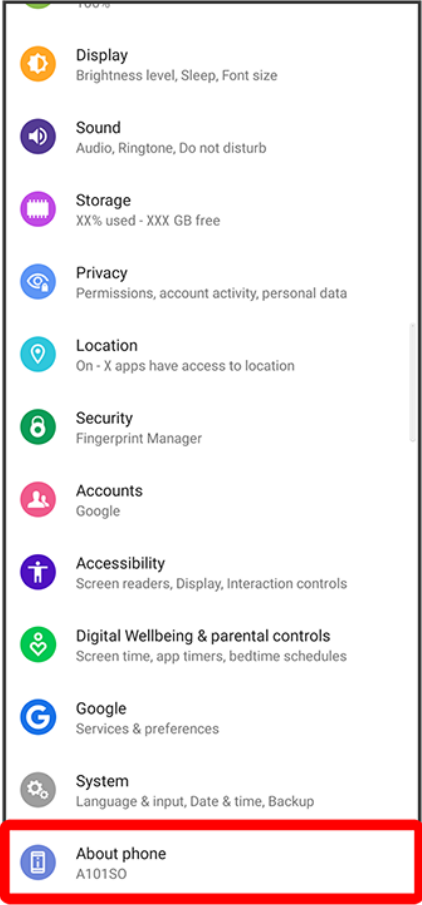

 Your phone number appears below Phone number field.



# Using Contacts

---

Save phone numbers, mail addresses, etc. to Contacts.

Operation when logged in to a Google account is described as an example.

---

↓ [Adding New Contacts](#)

---

## **Contacts Cautions**

Information saved in Contacts may be lost or changed if Internal Battery is left uncharged for a long period. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. SoftBank Corp. is not responsible for any damages from lost or changed contacts.

 
## Adding New Contacts

1

---

In Home Screen,  (Google)




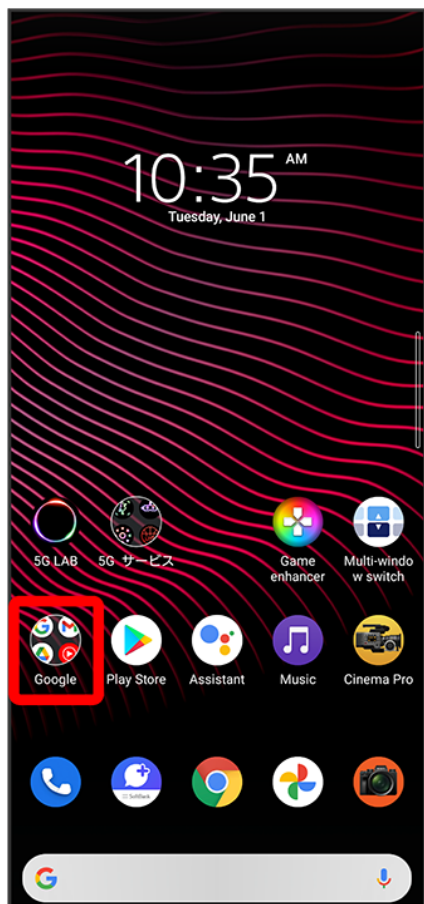

2

  (Contacts)



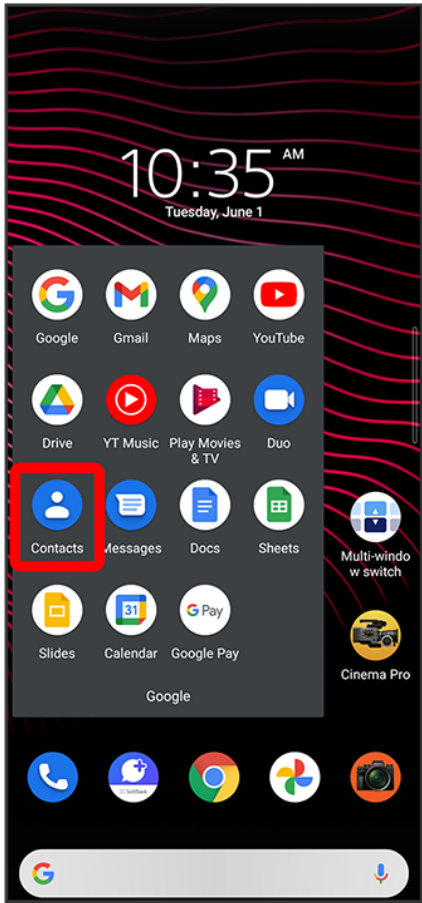


🚩 Contacts appear.

 3





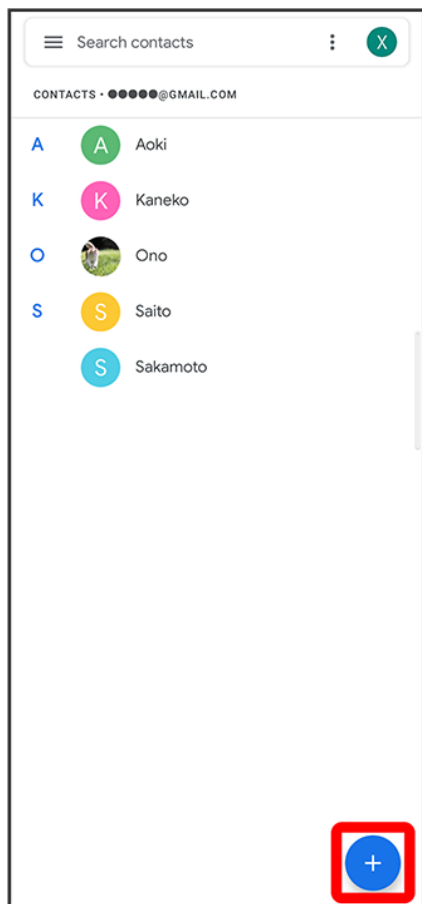


- If confirmation appears, follow onscreen instructions.

4








Enter items ➡ Save



 Contact is added.

## Saving Contacts from Dialing Screen

Save a number entered in dialing screen directly to Contacts.

In Home Screen,  (Phone)    Tap dialpad to enter number to save  Create new contact  Enter each item  Save

■ Tap More details  More fields to enter other items for contact.



# Sending Messages (+Message)

---

 
↓ Sending New Messages

---

## Sending New Messages

1


In Home Screen,  (+Message)

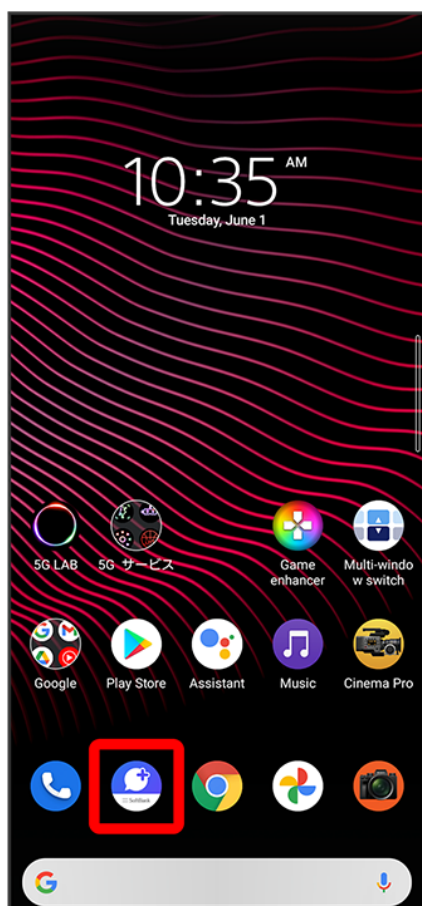

2



 
Message

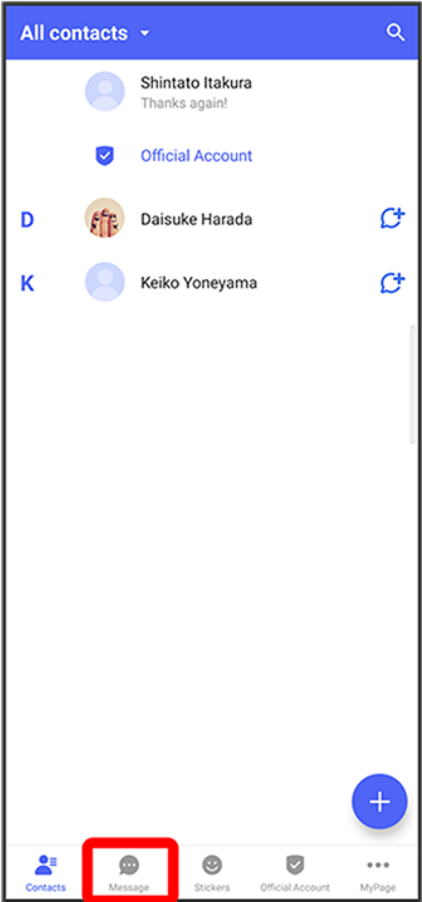

3






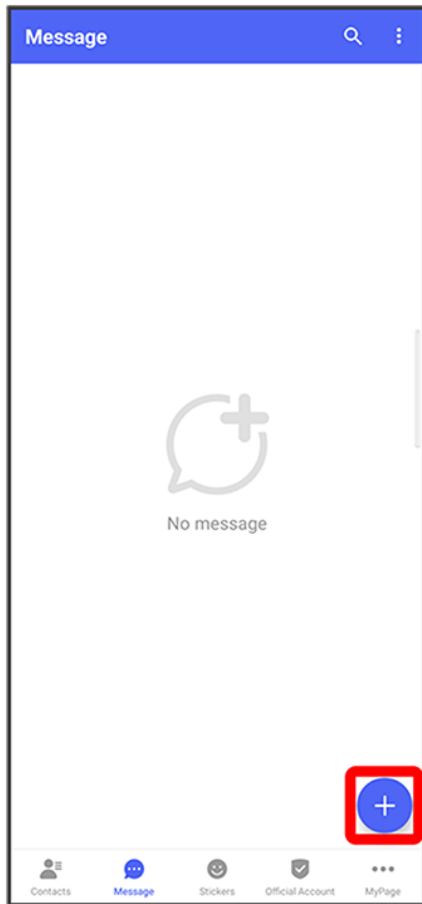 

4

 New message




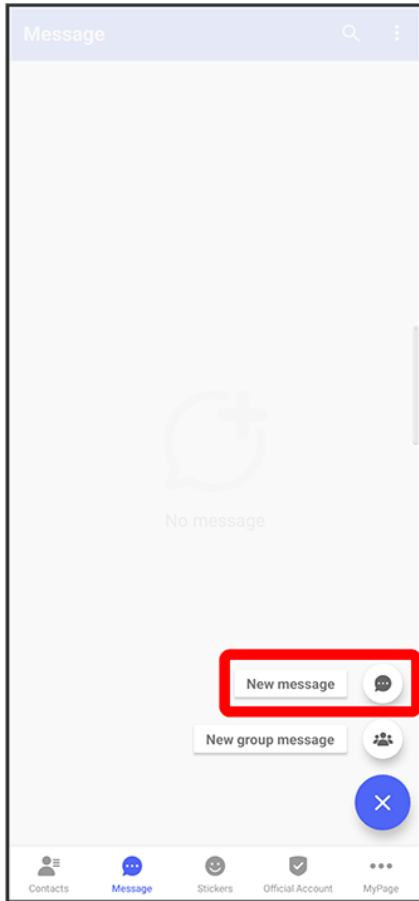

5

 Tap destination



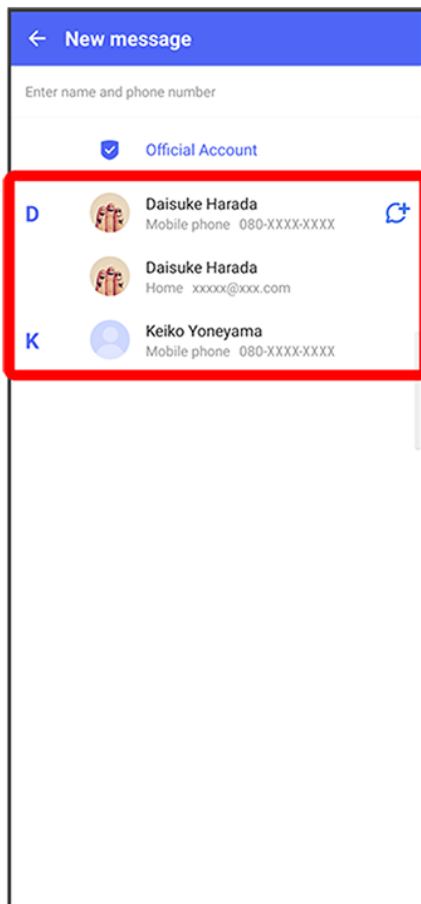

Message window opens.

- To send to a phone number/email address not saved in contacts, Tap destination entry field at top of Display → Enter phone number/email address → Add and create message.

6

Tap message entry field

 




7

Enter message ➡ ➤



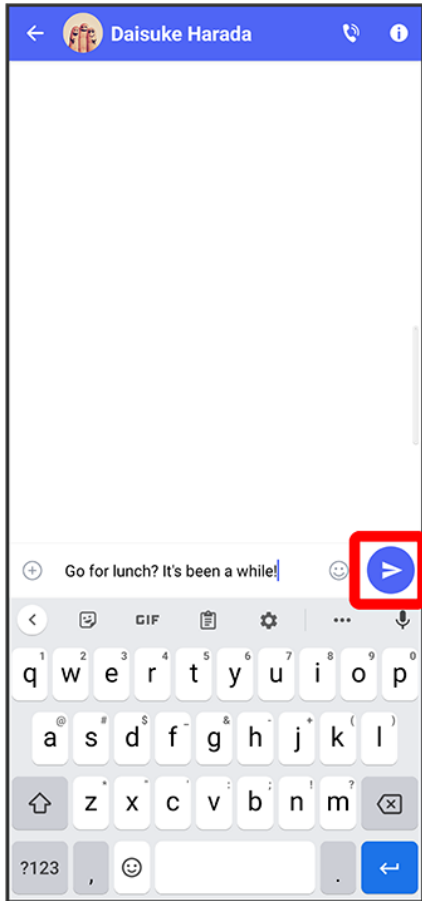

🚩 Message is sent.



# Using Gmail

---

Use Google's webmail service. Use this service to exchange email.


---

 
↓ [Creating/Sending Mail](#)

---

## Creating/Sending Mail


1


In Home Screen,  (Google)

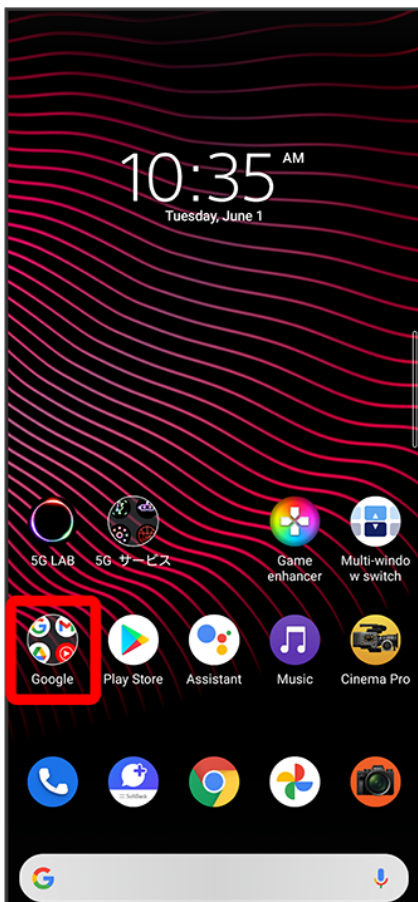



2

  (Gmail)

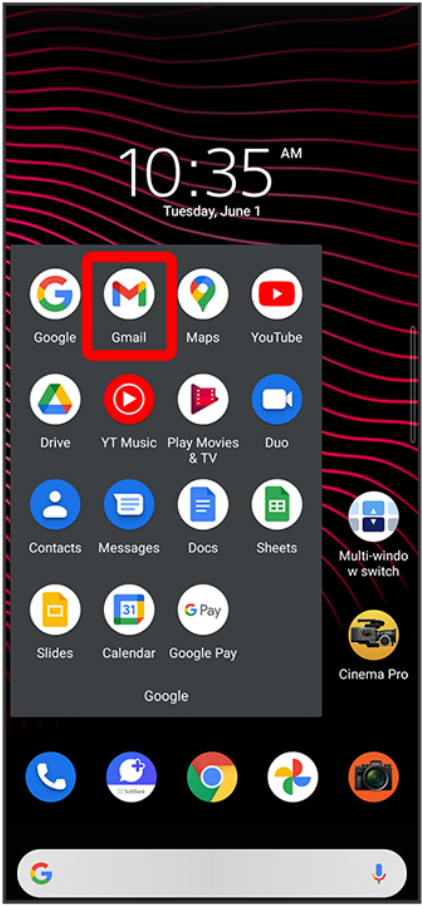


 Mail list opens.

3

 Compose



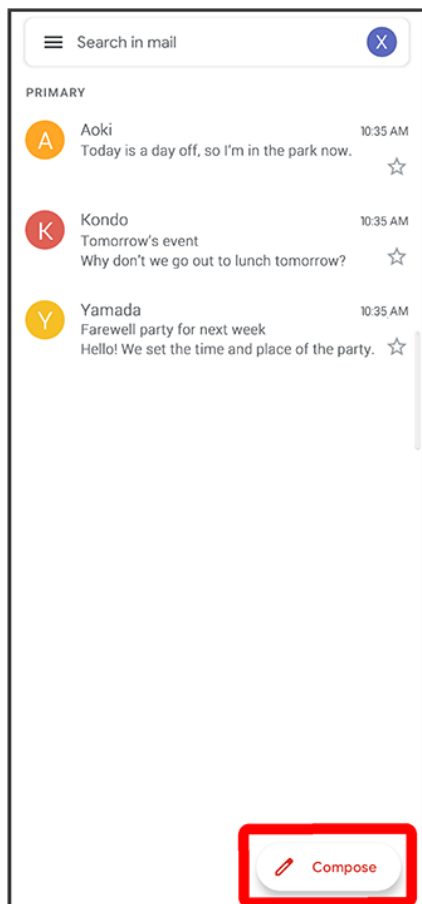


 Mail composition window opens.

4

 Enter recipient/subject/mail text ➡ ➤



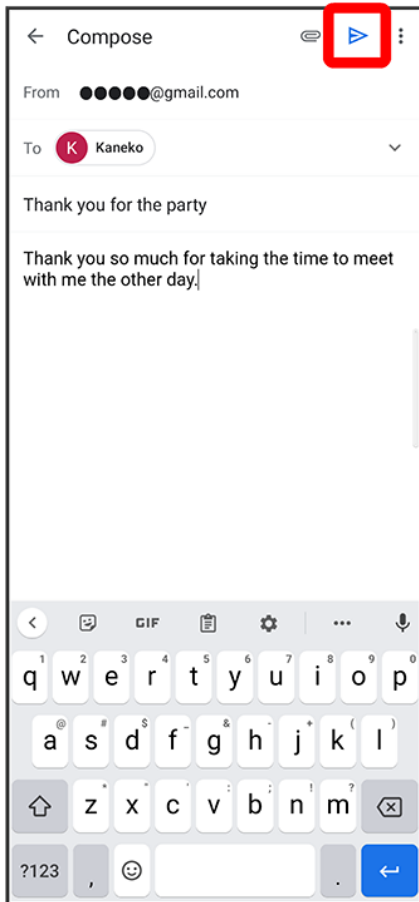

 Message is sent.

## Operations when Composing Mail



### Adding Cc/Bcc

In mail composition window,  for "To"  Enter recipient




### Attaching Files

In mail composition window,   Attach file  Select file to attach

### Saving Mail Being Composed as a Draft (Send Later)

In mail composition window,   Save draft

### Deleting Mail Being Composed

In mail composition window,   Discard  Discard



# Using Chrome

---

Use Chrome simply by entering words to search and URLs.

---

↓ [Using Chrome](#)

---

↓ [Adding Bookmarks](#)

---



## TLS

TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).




## TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification Authorities Symantec Website Security G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

## Using Chrome




---

In Home Screen,  (Chrome)





 Chrome opens.

 
- If confirmation appears, follow onscreen instructions.

2

---

Tap entry box at top




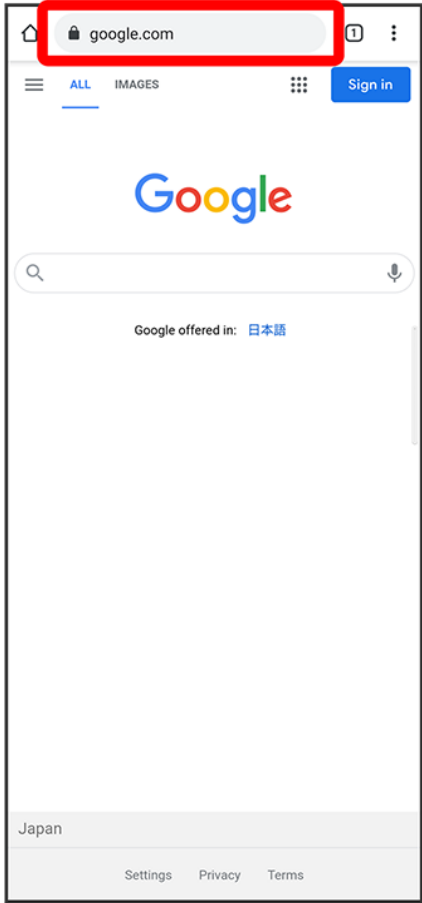

3

 Enter words to search or URL ➡ ➡



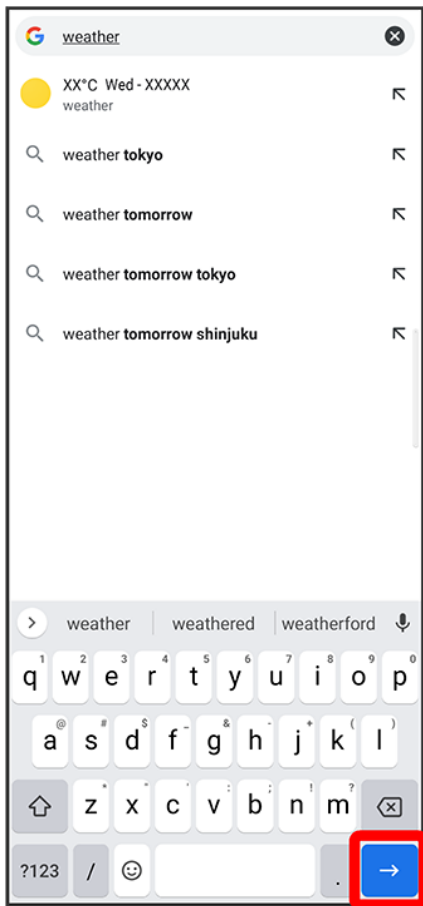


 Search results appear or a Website opens.

## Opening New Tabs


Open several tabs to switch between Websites easily.

In Chrome,   New tab

- To switch between tabs, Tap  next to entry field at top of Display and Tap tab (number in icon indicates opened tabs).

## Adding Bookmarks

1

In Home Screen,  (Chrome)



 


 Chrome opens.

2

Show Website to add




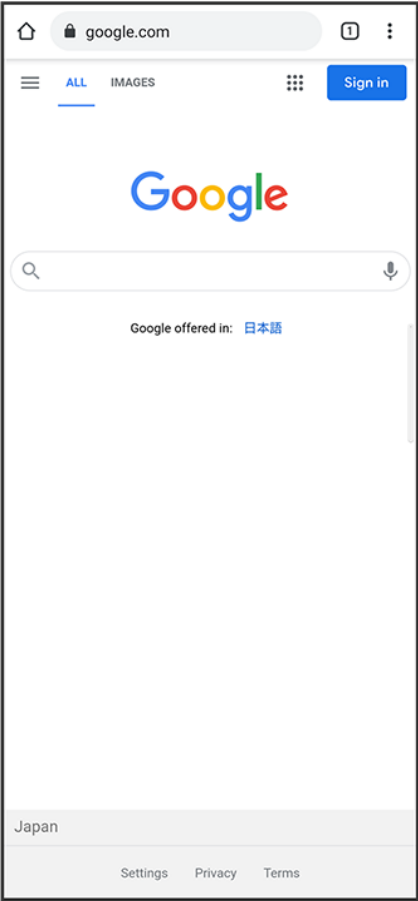

3

 ⋮




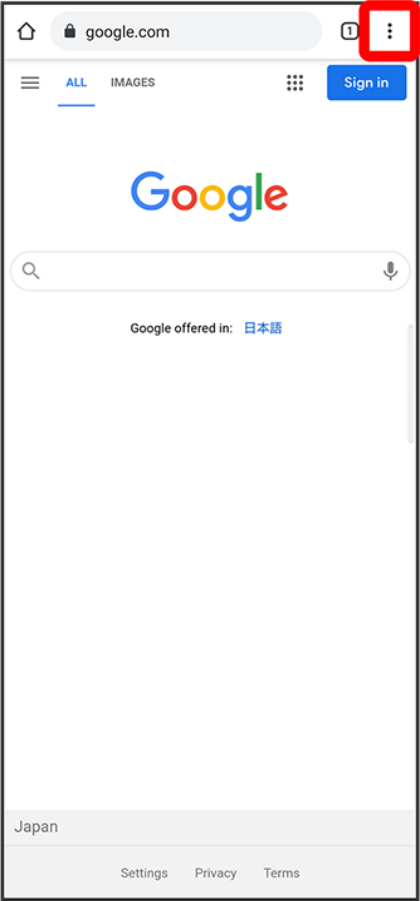

4





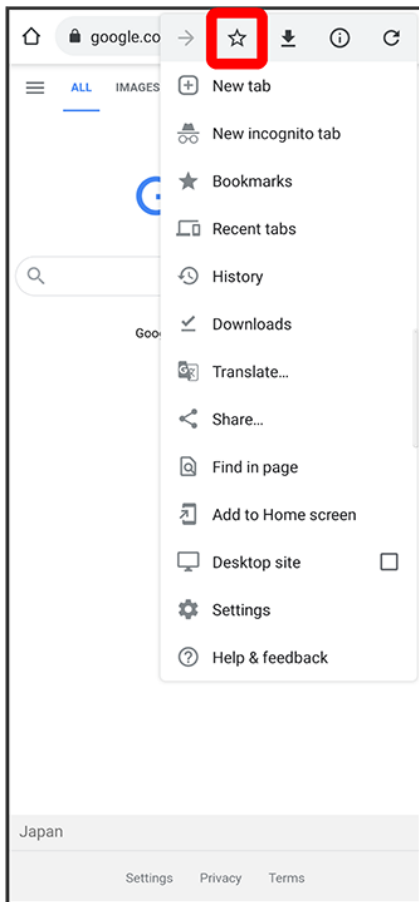 

Current Website is added to Bookmarks.

## + Bookmark Operations

### Editing Bookmarks

In Chrome, **Bookmarks** Touch & Hold target bookmark Edit items

■ Alternatively, Tap of bookmark **Edit**.

### Deleting Bookmarks

In Chrome, **Bookmarks** Touch & Hold target bookmark

■ Alternatively, Tap of bookmark **Delete**.



# Capturing Still Images/Videos

---

Photo Pro (Photography Pro) has a BASIC mode for easily capturing still images and videos as your smartphone's camera, as well as AUTO/P/S/M modes that can be used as on a real camera. How to capture using BASIC mode is described as an example.

---

↓ [Capturing Still Images](#)

---

↓ [Capturing Videos](#)

---



## Capturing Still Images/Videos

### File Format for Still Images

File formats for still images are JPEG/RAW (AUTO / P / S / M modes only).

### File Format for Videos

File format for videos is MPEG-4.



## Camera Cautions

### If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

### Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.



## Flash/Photo Light Warning

 
Do not shine Flash/Photo Light close to eyes. Do not look at Flash/Photo Light directly while in use. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.




# Capturing Still Images

1

In Home Screen,  (Photo Pro)

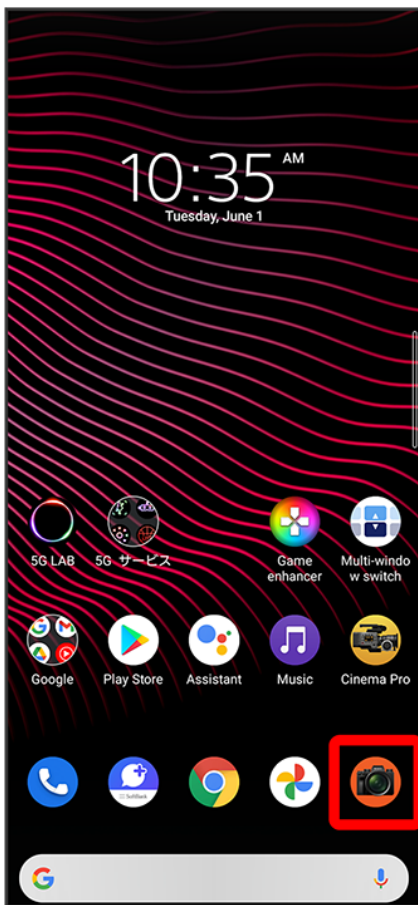


 Viewfinder appears.

- If confirmation appears, follow onscreen instructions.
- Alternatively, Long Press Camera Key for one second or more, or Press Power Key twice, or in Lock Screen, Swipe (Flick)  upward to the left to quick-activate Photo Pro.
- If there is no operation on Viewfinder, Photo Pro operation ends.

2



 
Tap  to switch to "Photo" Viewfinder ()

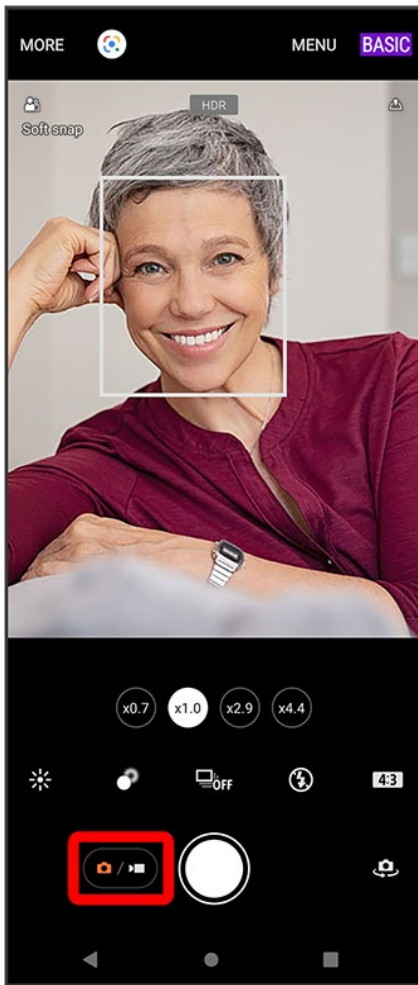


3

 Aim Camera at subject → Check Viewfinder, then ○



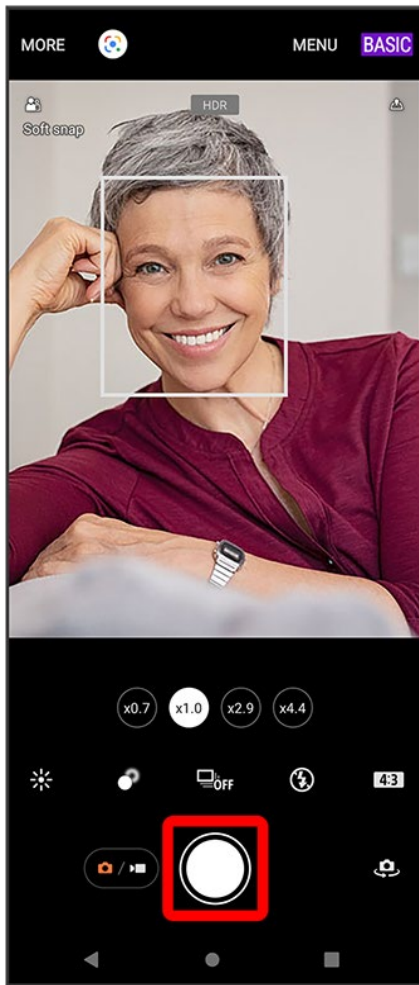


 Shutter clicks and still image is saved.

## Capturing Videos

 
1

In Home Screen,  (Photo Pro)



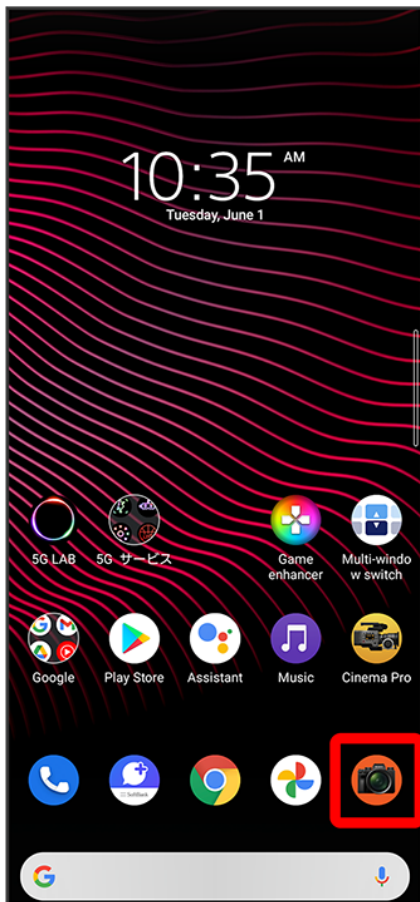




 Viewfinder appears.

- If confirmation appears, follow onscreen instructions.
- Alternatively, Long Press Camera Key for one second or more, or Press Power Key twice, or in Lock Screen, Swipe (Flick)  upward to the left to quick-activate Photo Pro.
- If there is no operation on Viewfinder, Photo Pro operation ends.

2

 Tap  to switch to "Video" Viewfinder ()




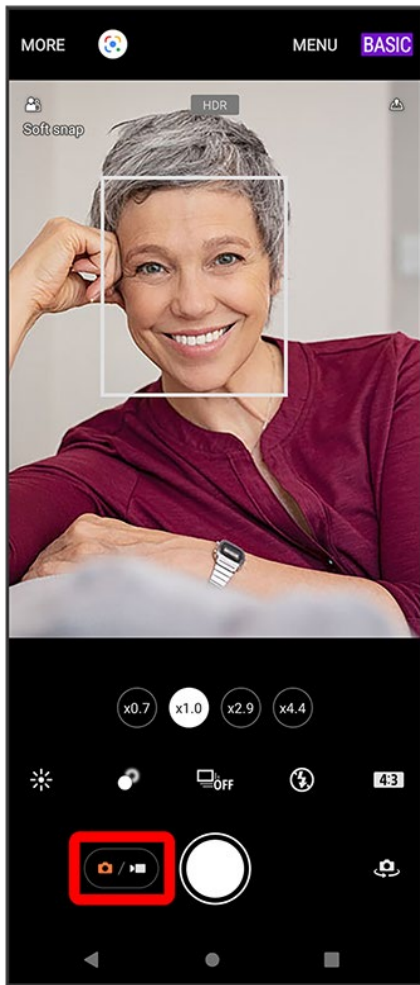



3

 Aim Camera at subject ➡ Check Viewfinder, then ●

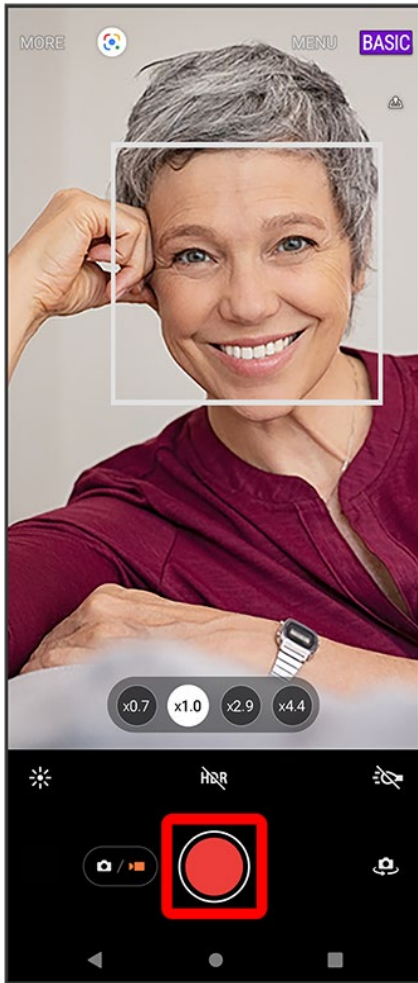




 Video capturing starts.

■ To pause, Tap  or to resume, Tap .

4

 To stop recording, 



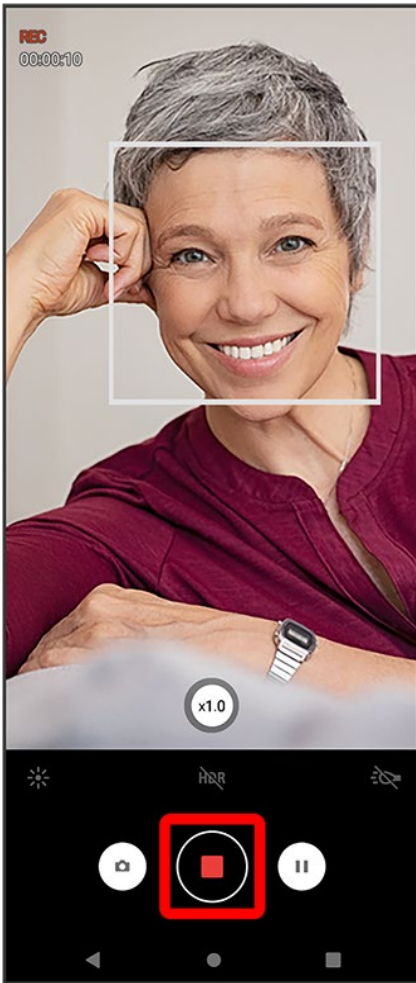

🚩 Video capturing stops and video is saved.



# Viewing Still Images/Videos (Photos)


↓ Showing Still Images/Videos

## Showing Still Images/Videos

 
Show captured or downloaded still images/videos. Supported file formats with Photos are as follows.

| Type        | File Format                                                                           |
|-------------|---------------------------------------------------------------------------------------|
| Still image | BMP, GIF, HEIC, ICO, JPG, PNG, TIFF, WEBP, some Raw files                             |
| Video       | 3GP, 3G2, ASF, AVI, DIVX, M2T, M2TS, M4V, MKV, MMV, MOD, MOV, MP4, MPG, MTS, TOD, WMV |

1

In Home Screen,  (Photos)



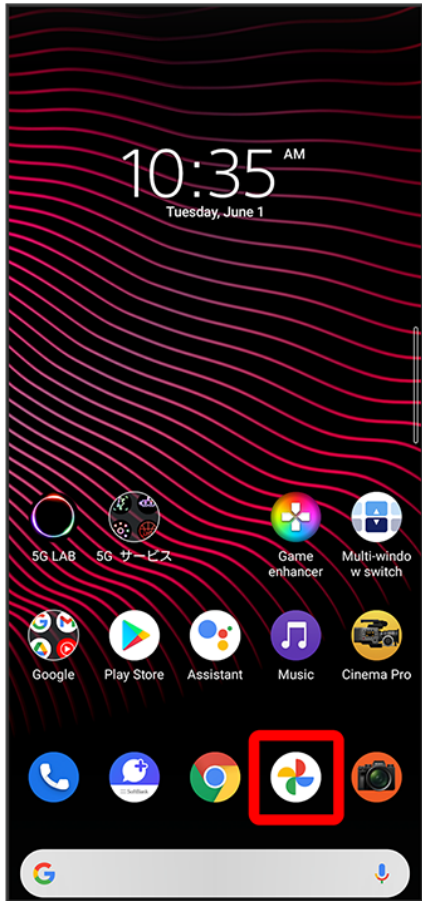

 Still image/video list opens.

2

Tap still image/video





 Still image/video window opens.

- Tap still image/video window to show/hide menu and other icons.
- Flick still image/video window up to show captured date & time.
- To select other files, in still image/video window, select file again or Flick still image/video window left or right.

### **Zooming In or Out Still Image**

In still image window, Tap Display twice or Pinch



# Applications


---

## ↓ Setting Required Permissions for Applications

---

## Setting Required Permissions for Applications

 
Set the operation of applications when activating for the first time.

The type and content of a confirmation differs with the application. Activating  (Music) for the first time is described as an example.

- An application may not function correctly if permission to use it was not set.


1


In Home Screen,  (Music)

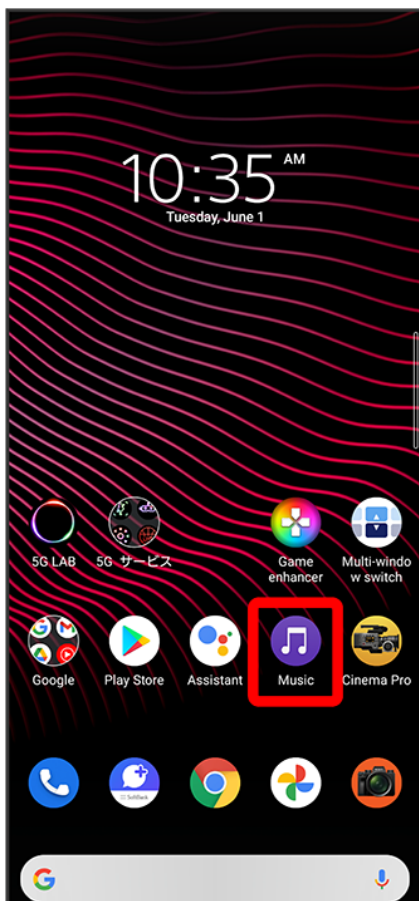



## ALLOW

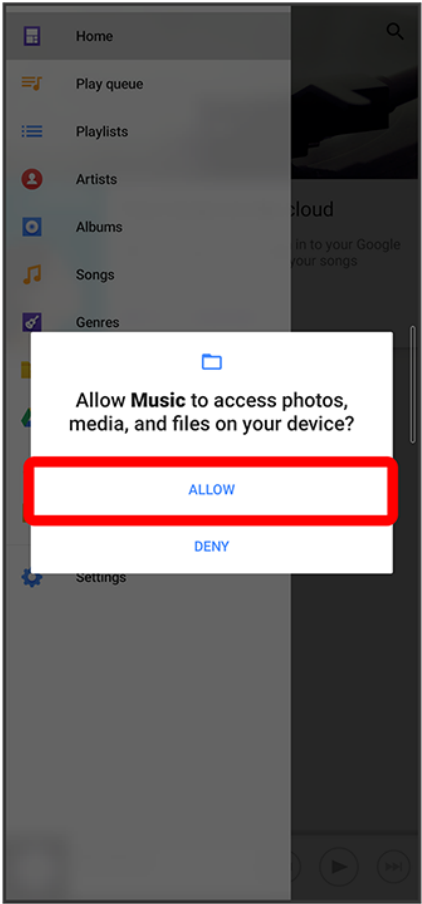 

 Settings are complete.


- Shown setting items depend on the function having permission set.
- For several functions, continue in the same way.


+

Other Ways to Set Required Permissions for Applications


Setting Functions to Use for Each Application

In Home Screen,


 (Settings)




Apps & notifications




SEE ALL XX APPS




Tap application



Permissions




Tap function




Tap required permission


Setting Applications with Permitted Usage for Each Function

In Home Screen,


 (Settings)




Apps & notifications




Advanced




Permission manager



Tap function



Tap application



Tap required permission



# Adding Applications

---

Download a variety of applications (free/paid) from Google Play™. Change the setting of downloaded applications to enable manual or automatic updates. Log in to your Google account beforehand.

---

↓ [Installing Free Applications](#)

---

↓ [Purchasing Paid Applications](#)

---

↓ [Updating Applications](#)

---

## Installing Applications

Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC). SoftBank Corp. is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

 
## Installing Free Applications

1

---

In Home Screen,  (Play Store)



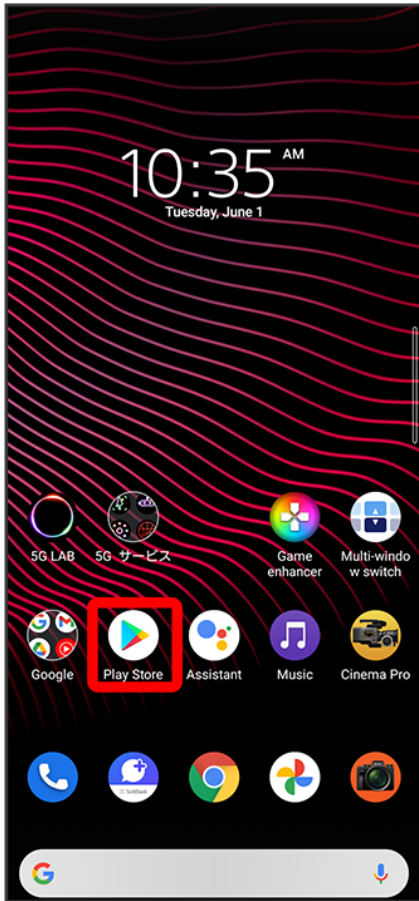

Google Play appears.

- If confirmation appears, follow onscreen instructions.

2

Tap free application

 




3

Install



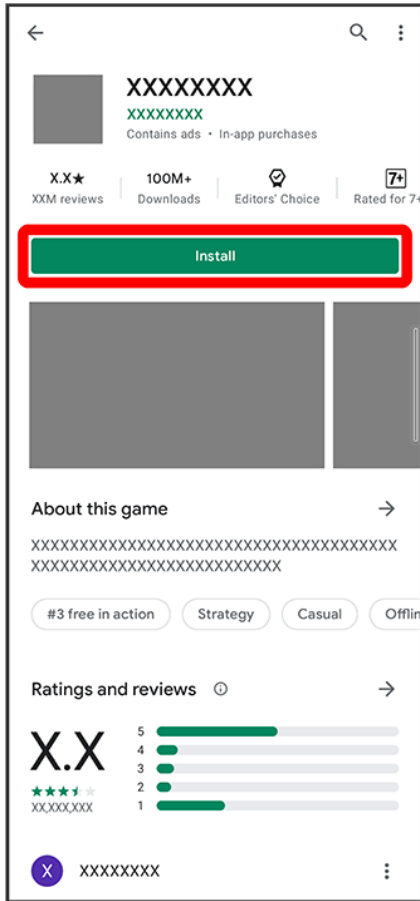

Application is downloaded and installed.


- If confirmation appears, follow onscreen instructions.

## Purchasing Paid Applications

 1

In Home Screen,  (Play Store)



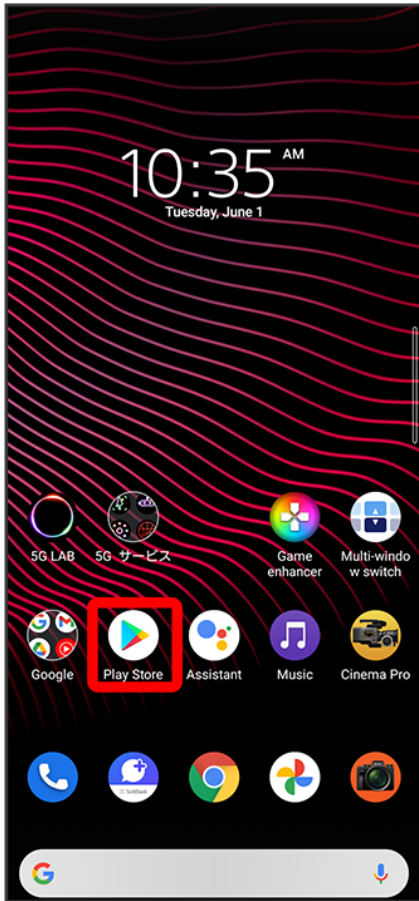

Google Play appears.

 
- If confirmation appears, follow onscreen instructions.

2

---

Tap paid application




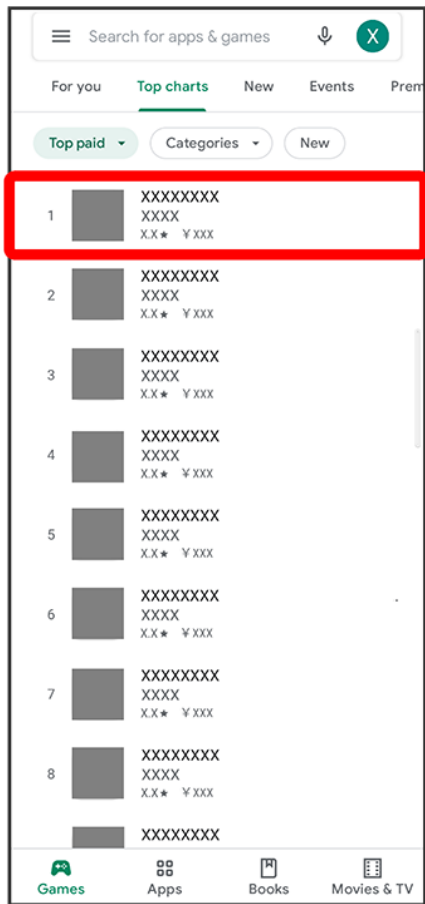

3

 Tap amount



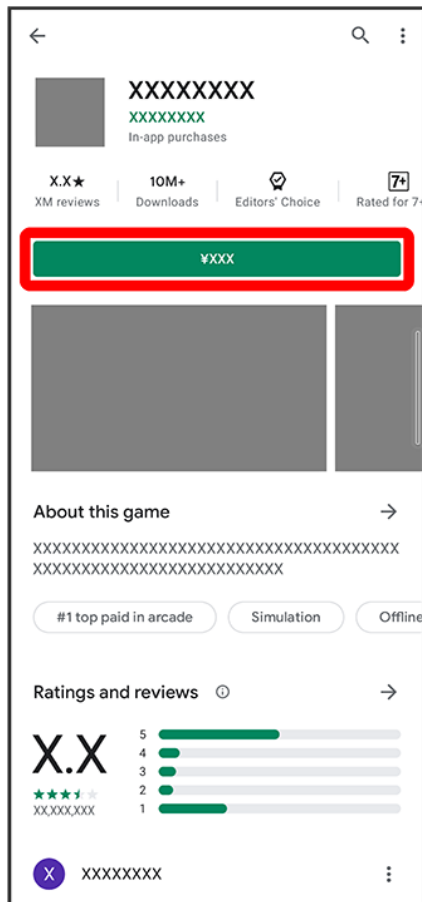


- If confirmation appears, follow onscreen instructions.

4

 Buy



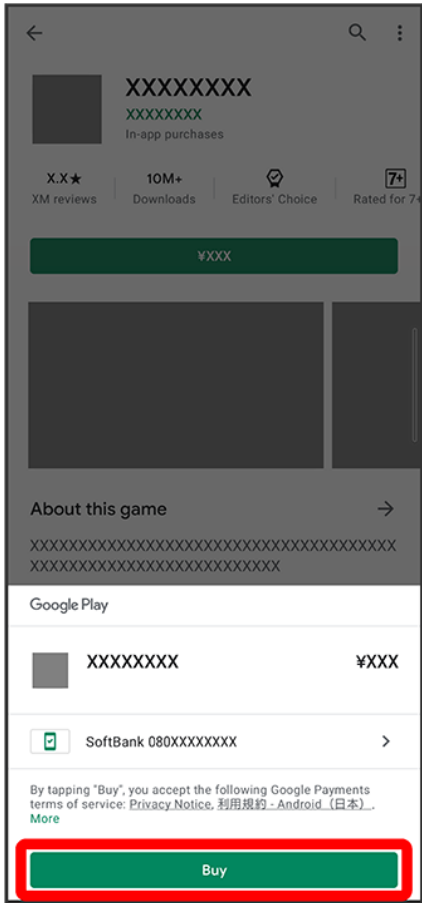


- If confirmation appears, follow onscreen instructions.

5

 OK



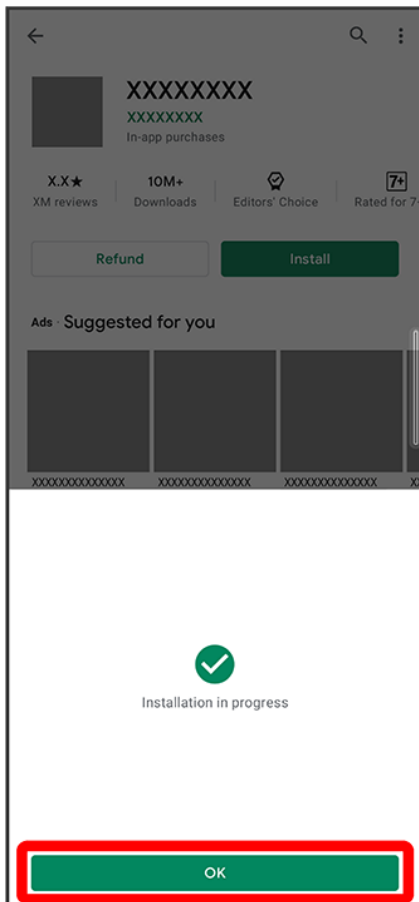

Application is downloaded and installed.

## Purchased Applications

### Payment







Pay only once. Redownloads of uninstalled applications are free of charge.

### On Other Android Devices

Install an application on any Android device under the same Google account for free.

## Requesting Refunds

Refund is possible within a limited time. By requesting a refund, the application is deleted and the charge is cancelled. A refund request is valid only once per one application.

In Google Play,   My apps & games  Installed  Tap application  Refund   
Request refund


## Purchasing Applications

 
Purchase applications at your own risk. SoftBank Corp. is not responsible for any disadvantage resulting for user or third parties.



# Updating Applications

1

In Home Screen,  (Play Store)

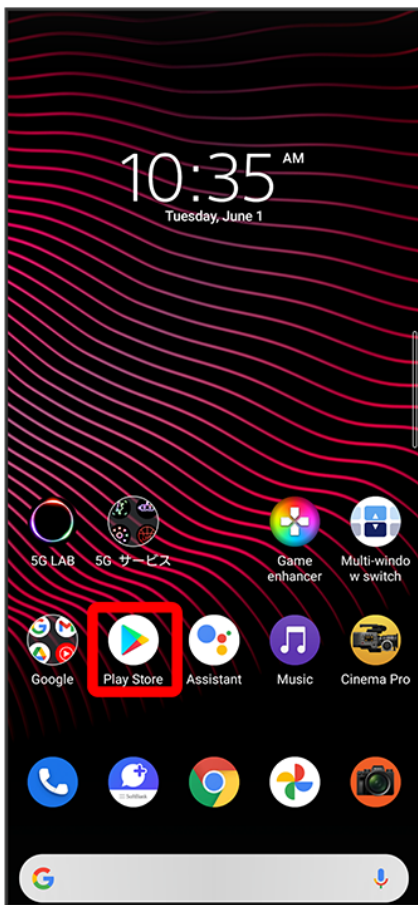

 Google Play appears.

- If confirmation appears, follow onscreen instructions.

2

☰ → **My apps & games** → **Update** at right of application to update





🚩 Application is updated.

- If confirmation appears, follow onscreen instructions.

## + Setting Application Updates

### Setting Automatic Updates for Applications

In Google Play, ⌵ → Settings → Auto-update apps → Set update method

### Setting Automatic Updates for Individual Applications

In Google Play, ⌵ → My apps & games → Tap application → ⋮ → Enable auto update (✅)

- Automatic updates are unavailable for some applications.




# Connecting by Wi-Fi

 
Handset supports Wi-Fi (wireless LAN). Access the Internet via a household Wi-Fi connection environment.

↓ [Selecting a Network Connection](#)

## Selecting a Network Connection


1

In Home Screen,  (Settings)

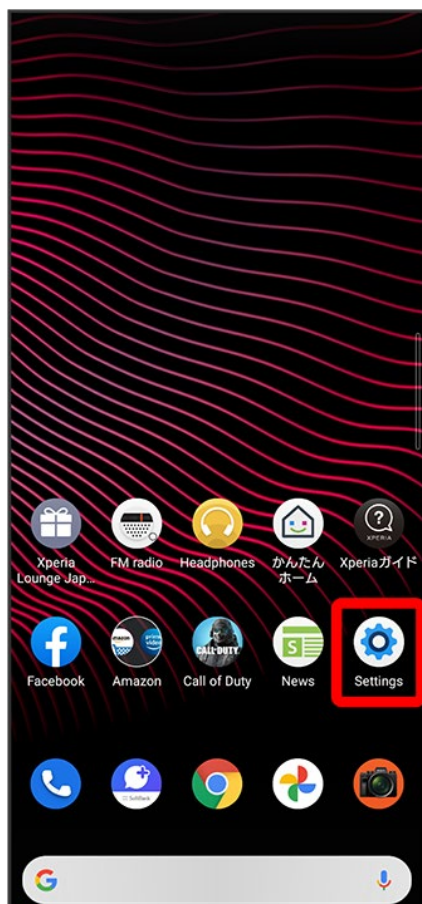




Network & internet

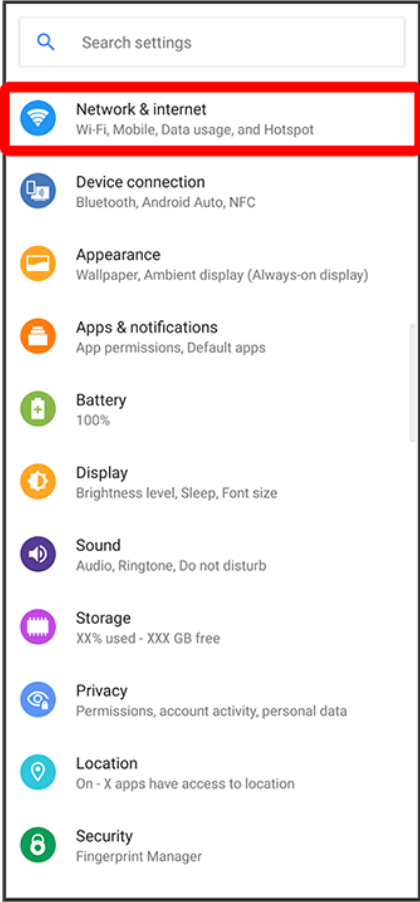 

Wi-Fi



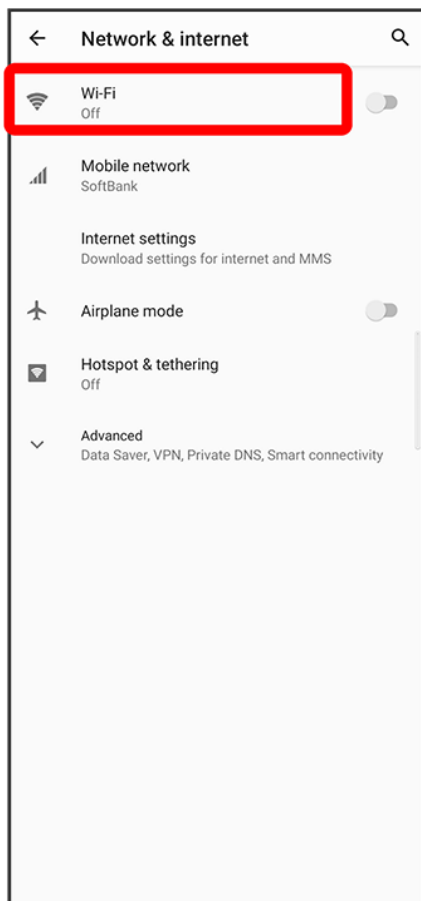 


🚩 Wi-Fi open.

4

 Use Wi-Fi (🔘)



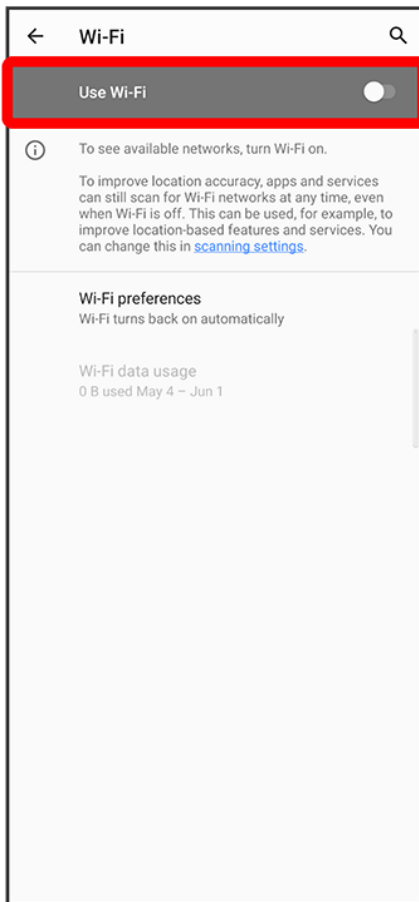

🚩 Wi-Fi is enabled.

 
- Wi-Fi networks are scanned. Available networks appear after scanning.
- Tap **Use Wi-Fi** to toggle on (🔵) / off (⚪).

5

---

Tap Wi-Fi network




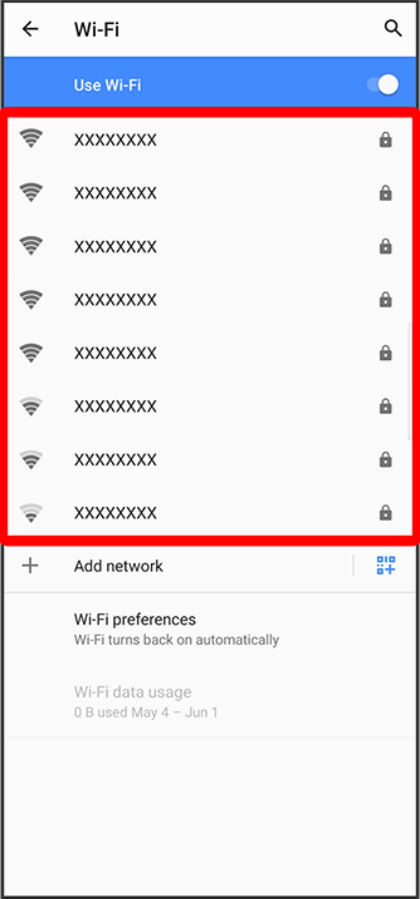

6

 Enter password➡CONNECT



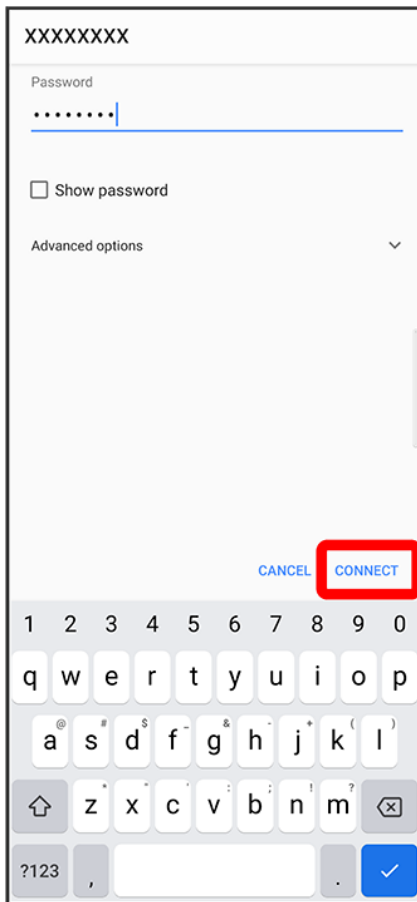

🚩 Handset is connected.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.



# Using Bluetooth Function

---

Connect to a Bluetooth-capable wireless phone, etc. for calls or to a hands-free device such as a headset.

---

↓ [Enabling Bluetooth Function](#)

---


## Bluetooth Function Cautions

Information may not appear correctly on both devices depending on the transferred data.

 
## Enabling Bluetooth Function

1

---

In Home Screen,  (Settings)




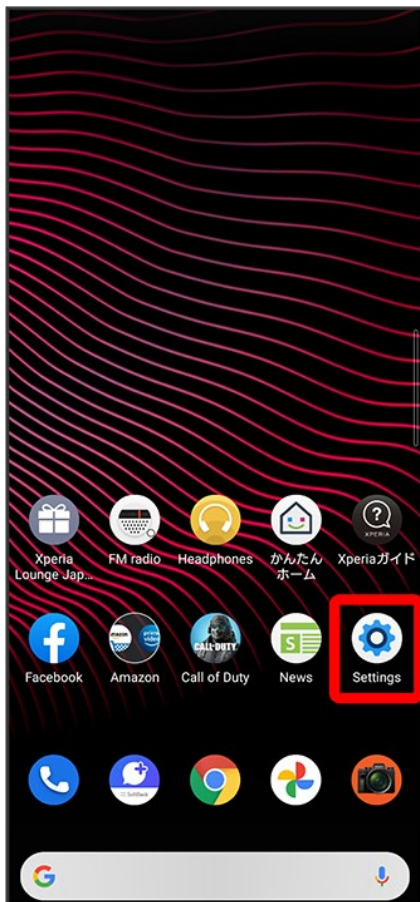

2

## Device connection



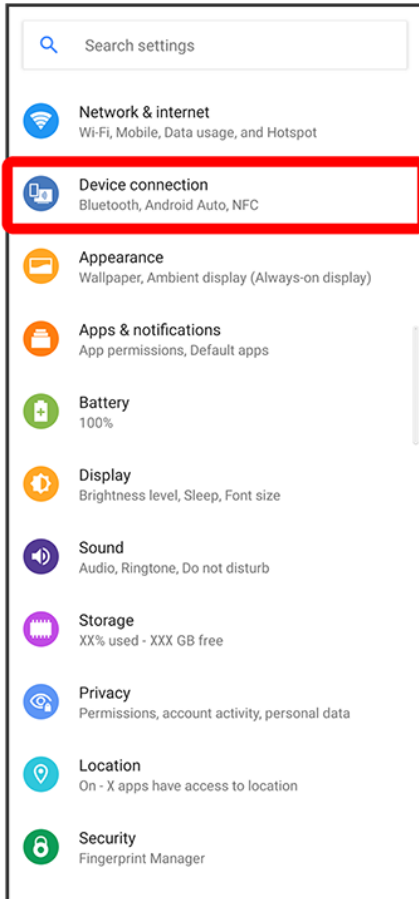 

Screen for connecting device opens.

3

Connection preferences

 





4

Bluetooth



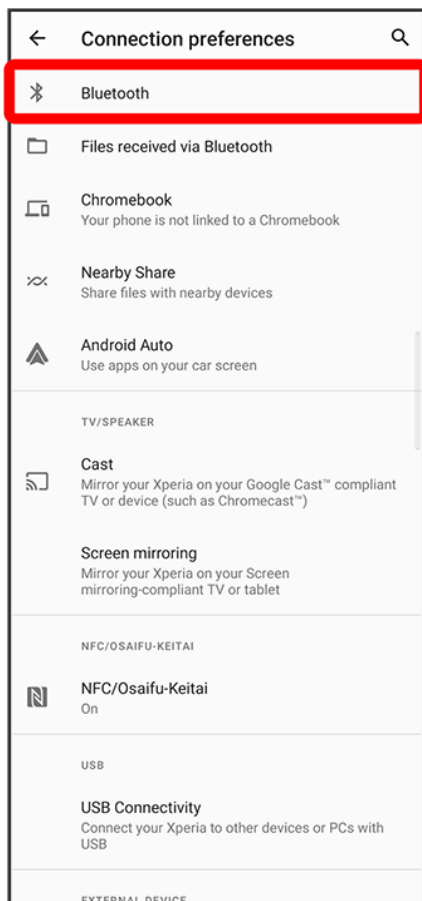


 Bluetooth settings open.

5

 Off (  )



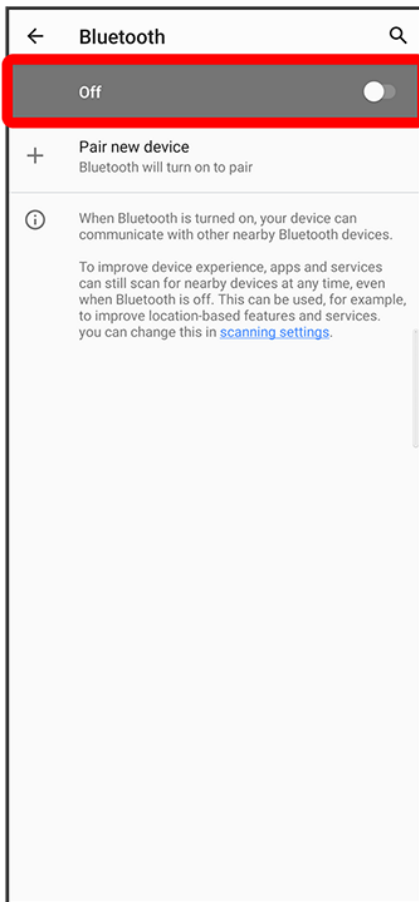

🚩 Bluetooth function is enabled.

- To disable Bluetooth function, Tap **On** (🔘).



# Handset Settings

Main setting options are described.  
Shown items and their arrangement may differ depending on current settings, etc.

↓ [Handset Settings](#)


## Handset Settings

 
Customize operation of handset functions. Handset settings include the following items.

| Item                                  | Description                                                                                              |
|---------------------------------------|----------------------------------------------------------------------------------------------------------|
| Network & internet                    | Make network and Internet settings for Wi-Fi, mobile networks, etc.                                      |
| Device connection                     | Make connection settings to other devices, such as Bluetooth connection and NFC/Osaifu-Keitai® settings. |
| Appearance                            | Set wallpaper, ambient display, clock design, etc.                                                       |
| Apps & notifications                  | Make application and notification settings.                                                              |
| Battery                               | Check Battery usage, make settings to save battery power, etc.                                           |
| Display                               | Set screen brightness, font size, etc.                                                                   |
| Sound                                 | Set ringtone, touch sounds, etc.                                                                         |
| Storage                               | Check internal and SD Card storage, mount SD Card, and delete SD Card data.                              |
| Privacy                               | Make privacy settings such as application permissions and showing passwords.                             |
| Location                              | Make Location settings.                                                                                  |
| Security                              | Set security functions such as screen lock, PIN, etc.                                                    |
| Accounts                              | Create accounts as well as add, sync, etc.                                                               |
| Accessibility                         | Set captions, magnification gestures, and other useful accessibility functions.                          |
| Digital Wellbeing & parental controls | Manage time that handset is used, set parental limitations on use, etc.                                  |
| Google                                | Make settings for Google services.                                                                       |
| System                                | Check and make settings for languages & input, gestures, date & time, backup, reset, system update, etc. |
| About phone                           | Check device name and own phone number, save emergency information, etc.                                 |



1

In Home Screen,  (Settings)

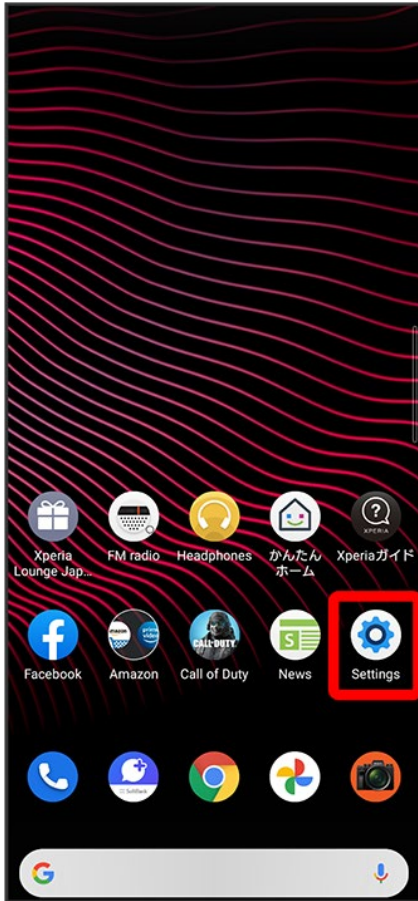


Handset settings open.

2

 Select item to set



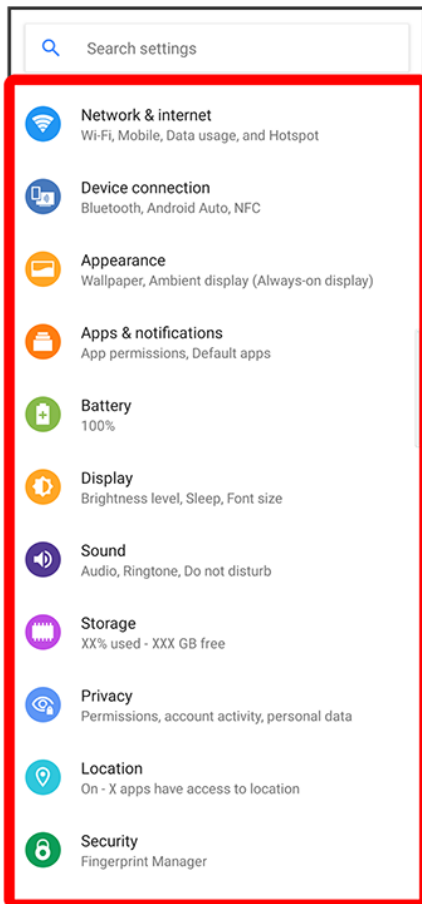

🚩 Settings open.



# Data Usage Settings

Check mobile data traffic and set limit.

↓ Data Usage Settings



## + Data Usage Operations

### Viewing Data Usage with Wi-Fi

In Home Screen,  (Settings) → Network & internet → Wi-Fi → Wi-Fi data usage



### Enabling Mobile Data

In Home Screen,  (Settings) → Network & internet → Mobile network → Mobile data


- Tap Mobile data to toggle on () / off (.
- If confirmation appears, follow onscreen instructions.



### Setting Data Saver

In Home Screen,  (Settings) → Network & internet → Advanced → Data Saver → Use Data Saver

- Tap Use Data Saver to toggle on () / off (.

### Setting Applications Not Subject to Data Saver

In Home Screen,  (Settings) → Network & internet → Advanced → Data Saver → Unrestricted data → Tap application not to be subject

 
- Tap application to toggle on () / off (.

## Data Usage Settings

1

In Home Screen,  (Settings) → Network & internet




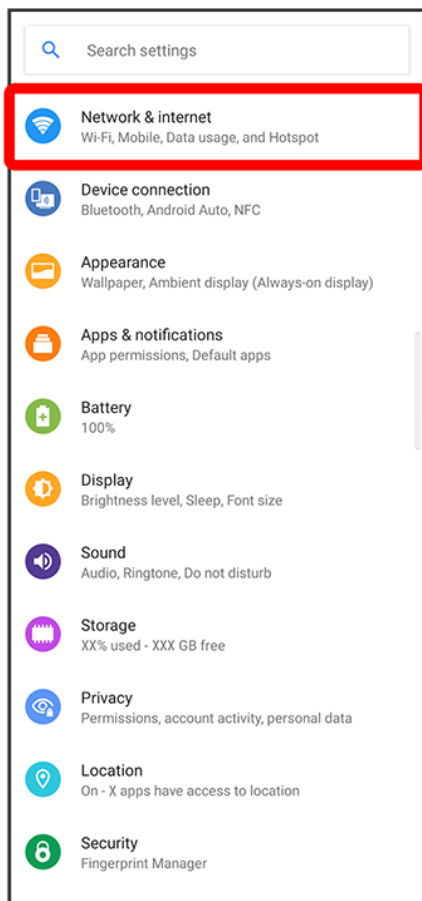

2

## Mobile network




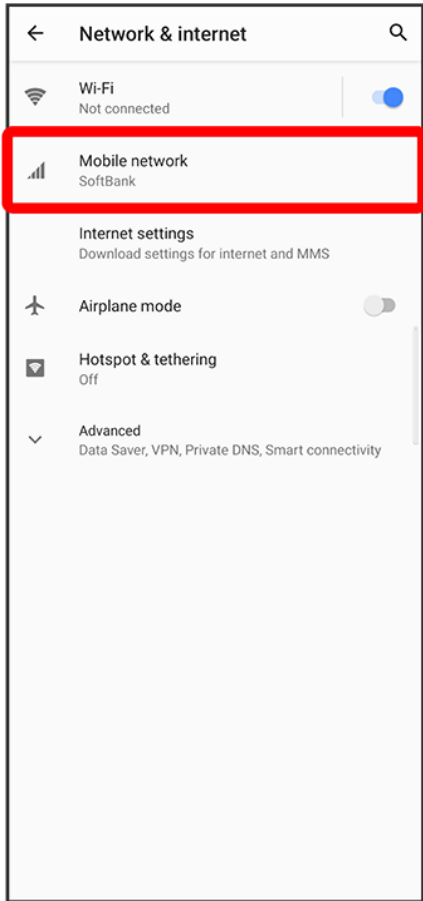 


3

## App data usage



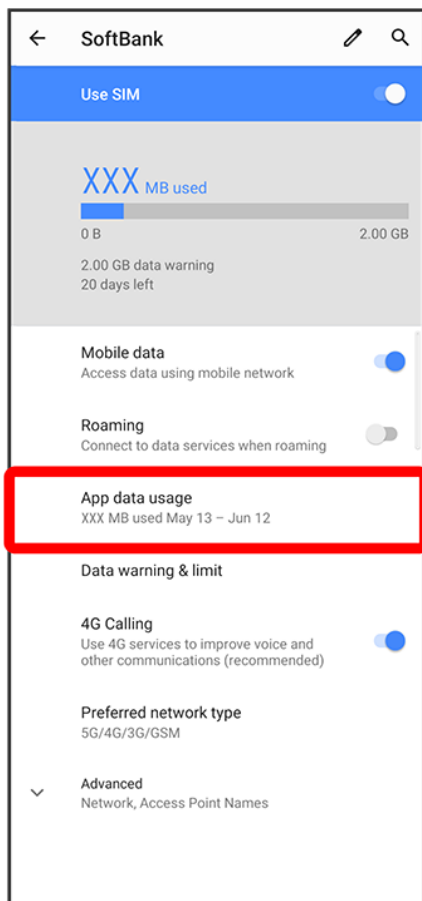 

 Mobile data usage window opens.



# Battery Settings

Check Battery usage, make settings to save battery power, etc.

↓ [Battery Settings](#)

## Battery Settings

Items that can be checked/set are the following.

| Item                                                          | Description                                                                                                                                                          |
|---------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery level and estimated time until depletion <sup>1</sup> | Check Battery and time remaining based on current usage.                                                                                                             |
| Apps are running normally <sup>1</sup>                        | Battery usage, etc appear.                                                                                                                                           |
| STAMINA mode                                                  | Save Battery by limiting heavy-consumption functions such as background communication and some visual effects.                                                       |
| Battery Care                                                  | Keep Battery better and longer performing. Set handset to learn charging habits (long time periods where connected to charging equipment) and adjust charging speed. |
| Battery share function                                        | Charge a Qi-compatible device from handset.                                                                                                                          |
| Adaptive Battery                                              | Limit Battery usage of seldom-used applications.                                                                                                                     |
| Battery percentage                                            | Enable battery level to be shown in Status Bar.                                                                                                                      |
| Last full charge                                              | Check time elapsed since last full charge.                                                                                                                           |
| Screen usage since full charge                                | Check Battery usage by screen since a full charge.                                                                                                                   |

<sup>1</sup> Screen view may differ depending on usage.




# Display Settings

Set screen brightness, font size, etc.

↓ [Display Settings](#)

## Display Settings

Settings can be made for the following items.

| Item                                                       | Description                                                                                                                  |
|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| Image quality settings                                     | Make settings for color gamut, contrast, and high-quality processing when playing back videos.                               |
| White balance                                              | Set white balance.                                                                                                           |
| High refresh rate                                          | Enable smooth screen rendering.                                                                                              |
| Brightness level                                           | Set brightness of Display.                                                                                                   |
| Adaptive brightness                                        | Enable adjustment of brightness for surroundings.                                                                            |
| Screen timeout                                             | Set a period of inactivity after which Display turns off automatically.                                                      |
| Font size                                                  | Set size of font for Display.                                                                                                |
| Display size                                               | Set the size of images, icons, etc. in Display.                                                                              |
| Dark theme                                                 | Make settings for using a dark theme.                                                                                        |
| Auto-rotate screen                                         | Enable Display to rotate with handset orientation automatically.                                                             |
| Lock screen                                                | Make settings for ambient display, clock design in Lock Screen, messages in Lock Screen, etc.                                |
| Side sense <sup>1</sup>                                    | Set Side sense.                                                                                                              |
| One-handed mode <sup>1</sup>                               | Double-Tap  then set smaller screen area. |
| Smart backlight control <sup>1</sup>                       | Set backlight to remain on even without any Tap operation while holding handset.                                             |
| Night Light <sup>1</sup>                                   | Set a night light.                                                                                                           |
| Prevent accidental operations with screen off <sup>1</sup> | Enable handset to prevent misoperation (unintended keypress, screen operation) when in a pocket or bag.                      |
| Screen saver <sup>1</sup>                                  | Set screensaver.                                                                                                             |

<sup>1</sup> Appears after Tapping "Advanced."



# Sound Settings

Set ringtone, touch sounds, etc.


↓ [Sound Settings](#)

## Sound Settings

Settings can be made for the following items.

| Item                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Audio settings</b>               | Set for sound. <ul style="list-style-type: none"><li>•Dolby Atmos</li></ul> Assign specific sounds to any position, including above your head, as well as reposition them. <ul style="list-style-type: none"><li>•360 Spatial Sound</li></ul> A unique sound technology from Sony that takes normal stereo sound and puts you in an immersive sound space. <ul style="list-style-type: none"><li>•DSEE Ultimate</li></ul> Enable accurate, scaled-up replay of compressed sound files and CD-level sound using AI technology. Use high-resolution audio headphones for sound quality that approximates high resolution. <ul style="list-style-type: none"><li>•Intelligent wind filter</li></ul> Enable filtering of wind noise on the mic when recording. |
| <b>Media volume</b>                 | Adjust media volume.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Dynamic Vibration</b>            | Add vibration when playing back movies, videos, and music for an enhanced experience.<br>During playback with a supporting application, Press Volume Key for volume adjust bar to adjust vibration. Muting media volume also turns Dynamic Vibration off.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>In-call volume</b>               | Adjust call volume.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Ring and notification volume</b> | Adjust ring volume and notification sound.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Alarm volume</b>                 | Adjust alarm volume.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Vibrate for calls</b>            | Enable vibration for ringtone.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Do Not Disturb</b>               | Enable/disable Do Not Disturb. Also make Do Not Disturb settings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Media</b>                        | Enable the player in Quick Settings to no longer appear once media playback has ended.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



|                                                  |                                                                                                                                         |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Phone ringtone</b>                            | Set phone ringtone.                                                                                                                     |
| <b>Notification sound</b>                        | Set notification sound.                                                                                                                 |
| <b>Default alarm ringtone</b>                    | Set alarm ringtone.                                                                                                                     |
| <b>Dial pad tones<sup>1</sup></b>                | Enable confirmation tones when Dialpad Tapped.                                                                                          |
| <b>Screen locking sound<sup>1</sup></b>          | Enable tone when locking or unlocking screen.                                                                                           |
| <b>Charging sounds and vibration<sup>1</sup></b> | Enable tone when charging starts.                                                                                                       |
| <b>Touch sounds<sup>1</sup></b>                  | Enable tones for Tap operation.                                                                                                         |
| <b>Touch vibration<sup>1</sup></b>               | Enable vibration for  (home), keyboard operation, etc. |

1 Appears after Tapping "Advanced."



## Audio Settings

Even if Dolby Atmos is set on when 360 Spatial Sound or DSEE Ultimate become are on, only either one of them may be enabled depending on the application. If using a music application, 360 Spatial Sound or DSEE Ultimate are enabled with priority.



# Security Settings


Set security functions such as screen lock, PIN, etc.

↓ Security Settings

↓ Enabling SIM PIN

↓ Changing SIM PIN

## + Setting Screen Not to Lock

In Home Screen,  (Settings) → Security → Screen lock → None

■ If method for unlocking screen is setting other than None or Swipe before changing setting, first Tap Screen lock and unlock screen, or None then YES, REMOVE.

## Security Settings

Settings can be made for the following items.

| Item                                   | Description                                                                                                           |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Google Play Protect <sup>1</sup>       | Enable regular scanning of handset to check for security threats.                                                     |
| Security update <sup>1</sup>           | Check for system updates.                                                                                             |
| Find My Device <sup>1</sup>            | Set Find My Device on/off and check method for finding handset.                                                       |
| Google Play system update <sup>1</sup> | Check for Google Play system updates.                                                                                 |
| Screen lock                            | Set method for unlocking screen.                                                                                      |
| Fingerprint Manager                    | Set fingerprints.                                                                                                     |
| Smart Lock                             | Set conditions for automatically unlocking screen when method for unlocking screen is "Pattern" / "PIN" / "Password." |
| Device admin apps                      | Enable/disable handset management applications.                                                                       |
| SIM card lock                          | Make settings for SIM Card lock.                                                                                      |
| Encryption & credentials <sup>2</sup>  | Make settings for encryption and credentials.                                                                         |
| Trust agents <sup>2</sup>              | Enable/disable Trust agents.                                                                                          |
| App pinning <sup>2</sup>               | Set to keep only screen of specified application in view. When set to ON, pinned screen cannot be moved.              |

1 Screen view may differ depending on usage.

2 Appears after Tapping "Advanced."

 


# Enabling SIM PIN

When PIN is enabled, a window for entering PIN appears to allow handset use each time handset is powered on with SIM Card installed.

1


In Home Screen,  (Settings)  Security

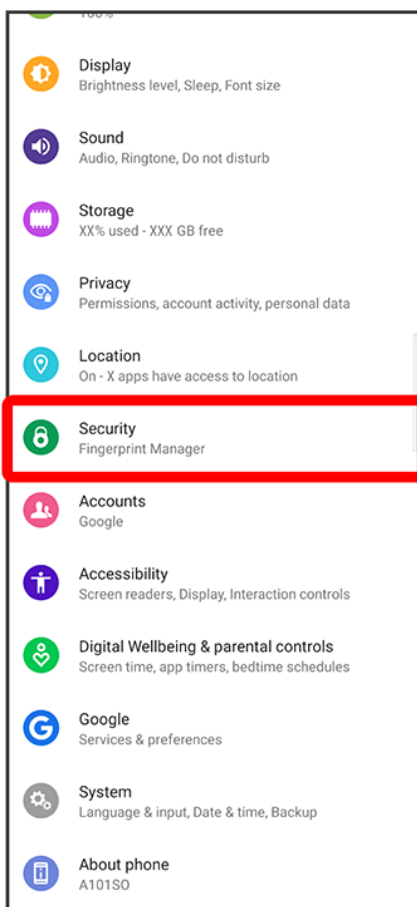


2

 SIM card lock  Lock SIM card  Enter PIN  OK 



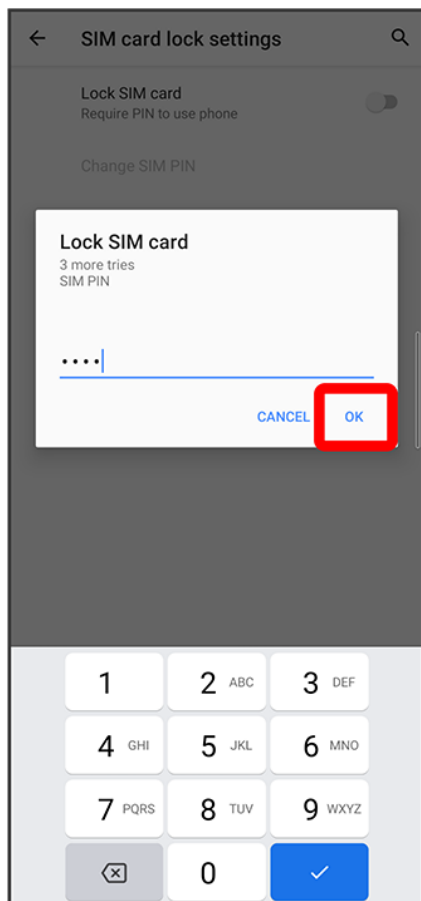

 PIN is enabled.

### **PIN Cautions**

Entering incorrect PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; contact Customer Service. Entering incorrect PUK ten consecutive times locks SIM Card, disabling handset. For recovery, SIM Card must be reissued at a SoftBank Shop (fees apply).

 
## Changing SIM PIN

First enable SIM PIN to change PIN.

**1**

In Home Screen,  (Settings)  Security



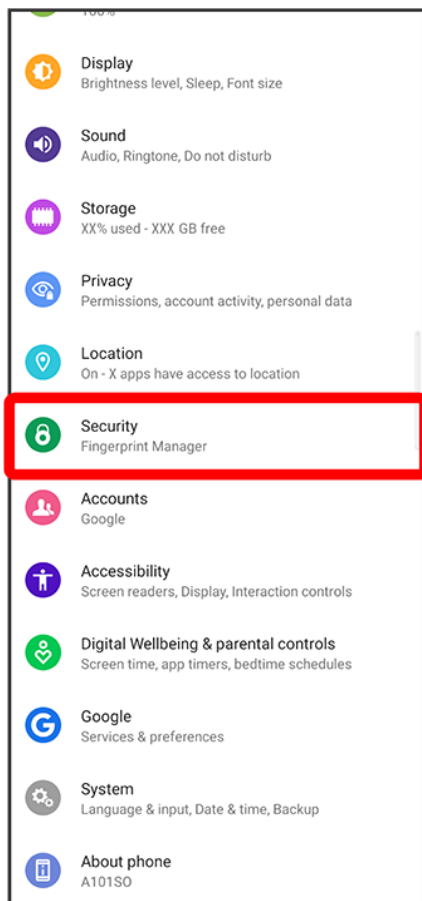


2

SIM card lock → Change SIM PIN → Enter current PIN → OK → Enter new PIN → OK →

 Re-enter new PIN → OK



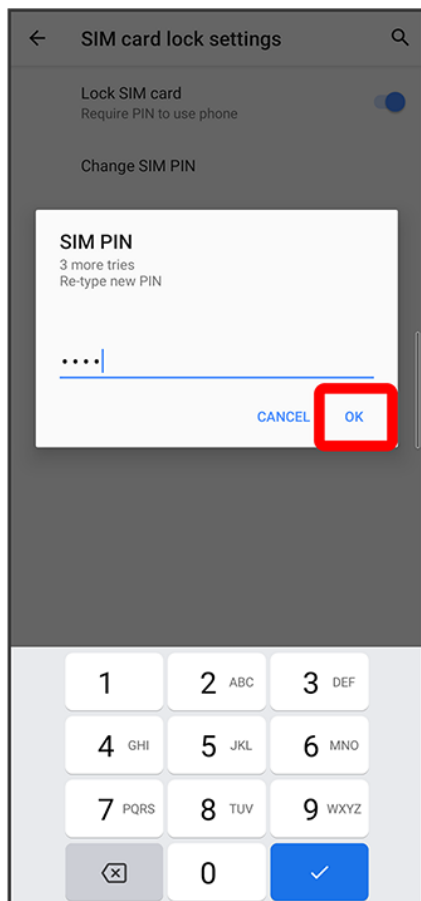

🚩 PIN is changed.



# System Settings


Check and make settings for languages & input, gestures, date & time, backup, reset, system update, etc.

↓ System Settings

## + Languages & Input Operations

### Setting Handset Language

In Home Screen, ⚙️ (Settings) → System → Languages & input → Languages → Add a language → Tap language → Tap region

- Language appearing at top is used.
- Drag  to change order of languages.

### Setting Keyboard/Voice Input

In Home Screen, ⚙️ (Settings) → System → Languages & input → On-screen keyboard → Tap keyboard/voice input method → Tap item → Follow onscreen instructions

# System Settings

Settings can be made for the following items.

| Item                            | Description                                                                |
|---------------------------------|----------------------------------------------------------------------------|
| Languages & input               | Make settings for handset language and text entry.                         |
| Gestures                        | Make handset operation settings, such as Side sense and System navigation. |
| Date & time                     | Make settings for date and time.                                           |
| Backup                          | Make settings for data backup functions.                                   |
| Reset options <sup>1</sup>      | Reset settings and initialize data.                                        |
| System update <sup>1</sup>      | Check for updates. For details, see "Updating Software."                   |
| Application update <sup>1</sup> | Make settings for updating applications, automatic updates, etc.           |

<sup>1</sup> Appears after Tapping "Advanced."



# Other Settings

- ↓ [Network & Internet Settings](#)
- ↓ [Device Connection Settings](#)
- ↓ [Appearance Settings](#)
- ↓ [Apps & notifications Settings](#)
- ↓ [Storage Settings](#)
- ↓ [Privacy Settings](#)
- ↓ [Location Settings](#)
- ↓ [Accounts Settings](#)
- ↓ [Accessibility Settings](#)
- ↓ [Digital Wellbeing & parental controls Settings](#)
- ↓ [Google Settings](#)
- ↓ [About phone Settings](#)

## Network & Internet Settings

Make network and Internet settings for Wi-Fi, mobile networks, etc. Settings can be made for the following items.

| Item                     | Description                                                                                                         |
|--------------------------|---------------------------------------------------------------------------------------------------------------------|
| Wi-Fi                    | Make Wi-Fi connection settings.<br>For details, see "Connecting by Wi-Fi."                                          |
| Mobile network           | Make mobile network settings.<br>For details on automatically selecting a network or roaming, see "Global Roaming." |
| Internet settings        | Download settings for internet and MMS.                                                                             |
| Airplane mode            | Disable all functions that emit signals. Handset stays powered on.                                                  |
| Hotspot & tethering      | Use handset as Wi-Fi router to access Internet from a PC, game console, etc.                                        |
| Data Saver <sup>1</sup>  | Stop background data communication for some applications.                                                           |
| VPN <sup>1</sup>         | Add a VPN.                                                                                                          |
| Private DNS <sup>1</sup> | Make private DNS settings.                                                                                          |



|                                        |                                                                                                       |
|----------------------------------------|-------------------------------------------------------------------------------------------------------|
| <b>Smart connectivity</b> <sup>1</sup> | Enable automatic connection to the optimal network when both Wi-Fi and mobile networks are available. |
|----------------------------------------|-------------------------------------------------------------------------------------------------------|


1 Appears after Tapping "Advanced."

## Device Connection Settings

Make connection settings to other devices, such as Bluetooth connection and NFC/Osaifu-Keitai® settings. For details on Bluetooth connection, see "Enabling Bluetooth Function." Settings can be made for the following items.

| Item                                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Connected device display</b> <sup>1</sup> | Any devices connected by Bluetooth and USB appear. Tap to make Bluetooth device settings and USB connection settings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Pair new device</b>                       | Search for and pair nearby Bluetooth devices.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>PREVIOUSLY CONNECTED DEVICES</b>          | Paired devices appear.<br>Tap <b>See all</b> for all paired Bluetooth devices.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Connection preferences</b>                | <ul style="list-style-type: none"> <li>• Bluetooth<br/>Make Bluetooth connection settings.</li> <li>• Files received via Bluetooth<br/>View history of files received by Bluetooth connection.</li> <li>• Chromebook<br/>Make Chromebook settings.</li> <li>• Nearby Share<br/>Share files with nearby devices.</li> <li>• Android Auto<br/>Connect to a vehicle display that supports Android Auto to use Google Maps, voice operation, etc.</li> <li>• Cast<br/>View handset screen on Google Cast™-capable device.</li> <li>• Screen mirroring<br/>View handset screen on Screen mirroring-capable device.</li> <li>• NFC/Osaifu-Keitai<br/>Make settings for NFC/Osaifu-Keitai®.</li> <li>• USB Connectivity<br/>Enable software install wizard to appear when connected to a computer.</li> <li>• External monitor<br/>Connect to a camera such as the Sony α (alpha) or an external device such as a computer and use handset as a monitor. After</li> </ul> |



setting this option on,  (External monitor) appears in app list.

- DUALSHOCK™ 4

Set handset to be controllable by wireless controller (DUALSHOCK™ 4).

- Printing

Set printing from handset to be possible with a printer.

1 Shown screen depends on connected device.

## Appearance Settings

Set wallpaper, ambient display, clock design, etc. Settings can be made for the following items.

| Item                                       | Description                                                                                                                 |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>Wallpaper</b>                           | Set wallpaper.                                                                                                              |
| <b>Ambient display (Always-on display)</b> | Make ambient display settings to allow checking of time, notifications, details of playing music, etc. while screen locked. |
| <b>Clocks</b>                              | Change type of clock in Lock Screen.                                                                                        |
| <b>Multitasking usage guides</b>           | Check useful functions such as Side Sense, multi-window, and pop-up window.                                                 |

## Apps & notifications Settings

Make application and notification settings. Settings can be made for the following items.

| Item                                         | Description                                                                                                                                                     |
|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Recently opened apps</b>                  | Recently opened applications appear.                                                                                                                            |
| <b>SEE ALL XX APPS</b>                       | Check and make settings for installed applications.                                                                                                             |
| <b>Conversations</b>                         | Appears for notifications from applications supporting talk functions, and when set to be shown in talk section. Check priority and make notification settings. |
| <b>Configure notifications</b>               | Make notification settings.                                                                                                                                     |
| <b>Screen time</b>                           | Check Screen time, Notifications received, and Times opened for handset and each application.                                                                   |
| <b>Default apps<sup>1</sup></b>              | Set applications that launch as standard applications.                                                                                                          |
| <b>Permission manager<sup>1</sup></b>        | Check/change application permissions.<br>For details, see "Setting Required Permissions for Applications."                                                      |
| <b>Wireless emergency alerts<sup>1</sup></b> | Make settings for emergency alerts.                                                                                                                             |
| <b>Special app access<sup>1</sup></b>        | Make settings for special application access.                                                                                                                   |



1 Appears after Tapping "Advanced."

## Storage Settings

Check internal and SD Card storage, mount SD Card, and delete SD Card data. Settings can be made for the following items.

| Item                           | Description                                          |
|--------------------------------|------------------------------------------------------|
| <b>DEVICE STORAGE</b>          | Check used space/total space on handset.             |
| <b>Internal shared storage</b> | Check used space/total space in internal storage.    |
| <b>PORTABLE STORAGE</b>        | Check used space/total space on SD Card/USB storage. |

## Privacy Settings

Make privacy settings such as application permissions and showing passwords. Settings can be made for the following items.

| Item                                       | Description                                                                                                                           |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>Permission manager</b>                  | Check/change application permissions.<br>For details, see "Setting Required Permissions for Applications."                            |
| <b>Show passwords</b>                      | Enable entered characters to be visible briefly before changing to "●" in text entry window for SIM PIN / screen lock PIN / password. |
| <b>Show notifications</b>                  | Make settings for showing notification details.                                                                                       |
| <b>Autofill service from Google</b>        | Set information saved to your Google account, such as passwords, to be entered by Tapping only once.                                  |
| <b>Google location history<sup>1</sup></b> | Enable handset to save locations of visited places.                                                                                   |
| <b>Activity controls<sup>1</sup></b>       | Select activities and information that are savable to Google.                                                                         |
| <b>Ads<sup>1</sup></b>                     | Make settings for advertisements that appear.                                                                                         |
| <b>Usage &amp; diagnostics<sup>1</sup></b> | Enable diagnostic data as well as data on handset and application usage to be sent to Google for Android improvement purposes.        |

1 Appears after Tapping "Advanced."

## Location Settings

Make Location settings. Settings can be made for the following items.

| Item                | Description                                                                              |
|---------------------|------------------------------------------------------------------------------------------|
| <b>Use location</b> | Enable use of wireless networks and GPS so as to obtain information on current location. |



|                                               |                                                                                                                    |
|-----------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| <b>RECENT LOCATION REQUESTS</b>               | Show applications recently using location.<br>Tap <b>See all</b> to show all applications recently using location. |
| <b>App access to location</b>                 | Permit use of location information per individual application.                                                     |
| <b>Wi-Fi and Bluetooth scanning</b>           | Permit Wi-Fi and Bluetooth scanning for improvement of functions and services that use location information.       |
| <b>Emergency Location Service<sup>1</sup></b> | Enable use of emergency location information.                                                                      |
| <b>Google Location Accuracy<sup>1</sup></b>   | Enable improved accuracy of location information, using Wi-Fi, mobile networks, and sensors.                       |
| <b>Google Location History<sup>1</sup></b>    | Enable handset to save locations of visited places.                                                                |
| <b>Google Location Sharing<sup>1</sup></b>    | Share current location with other users.                                                                           |

<sup>1</sup> Appears after Tapping "Advanced."

## Accounts Settings

Create accounts as well as add, sync, etc. Settings can be made for the following items.




| Item                               | Description                                         |
|------------------------------------|-----------------------------------------------------|
| <b>ACCOUNTS FOR OWNER</b>          | Added account appears on handset.                   |
| <b>Add account</b>                 | Create and add accounts.                            |
| <b>Automatically sync app data</b> | Enable automatic updating of data for applications. |

## Accessibility Settings

Set captions, magnification gestures, and other useful accessibility functions. Settings can be made for the following items.

| Item                               | Description                                                                   |
|------------------------------------|-------------------------------------------------------------------------------|
| <b>Smart Security</b>              | Enable use of Smart Security.                                                 |
| <b>詐欺ウォール (SagiWall)</b>           | Enable Internet SagiWall.                                                     |
| <b>Select to Speak<sup>1</sup></b> | Enable Tapped items on Display to be read out.                                |
| <b>TalkBack<sup>1</sup></b>        | Set TalkBack to read out screen information.                                  |
| <b>Text-to-speech output</b>       | Set engine for text readout, as well as change readout speed and play sample. |
| <b>Font size</b>                   | Set the size of text appearing in Display.                                    |
| <b>Display size</b>                | Set the size of images and icons, etc. appearing in Display.                  |
| <b>Dark theme</b>                  | Enable a dark theme.                                                          |
| <b>Magnification</b>               | Set screen to be enlargeable.                                                 |

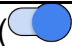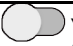

|                                                    |                                                                                                                                                                                                                                                             |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Color correction</b>                            | Compensate colors when red and green are hard to distinguish.                                                                                                                                                                                               |
| <b>Color inversion</b>                             | Enable inverted screen colors.                                                                                                                                                                                                                              |
| <b>Large mouse pointer</b>                         | Enable a large pointer when using a mouse.                                                                                                                                                                                                                  |
| <b>Remove animations</b>                           | Remove animation effect when Tapping on (  ) / off (  ) icon and when screen changes. |
| <b>Accessibility Menu</b>                          | Enable use of large menu by Tapping  in Navigation Bar.                                                                                                                  |
| <b>Switch Access</b>                               | Enable handset functions to be assigned to keys.                                                                                                                                                                                                            |
| <b>Click after mouse pointer stops moving</b>      | Set handset to click screen where pointer stops moving when using a mouse.                                                                                                                                                                                  |
| <b>Power button ends call<sup>2</sup></b>          | Enable end of call by Pressing Power Key during call.                                                                                                                                                                                                       |
| <b>Auto-rotate screen</b>                          | Enable Display to rotate with handset orientation automatically.                                                                                                                                                                                            |
| <b>Touch &amp; hold delay</b>                      | Set detection time for Touch & Hold on Display.                                                                                                                                                                                                             |
| <b>Time to take action (Accessibility timeout)</b> | Set how long messages appear that appear only briefly.                                                                                                                                                                                                      |
| <b>Vibration &amp; haptic strength</b>             | Set handset to vibrate for ringtone, notifications, and tap operation.                                                                                                                                                                                      |
| <b>System navigation</b>                           | Make settings for using gesture action or an icon at Display bottom to move to Home Screen, switch between applications, and go back.                                                                                                                       |
| <b>Mono audio</b>                                  | Enable monaural audio playback.                                                                                                                                                                                                                             |
| <b>Audio balance</b>                               | Set audio left-right balance.                                                                                                                                                                                                                               |
| <b>Hearing aids</b>                                | Pair handset with a Bluetooth-capable hearing aid.                                                                                                                                                                                                          |
| <b>Caption preferences</b>                         | Enable captions, as well as caption language, size, etc.                                                                                                                                                                                                    |
| <b>High contrast text<sup>3</sup></b>              | Make text easier to see by adding outline, etc.                                                                                                                                                                                                             |
| <b>Shortcut from lock screen<sup>4</sup></b>       | Enable user accessibility functions to activate by Pressing Volume Up and Down at the same time in Lock Screen.                                                                                                                                             |


- 1 Readout is in "Language" set in "Text-to-speech output."
- 2 When enabled and Display has gone out during a call, first Press Power Key to turn Display on, then Press Power Key to end call.
- 3 Experimental feature; may not work optimally.
- 4 Appears after Tapping "Advanced."

## Digital Wellbeing & parental controls Settings

Manage time that handset is used, set parental limitations on use, etc. Settings can be made for the following items.

| Item                         | Description                                                                                   |
|------------------------------|-----------------------------------------------------------------------------------------------|
| <b>Dashboard<sup>1</sup></b> | Check Screen time, Notifications received, and Times opened for handset and each application. |



|                                              |                                                                                                                                       |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>Bedtime mode<sup>1</sup></b>              | Change Display to monochrome or enable Do Not Disturb at preset time.                                                                 |
| <b>Focus mode<sup>1</sup></b>                | Pause applications that might be a distraction.                                                                                       |
| <b>Manage notifications<sup>1</sup></b>      | Set notifications on/off for apps that have recently sent notifications.                                                              |
| <b>Do Not Disturb<sup>1</sup></b>            | Enable/disable Do Not Disturb. Also make Do Not Disturb settings.                                                                     |
| <b>Show icon in the app list<sup>1</sup></b> | Enable  (Digital Wellbeing) to be shown in app list. |
| <b>Set up parental controls</b>              | Use family link for parents and remotely manage handset and limit handset use time.                                                   |

<sup>1</sup> When setting for the first time, Tap "Show your data" first.

## Google Settings

Make settings for Google services. Settings can be made for the following items.

| Item                              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Manage your Google Account</b> | Make Google account settings.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Account services</b>           | Make service settings for your Google account.                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Ads</b>                        | Make settings for advertisements that appear.                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Autofill</b>                   | Set auto-filling of forms and confirmation codes.                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Backup</b>                     | Make backup settings.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Chromebook</b>                 | Connect handset to Chromebook.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Data &amp; messaging</b>       | <ul style="list-style-type: none"> <li>• Data management</li> </ul> <p>Make file update settings for applications compatible with Google Drive.</p> <ul style="list-style-type: none"> <li>• Device phone number</li> </ul> <p>Make settings for use of phone number set to be recognized by Google.</p>                                                                                                                                                  |
| <b>Device connections</b>         | <ul style="list-style-type: none"> <li>• Cast media controls</li> </ul> <p>Enable control directly from Cast media control notifications when playing media on TV or speaker with Chromecast on same Wi-Fi network.</p> <ul style="list-style-type: none"> <li>• Devices</li> </ul> <p>Make notification settings for a device near handset.</p> <ul style="list-style-type: none"> <li>• Nearby Share</li> </ul> <p>Share files with nearby devices.</p> |
| <b>On-device sharing</b>          | Let Google applications use on-device data shared by these applications.                                                                                                                                                                                                                                                                                                                                                                                  |



|                             |                                                                                                                                                                                                                                                                                                                             |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parental Controls</b>    | Use family link for parents and remotely manage handset and limit handset use time.                                                                                                                                                                                                                                         |
| <b>Security</b>             | Make security settings in case of handset loss.                                                                                                                                                                                                                                                                             |
| <b>Set up &amp; restore</b> | <ul style="list-style-type: none"> <li>• Restore contacts</li> </ul> Restore backed up contacts. <ul style="list-style-type: none"> <li>• Set up nearby device</li> </ul> Make settings for a device near handset. <ul style="list-style-type: none"> <li>• Set up your work profile</li> </ul> Make work profile settings. |

## About phone Settings

Check device name and own phone number, save emergency information, etc.

Items that can be checked/set are the following.

| Item                            | Description                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------|
| <b>Device name</b>              | Check/change handset name.                                                        |
| <b>Phone number</b>             | Check own phone number.                                                           |
| <b>Emergency information</b>    | Set information on any medical treatment and emergency contact information.       |
| <b>Legal information</b>        | Show legal information.                                                           |
| <b>Certificates</b>             | Check credentials.                                                                |
| <b>Detailed Diagnostics</b>     | Enable detailed handset diagnostic data to be sent for improving Xperia™ quality. |
| <b>SIM status</b>               | Check SIM information.                                                            |
| <b>Model</b>                    | Check handset's model name, serial number, and hardware version.                  |
| <b>IMEI</b>                     | Check IMEI.                                                                       |
| <b>Android version</b>          | Check the Android version.                                                        |
| <b>Battery life</b>             | Check Battery performance.                                                        |
| <b>IP address</b>               | Check IP address.                                                                 |
| <b>Wi-Fi MAC address</b>        | Select and check saved networks.                                                  |
| <b>Device Wi-Fi MAC address</b> | Check Wi-Fi MAC address.                                                          |
| <b>Bluetooth address</b>        | Check Bluetooth address.                                                          |
| <b>Up time</b>                  | Check up time.                                                                    |
| <b>Build number</b>             | Check build number.                                                               |



# Global Roaming

---

Handset is Global Roaming Service eligible. Use the same handset number outside Japan.

Handset connects to an appropriate cellular provider automatically by default. A specific carrier can also be selected manually.

Change communications method and roaming settings as needed.

---

↓ [Setting the Carrier](#)

---

↓ [Changing Roaming Setting](#)

---

 
## Setting the Carrier

1

---

In Home Screen,  (Settings)  **Network & internet**




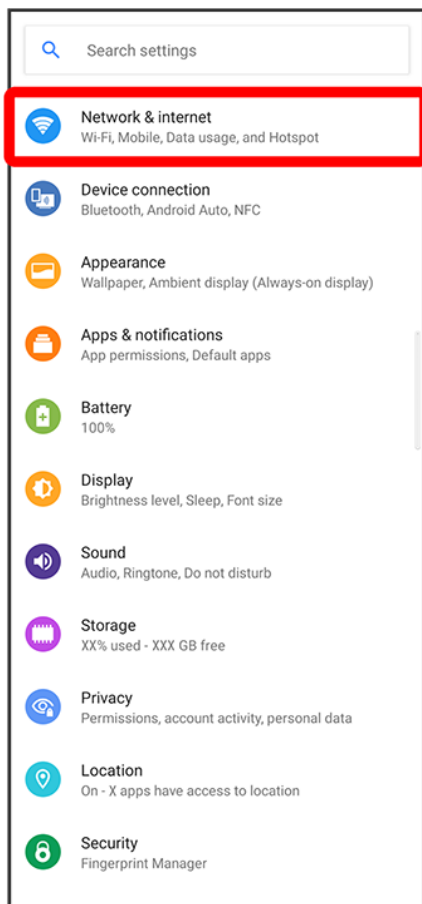

2

 Mobile network ➡ Advanced




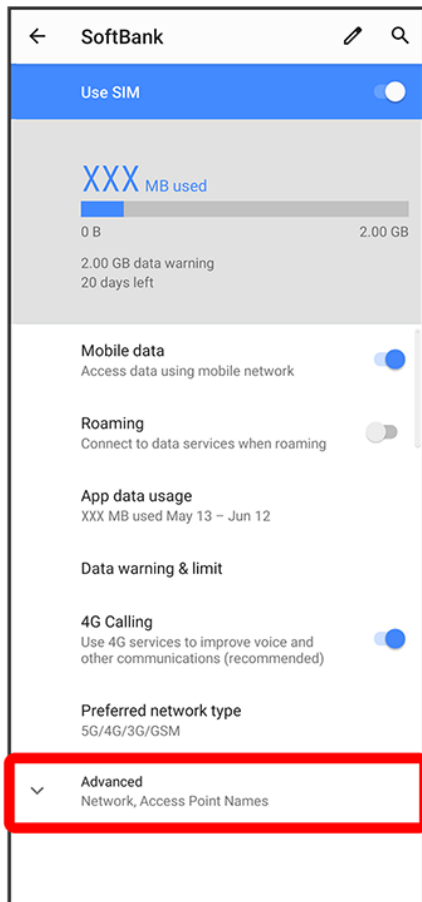


3

 Automatically select network (🔴🟢)



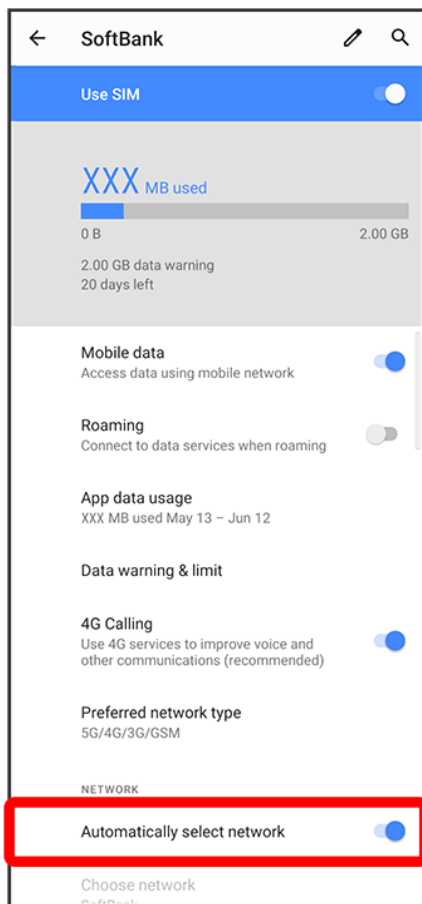


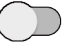- Disable (  ) to search for available networks.

4

 Tap network to connect to



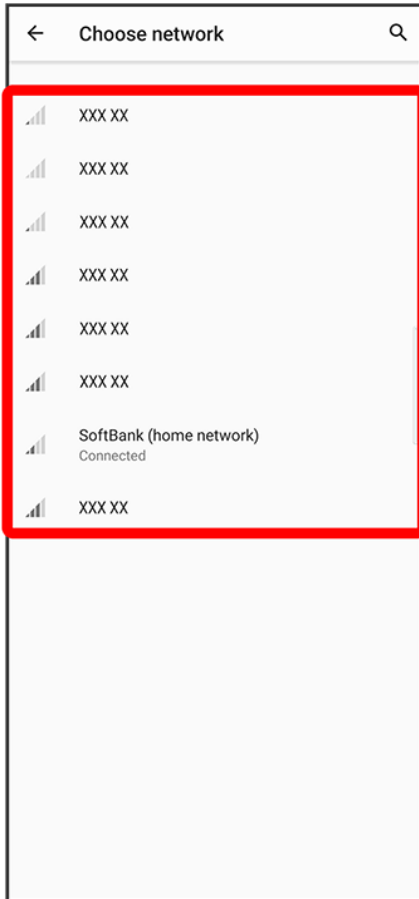


 The selected carrier is set.

## Changing Roaming Setting

 1

In Home Screen,  (Settings)  **Network & internet**




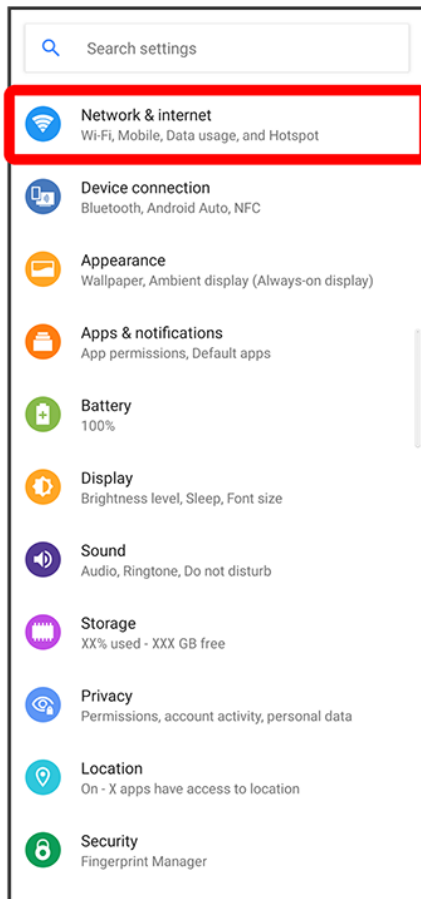

2

## Mobile network




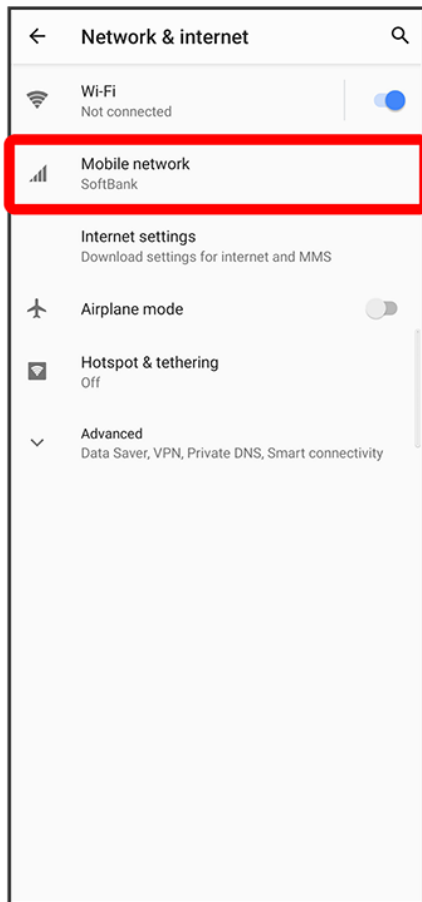 



3

 Roaming (  )

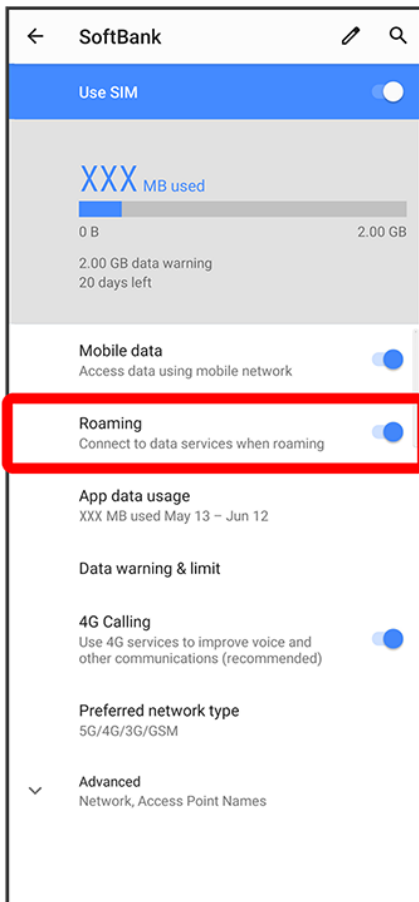



 Roaming setting is changed.

- Tap **Roaming** to toggle on () / off () .
- If confirmation appears, follow onscreen instructions.



# Making Calls while Abroad

---

See SoftBank Website to learn about roaming areas/services, etc.

<https://www.softbank.jp/en/mobile/service/global/>

---

↓ [International Calls to Japan and Other Countries/Regions from Abroad](#)

---

↓ [Calls to Landline Phones/Cell Phones in Country/Region of Stay](#)

---

 
## International Calls to Japan and Other Countries/Regions from Abroad

1

---

In Home Screen,  (Phone)



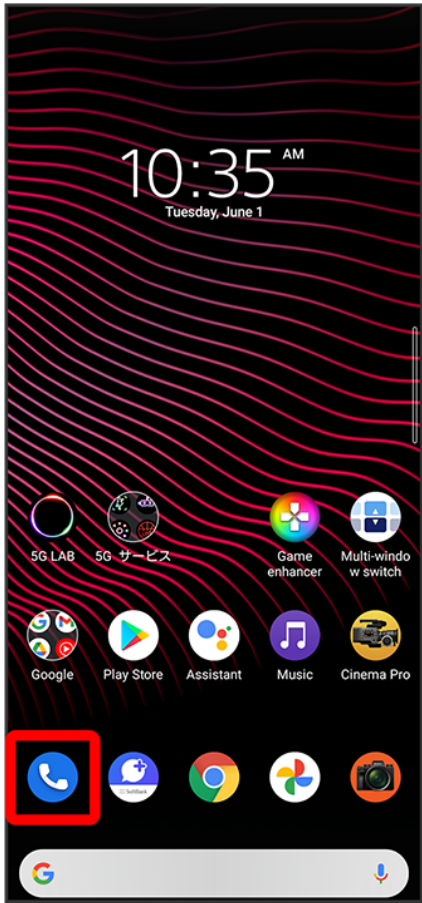


🚩 Phone opens.

 2





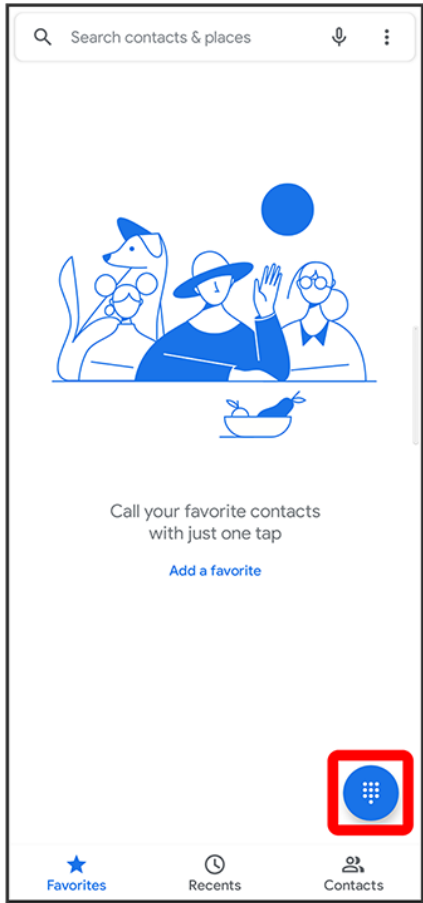


🚩 Dialing screen opens.

3

 Touch & Hold 0<sub>+</sub>



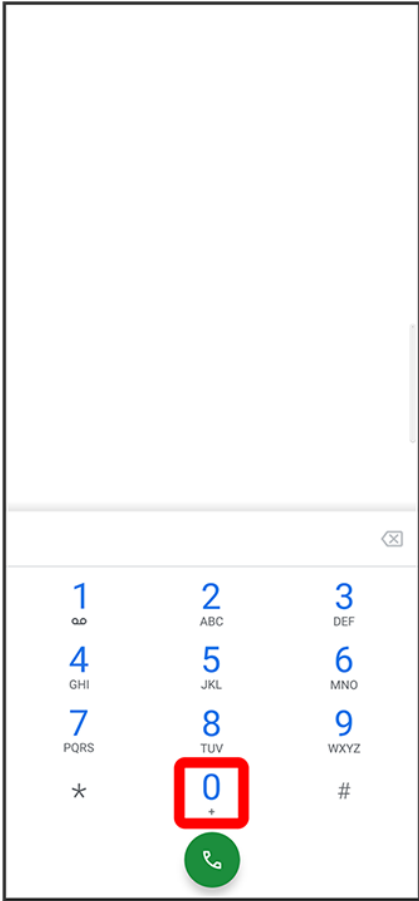

🇬🇧 "+" is entered.

4

Enter country code then other party number (omit first 0)



 



- Do not omit first 0 from phone numbers when dialing Italy (39).

5





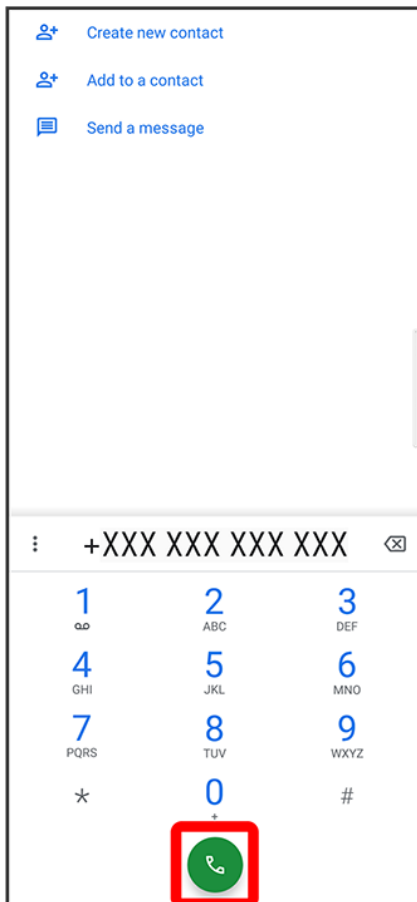

 Handset dials number. Call begins when other party answers.

## Calls to Landline Phones/Cell Phones in Country/Region of Stay

 
Place calls the same way you would within Japan.

- Do not enter country code or omit first 0 from phone numbers.

1

In Home Screen,  (Phone)



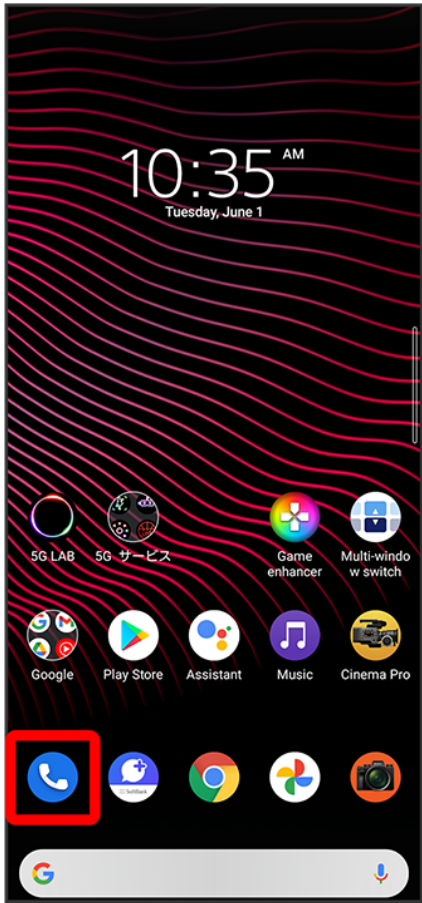


🚩 Phone opens.

 2





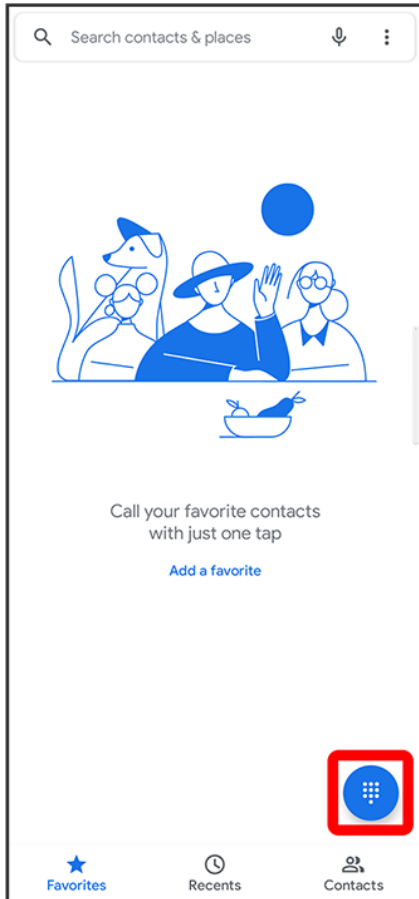


🚩 Dialing screen opens.

3

---

 Tap dialpad to enter the other party's number




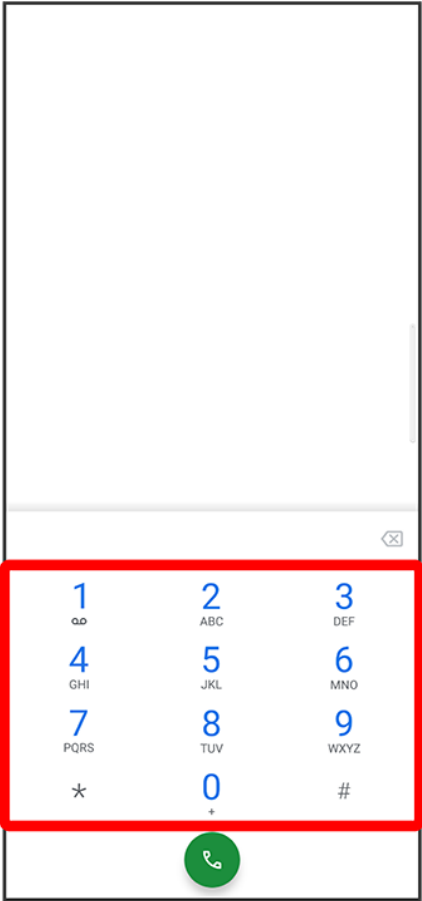

4





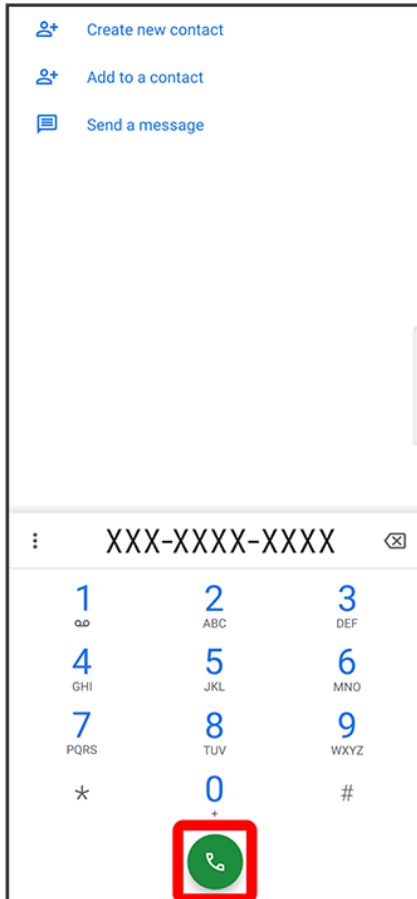 

Handset dials number. Call begins when other party answers.



# Warranty & After-Sales Service

↓ Warranty

↓ After-Sales Service

## Warranty

- The warranty period is 1 year from the date of newly purchase.
- Repairs will be done based on terms of free repair service. Terms of free repair service is referred to SoftBank website.  
<https://cdn.softbank.jp/mobile/set/common/pdf/legal/spguide/common/warranty.pdf> (Japanese)
- Warranty covers only handset. Accessories such as cables are not covered by terms of free repair service.

### Cautions

#### Damages

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

#### Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files (contacts/images/sound etc.) or settings due to accident or repair.

#### Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

## After-Sales Service

To request repairs, contact Customer Service or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms of free repair service.
- After the warranty period, if handset can be repaired, repairs will be made at cost. The functional parts necessary to repair the handset will be available for 3 years generally after the manufacture



is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.



### **Further inquiries**

For more information on after-sales service, contact a nearby SoftBank Shop or Customer Service.



# Specifications

↓ [Handset](#)

## Handset

| Item                                 | Description                                                                                                                           |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Dimensions (W x H x D)               | Approx. 71 × 165 × 8.2 mm                                                                                                             |
| Weight                               | Approx. 188 g                                                                                                                         |
| Continuous Talk Time <sup>1</sup>    | 4G (LTE): Approx. 1,900 minutes                                                                                                       |
| Continuous Standby Time <sup>1</sup> | 4G (FDD-LTE): Approx. 550 hours                                                                                                       |
| Charging Time                        | Approx. 130 minutes<br>AC Charger (USB Type-C™ rapid charging AC Charger with USB PD capability [ZSDBAS] (SB-AC20-TCPD)) <sup>2</sup> |

- 1 May become shorter depending on battery charge, surrounding conditions such as temperature, signal conditions where used, and function settings.
- 2 For details on compatible chargers, see SoftBank Website.



# Customer Service

---

If you encounter any difficulties or are unsure of anything, contact customer service.

---

↓ [SoftBank Customer Support](#)

---

↓ [Smartphone Technical Support Center](#)

---

## SoftBank Customer Support

- From a SoftBank handset, dial toll free at 157
- From a landline/IP phone, dial toll free at 0800-919-0157
- Business hours : Call 10:00am - 7:00pm / Chat 9:00am - 8:00pm

## Smartphone Technical Support Center

- From a SoftBank handset, dial toll free at 151
- From a landline/IP phone, dial toll free at 0800-1700-151
- Business hours : Mon. - Fri. 9:00am - 7:00pm / Sat., Sun., and Holiday 9:00am - 5:00pm / 9:00am - 8:00pm (for general information)






# Safety Precautions

Read safety precautions before using handset.  
Observe precautions to avoid injury to self or others, or damage to property.

|   |                                                                                              |
|---|----------------------------------------------------------------------------------------------|
| ↓ | Safety Precautions                                                                           |
| ↓ | Handset, AC Charger (Optional Accessory), Wireless Charger (Commercially Available) (Common) |
| ↓ | Handset                                                                                      |
| ↓ | AC Charger (Optional Accessory), Wireless Charger (Commercially Available)                   |
| ↓ | SIM Card                                                                                     |
| ↓ | Handset Use & Electronic Medical Equipment                                                   |
| ↓ | Material List                                                                                |

## Safety Precautions

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.







| Mark                                                                                              | Descriptions                                                                           |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
|  <b>DANGER</b>  | Great risk of death or serious injury <sup>1</sup> from improper use                   |
|  <b>WARNING</b> | Risk of death or serious injury <sup>1</sup> from improper use                         |
|  <b>CAUTION</b> | Risk of minor injury <sup>2</sup> or damage to property <sup>3</sup> from improper use |

- 1 Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having side effects or requiring hospitalization or long term treatment.
- 2 Minor injury includes: Physical burns (high-temperature and low-temperature), electric shock, and other conditions not requiring hospitalization or long-term treatment.
- 3 Damage to property includes: Incidental damage to structures and household property and/or to




pets and livestock.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.


| Mark                                                                                                           | Descriptions                   |
|----------------------------------------------------------------------------------------------------------------|--------------------------------|
| <br>Prohibited                | Prohibited actions             |
| <br>Do Not Disassemble        | Disassembly prohibited         |
| <br>Avoid Liquids Or Moisture | Exposure to liquids prohibited |
| <br>Do Not Use Wet Hands      | Use with wet hands prohibited  |
| <br>Compulsory                | Compulsory actions             |
| <br>Disconnect Power Source   | Unplug AC Charger from outlet  |

# Handset, AC Charger (Optional Accessory), Wireless Charger (Commercially Available) (Common)

## DANGER

  
Prohibited

**Do not use, store, leave in a high temperature or heat accumulating place (e.g. near fire or heater appliances, under kotatsu or bedding, in direct sunlight, inside a sun-heated car, etc.)**  
May cause fire, burns, injury, electric shock, etc.

  
Prohibited

**Do not put in or place nearby cooking appliances such as a microwave oven, or IH cooking heater, or high-pressure container such as pressure cooker.**  
May cause fire, burns, injury, electric shock, etc.





Prohibited

**Do not allow sand, soil, or mud to contact, or do not place directly on sand, soil, or mud. Do not touch with soiled hands.**

May cause fire, burns, injury, electric shock, etc.

For water resistance/dustproofing, see "Water Resistance/Dustproofing."



Prohibited

**Do not charge when handset or related accessory is wet with liquids such as water (drinking water, sweat, sea water, urine of pets, etc.) Do not charge where handset can come in contact with water.**

May cause fire, burns, injury, electric shock, etc.

For water resistance, see "Water Resistance/Dustproofing."



Prohibited

**Do not subject handset to excessive force or break it. Especially when carrying it in your pocket, do not hit it or press it between other objects.**

Internal Battery breakage may cause fire, burns, injury, etc.

\* Take additional care in instances such as the following:

- Sitting or squatting with the product in your pants or skirt pocket
- The product becoming caught in a sliding door or vehicle door when in a jacket pocket
- Stepping on the product when it is on something soft such as a sofa, bed, or futon or on the floor
- Getting the product caught in the seat on a train or bus



Do Not  
Disassemble

**Do not disassemble, modify, or solder.**

May cause fire, burns, injury, electric shock, etc.



Prohibited

**Do not try to remove Internal Battery.**

May cause fire, burns, injury, etc.



Prohibited

**Back Cover on handset is not removable. Do not try to remove.**

May cause fire, burns, injury, etc.





Avoid Liquids  
Or Moisture

**Do not allow handset or related accessory to get wet with liquids such as water (drinking water, sweat, sea water, urine of pets, etc.)**

May cause fire, burns, injury, electric shock, etc.

For water resistance, see "Water Resistance/Dustproofing."



Avoid Liquids  
Or Moisture

**Do not allow liquids such as water (drinking water, sweat, seawater, urine of pets) to come into Charging Terminals or USB Type-C Port/Headphone Port.**

May cause fire, burns, injury, electric shock, etc.

For water resistance, see "Water Resistance/Dustproofing."



Compulsory

**Use optional accessories specified by SoftBank.**

Using unspecified accessories may cause fire, burns, injury, electric shock, etc.



# WARNING



Prohibited

**Do not drop, stomp, throw, or otherwise subject to strong force, impact, or vibration.**

May cause fire, burns, injury, electric shock, etc.



Prohibited

**Do not allow Charging Terminals or USB Type-C Port/Headphone Port to contact conductive materials (metal parts, pencil leads, etc.), or do not allow dust to enter inside.**

May cause fire, burns, injury, electric shock, etc.



Prohibited

**Do not cover or wrap with bedding or other cloths while using or charging.**

May cause fire, burns, etc.



Prohibited

**Do not adhere anything metal (stickers containing metal material, etc.) to a wireless charger (commercially available) or handset.**

May cause fire, burns, injury, etc.





Prohibited

**Do not place anything metal (straps or clips containing metal material, etc.) between a wireless charger (commercially available) and handset.**

May cause fire, burns, injury, etc.



Compulsory

**Remove any covers from handset before charging with a wireless charger (commercially available).**

Cover material/thickness or any dirt lodged between handset and the cover may prevent handset from charging properly, and may result in fire, burns, injury, etc.



Compulsory

**Power off handset near electronic devices or equipment operating on high precision control or weak signals.**

Handset radio waves may cause electronic malfunctions, etc.

\* Take additional care near these devices:

Hearing aids, implanted cardiac pacemakers, implanted cardioverter defibrillators, other electronic medical equipment, and other automatically controlled devices or equipment. For users of implanted cardiac pacemakers, implanted cardioverter defibrillators, other electric medical equipment, check with the equipment vendor or distributor for information about the effects of radio waves.



Compulsory

**Stop charging if not complete when the prescribed charging time has passed.**

Overcharge may occur resulting in fire, burns, injury, etc.



Compulsory

**Always turn off handset before entering a place where flammable gas may be present, or a place where dusts are generated. Stop charging handset if charging it.**

Ignition of flammable gas may cause explosion, fire, etc.



Compulsory

**Follow the instructions of a gas station or other such location before using handset there. Do not charge handset at a gas station, etc.**

**Take care not to drop handset at a gas station, etc.; in particular, do not use handset while filling.**



Ignition of flammable gas may cause explosion, fire, etc.



Compulsory

**Take the following actions, exercising caution, in case of abnormal smell, noise, smoke, heat generation, discoloring or deformation while using, charging, or storing.**

-Disconnect the power plug from an outlet

-Power off handset

Continued use may cause fire, burns, injury, electric shock, etc.



# CAUTION



Prohibited

**Do not use damaged handsets or related accessories.**

May cause fire, burns, injury, etc.



Prohibited

**Do not place handset on unstable/uneven surfaces. Be extra careful while the vibrator is set.**

Handset may drop and cause injury.



Prohibited

**Do not use or store handset and related accessories in humid, dusty, or high-temperature places.**

May cause fire, burns, electric shock, etc.

For water resistance, see "Water Resistance/Dustproofing."



Prohibited

**Do not allow children to use handset or related accessories in the wrong way. Guardians should supervise use by children.**

May cause accidental swallowing, injury, electric shock, etc.



Prohibited

**Do not place handset and related accessories within an infant's reach.**

**In particular, be careful where small parts are stored, such as SIM Card/SD Card Tray.**

May cause accidental swallowing, injury, electric shock, etc.





Compulsory

**Handset temperature may become high when used continuously or while charging. Avoid continued contact with handset for a long time involuntarily such as by placing handset in clothes pocket, falling asleep, etc.**

While using apps, calling, transmitting data, watching TV or videos, or charging Internal Battery, the temperature of handset or AC Charger (optional accessory) may become high. Continued contact with a high-temperature area may cause redness, itching, rash of skin, or low-temperature burns depending on the user's physical condition.

## Handset



### DANGER



Prohibited

**Do not throw handset into a fire or apply heat.**

May cause fire, burns, injury, etc.



Prohibited

**Do not penetrate with a sharp object (nail), hit with a hard objects (hammer), stomp, or otherwise subject handset to strong force.**

May cause fire, burns, injury, etc.



Compulsory

**If the internal substance of handset gets into your eyes, mouth, etc., immediately rinse with clean water and consult a doctor.**

May cause loss of sight, medical problem, etc.



### WARNING



Prohibited

**Do not light up or flash the light with the light-emitting part close to other people's eyes.**

**Keep away from infants.**

May harm eyesight. Flash may impair vision or frighten others causing accidents such as injury.





Prohibited

**Do not light up or flash the light toward a driver of a car.**

May hinder driving and cause accidents, etc.



Prohibited

**Do not look at a repeatedly blinking screen for a long time.**

May cause twitches, loss of consciousness, etc.



Prohibited

**Do not put liquid such as water (drinking water, sweat, sea water, urine of pets, etc.), metal, or flammable object into SIM Card/SD Card Slot.**

**Do not insert SIM Card or SD Card in the wrong position or orientation.**

May cause fire, burns, injury, electric shock, etc.



Prohibited

**Do not expose the camera lens to direct sunlight, etc. for a long time.**

May cause fire, burns, injury, etc. due to light-condensing of lens.



Prohibited

**Do not look into laser AF sensor.**

May affect eyesight or lead to an accident.



Compulsory

**Power off handset or set to Airplane mode before boarding an aircraft.**

Use of handset on board an airline is restricted. Follow the airline's instructions.

Handset radio waves may affect electronic devices of the aircraft.

Prohibited use aboard an aircraft may be subject to penalty by law.



Compulsory

**For use in hospitals, follow the medical facility's instructions.**

Power off handset in a place where its use is prohibited.

Handset radio waves may affect electronic devices or other electronic medical equipment.



Compulsory

**Always keep handset away from your ear when calling hands free, ringing loudly for incoming**



**calls, or during standby.**

**Adjust the sound volume adequately when playing games or playing back videos or music with an earphone/microphone, etc. connected to handset.**

Handset sound is loud when calling hands free.

Even in standby, the ringtone or alarm may ring suddenly.

Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty.

Too loud volume may cause inability to hear ambient sound and may also cause an accident.



Compulsory

**Users with heart conditions should adjust vibration and ringtone volume as needed.**

Handset suddenly vibrating and ringing for a new call may startle and affect persons with heart conditions.



Compulsory

**When using electric medical equipment, etc., check with the equipment vendor or distributor for information about the effects of radio waves.**

Handset radio waves may affect electronic medical equipment.



Compulsory

**If Display, Back Cover, or Camera lens is broken, do not touch the broken components or exposed inside of handset.**

Touching the broken or exposed part may cause burns, injury, electric shock, etc.



Compulsory

**If Internal Battery leaks or has an unusual smell, immediately stop using, and keep away from fire.**

The leaked fluid may catch on fire causing ignition, explosion, etc.



Compulsory

**Do not allow a pet, etc. to bite handset.**

Internal Battery may ignite, explode, overheat, or leak causing fire, burns, injury, etc.



# CAUTION



Prohibited

**When using the motion sensor, ensure the safety of the surroundings and hold handset firmly,**



**not swinging around more than necessary.**

Failure to do so may cause accidents such as injury.



Prohibited

**If Display is broken, do not allow the leaked internal substance to contact the skin of your face or hands, or clothes.**

May cause injury to eyes, skin, etc.

If the internal substance gets into your eyes, mouth, etc., or contacts your skin or clothes, immediately rinse with clean water.

Also, in case it gets into your eyes, mouth, etc., immediately consult a doctor after rinsing.



Prohibited

**Do not dispose handset together with ordinary trash.**

May cause fire, burns, injury, etc. Also, may cause environmental destruction. Bring unnecessary handset into a sales outlet such as a SoftBank Shop or follow the municipality instructions for recycling.



Prohibited

**If the internal fluid is leaked from Internal Battery, do not allow it to contact the skin of your face or hands, or clothes.**

May cause injury to eyes, skin, etc.

If the internal substance gets into your eyes, mouth, etc., or contacts your skin or clothes, immediately rinse with clean water.

Also, in case it gets into your eyes, mouth, etc., immediately consult a doctor after rinsing.



Compulsory

**Before using handset in a car, check with the car manufacturer or dealer for information about the effects of radio waves.**

Handset radio waves may affect the vehicle's electronic equipment in some car models. In that case, stop using handset immediately.



Compulsory

**If skin abnormalities develop during use, immediately stop using handset and consult a doctor.**

Continuing its use may cause itching, rashes, eczema, or other symptoms depending on the user's physical condition.

For the material of each parts, see "Material List."





Compulsory

**Make sure that metallic pieces (cutter blade, staples, etc.) are not adhered to Earpiece/Speaker (middle top), Speaker (rear bottom left), vibrator area (bottom right, back) since magnetic parts are included.**

Adhered objects may cause injury, etc.



Compulsory

**Do not leave handset in reach of children or persons requiring supervision.**

Handset uses magnets. If swallowed, there is a risk of choking or serious harm to internal organs. If the magnet has been swallowed, immediately consult a doctor.



Compulsory

**Do not bring handset near medical devices.**

Handset uses magnets; they may affect pacemakers, variable-pressure hydrocephalus shunts, and other medical devices. Do not bring handset near persons using these devices. If you use such a device, consult your doctor before using the product.



Compulsory

**Watch Display in a well-lit place with enough distance kept.**

Watching in a dark place or getting too close to Display may reduce visual acuity, etc.

## AC Charger (Optional Accessory), Wireless Charger (Commercially Available)

### WARNING



Prohibited

**Do not use AC Charger (optional accessory) or wireless charger (commercially available) if the cord is damaged.**

May cause fire, burns, electric shock, etc.



Prohibited



**If thunder is audible, do not touch AC Charger (optional accessory) or wireless charger (commercially available).**

May cause electric shock, etc.



Prohibited

**Do not short circuit Charging Terminals when it is connected to a power outlet. Also, do not allow body parts such as your hands or fingers to contact Charging Terminals.**

May cause fire, burns, electric shock, etc.



Prohibited

**Do not put heavy objects on the cord of AC Charger (optional accessory) or wireless charger (commercially available) or pull it strongly.**

May cause fire, burns, electric shock, etc.



Prohibited

**When plugging or unplugging AC Charger (optional accessory) to or from a power outlet, do not allow metals to come in contact.**

May cause fire, burns, electric shock, etc.



Prohibited

**Do not use a voltage converter (such as a travel converter for overseas use) when charging with AC Charger (optional accessory).**

May ignite, overheat, cause electric shock, etc.



Prohibited

**Do not apply unnecessary force to the connection part when handset and AC Charger (optional accessory) are connected.**

May cause fire, burns, injury, electric shock, etc.



Prohibited

**Do not charge anything that is wet with liquids such as water (drinking water, sweat, sea water, urine of pets, etc.) using a wireless charger (commercially available).**

May cause fire, burns, injury, electric shock, etc.



Do Not Use  
Wet Hands

**Do not touch the cord of AC Charger (optional accessory), charging terminals, power plug, or**



**wireless charger (commercially available) with wet hands.**

May cause fire, burns, electric shock, etc.



Compulsory

**Use with specified power supply and voltage.**

**Also, use AC Charger for global use (optional accessory) when charging overseas.**

Using the incorrect power supply and voltage may cause fire, burns, electric shock, etc.

AC Charger: 100V AC (Household AC power outlet only)

AC Charger for global use: 100V to 240V AC (Household AC power outlet only)



Compulsory

**Wipe off dust on the power plug.**

Using with dust adhered may cause fire, burns, electric shock, etc.



Compulsory

**Firmly insert the power plug of AC Charger (optional accessory) to an outlet.**

Failure to do so may cause fire, burns, electric shock, etc.



Compulsory

**When unplugging from an outlet, grasp AC Charger (optional accessory) main unit without applying force such as pulling the cord.**

The cord of AC Charger may be damaged if it is pulled out and it may cause fire, burns, electric shock, etc.



Compulsory

**Persons with an implanted pacemaker, defibrillator, or other electronic medical equipment should consult carefully with a doctor before using a wireless charger (commercially available).**

Handset radio waves may affect electronic medical equipment.



Compulsory

**Insert or remove the connector of AC Charger (optional accessory) straight against the port without applying force such as pulling the cord.**

Incorrect insertion or removal may cause fire, burns, injury, electric shock, etc.



Compulsory



**Stop using handset immediately if Charging Terminals are deformed or bent.**  
**Or, do not use AC Charger even with the deformation fixed.**  
Charging Terminals may short-circuit causing fire, burns, injury, electric shock, etc.



Disconnect  
Power Source

**Unplug power plug of AC Charger when not using it.**

Keeping the power plug connected may cause fire, burns, electric shock, etc.



Disconnect  
Power Source

**If liquid such as water (drinking water, sweat, seawater, urine of pets, etc.) gets on equipment, immediately disconnect the power plug from an outlet.**

Liquid on equipment may result in short-circuit causing fire, burns, electric shock, etc.



Disconnect  
Power Source

**When cleaning, disconnect the power plug from an outlet.**

Failure to do so may cause fire, burns, electric shock, etc.



# CAUTION



Prohibited

**Do not touch AC Charger (optional accessory) that is connected to an outlet continuously.**  
May cause burns, etc.

## SIM Card



# CAUTION



Compulsory

**When handling SIM Cards, be careful of the cut surface so as not to hurt your body parts such as fingers.**

Cut surface may be sharp and may cause injury, etc.



# Handset Use & Electronic Medical Equipment



## WARNING



Compulsory

**Persons with an implanted pacemaker or defibrillator should keep handset at least 15 cm away from the device.**

Handset radio waves may affect implanted pacemakers or defibrillators.



Compulsory

**When using electronic medical equipment (other than implanted cardiac pacemakers/defibrillators) outside medical facilities, check with the equipment vendor or distributor for information about the effects of radio waves.**

Handset radio waves may affect electronic medical equipment.



Compulsory

**Disable handset transmissions (e.g. airplane mode) or power off handset when it is difficult to keep a distance of at least 15 cm away from others such as in a crowd.**

There may be someone who is wearing an implanted pacemaker or defibrillator.

Handset radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



Compulsory

**Observe each medical facility's instruction when using handset.**

Handset radio waves may affect electronic medical equipment.

## Material List

### ■ Xperia 1 III Main Unit

| Part                                                                                                        | Material/Surface Treatment        |
|-------------------------------------------------------------------------------------------------------------|-----------------------------------|
| Exterior case (top, bottom, side)                                                                           | Aluminum alloy/Anodized + Coating |
| Exterior case (Volume/Zoom Up/Down Key, Google Assistant Key, Camera Key, Camera ring (around main camera)) | Aluminum alloy/Anodized           |



|                                                                      |                                                   |
|----------------------------------------------------------------------|---------------------------------------------------|
| <b>Exterior case (SIM Card/SD Card Slot Cover)</b>                   | PC resin/Coating                                  |
| <b>Exterior case (antenna slit, USB Type-C Port, Headphone Port)</b> | PBT resin (with glass fiber)/-                    |
| <b>Transparent plate (Display, Back Cover)</b>                       | Strengthened glass/AFP processing                 |
| <b>Transparent plate (Camera lens)</b>                               | Strengthened glass/AFP processing + AR processing |
| <b>Power Key/Fingerprint Sensor</b>                                  | Epoxy resin/Coating                               |
| <b>Earpiece/Speaker (top) mesh</b>                                   | Polyester resin/dyed                              |
| <b>Rubber gasket of SIM Card/SD Card Slot Cover</b>                  | Silicone rubber/-                                 |
| <b>SIM Card/SD Card Slot Cover inside</b>                            | PC resin + elastomer resin/-                      |
| <b>SIM Card/SD Card Tray</b>                                         | Polyacetal resin/-                                |



# Important Product Information

↓ Handset, SIM Card, AC Charger (Optional Accessory) (Common)

↓ Charging

↓ Display (Touchscreen)

↓ Volume

↓ Rising Handset Temperature

↓ Earpiece/Speaker

↓ Technical Conformity

↓ Fingerprint Authentication

↓ Forcibly Powering Off

## Handset, SIM Card, AC Charger (Optional Accessory) (Common)

- Do not get wet. AC Charger (optional accessory) is not water resistant. Avoid using in humid places such as a bathroom and exposing it to rain. Contact to dampness from sweat by wearing on your body may cause corrosion inside resulting in malfunction. If malfunction is determined to be caused by above water exposures, warranty will not apply to repair. In the case that repair is possible, repair charge is incurred.
- External abnormalities such as damage or deformation may degrade the water resistance/dustproof performance.
- Use handset, SIM Card (inserted in handset) within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures, humidity, direct sunlight (temporary use at 36°C to 40°C and humidity 86% to 90%).
- Charge Internal Battery within temperatures of 5°C to 35°C.
- Do not use in a dusty place, where there is much vibration, or near landline phone, TV, radio, etc.
- For using power outlet with drop-off prevention structure, see the user's manual.
- Handset exterior case is not removable. Trying to remove case may cause breakage or malfunction.
- Battery is built in and is not removable.
- Internal Battery is a lithium-ion battery.





## Li-ion 00

- Lithium-ion batteries are precious, recyclable resources. Do not discard of old handsets, batteries, or chargers with ordinary waste, and instead bring them to the nearest shop with the Mobile Recycle Network mark.
- Storing handset with full-charged or insufficient battery level deteriorates battery performance. It is recommended to store handset with 40% battery level.
- Turning off by pressing Power Key does not shut off handset from power source completely. Unplug AC Charger power plug to completely turn it off. Use AC Charger (optional accessory) near a power outlet for easy unplugging in case that malfunction is detected.
- Display may become dim when handset temperature rises. It is not abnormal.
- Do not subject handset to excessive shock. Do not deform USB Type-C Port/Headphone Port. May cause malfunction.
- Occasionally clean Charging Terminals with a dry, cotton swab etc. Dirt on Charging Terminals may cause power shut-off or insufficient charging. Take care not to damage Charging Terminals when cleaning.
- Clean with a dry, soft cloth. Rubbing hard with a dry cloth etc. may scratch them. Wiping off with wet dustcloth may cause malfunction. Using benzine, thinner, alcohol, detergent, etc. may fade color/print.
- Do not leave Camera in direct sunlight. Concentrated sunlight through Lens may cause handset to malfunction.
- Do not bring magnetic data or magnetic objects close to handset. Magnetic data on cash card, credit card, etc. may be erased or may cause handset malfunction.

## Charging

- AC Charger (optional accessory) may become warm while charging. It is not abnormal.
- If charging is started, although handset is unavailable for operation, screen indicating that handset is charging appears. For this reason, do not charge where handset is required to be powered off.
- Check battery level with Status Indicator at the top of screen.
- Operation time of Internal Battery varies by usage environment or the battery condition.
- Internal Battery is consumable item. Operation time per charge decreases by charging repeatedly. When operation time with full-charged is extremely shortened, it is time to replace. Internal Battery is not customer-replaceable. Bring handset to a SoftBank Shop etc. to replace Internal Battery. Fee is incurred for the replacement. Contact a SoftBank Shop or Customer



Service.

- Using application while charging may shorten Internal Battery life.

## Display (Touchscreen)

- Handset uses a touchscreen Display. Operate with your fingers on Display.
- Touch with your fingers lightly. Do not press forcibly with fingers or push with a sharp-pointed object (nail, ball-point pen, pins, etc.)
- Touchscreen may not work or malfunction in the following cases:
  - Operation with gloves on
  - Operation with fingernail
  - Foreign object on Display
  - Protection sheet or sticker applied on Display
  - Waterdrop or dew condensation on Display
  - Operation with fingers wet or sweaty
  - Operation under water
- Although Display is made with hardened and shatterproof glass, touching scattered or exposed parts accidentally may cause injuries.
- Handset uses an OEL display; ghost images may appear. The same image on Display for a long time, a higher-than-necessary brightness setting, or extremely long use may cause brightness to partially dim, color to change, or may burn images into Display. Depending on viewing angle, uneven color or brightness or change in colors may be visible. This is normal for OEL displays.

## Volume

- Caution: Listening at a loud volume hard on the ears for a long time can affect hearing.



## Rising Handset Temperature

The mark below may appear if the surface temperature of handset rises while in use. Avoid continued contact with handset for a long time if the mark appears.

May cause burns, etc.





## Earpiece/Speaker


Handset earpiece is also used as a speaker. Loud sound may be heard from the speaker when playing sound, for arriving incoming calls, etc.

Subjecting your ears to loud sound may affect your hearing ability. Use Earpiece/Speaker with care to prevent your ears from being subject to loud sound. For example, remove Earpiece/Speaker from your ears as soon as a call is ended.



## Technical Conformity

Handset is certified as wireless equipment for low power electric data communication based on the Radio Law. No license is required for using handset as the wireless radio station. However, disassembling/modifying handset may be subject to penalty by law.

- Disassembling/modifying handset
- Never use modified handset. Using modified handset is a violation of the Radio Law.

Handset is compliant with the technical standard conformance of specified wireless equipment based on the Radio Law, and as a proof of it, the "Technical Compliance Mark  " appears on the electronic nameplate of handset.

Electronic nameplate can be viewed in the following way.

To view: in Home Screen,  (Settings)  About phone  Certificates

The technical standard conformance certification etc. is invalidated by removing the screws and altering the inside of handset. Using handset with invalid technical standard conformance certification etc. is a violation of the Radio Law.

- Do not alter the basic software illegally. May be regarded as software modification and repairs may be refused.

## Fingerprint Authentication

- Fingerprint authentication uses the characteristics of your fingerprint. If your fingerprint image has few characteristics, fingerprint authentication may not be available.
- Authentication performance (authenticating fingerprint when using Fingerprint Sensor) depends on usage condition. If your finger is under any of the following conditions, registration of



fingerprint may be difficult or authentication performance may degrade. Washing/wiping hands, using different finger, etc. may improve capability.

- Wrinkled after taking a bath, etc.
  - Wet with water, sweat, etc.
  - Dried
  - Covered with grease (e.g. hand cream)
  - Dirty with mud or grease
  - Rough or injured (cut, inflammation, etc.)
  - Abraded and faded
  - The shape of fingerprint has changed due to weight loss or weight gain
  - The surface condition of finger is extremely different from when you registered fingerprint
- Personal authentication and identification are not completely guaranteed by fingerprint authentication technology. Note that SoftBank Corp. is not liable for any damage incurred due to misuse by a third party or due to handset being unable to be used.



### **Precautions on Fingerprint Sensor**

- Do not hit or apply strong impact. This may cause a malfunction or damage. Also, do not scratch the surface or poke it with a sharp object such as a ballpoint pen or pin tip.
- Do not attach stickers or do not daub with ink, etc.
- If dirt such as dust or sebum is attached to Fingerprint Sensor, reading fingerprints may be difficult or the authentication performance may be degraded. Occasionally clean the surface of Fingerprint Sensor.
- If the time of touching is too short or too long, authentication may fail. Touch the center of Fingerprint Sensor straight with the vortex of your fingerprint.
- Activating Fingerprint Sensor may fail if a finger is placed on it before starting registration or authentication. Release your finger once and try again.

## **Forcibly Powering Off**

If Display stops responding or handset cannot be powered off, Long Press both Power Key and Volume Up Key at the same time for about 8 seconds. After handset vibrates three times in a row, release Keys and handset powers off.



# Bluetooth/Wi-Fi (WLAN)

- ↓ [Frequencies](#)
- ↓ [Notes on Using Bluetooth Devices](#)
- ↓ [Reception Interference Caused by Wi-Fi \(WLAN\) Devices](#)
- ↓ [Wi-Fi \(WLAN\)](#)
- ↓ [Notes on Using 2.4 GHz Devices](#)
- ↓ [Notes on Using 5 GHz Devices](#)
- ↓ [Reception Interference Caused by Bluetooth Devices](#)

## Frequencies

Frequency band used by handset Bluetooth/Wi-Fi (WLAN) functions are as follows:

2.4FH4/XX8/DS4/OF4

- 2.4:Frequency band is 2400 MHz
- FH/XX/DS/OF: Modulations are FH-SS, other modulation, DS-SS, OFDM
- 4:Estimated range of radio frequency interference is up to 40 m
- 8:Estimated range of radio frequency interference is up to 80 m



:Utilizes 2,400 MHz to 2,483.5 MHz band without

mobile device bandwidth differentiation

- Available channels may vary by country/region.
- For use in an airplane, contact your airline.

## Notes on Using Bluetooth Devices

Handset operates on the same frequency band used by home electric appliances such as microwave ovens, industrial, scientific and medical equipment, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring a license),



specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereinafter referred to as "another station.")

- Before using handset Bluetooth function, confirm that premises radio stations, specified low power radios and amateur radios are not in use nearby.
- In the event of handset causing harmful radio wave interference with "another station," promptly change the operating frequency or stop radio wave emission by turning off the power, etc.
- For further questions, contact a SoftBank Shop or Customer Service.

## Reception Interference Caused by Wi-Fi (WLAN) Devices

Handset Bluetooth function uses the same frequency band (2.4 GHz) as Wi-Fi (WLAN) devices. Using near Wi-Fi (WLAN) devices may cause radio interference, low-communication speed, noise or connection failure. In that case, take the following measures.

- Provide distance between Bluetooth device and Wi-Fi (WLAN) device. Required distance varies by device.
- If the problem persists, power off Bluetooth device or Wi-Fi (WLAN) device.

## Wi-Fi (WLAN)

- Wi-Fi (WLAN) uses radio waves to exchange information and LAN connection is freely established within an area where the radio wave reaches. Meanwhile, if no security is set, Wi-Fi communications may be intercepted or hacked by malicious parties. It is recommended to make necessary security settings on your responsibility.
- Use handset WLAN function only in Japan.
- Do not use Wi-Fi near magnetic devices such as electrical appliances or AV/OA devices. Magnetic/radio waves may hinder or disable communication. Avoid microwave ovens especially. Using near a TV or radio, etc. may cause interference; may affect TV reception. If there are multiple Wi-Fi access points using the same channel, search may fail.
- Enable Wi-Fi to search available Wi-Fi networks and then establish connection.
- Connect to Wi-Fi network before accessing Internet via Wi-Fi (WLAN).
- Take care with radio signal strength for Wi-Fi (WLAN). Radio signal strength for Wi-Fi network differs depending on the access point location. Moving close to a Wi-Fi router may improve radio signal strength.
- To save battery power, disable Wi-Fi (WLAN) when not used.



## Notes on Using 2.4 GHz Devices

WLAN devices operate on the same frequency band used by home electric appliances such as microwave ovens, industrial, scientific and medical equipment, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations.

- Before using handset, confirm that premises radio stations, specified low power radios, and amateur radio stations are not in use nearby.
- In the event of handset causing harmful radio wave interference with premises radio stations for identifying mobile units, promptly change the operating frequency or stop radio wave emission by turning off the power, etc. and then contact a SoftBank Shop or Customer Service for measurement against the cross talk (e.g. installing partition.)
- Also, in the event of handset causing radio wave interference with specified low power radios and amateur radio stations, contact a SoftBank Shop or Customer Service.

## Notes on Using 5 GHz Devices

In 5 GHz frequency bandwidth, handset can use following bands:

- 5.2 GHz band (W52/36, 40, 44, 48 ch)
- 5.3 GHz band (W53/52, 56, 60, 64 ch)
- 5.6 GHz band (W56/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144 ch)

Using a 5.2/5.3-GHz-band wireless LAN outdoors is prohibited by law (this does not apply to communication with access points/relay stations of high-output data communications systems operating in the 5.2 GHz band).

## Reception Interference Caused by Bluetooth Devices

Bluetooth and WLAN (IEEE802.11b/g/n/ax) use the same frequency band. Using near Wi-Fi (WLAN) devices may cause radio interference, low-communication speed, noise or connection fault. Or may cause communication interruption or sound distortion when streaming data is played. In that case, take the following measures.

- Provide distance between Wi-Fi (WLAN) device and Bluetooth device. Required distance varies by device.
- If the problem persists, power off Bluetooth device.



# Water Resistance/Dustproofing

Handset complies with IPX5<sup>1</sup>, IPX8<sup>2</sup> water resistance standards and IP6X<sup>3</sup> dustproof standard with SIM Card/SD Card Slot Cover firmly closed.

1 Protection against water jet (at 12.5 L/minute from every direction from a distance of approximately 3 m for over 3 minutes through 6.3 mm nozzle)

2 Protection against seepage when slowly submerged in still tap water at room temperature to depth of 1.5 m for 30 minutes

3 Protection against dust ingress when being placed in an apparatus with grit and dust of diameters of 75 µm or less and shaken for 8 hours

---

↓ [Handset Water Resistance/Dustproofing](#)

---

↓ [Maintaining Water Resistance/Dustproof Performance](#)

---

↓ [Precautions](#)

---

↓ [Draining](#)

---

↓ [Charging](#)

---

## Handset Water Resistance/Dustproofing

Handset water resistance/dustproofing provides the following:

Calling in the rain without umbrella (approximately 20 mm rainfall per hour)

- Do not open or close SIM Card/SD Card Slot Cover with wet hands or when handset gets wet.

Washing handset when it gets dirty or stained with liquid other than tap water

- Wash with tap water at normal temperature (5°C - 35°C) with weak water flow (less than 6 L/minute) at distance of approximately 10 cm away from the tap or shower.
- When washing handset, make sure to securely close SIM Card/SD Card Slot Cover. Do not use a brush or sponge. Drain and the use handset after washing.

Using handset at a poolside

- Do not get water from a pool on handset or soak it in pool water.

## Maintaining Water Resistance/Dustproof Performance

Observe the following to avoid water or dust ingress.



- Do not get any liquid other than room temperature tap water on handset, or soak it in such liquid.
- Firmly close SIM Card/SD Card Slot Cover. Even a fine particle (one hair, one grain of sand, tiny fiber, etc.) put between the port contact surfaces may allow water or dust to ingress.
- Do not push Earpiece/Speaker, Mic, Speaker, Second Mic, USB Type-C Port, or Headphone Port with a sharp-pointed object.
- Do not let handset fall. Scratch on handset may degrade water resistance/dustproof performance.
- Rubber gaskets on inner side of SIM Card/SD Card Slot Cover play important roles for water resistance/dustproofing. Do not remove or damage them. Also, prevent dust from adhering onto them.

## Precautions

Do not perform the following actions.

- Washing with Soap/Detergent/Bath powder
- Washing using brush/sponge
- Machine-washing
- Applying strong water flow
- Soaking in ocean water
- Using in hot spring
- Exposing to sand/mud

Observe the following precautions to use handset properly.

- Do not apply water flow stronger than allowed directly from a tap or shower. Handset provides IPX5 water resistance, but doing so may cause malfunction.
- If handset gets wet with salt water, sea water, beverage, or mud or sand adheres, wash it immediately. If they dry, they become hard to remove and may cause damage or malfunction.
- Do not put in hot water, use in a sauna or apply hot airflow (from a hair dryer etc.).
- Do not move handset in water or slam handset against surface of water.
- Soaking handset in tap water should be no more than 30 minutes.
- For using handset at a swimming pool, obey rules of the facility.
- Handset does not float on water.
- Do not let water remain on handset. In cold region, water freezes up and may cause malfunction.
- Do not allow water to remain in the Earpiece/Speaker, Mic, Speaker, Second Mic, USB Type-C Port, or Headphone Port. Such water may interfere with calls or get clothes or bag wet.
- If handset gets splashed with water or other liquid while SIM Card/SD Card Slot Cover is opened, seepage may occur resulting in electric shock or malfunction. In that case, stop using and power off handset, then contact a SoftBank Shop or Customer Service.
- If rubber gasket on back of SIM Card/SD Card Slot Cover becomes scratched or deformed, contact a SoftBank Shop or Customer Service for part replacement.
- Do not connect earphones, etc. to handset that is wet with water. May cause malfunction.



 
- Do not use USB Type-C Port or Headphone Port if wet or dirty/dusty. May lose water resistance, cause electric shock or short circuit, resulting in malfunction, fire, or burns.
- Do not leave handset in a humid place for a long time. Take handset out from bathroom after using.
- Avoid moving handset from cold place to warm place suddenly. Wait until handset temperature gets warm and before bringing it to bathroom etc.
- Complete protection is not guaranteed under all conditions. Malfunctions due to improper handling by the user are not covered by Warranty.

## Draining

When handset gets wet, remaining water may flow out after wiping it off. Drain as shown.


1

Wipe off moisture on handset surface and back side with dry, clean cloth etc.

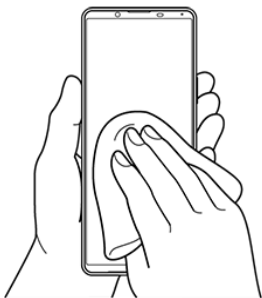


2

 Shake handset approximately 20 times until there is no more water splattering (Left), then turn upside down and shake it approximately 20 times again (Right)

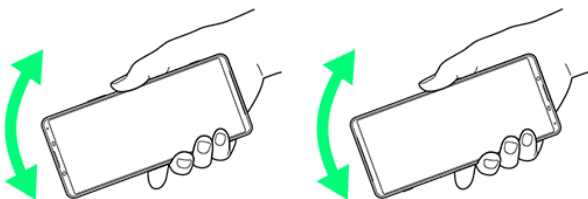



 
Wipe off water drained from handset with clean cloth etc.

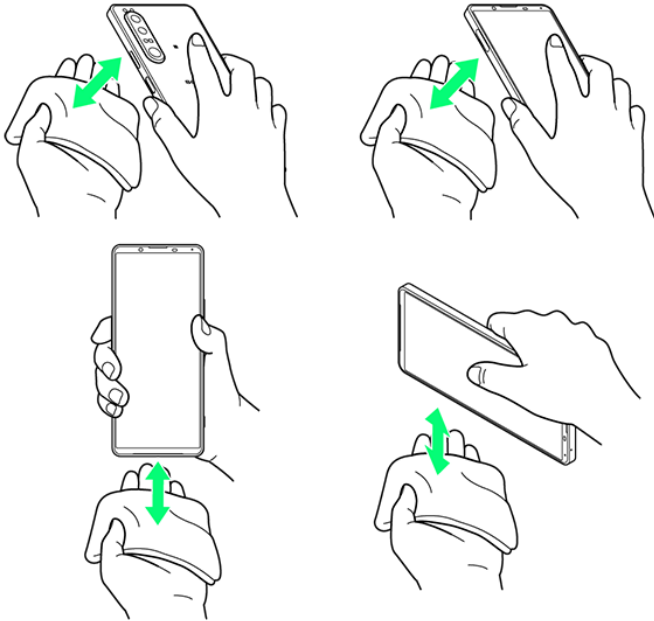

- Turn Earpiece/Speaker, Mic, Speaker, USB Type-C Port, Second Mic, Headphone Port, Power Key/Fingerprint Sensor, Volume/Zoom Up/Down Key, Google Assistant Key, Camera Key and SIM Card/SD Card Slot Cover, Camera ring (around main camera) face down onto cloth etc. to drain water.
- Turn upside down and wipe off.

Place handset on dry, clean cloth etc., and dry naturally at room temperature for a couple of hours

 Water is drained.

## Charging

Check the following while and after charging.

- While charging, check that handset is not wet. Never charge while handset is wet.
- Never connect USB Type-C connector when handset or AC Charger is wet. Handset provides water resistance, but liquids (tap water, beverages, sea water, pet urine, etc.) adhered to USB



Type-C connector may cause electric shock or short circuit, resulting in fire, burns, or malfunctions.

- Do not use AC Charger (optional accessory), USB Type-C cable (commercially available) in a bathroom, shower room, kitchen, lavatory or other highly humid area. Doing so may cause fire or electric shock.
- Do not touch AC Charger (optional accessory) or USB Type-C cable (commercially available) with wet hand. Doing so may cause electric shock.



# Export Controls and Regulations

---

---

↓ [Export Controls and Regulations](#)

---

## Export Controls and Regulations

The products may be subject to the application of the Foreign Exchange and Foreign Trade Act and other related laws and regulations in Japan.

In addition, the Export Administration Regulations (EAR) of the United States may be applicable.

In cases of exporting or reexporting the products, customers are requested to follow the necessary procedures at their own responsibility and cost. Please contact the Ministry of Economy, Trade and Industry of Japan or the Department of Commerce of the United States for details about procedures.



# Intellectual Property Rights

---

↓ [Copyrights and Portrait Rights](#)

↓ [Trademarks](#)

## Copyrights and Portrait Rights



Copyrighted contents you recorded or obtained from Websites pages using this product by downloading or other means, such as documents, images, music data, software, are prohibited from reproduction, transformation and transmission over public lines without consent of the copyright holders, unless intended for personal use or any other purpose permitted by law. Note that some performances, shows, and exhibitions may not permit photography, movie shooting, or sound recording even for personal use.

You should also refrain from taking a picture of other people and disclosing it by such means as posting it on a Website without their consent because of possible infringement of their right of portrait.

## Trademarks

- SOFTBANK, SOFTBANK's equivalent in Japanese and the SOFTBANK logo are registered trademarks or trademarks of SOFTBANK GROUP CORP. in Japan and other countries.
- Yahoo! and the Yahoo! and Y! logomarks are registered trademarks or trademarks of Oath Inc. in the United States.
- 詐欺ウォール/Internet SagiWall name and logo are trademarks or registered trademarks of BB Softservice Corp.
- McAfee and the McAfee logo are trademarks of McAfee LLC in the United States and other countries.
- ハローページ is a registered trademark of Nippon Telegraph and Telephone Corporation.
- ©JBA ©B.LEAGUE ©W LEAGUE
- Qualcomm Quick Charge is a product of Qualcomm Technologies, Inc.
- Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries.  
Qualcomm Quick Charge is a trademark of Qualcomm Incorporated. All Qualcomm Incorporated marks are used with permission.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc., and is used under license to Sony Group Corporation.



- Wi-Fi® and Wi-Fi Direct® are trademarks or registered trademarks of Wi-Fi Alliance.
- microSD logo, microSDHC logo and microSDXC logo are trademarks of SD-3C, LLC.
- USB Type-C™ is a trademark of USB Implementers Forum.
- DisplayPort is a trademark, or in the United States and/or other countries a registered trademark, of Video Electronics Standards Association.
- Ethernet is a registered trademark of Fuji Xerox Co., Ltd.
-  is a registered trademark of FeliCa Networks, Inc.
- "Qi" is a trademark of Wireless Power Consortium.
-  is a trademark or registered trademark of NFC Forum, Inc. in the United States and other countries.
- Manufactured based on a license from Dolby Laboratories.  
Dolby, ドルビー, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.
- Google, the Google logo, Android, Google Play, the Google Play logo, Gmail, the Gmail logo, Google Maps, the Google Maps logo, Google Calendar, the Google Calendar logo, YouTube, the YouTube logo, Google Docs, the Google Docs logo, Google Chrome, the Google Chrome logo, Google Sheets, the Google Sheets logo, Google Slides, the Google Slides logo, YouTube Music, the YouTube Music logo, Google Drive, the Google Drive logo, Google Duo, the Google Duo logo, Google Photos, the Google Photos logo, Google Pay, the Google Pay logo, the Google Assistant logo, Google Lens, and the Google Lens logo are trademarks or registered trademarks of Google LLC.
- Windows is a trademark or registered trademark of US Microsoft Corporation in the United States and other countries/regions.
- QR code is a registered trademark of DENSO WAVE INCORPORATED.
- Osaifu-Keitai is a registered trademark of NTT DOCOMO, INC.
- Facebook and the Facebook logo are registered trademarks of Facebook, Inc.
- Amazon, Amazon.co.jp and its logo, and Amazon Prime are trademarks of Amazon.com, Inc. or its affiliates.
- "mora" and its name and logo are registered trademarks of Label Gate Co., Ltd.
- iPhone is a trademark of Apple Inc. registered in the United States and other countries. The iPhone trademark is used based on a license from Aiphone Co., Ltd.
- This product is licensed under the MPEG-4 visual and AVC patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained MPEG LA, LLC (See <https://www.mpegla.com>). MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.
- "ソニー" and "SONY", as well as product names, service names, and logomarks used in this



instruction manual are registered trademarks or trademarks of Sony or its affiliates. All other product names, service names, company names, and logomarks are the trademarks or registered trademarks of their owners.

- FeliCa is a contactless IC card technology developed by Sony Corporation.
- The TM and ® marks are sometimes abbreviated in this instruction manual.
- Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.



# RF Exposure Information of This Product

---

"A101SO" here refers to this mobile phone "Xperia 1 III."

---

↓ [RF Exposure Information of This Product \(for Japan\)](#)

---

↓ [European RF Exposure Information](#)

---

↓ [FCC RF Exposure Information](#)

---

## RF Exposure Information of This Product (for Japan)

This mobile phone A101SO is compliant with the Japanese technical regulations<sup>\*1</sup> on human exposure to radio frequency (RF) electromagnetic energy.

This mobile phone is designed to comply with the Japanese technical regulations on human exposure to RF electromagnetic energy. The regulations establish the permissive limits of the energy, that are consistent with the restrictions set by ICNIRP<sup>\*2</sup> which is in collaboration with the World Health Organization (WHO) and ICES<sup>\*3</sup> of IEEE and include substantial safety margins designed to assure the safety of all persons regardless of age and health.

The permissive limits are defined as SAR (Specific Absorption Rate) for the frequencies under 6 GHz and PD (Power Density) for the frequencies over 6 GHz in the regulation. For mobile phones, the stipulated permissive levels are: SAR 2.0 W/kg, PD: 2 mW/cm<sup>2</sup>. The regulations also stipulate the indication of Combined Radiation Ratio (CRR), which summarizes the compliance with the limits, on condition that mobile phone supports simultaneous transmission of the frequency bands that should be evaluated by each corresponding limit. Mobile phones which CRR is less or equal than 1 qualifies the permissive limits.

The CRR values for this mobile phone are: 0.738<sup>\*4</sup>, <sup>\*5</sup> when tested for use at the ear, and 0.837<sup>\*4</sup>, <sup>\*5</sup> when worn on the body. The actual SAR and PD of mobile phones while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to access the mobile network(s). There may be slight differences in SAR and PD levels for each product, but they all satisfy the permissive limits.

This mobile phone can be used at positions other than at the ear. By using accessories such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body, this mobile phone is certified the compliance with the Japanese technical regulations.



\*1 The technical regulations are provided in the Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

\*2 International Commission on Non-Ionizing Radiation Protection

\*3 ICES: International Committee on Electromagnetic Safety

\*4 The value is under simultaneous transmission use conditions.

\*5 The values of SAR and PD that the CRR values are calculated are as follows: For temporal region (near ear), SAR: 1.091 W/kg, PD: 0.385 mW/cm<sup>2</sup>; For body-worn, SAR: 1.028 W/kg, PD: 0.645 mW/cm<sup>2</sup>.

WHO has announced that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

For more information about RF exposure information, see the following websites:

- Ministry of Internal Affairs and Communications (MIC)

<https://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>

- Association of Radio Industries and Businesses (ARIB)

<https://www.arib-emf.org/01denpa/denpa02-02.html> (Japanese)

- World Health Organization

<https://www.who.int/news-room/fact-sheets/detail/electromagnetic-fields-and-public-health-mobile-phones>

- List of Specific Absorption Rates (SAR) for radio waves by smartphone/3G model

<https://www.softbank.jp/mobile/support/sar/> (Japanese)

## European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear is 0.16 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body. In this case, the highest tested SAR value is 1.42 W/kg\* at the separation distance of 0.5 cm from the body. For electronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with RF exposure guidelines.



\* The tests are carried out in accordance with international guidelines for testing.

## FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.26 W/kg, when worn on the body is 0.72 W/kg and when WiFi hotspot mode is 1.13 W/kg. For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines. Please use an accessory designated for this product or an accessory which contains no metal and which positions the handset a minimum of 1.0 cm from the body. For devices which include "WiFi hotspot" functionality, SAR measurements for the device operating in WiFi hotspot mode were taken using a separation distance of 1.0 cm. When using the device as charger, you need to put the phone on a flat surface and 20 cm separation distance from user during the charging mode.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <https://www.fcc.gov/oet/ea/> after searching on FCC ID PY7-73876N.

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at <https://www.fcc.gov/general/radio-frequency-safety-0>.



# FCC Statement for the USA

---

↓ [FCC Statement for the USA](#)

---

## FCC Statement for the USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



# End User Licence Agreement

---

↓ [End User Licence Agreement](#)

---

## End User Licence Agreement

Software delivered with this device and its media is owned by Sony Corporation, and/or its affiliated companies and its suppliers and licensors.

Sony grants you a non-exclusive limited licence to use the software solely in conjunction with the device on which it is installed or delivered. Ownership of the software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the software, reproduce and distribute the software, or modify the software. You are entitled to transfer rights and obligations to the software to a third party, solely together with the device with which you received the software, provided the third party agrees in writing to be bound by the terms of this licence.

This licence exists throughout the useful life of this device. It can be terminated by transferring your rights to the device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the licence immediately.

Sony and its third party suppliers and licensors retain all rights, title and interest in and to the software. To the extent that the software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

This licence is governed by the laws of Japan. When applicable, the foregoing applies to statutory consumer rights.

In the event that software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the software.