AQUOS R7 User Guide

Introduction

About	the	User	Guide 3

Getting Started

Package Contents	6
Parts & Functions	6
eSIM	8
SIM Card	11
Internal Storage and SD Card	14
Charging Handset	19
Power On/Off	20
Making Initial Settings	21
Google Account	24
Unlocking Screen	27

Basic Operations

Basic Operations	.30
Using Touchscreen	. 31
Using Manner Mode	. 32
Using Airplane Mode	.34
Text Entry	.35
Using Fingerprint Authentication Function	.36
Updating the System	.39
Using ROBOQUL	. 40

Handset Interface

Handset Screens	44
Icons at Display Top (Status Bar)	.50
Checking Notifications (Notifications Window)	.52
Checking Notifications (Quick Settings Window)	54
Capturing Screenshots (Clip Now)	.56
Scrolling Screen Automatically (ScrollAuto)	.57
Using Gaming Menu	59

Phone

Placing/Answering Calls	64
Optional Services	69
Handset Phone Number	
Making Phone Settings	77
Address Book	79

Messaging

Sending Messages (+メッセージ (+Message))	84
Using Gmail	85

Internet

Using	the	Internet	(Chrome)	90
-------	-----	----------	----------	----

Camera

Capturing	Photos/Videos
-----------	---------------

Music & Images

Listening to Music (YT Music)102	
Viewing & Managing Photos/Videos (Photos)104	

AQUOS R7 User Guide Contents

Application Basics

Confirmation when First Activating Applications 108	
Applications111	
Adding/Deleting Applications113	

Managing Data

File Storage1	120
Backup & Restore1	20
Importing Data from Other Mobiles1	21

Wi-Fi/Bluetooth®

Connecting by Wi-Fi	126
Using Bluetooth® Function	. 132
Using Tethering	137

Handset Settings

About Settings	140
Data Usage Settings	141
Battery Settings	.146
Sound Settings	.148
Display Settings	153
AQUOS Tricks Settings	159
Security Settings	.165
Privacy Settings	176
Location Settings	177
System Settings	.178
Other Handset Settings	.184

Global Services

Global Roaming 2	02
Calling from Outside Japan2	03

For Assistance

Handset Powers Off	. 208
Handset Does Not Power On	.208
Cannot Charge / Charging Stops / Charging Is Slow	209
Battery Runs Out Quickly	. 209
Display Turns Off Suddenly	. 210
Screen Freezes / Operation Is Unstable	.210
SIM Card Not Recognized	. 211
Cannot Use SD Card	.211
Cannot Send/Receive Mail	212
Cannot Connect to Internet	.212
Cannot Talk on Phone / Cannot Hear Other Party	. 213
Cannot Use Applications	.213

Warranty/Specifications/Customer Service

Warranty & After-Sales Service	6
Specifications21	6
Customer Service21	8

Safety Precautions

Safety Precautions	.220
Important Product Information	230
Handset & Hardware Care	. 231

General Notes23	33
RF Exposure Information of This Product	36
Water & Dust Resistance23	37

About the User Guide

In the User Guide, most operation descriptions are based on the handset at time of purchase.

Unless noted otherwise, descriptions are for Home Screen (AQUOS Home). Some operation descriptions may be omitted. The information in the User Guide is subject to change without prior notice.

Before Using This Product

Read "Safety Precautions" thoroughly beforehand for proper usage.

Accessible services may be limited by subscription contract conditions.

Data Communication

- Handset is designed to be always connected to the Internet. Communication is initiated automatically for some functions such as data syncing.
- Large-volume data communication, such as downloading applications and viewing videos, incurs expensive transmission fees. Subscription to a flat-rate plan is strongly recommended.
- Even if connected by Wi-Fi, some applications and services incur transmission fees.

Screenshots & Key Labels

Screenshots in the User Guide may differ in appearance with actual Display. Key labels in the User Guide are simplified for description purposes and differ with actual Display.

Other Notations

In the User Guide, the product is referred to as "handset." microSD™/microSDHC™/microSDXC™ Card is referred to as "SD Card."

"A202SH" here refers to this mobile phone "AQUOS R7."

Introduction

Getting Started

Package Contents	. 6
Parts & Functions	. 6
eSIM	8
SIM Card	11
Internal Storage and SD Card	14
Charging Handset	19
Power On/Off	20
Making Initial Settings	21
Google Account	24
Unlocking Screen	27

Package Contents

Package Contents

- · Handset (AQUOS R7)
 - \cdot Battery is built into handset.
 - \cdot Handset back cover is not removable.
- \cdot Quick Switch Adapter (Complimentary sample)
- · SIM Removal Tool (Complimentary sample)
- ・クイックスタート (Japanese)
- ・お願いとご注意 (Japanese)


Parts & Functions

Handset (Front)

Name	Description
1 Earpiece/ Speaker	Hear the other party's voice here.
2 Front Camera	Use to shoot photos or videos of yourself.
3 Display	Touchscreen-type display; operate with your fingers on Display.
4 Proximity/ Light Sensor ¹	Proximity Sensor prevents Touchscreen misoperation during calls. Light Sensor adjusts Display brightness according to ambient light.
5 Fingerprint Sensor ¹	Use fingerprint authentication to unlock screen.


1 $\,$ Do not apply stickers or other coverings over the sensors.

Handset (Back and Sides)

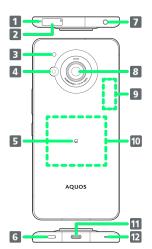

I

Name	Description
1 Mic	Use while recording videos or when talking through Speakerphone. Make sure not to cover Mic.
2 Card Tray	Insert/remove SD Card and SIM Card.
3 Mobile Light	Use as a camera flash, flashlight, etc.
4 Distance measurement sensor	Depth sensor to realize impressive bokeh softfocusing in portrait mode.
5 FeliCa mark	Hold up to reader/writer to use NFC/ Osaifu-Keitai®.
6 Speaker	Listen to music, video sound, etc.
Earphones-MicrophoneJack	Connect stereo earphones with mic (commercially available) here.
8 Standard Camera	Capture photos and videos.
9 5G mmWave antenna	Use for high-speed 5G communications. Covering with hands may slow down the speed. Hold handset without covering it with hands as much as possible.
10 Wireless charging point	Align with this point when charging with the wireless charger.
11 External Connection Jack	Connect USB Type-C® plug such as AC adapter.
12 Mic/ Recorder Mic	Use during calls while handset is held up to ear. Use as Mic while recording videos, on speech recognition, or when talking to emopa. Make sure not to cover Mic/Recorder Mic.

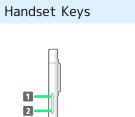

3

Name	Description
1 Volume Up Key	Increase volume.
2 Volume Down Key	Decrease volume.
3 Power Key	Turn Display off/on. Long Press to power on or activate Google Assistant™.1

 Other applications can also be set up to activate. Also set whether to activate Camera by pressing Power Key twice. See "Quick Operation Settings" for details.

eSIM

eSIM is a type of SIM that is embedded in a device. If your device supports an eSIM, you only need to set up a service plan that you purchased with eSIM and start using it. You don't need a USIM card.

Figure Handling eSIM

To learn about setting up your service plan with eSIM, see the following website.

https://www.softbank.jp/mobile/support/product/sim/
esim/ (Japanese)



1

Beneration and a second a s

2



3

Download a SIM instead?



4







Scan a QR code



6





7


Enter verification code 🔶 Continue



Close




Your service plan with eSIM is downloaded.

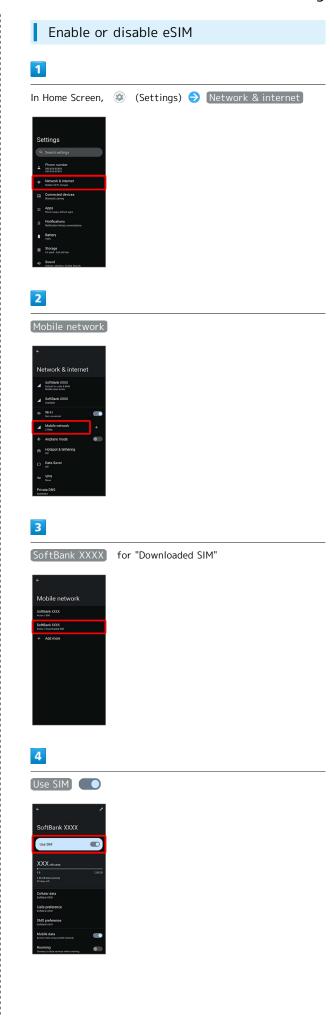

Getting Started

AQUOS R7

5
YES
♦ SoftBank XXXX
Use Sint
Colluter dats Coll pareference Version Coll pa
ANALAR data Analos data series en entre
🏁 You can set enabling or disabling eSIM.
• Tap Use SIM 🔵 to enable eSIM.

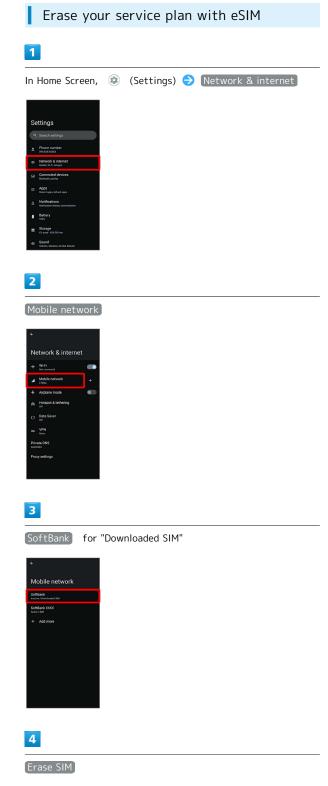



5

ERASE



Your service plan with eSIM is erased.

Restart your service plan with eSIM after erasing it

Your service plan with eSIM is not terminated by erasing it. To restart it, you need a new QR code to download the plan again.

SIM Card

SIM Card is an IC card containing phone number and other customer information.

🛐 Handling SIM Card

Check the following regarding SIM Card handling.



1 IC (gold) chip

· For SIM Card handling, see SoftBank Website.

https://www.softbank.jp/mobile/support/protect/usim/
(Japanese)

- · Avoid applying labels. May damage SIM Card.
- \cdot SIM is replaceable (at cost) in case of loss/damage.
- \cdot Wipe clean with a dry, soft cloth.
- \cdot Always keep the IC (gold) chip clean.

SIM Card Cautions

Observe the following when using SIM Card.

- Within Japan, SIM Card must be installed to make emergency calls (110, 119, 118).
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/ stolen. For details, contact Customer Service.
- Customer is responsible for any damage caused by inserting SIM Card in an other-brand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- It is recommended that you back up information that is saved on SIM Card. SoftBank Corp. is not responsible for damages from saved information that is lost.
- Always power off handset before inserting/removing SIM Card.
- Note that SIM Card specifications and performance may change without notice.
- Return SIM Card to SoftBank Corp. when canceling subscription.
- \cdot SIM Card is the property of SoftBank Corp.
- Returned SIM Cards are recycled for environmental purposes.
- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. SoftBank Corp. does not guarantee operation whatsoever.


Inserting SIM Card

Always power off beforehand.

 \cdot Set SIM Card in Card Tray beforehand. Do not insert SIM Card without setting it in Card Tray.

1

With Display upward, insert SIM Removal Tool in removal hole in Card Tray

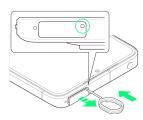

 \cdot Press firmly and straight until Card Tray ejects.

2

Pull out Card Tray



With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.

3


Set SIM Card in Card Tray



- Place gently, noting orientation of SIM Card (notch/IC (gold) chip facing down).
- \cdot Make sure SIM Card is in Card Tray. Inserting Card Tray with SIM Card on its edge may cause damage.

4

Check SIM Card Tray Slot

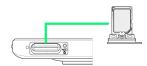

- \cdot SIM Card Tray Slot is on the display side.
- \cdot On the back side is SD Card Slot. Do not insert wrongly.

5

Insert Card Tray in SIM Card Tray Slot



🏁 SIM Card is inserted.


- \cdot Do not insert Card Tray upside down.
- \cdot Insert gently all the way horizontally in direction shown.
- \cdot Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- \cdot To maintain water and dust resistance, use handset with Card Tray completely closed.

Removing SIM Card

Always power off beforehand.

1


With Display upward, insert SIM Removal Tool in removal hole in Card Tray

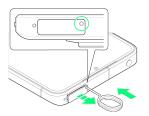

· Press firmly and straight until Card Tray ejects.

2


Pull out Card Tray

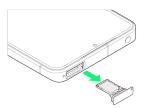

With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.


3

Remove SIM Card

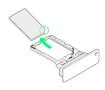

4


Check SIM Card Tray Slot

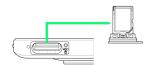

- \cdot SIM Card Tray Slot is on the display side.
- \cdot On the back side is SD Card Slot. Do not insert wrongly.

5

Insert Card Tray in SIM Card Tray Slot

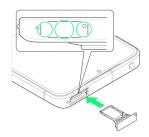

🏁 SIM Card is removed.

- · Do not insert Card Tray upside down.
- Insert gently all the way horizontally in direction shown.
- \cdot Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- \cdot To maintain water and dust resistance, use handset with Card Tray completely closed.



Internal Storage and SD Card

Handset supports SD Card up to 1 TB. Some SD Cards may not operate properly.

Internal storage can be used for saving data including system data, applications, and video and photos taken with Camera.

Internal Storage/SD Card Cautions

Data on Internal Storage/SD Card

Data on internal storage/SD Card may be lost/altered due to accidents, malfunctions, repairs, handset upgrade/ replacement, mishandling, etc. Back up important data regularly. SoftBank Corp. is not liable for any damages resulting from loss/alteration of data.

- · Do not insert or remove SD Card forcefully.
- \cdot Do not touch terminals or expose them to metal objects.
- \cdot Never power off while reading or writing data.
- · Make sure not to erase or overwrite data accidentally.

microSDXC Card

Handset supports microSDXC Cards (SDXC-compatible SD Cards). microSDXC Cards are supported by SDXC-compatible devices only.

Exchanging Data with Non-SDXC-Compatible Devices

To exchange data between handset and non-SDXCcompatible devices, use SD Cards (microSD/microSDHC Cards) supported by handset and those devices. Inserting a microSDXC Card used on handset in a non-SDXC-compatible device may corrupt card data. In such cases, do not format the microSDXC Card on that device even if prompted to do so.

Formatting deletes all microSDXC Card data and changes the file system. The original storage capacity may be unavailable after formatting. To use a corrupted microSDXC Card, format it on an SDXC-compatible device.

Save Location

By default, data, including photos and videos taken with handset, is saved in internal storage. Even with downloaded commercially-available applications described as saving data on SD Card, data is saved in internal storage.

• To save photos and videos taken with handset on SD Card, insert SD Card before using Camera, then change save location as follows.

SD Card Caution


Keep SD Card away from infants; may cause choking if swallowed.

Inserting SD Card

Always power off beforehand.

1

With Display upward, insert SIM Removal Tool in removal hole in Card Tray

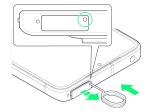

· Press firmly and straight until Card Tray ejects.


2

Pull out Card Tray

- With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
- Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.




Check SD Card Slot

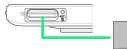

- · SD Card Slot is on the back side.
- On the display side is SIM Card Tray Slot. Do not insert wrongly.

4

Insert SD Card into SD Card Slot

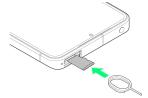

- \cdot Set SD Card with the metal chip facing down.
- Use SIM Removal Tool to insert in the direction shown in the figure until it clicks.

Insert Card Tray in SIM Card Tray Slot



ı

15

SD Card is inserted.

- \cdot Do not insert Card Tray upside down.
- \cdot Insert gently all the way horizontally in direction shown.
- \cdot Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- \cdot To maintain water and dust resistance, use handset with Card Tray completely closed.

Formatting SD Card

When using a new SD Card for the first time, always format it on handset.

- \cdot Formatting erases all data on SD Card. Format SD Card with caution.
- When formatting, keep handset charged or charge it adequately beforehand.
- Insert SD Card beforehand. See "Inserting SD Card" for details.

1

In Home Screen, 💿 (Settings)



2

Storage





THIS DEVICE



4 SD CARD Free up Go to File E System Xcos Xcos Xcos Xcos Xcos Xcos Xcos Xcos Xcos 5 000 Storage X.X... Free up sp Ge to Files sce 6 Format Storage X.X.... Free up space Goto File app form Files

8

Done

	a
	Your SD card is ready to use
,	au can move content to 50 card
	Dave 1
	Oave

🏁 All data on SD Card is erased.




7

FORMAT SD CARD





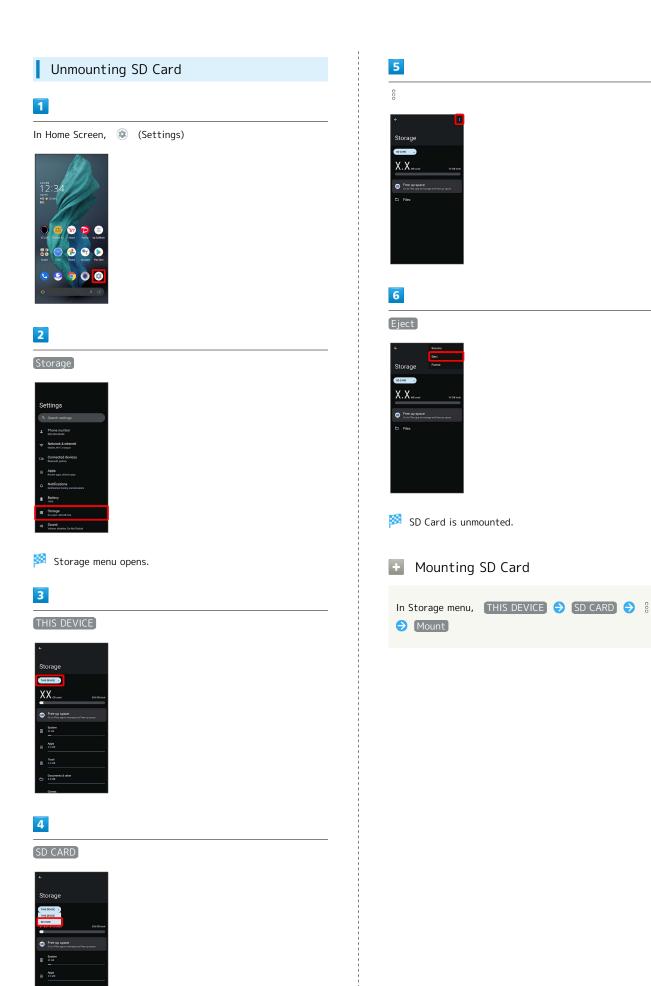


AQUOS R7

Removing SD Card

Always power off beforehand.

1

With Display upward, insert SIM Removal Tool in removal hole in Card Tray

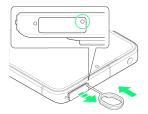

· Press firmly and straight until Card Tray ejects.

2






With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.

3


Check SD Card Slot

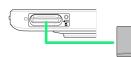

- \cdot SD Card Slot is on the back side.
- \cdot On the display side is SIM Card Tray Slot.

4

Remove SD Card

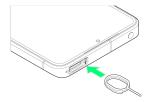

 \cdot Use SIM Removal Tool to push in the direction shown in the figure until it clicks.

5

Insert Card Tray in SIM Card Tray Slot



🟁 SD Card is removed.

- \cdot Do not insert Card Tray upside down.
- \cdot Insert gently all the way horizontally in direction shown.
- \cdot Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- \cdot To maintain water and dust resistance, use handset with Card Tray completely closed.

Charging Handset

Battery is built into handset.

Internal Battery

A lithium-ion battery is built into handset; it is not removable.

🖉 Recycling

This product requires a lithium-ion battery. Lithiumion batteries are recyclable. To recycle a used lithiumion battery, take it to any shop displaying the recycling symbol.



Battery Cautions

Storage

To help maintain performance and life of Internal Battery, do not store in the following conditions (battery level should be at approximately 40% for optimal storage).

- Full (immediately after charging is complete)
- \cdot Exhausted (too low to power on handset)

Bulges of Internal Battery


Depending on use, bulges may appear near end of battery life; this does not affect safety.

Internal Battery Replacement

Internal Battery is a consumable item; may need to be replaced if operating time shortens noticeably. Internal Battery is not user replaceable; its replacement incurs fees and requires handset submission to a SoftBank Shop or other appropriate servicer. For details, contact a SoftBank Shop or Customer Service.

Charging with AC Adaptor

Use an AC Adaptor (USB Type-C® quick charge AC Adaptor for USB PD-PPS [ZSDBAV] (SBAC22-TCPD)) (optional accessory). For information on other peripheral devices, see SoftBank Website.

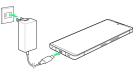

1

Insert USB Type-C plug of AC Adaptor into External Connection Jack



2

Raise plug on AC Adaptor and plug into outlet

🏁 Charging starts.

3

After charging, unplug AC Adaptor from outlet and disconnect from handset

🏁 Charging ends.

Lock Screen while Charging

Charging progress, time until charging completes (approximate), etc. appear in lock screen.

- "Charging": normal charging
- · "Charging rapidly": rapid charging
- "Charging slowly": low-speed charging; handset begins low-speed charging depending on the conditions, such as when nearly charged.
- "In direct charging": direct charging. See "Battery Settings" for details.
- "Charging wirelessly": Displayed when charging with a wireless charger. See "Charging with a Wireless Charger" for details.

Charging Cautions

Water Resistance

AC Adaptor is not waterproof. Never connect a USB Type-C plug while handset or charger is wet.

Handset is water resistant; however, if a USB Type-C plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or a USB Type-C plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.

Handling Cords

Do not pull, bend, or twist cord; may damage the cord.

About Charging Abroad

SoftBank Corp. is not liable for problems resulting from charging handset abroad.

Charging with a Wireless Charger

A third party wireless charger can be used to charge the Handset. See the User Guide for your wireless charger for information on charging the Handset.

- Align the wireless charging point on the Handset correctly with position of the wireless charger. See "Handset (Back and Sides)" for the location of the wireless charging point on the Handset.
- Remove the Handset case and/or cover, if fitted.

Wireless Charging Cautions

Note the following when charging with a wireless charger:


- Disable the Handset's vibrate function during charging. Enabling the vibrate function may prevent complete charging or cause the handset to fall off the charger.
- If charging causes audible interference on a TV or radio, move the charger further away from the TV or radio.
- If other wireless chargers are nearby, maintain a distance of at least 30 cm between chargers. Failing to do so may prevent the handset from being correctly detected or otherwise prevent charging.
- Charging may adversely affect calls, data communication or TV reception.
- Do not place any metallic material between the handset and the Wireless Charger. Metallic materials may prevent charging or cause heat generation.
- Do not place objects such as IC cards between the handset and the Wireless Charger. Doing so may damage the IC card.
- Do not place the handset on a Wireless Charger while the AC Adaptor or USB Type-C cable is connected to the handset.
- Using the camera during charging may result in noise in the images.
- Using the handset during charging may stop or slow down charging (to avoid temperature increases in the handset).

Power On/Off

Powering On

1

Long Press Power Key until SHARP logo appears

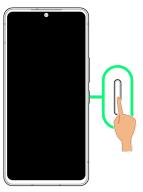

🏁 Handset powers on, and lock screen appears after a while.

 An initial settings wizard may appear the first time handset is powered on. For details on initial settings, see "Making Initial Settings."

2

Flick lock screen up



Home Screen appears.

 After Flicking screen up when not is displayed, enter pattern / lock no. (PIN) / password to unlock.

Powering Off

1

Power Key + Volume Up Key



2

Power off



Handset powers off.

Making Initial Settings

When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google™ account, and other settings. Follow onscreen instructions to set items. You can also easily transfer data from a previously used smartphone, by connecting the included Quick Switch Adapter to handset External Connection Jack and then connecting the smartphone using a cable.

Insert SIM Card before powering on handset.

🛐 Transferring Data

Before Transferring Data

The following are required for transferring data.

- Handset
- · Quick Switch Adapter
- \cdot The previously used smartphone
- \cdot Cable used with the previous smartphone

How to Transfer Data

Data transfer is performed from the initial settings screen that appears the first time handset is powered on. From "Copy apps & data" in the initial settings screen, follow onscreen prompts to connect the smartphones and transfer data.

- For details on transferring data using the Quick Switch Adapter, see the following website.
- http://k-tai.sharp.co.jp/support/datacopy/pdf/
 easy_data_copy.pdf (Japanese)
- Charge handset and previously used smartphone adequately beforehand.
- · Connect to Wi-Fi or mobile network beforehand.
- If transferring data from an iPhone®, set iMessage® and FaceTime® off beforehand.
- · If iPhone data is encrypted, iTunes® password is required.

To Transfer Data after Initial Settings Have Been Completed

For details on transferring data after initial settings have been completed, see the following website.


http://k-tai.sharp.co.jp/support/datacopy/pdf/
easy_data_copy.pdf (Japanese)

eSIM Cautions

When using eSIM, confirm the following before powering on.

- \cdot Remove SIM Card from handset.
- Make sure that handset can connect to the Wi-Fi network.
- \cdot Have the QR code ready for eSIM registration.

21

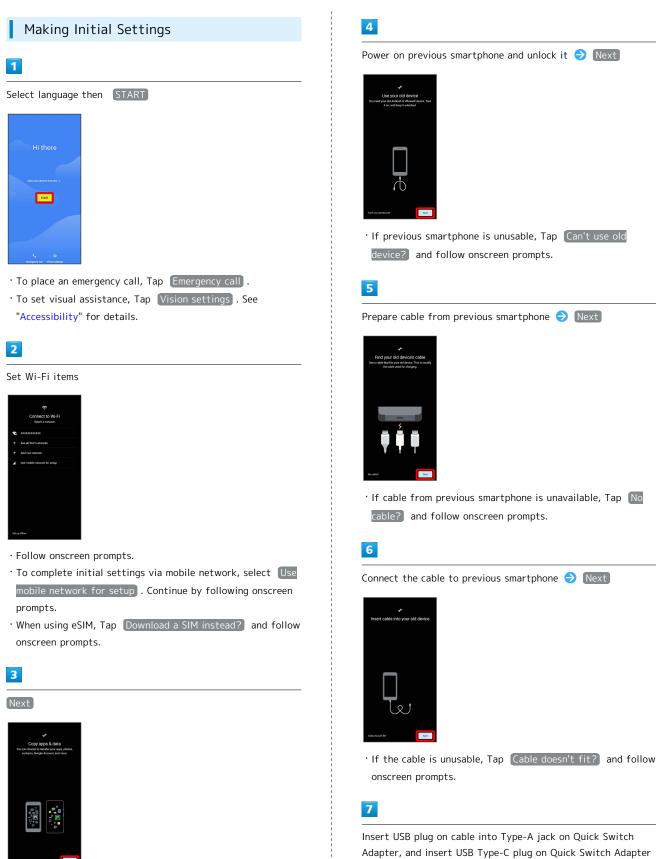

• To not copy data from another mobile, etc., Tap Don't copy .

If Quick Switch Adapter is unavailable, Tap Cable doesn't
 fit? → No adapter?

into External Connection Jack

NO REAL

Set up a Google Account



- \cdot See "Google Account" for details on a Google Account.
- \cdot After setting a Google account, a list of transferable data appears.



10

Tap items to import 🔿 Copy







Set/check each item



12

(Accept)





SKIP



• Tap method • NEXT to set selected method. See "Using Fingerprint Authentication Function," "Setting Screen to Unlock by Tracing Pattern," "Requiring Lock No. (PIN) Entry for Unlocking Screen," "Setting Screen to Unlock with Password," and "Using Face Authentication" for details.



Continue



- To stop initial settings and be reminded later, Tap Leave & get reminder .
- \cdot Follow onscreen prompts to set up Google Assistant.





• After Tapping Add a card follow onscreen prompts to save card information.

16

Set each item \Rightarrow Done for now



17

Done



Mort is complete, and initial settings are complete.


- \cdot After import is complete, remove cable.
- \cdot If confirmation appears, follow onscreen prompts.



Use only for transferring data, and to not use for any other purpose (such as charging).

Google Account

Use a Google Account and get more convenience with Google services. A Google Account is required to use some services or fully use some applications.

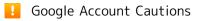

Google Account Mail Address & Password

Be careful not to forget your Google account mail address and password.

Google Account Operations & User Interface

Operations and user interface are subject to change due to automatic application updates or other reasons.

Creating a Google Account

1

In Home Screen, 💿 (Settings)





Passwords & accounts

	Display Dark theme, fort size, brightness
	Wallpaper Home, lock screen
	AQUOS Tricks various functions to make more use of this phone.
	Home applications
	Accessibility Display, interaction, audio
	Security Screen lock, faceconirol, fingerprint
	Privacy Permissions, account activity, personal data
	Location On - X ages have access to location
*	Safety & emergency Emergency 505, medical infa, alons
۲	Passwords & accounts Sered assessed, adafA spreed accounts
ô	Digital Wellbeing & parental controls screen time, app timers, bedune schedules



Add account



(Google)



🧭 Window for logging in to a Google account opens.



Create account





For myself



' To create a child's account, Tap For my child , then follow onscreen prompts.



Enter first name 🔿 Enter last name 🔿 Next



8

Set/enter date of birth and gender ⊖ Next





9

Select a mail address ∋ Next



• To create another mail address, Tap Create your own Gmail address ⊖ Enter user name (mail address) ⊖ Next .



Enter password \bigcirc Next



11





- To add a phone number for security only, Tap More options . Continue by following onscreen prompts.
- \cdot To not add a phone number, Tap $\begin{tabular}{c} Skip \\ Skip \\ . \end{tabular}$

25

12 Next



13

Check the privacy policy and terms of use lagree



14

Select whether to enable data backup 🗦 Accept



🏁 Account is created.

Signing in to a Google Account



In window for logging in to a Google account, enter mail address \bigcirc Next





Enter password 🔿 Next





Continue by following onscreen prompts



🏁 You are signed in to your Google Account.

Unlocking Screen

Screen Lock

After a period of inactivity, Display turns off to save battery power (screen lock active).

Screen lock prevents accidental Touchscreen operation.



 \cdot To activate screen lock manually, Press Power Key when Display is turned on.


If Screen Lock Activates while Playing Music

Music continues to play. For operation, Press Power Key to open lock screen and use operation panel (operations may vary depending on application).

Unlocking Screen

1

When Display is turned off (screen lock active), Power Key

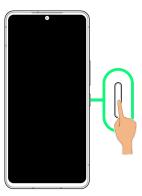

Lock screen appears.

2

Flick lock screen up



Screen is unlocked.

- To change the unlock method for enhanced security, set handset to require pattern drawing or lock no. (PIN)/ password entry for unlocking screen or set screen to be unlocked with your fingerprint/face as needed. See "Using Fingerprint Authentication Function," "Setting Screen to Unlock by Tracing Pattern," "Requiring Lock No. (PIN) Entry for Unlocking Screen," "Setting Screen to Unlock with Password," and "Using Face Authentication" for details.
- After Flicking screen up when <a>[] is displayed, enter pattern / lock no. (PIN) / password to unlock.

🛐 Another Way to Turn On Display

Set Display to turn on when handset is picked up and held still (Turn screen on by holding). See "Bright Keep Settings" for details.

Basic Operations

Basic Operations	30
Using Touchscreen	31
Using Manner Mode	32
Using Airplane Mode	34
Text Entry	35
Using Fingerprint Authentication Function	36
Updating the System	39
Using ROBOQUL	40

Basic Operations

Selecting Options and Navigating Screens

Tap items, icons, onscreen keys, etc. to open assigned items.



 \cdot To return to the previous screen, Flick the edge of screen to the left/right.

Moving to Home Screen

The area at the bottom of the screen where **Example** is displayed is called "Navigation Bar." Flick Navigation Bar up to move to Home Screen.



Menu Operations

1

Tap at Display top for available settings and items.



2

Screens may also have settings and items that are available by Touching & Holding Display.



Using Touchscreen

Handset uses a touchscreen-type Display. Operate with your fingers on Display.

🖉 About Touchscreen

In Case of Unintended Operation

If handset initiates operation without Touchscreen (Display) being operated or does not respond after Touchscreen being operated, Press Power Key to turn off Display, Press Power Key again to turn on Display and then operate handset.

Touchscreen Usage Notes

Touchscreen may not respond in these situations:

- \cdot Use with gloves/long fingernails
- When using handset with gloves on, enable glove mode.
- \cdot Use of pens, pencils or sharp objects
- \cdot Use with objects on/against Display
- · Use while wet

Iouchscreen Usage Cautions

To prevent malfunctions, do not:

- \cdot Touch Display with wet fingers
- \cdot Use if Display is wet
- If Display is wet, wipe it with a soft cloth.
- · Subject Display to force/pressure
- Place a sticker or shield (commercially-available protective film, privacy protector shield, etc.) on Display

Тар

Contact Display lightly and briefly.



Touch & Hold

Contact Display lightly; release finger when screen changes.



Basic Operations

Drag

Touch icon or other item lightly, move it where desired, and release finger.




Flick (Swipe)

Contact Display lightly, then brush screen up/down or left/ right.



Pinch/Spread

Contact Display lightly, then move fingers toward each other (Pinch) or away from each other (Spread).

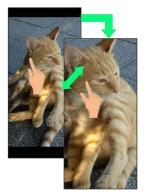

Using Manner Mode

Mute ringtones and other handset sounds to avoid disturbing others around you.

Manner mode setting is also accessible from Quick Settings Window.

Manner Mode Options

Settable items are the following.

• Vibe

Ringtones and other handset sounds are muted; handset vibrates for incoming calls/messages, etc.

• Mute

Ringtones and other handset sounds are muted; handset does not vibrate for incoming calls/messages, etc.

Manner Mode Cautions

Camera shutter sound, video recording tones, alarms, media sound, etc. still play even in Manner mode.

• Alternatively, to mute alarms and media sound, use "Do Not Disturb." See "Sound Settings" for details.

Activating Manner Mode (Vibe)



Press Volume Up/Down Key



🏁 Volume bar appears.




(Manner OFF)



(Vibe)



🏁 Handset enters Manner mode (vibe).

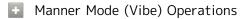

Setting from Quick Settings

Manner mode (vibe) setting is also accessible from Quick Settings Window.

Flick Status Bar down ⋺ 😐

🏁 Icon changes to 💿 , and handset enters Manner mode (vibe).

Canceling Manner Mode (Vibe)

Press Volume Up/Down Key for volume bar, (Vibe) (Manner OFF)

🟁 Handset exits Manner mode.

Activating Manner Mode (Mute)

1

Press Volume Up/Down Key



Volume bar appears.

2

22





3

8 (Mute)



🏁 Handset enters Manner mode (mute).

Manner Mode (Mute) Operations

Setting from Quick Settings

Manner mode (mute) setting is also accessible from Quick Settings Window.

Flick Status Bar down 🔿 🗅 🔿 💿

🏁 Icon changes to 🔉 , and handset enters Manner mode (mute).

33







Using Airplane Mode

Leaving power on, suspend signal-transmitting functions.

Activating Airplane Mode



Flick Status Bar down



Notifications Window opens.




Flick Notifications Window down



🏁 Quick Settings Window opens.

• Alternatively, to open Quick Settings Window, Flick Status Bar down with two fingers with Notifications Window closed.



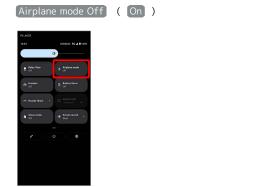

🏁 Airplane mode activates.



I Airplane Mode Caution

Wi-Fi and Bluetooth® functions can be enabled after placing handset in Airplane mode.

While connected to another device with handset Bluetooth® function, placing handset in Airplane mode does not disable Bluetooth® function.

Text Entry

Keyboards

Use onscreen keyboards for text entry.

- \cdot Tap Text entry field for keyboard. To hide it, Tap \checkmark .
- Text entry descriptions are for Google Keyboard (default input method).

Enabling One-Handed Mode

Shrink onscreen keyboard for easier one-handed operation; switch between Left-handed mode and Right-handed mode as needed.

When keyboard is open, Touch & Hold 📕 / 😐 and slide finger over 😰 / 🖪

• Tap ▶ / to switch between Right-handed mode and Left-handed mode.


• Tap 🔣 to disable One-handed mode.

Keyboard Layout



1 Enter characters.
2 Toggle case.
3 Switch to number/symbol keyboard.
4 Enter comma. Touch & Hold to specify settings or enable One-handed mode.
5 Switch to emoji/emoticon keyboard.
6 Delete characters.
Insert line break. Touch & Hold for options; enable One- handed mode, or move to other entry fields.
8 Enter period. Touch & Hold for a set of other punctuation marks and symbols.
9 Enter space.

35

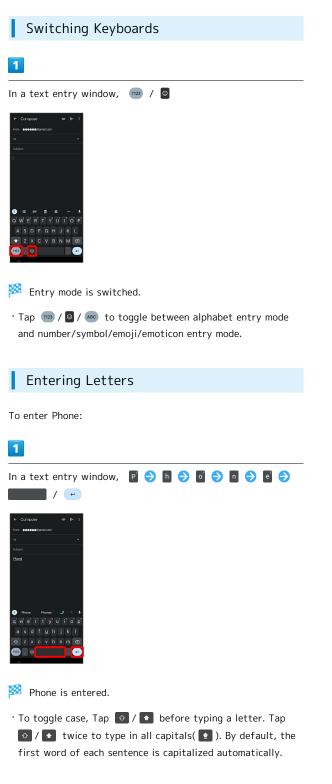

Using Fingerprint Authentication Function


Fingerprint Authentication Function

Hold finger to sensor to authenticate and use handset. Use this function to unlock screen.

Fingerprint Authentication Function Cautions

Observe the following when using the fingerprint authentication function.

- Authentication is based on fingerprint characteristics. This function may be unusable if your fingerprint characteristics are not prominent.
- Ability to authenticate (assuming finger is held to sensor correctly) depends on conditions of use. Saving your fingerprint may be difficult if finger is in any of the following conditions. Washing/wiping hands, using different finger, saving a wider area, etc. may improve capability.
- Wrinkled with moisture (e.g., after a bath)
- Wet with water, sweat, etc.
- Dry
- Covered with handcream, etc.
- Stained with mud or oil
- Rough or damaged (cut, sore, etc.)
- Fingerprint is faint (finger surface is worn)
- Fingerprint is deformed due to weight gain or loss
 Finger surface condition at the time of authentication is extremely different than when fingerprint was saved
- Fingerprint authentication technology does not guarantee successful personal authentication/verification. SoftBank Corp. is not liable for any damages resulting from use of handset by third party or lost opportunities to use handset.

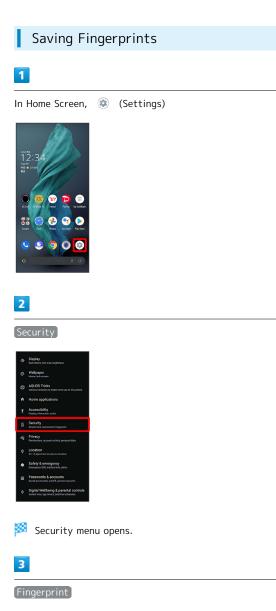



🏁 Fingerprint settings open.



Register fingerprint



5

Follow onscreen prompts and set pattern / lock no. (PIN) / password for unlocking screen



- Basic Operations
- This is a backup method for unlocking the screen if unable to authenticate with your fingerprint.
- If method for unlocking screen is setting other than None or Swipe , first unlock screen.
- See "Setting Screen to Unlock by Tracing Pattern,"
 "Requiring Lock No. (PIN) Entry for Unlocking Screen," and
 "Setting Screen to Unlock with Password" for details on setting a method for unlocking screen.

6

[agree]



· If confirmation appears, follow onscreen prompts.

7

Hold finger to sensor until handset vibrates



· If finger is already saved, use another finger.





🏁 Fingerprint is saved.

• To save other fingerprints, Tap Add another .

👸 Saving Fingerprints

Savable Number of Fingerprints

Save up to 5 fingerprints.

Backup Screen Unlock Methods

Make sure not to forget pattern / lock no. (PIN) / password set as backup for unlocking screen.

Fingerprint Saving Operations

Setting/Changing Names of Saved Fingerprints

In fingerprint settings, Register fingerprint → Enter pattern / lock no. (PIN) / password → Tap saved fingerprint → Enter name → OK

Deleting Fingerprints

In fingerprint settings, <u>Register fingerprint</u> → Enter pattern / lock no. (PIN) / password → 前 for saved fingerprint → YES, REMOVE

Setting Whether to Use Two Fingers when Authenticating

In fingerprint settings, **()** / **()** for "Two-finger authentication"

- Tap (to toggle on (), to toggle off ().
- · Save at least two fingerprints beforehand.
- · If confirmation appears, follow onscreen prompts.

Setting Whether to Use Two Fingers on All Authentication Prompts when using Two Fingers for Fingerprint Authentication

In fingerprint settings, Two-finger authentication → Use two-finger authentication on all screens. / Use onefinger authentication for unlock only.

Troubleshooting

- Q. Failure to save fingerprint
- A. Keep your finger pressed on the sensor slightly harder. Using a different finger may also improve authentication performance.

Fingerprint Sensor Cautions

Observe the following when using Fingerprint Sensor.

- Do not hit or subject handset to excessive shock. Do not hit or subject handset to excessive shock. Do not scratch sensor surface or poke with a pen, pin, or other pointed object.
- \cdot Do not place stickers on sensor surface or mark with ink.
- Dust, smudges, or other soiling on sensor may affect authentication. Clean the Fingerprint Sensor surface from time to time.
- Holding finger to sensor for too short/long a time may affect authentication. Hold finger straight on sensor so that spiral of fingerprint is in center of sensor.
- Fingerprint Sensor may not activate if you start saving your fingerprint or performing authentication with your finger on the sensor. Release it and retry.
- To save or authenticate your fingerprint, press the screen firmly.
- If you have a protective film on the screen, or if the fingerprint sensor area on the screen is dirty, the lock will not get unlocked.
- When attaching a screen protection film, use one that is fingerprint sensor compatible. Also, save fingerprint after attaching the screen protection film.
- The brightness and color of the screen may change slightly while your fingerprint is being authenticated.

Performing Fingerprint Authentication

1

In authentication window, hold finger to sensor



Fingerprint is authenticated.

• When Tap to display the fingerprint sensor and clock when the screen is off is enabled, Fingerprint Sensor can be displayed by tapping the screen while the screen is off (screen locked). Also if Unlock even when the screen is OFF is enabled, hold finger to Fingerprint Sensor while Display is off (screen lock) to unlock screen. See "Display Settings" for details.

Troubleshooting

- Q. Fingerprint is not authenticated
- A. Remove finger then try authenticating again.
 Or, Flick lock screen up and unlock screen using backup unlock method set when saving fingerprint.

Updating the System

Check whether system updates are required via the network, and update manually as required. Checking/updating does not incur transmission fees.

Software Update Cautions

Applications

Applications may be updated or newly added, or names, icons, operations and user interfaces of applications may be changed.

System Update Cautions

Observe the following before a system update.

- \cdot It may take time to update the system.
- Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during a system update may cause an update failure (an update failure may disable handset).
- Never remove SIM Card or power off handset during a system update. Doing so may cause the update to fail. An update failure may disable handset. If handset becomes disabled, contact Customer Service.

Data Backup


Saved data may be lost depending on condition of handset (malfunctioning, damaged, water seepage, etc.). It is recommended that you back up important data before updating the system. SoftBank Corp. is not responsible for damages from loss of data.

Updating the System

Notification appears when a system update is required. Tap the notification and follow onscreen prompts. If notification does not appear, check whether a system update is required as follows and update the system.



39

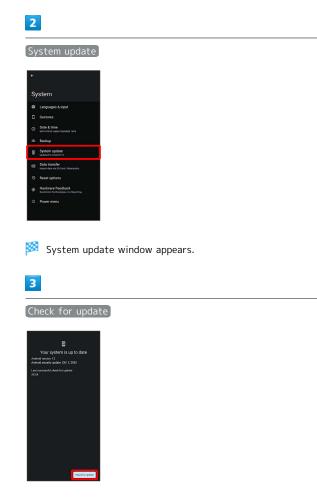

4

Continue by following onscreen prompts



🟁 System update begins.

- Use other functions during a system update. However, for 10 days after a system update notification, update installation pauses while using other functions. Tap Resume to restart the installation and also use other functions.
- After the system update proceeds, Restart now appears at the end. Tap and complete the system update.

If Handset Does Not Restart after Tapping "Restart now"

An update failure may disable handset. If handset is disabled, contact your contracted SoftBank Customer Service.

Using ROBOQUL

When charging using ROBOQUL and handset is powered on, ROBOQUL swivels when Display lights up, at start of charging, for incoming calls, alarms, etc. If emopa is enabled, ROBOQUL makes an audio notification as it swivels.

👸 ROBOQUL Firmware Updates

ROBOQUL firmware is updatable. When an update is required, "Updating ROBOQUL" appears on handset when connected to ROBOQUL. Follow onscreen prompts to update firmware.


- To update firmware, the following conditions are required.
- ROBOQUL is connected to an AC Adaptor
- Handset is placed in ROBOQUL
- Handset is connected to the network
- At least 30% battery is remaining
- The firmware update will be interrupted if the battery becomes too low or handset/AC Adaptor is removed from ROBOQUL. ROBOQUL will become unusable if a firmware update is interrupted. Make sure that the required conditions are met, and then connect handset to ROBOQUL again and complete a firmware update.
- Handset checks for firmware updates via the network once a week when placed in ROBOQUL. Firmware is also updated via the network. Transmission fees are incurred when using the network.

Before Using ROBOQUL

You must set permissions for ROBOQUL to use functions beforehand.



Power on handset and charge with ROBOQUL

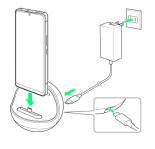

2

Unlock screen with handset placed in ROBOQUL

Description of ROBOQUL appears.

3



4

WHILE USING THE APP / ONLY THIS TIME



 \cdot For several functions, continue in the same way.

5

CLOSE




- ROBOQUL setting is complete.
- To make emopa settings, Tap Set emopar , then follow onscreen prompts.

Setting ROBOQUL

Set whether ROBOQUL swivels while charging with ROBOQUL.

• When enabled while charging using ROBOQUL and handset is powered on, ROBOQUL swivels when Display lights up, at start of charging, for incoming calls, alarms, etc.

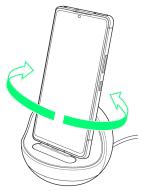

1

In Home Screen, 🐵 (AQUOS Tricks)




AQUOS Tricks menu opens.

2

ROBOQUL setting



ROBOQUL setting window opens.

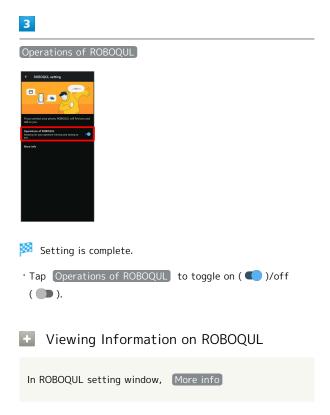

Handset Interface

Handset Screens	44
Icons at Display Top (Status Bar)	50
Checking Notifications (Notifications Window)	52
Checking Notifications (Quick Settings Window)	54
Capturing Screenshots (Clip Now)	56
Scrolling Screen Automatically (ScrollAuto)	57
Using Gaming Menu	59

Lock Screen Layout

Lock screen appears at power on or when Power Key is Pressed while Display is turned off (screen lock active). From lock screen, unlock screen, or (a) (Flick screen from bottom right up to the left).

By default, Wallpaper changes randomly each time lock screen appears (Lock Photo Shuffle). Change Wallpaper for lock screen as needed. See "Changing Wallpaper" for details.



- 1 Display screen lock status.
- 2 Time and date appear here.
- 3 Notifications of incoming calls/messages or from applications, etc. appear here.¹
- 4 Messages and news from emopa appear here (emopa area).²
- 5 Show message set for lock screen.³
- 1 If Organize notifications on the lock screen is enabled, a notification viewed the first time does not appear the second and subsequent times. See "Display Settings" and "Notifications" for details.
- 2 Appear when emopa is configured. See "エモパーを利用 する (https://www.softbank.jp/mobile/support/manual/ smartphone/aquos-r7/menu/21790/)" (Japanese) for details.
- 3 Appears when Add text on lock screen is set. See "Display Settings" for details.

Home Screen & App List

Most handset operations start in Home Screen or in app list. Flick Home Screen up to display app list and activate applications or change handset settings (To change Home Screen, switch to another home screen app.)

Home Screen Layout



Desktop sheet

Place application shortcuts, folders, widgets freely. Flick left/right to toggle sheets.

2 Favorites Tray

Place application shortcuts and folders freely. Activate applications quickly from any Home Screen sheet or use Google™ Search Bar.

Toggling Home Screen Sheets

Home Screen consists of several sheets. Flick left/right to toggle Home Screen sheets.

 Adding widgets and function shortcuts in Home Screen adds more Home Screen sheets. See "Adding Shortcuts" and "Adding Widgets" for details.



App List Layout



Search for application

View predicted applications

3 App list

Tap to activate applications. See "Activating Applications" for details.

Portrait Orientation & Landscape Orientation

appears in Navigation Bar when handset is rotated
 horizontally. Tap
 to switch current screen to landscape
 orientation. To switch screen to portrait orientation, rotate
 handset vertically and Tap
 .

Enable (Auto-rotate screen) to allow current screen to switch to landscape orientation when handset is rotated sideways. See "Quick Settings Window Layout," "Display Settings," and "Accessibility" for details.



Multi-Window

Split screen to view and operate two applications.

• Viewing in Multi-Window is not available for some applications.

1

Drag bottom of Display up



🏁 Recent apps window opens.

2

Drag recently used applications to the left or right and Tap application to use in history





Split screen




Multi-Window opens, and selected application opens at top of Display.

45

4

In Home Screen/app list, Tap application to use



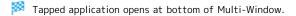

 Alternatively, in recent apps window, Tap icon of application in list
 Split screen to split the screen.

+ Multi-Window Operations



Capturing Screenshots

Press Power Key and Volume Down Key at the same time to capture a screenshot of the current screen.



- \cdot May be unavailable for some applications.
- \cdot View captured screenshots in $\, \, \ensuremath{\mathfrak{E}}$ (Photos), etc.
- After capturing a screenshot, tap Capture more to zoom in/out to an area not shown in the screenshot, and save. Follow onscreen prompts. Some screens may not be supported.
- Alternatively, use Clip Now and drag Display from corner to center to capture a screenshot. See "Capturing Screenshots (Clip Now)" for details.

Changing Wallpaper

1

Touch & Hold open area of Home Screen





Wallpapers





Tap application (🚷 (Photos) etc.)





Select image



 Operations may vary depending on selected item. Follow onscreen prompts.

5

Home screen) / Lock screen) / Home screen and lock



Setting is complete.

- \cdot Operations may vary depending on selected item. Follow onscreen prompts.
- Tap Home screen to set the image as Wallpaper for Home Screen only.
- Tap Lock screen to set the image as Wallpaper for lock screen only.
- Tap Home screen and lock screen to set the image as Wallpaper for both Home Screen and lock screen.

Wallpaper Change Operations

Using Lock Photo Shuffle/Home Photo Shuffle

Change Wallpaper randomly each time lock screen/Home screen appears.

 Touch & Hold open area of Home Screen

 Wallpapers

 ♦
 Lock Home Photo Shuffle

 Lock Photo Shuffle

/ Home Photo Shuffle (●) → Select folder

Select images to show with Lock Photo Shuffle/Home Photo Shuffle (✓)

- \cdot Selected images appear randomly.
- Tap Shuffle interval setting to select the interval at which images are randomly switched.
- Tap Check selected images to check selected images.
- Alternatively, in Home Screen, (Internatively, In Home Screen, (Internatively, Internatively, Int

Using My AQUOS

Adding Shortcuts

1

In app list, Touch & Hold application and Drag to "Add to home screen"



Shortcut is added automatically.

Function Shortcuts

With some applications, Touch & Hold for shortcuts to functions. Touch & Hold function shortcut then release finger at location in Home Screen to add function shortcut.

• Drag to sheet visible at edge of Display to toggle sheets and add function shortcut. Drag to rightmost sheet to add one more sheet and add.



Deleting Shortcuts

In Home Screen, Touch & Hold icon ଚ Drag to "Remove"

Adding Widgets

Add Chrome[™] bookmarks, Analog clock, etc. as follows.

1

Touch & Hold open area of Home Screen



2

Widgets



A list of widgets opens.

3

Tap application name of widget to add



4

Touch & Hold widget



5

Drag to location to add widget



🏁 Widget is added.

 \cdot Drag to sheet visible at edge of Display to toggle sheets and add. Drag to rightmost sheet to add one more sheet and add.



Removing Widgets

In Home Screen, Touch & Hold widget ラ Drag to "Remove"

Handset Interface

Adding Folders

Add folders to collect icons.

 \cdot Folders can also be created in Favorites Tray and app list.

1

In Home Screen, Touch & Hold icon to place in folder



2

Drag to another icon to group with



Folder is added, and two icons are saved in the folder.

Folder Operations

Changing Folder Names

In Home Screen, Tap folder
Tap area to enter folder
name at bottom of window
Enter folder name
Change folder names the same way in Favorites Tray and app list.

Placing Icons in Folder

In Home Screen, Touch & Hold icon ⋺ Drag to folder • Place icons the same way in Favorites Tray and app list.

Moving Icons Out of Folder

In Home Screen, Tap folder ⊖ Touch & Hold icon ⊖ Drag it out of folder

 \cdot Move icons the same way in Favorites Tray and app list.

Deleting Folders

In Home Screen, Touch & Hold folder 🗦 Drag to "Remove"

- \cdot Delete folders the same way in Favorites Tray.
- \cdot Applications in folder are also deleted.

Moving Icons/Widgets

Icons can also be rearranged in Favorites Tray and app list.

1

In Home Screen, Touch & Hold icon/widget



2

Drag to target location

- Icon/widget is moved.
- \cdot To a folder:Drag icon to target folder.

Making Home Screen Settings

Settable items are the following.

Item	Description
Notification dots	Set whether to show dots with application icons for notifications. See "Notifications" for details.
Add number on notification dots	Set whether to show number of notifications with notification dots.
Add app icons to Home screen	Set whether icon is added to Home Screen after downloading new application.
Show Google app	Set whether to show news, weather, etc. at left of Home Screen.
Display Google Search widget	Set whether to show Google Search Bar in Favorites Tray.
App suggestions	Set whether to show application suggestions in app list, etc.
Allow Home screen rotation	Set whether to rotate Home Screen with handset orientation automatically.

1

Touch & Hold open area of Home Screen





Home settings



3

Set items

🏁 Settings are complete.

Icons at Display Top (Status Bar)

Indicators (new message notification, handset status, etc.) appear at the top of Display.

Status Bar Layout



- Notifications, warnings, etc. appear here. (Notification Indicators)
- 2 Handset status and other information appear here. (Status Indicators)

Main Notification Indicators

Notification Indicators appear on the left.

 \cdot Notification Indicators do not appear in lock screen.



Indicator	Description
12:34	Time
7	Glove Mode On
1	Battery level less than about 15%
L	Call (Dialing/Arriving/in Progress)
U	Call on Hold
×	Missed Call
00	New Answer Phone Message
00	New Voicemail
Ð	New SMS/+Message
M	New Gmail™
A	New Urgent News
Õ	Alarm Sounding/Snoozing/Upcoming Alarm
31	Calendar Event Notification
	Application Update Notification
	Application Installation Complete
? ?	High-Quality Public Network Available
O	Data Communication Disabled
î	Data Sent
L	Data Downloaded/Received
*:	Bluetooth® Data Reception Request
A	Error Indication ¹
—	Mounting SD Card
•	More Notifications
O :	Space Low in Internal Storage
₽	System Update Information
	Gaming Menu in Use

1 Appears when an error occurred.

Main Status Indicators

Status Indicators appear on the right.



Indicator	Description
	Battery Strength(100%)
İ	Battery Strength (less than about 15%)
3	Energizing
•	Battery Saver On
	Signal Strength (Strong)
	Signal Strength (Fair)
\angle	Signal Strength (Weak)
Ź	No Signal (5G/4G LTE/4G/3G)
5G	5G Data in Use ¹
4G	4G LTE/4G Data in Use ²
3G	3G Data in Use
R	Roaming
	Wi-Fi Connected (Strong)
\bigcirc	Wi-Fi Connected (Fair)
\bigtriangledown	Wi-Fi Connected (Weak)
*	Communication in Use
<u>к</u>	Airplane Mode
*	Bluetooth [®] Connected
6	Talking with Speakerphone
X	Talking while Muted
ال	Manner Mode (Vibe)
X	Manner Mode (Mute)
Θ	Do Not Disturb Set
0	Wi-Fi Hotspot Tethering in Use
0	Getting Location Information
ন্দ	VPN Connected
D	Camera in Use ³
Ŷ	Microphone in Use ³
	Hidden Statuses

1 Although "5G" may appear in standby (top of Display), this may change to "4G" with data communication then being by the 4G network.

2 Corresponding indicator appears when handset is connected to FDD-LTE (SoftBank 4G LTE) or AXGP (SoftBank 4G).

AQUOS R7

Between these Networks, handset connects to SoftBank 4G $\,$ whenever possible.

3 Appears when application starts using the camera/ microphone. Displayed as a green dot while the camera/ microphone is in use.

Checking Notifications (Notifications Window)

Open notifications and check handset status.

Opening Notifications Window

1

Flick Status Bar down



Notifications Window opens.



Closing Notifications Window

Flick Notifications Window up

Notifications Window Layout



- Notifications and active functions.
- 2 Use corresponding functions.¹
- 3 Silent notifications.
- 4 Manage notifications.
- **5** Delete all notifications and close Notifications Window.
- 1 Usable functions depend on the notification. As an example, dial or send an SMS to the phone number of a new call.

Notifications Window Operations

Switching between Detailed & Simple Views for Notifications in Notifications Window

In Notifications Window, Drag notification down/up with two fingers at the same time, or Pinch/Spread

 \cdot Unavailable for some notifications.

Making Notification Settings

In Notifications Window, Touch & Hold notification 😔

🕸 ଚ Follow onscreen instructions

 \cdot Settable items depend on the notification.

Checking Notifications

1

Flick Status Bar down



Deleting Notifications

1

Flick Status Bar down



Notifications Window opens.

2

Flick notification left/right



🏁 Notification is deleted.

 \cdot Some notifications may not be deleted.

Deleting All Notifications

1

Flick Status Bar down





2

Clear all



🏁 All notifications are deleted.

 \cdot Some notifications may not be deleted.

Checking Notifications (Quick Settings Window)

Tap icons to toggle functions on/off, etc.

Opening Quick Settings Window

1

Flick Status Bar down



🏁 Notifications Window opens.



Flick Notifications Window down




🏁 Quick Settings Window opens.

• Alternatively, to open Quick Settings Window, Flick Status Bar down with two fingers with Notifications Window closed.

🚹 Closing Quick Settings

Flick Quick Settings up

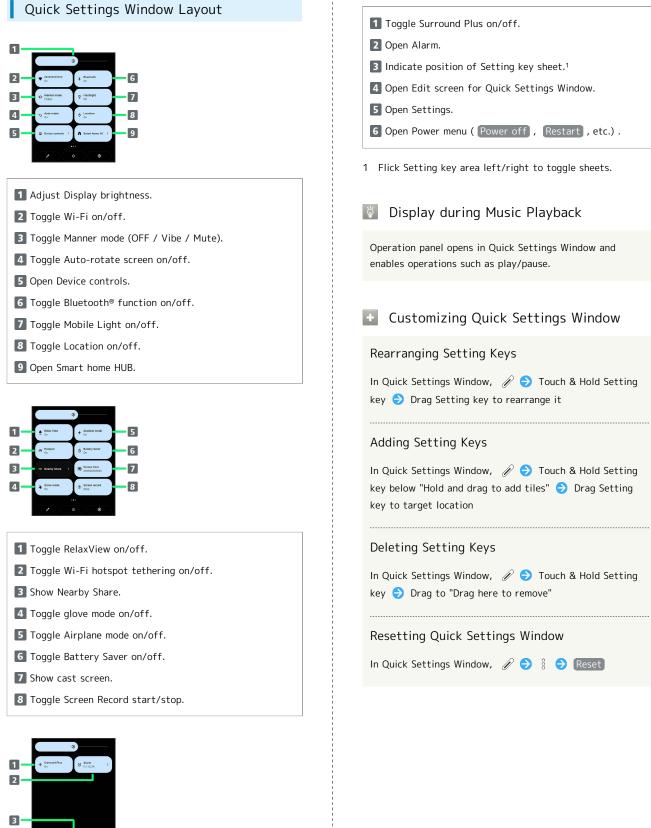

Capturing Screenshots (Clip Now)

Drag Display from corner to center to capture a screenshot.

Enabling Clip Now

1

In Home Screen, 🛞 (AQUOS Tricks)



• • •

🏁 AQUOS Tricks menu opens.

2

Clip Now



🏁 Clip Now menu opens.



🏁 Clip Now is enabled.

• Tap Clip Now to toggle on (**(**)/off (**)**.

Checking How to Use Clip Now

In Clip Now window, User's Guide

Capturing Screenshots

Capture screenshots for saving as files.

- \cdot Some screens may not be capturable.
- View captured screenshots in 🚷 (Photos), etc.



Touch upper left (upper right) corner of Display





Drag to line



🏁 Screenshot is saved.

Scrolling Screen Automatically (ScrollAuto)

Scroll the screen up and down automatically.

Enabling ScrollAuto

1

In Home Screen, 🐵 (AQUOS Tricks)




🟁 AQUOS Tricks menu opens.

2

ScrollAuto



🟁 ScrollAuto menu opens.

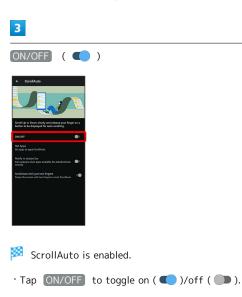

ScrollAuto Operations

Setting ScrollAuto to Applications

In ScrollAuto menu, Set Apps ラ Tap application name

Tap application name to toggle on ()/off ().
If confirmation appears, follow onscreen prompts.

Setting Whether to Show Status Bar Indicator while Running Target Applications

In ScrollAuto menu, Notify in status bar

Tap Notify in status bar to toggle on ()/off
).

Setting Whether to Swipe with Two Fingers to Autoscroll

In ScrollAuto menu, ScrollAuto with just two fingers

Tap ScrollAuto with just two fingers to toggle on
 ()/off ().

57


58

Using ScrollAuto

The feature may not follow the setting with certain applications.

1

Drag up slowly

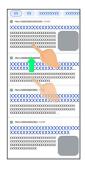

🏁 🕜 appears.


• When Display is Dragged down, 🕑 appears instead.



Slide finger to	
XOXXOXXOXXOXXOX	
Auto-scrolling will begin when you release your finger from this botton.	
· Maga / 2020 000000 - 20200	
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
XX000000000000000000000000000000000000	
http://0000000000000	
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
関連キーワード 9 XXXXX	

Screen scrolls automatically.

- Alternatively, while Tap ScrollAuto with just two fingers is enabled, Drag from bottom upward or from top downward with two fingers to start scrolling.
- \cdot Screen may not scroll depending on where you start Dragging.
- \cdot Scroll stops when Display is Tapped or after five minutes.

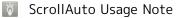

ScrollAuto does not work when Display is Flicked or Dragged quickly. ScrollAuto supports vertical scrolling only.

ScrollAuto Operations

Changing Scrolling Speed

While scrolling, + / 😑

Pausing Scrolling

While scrolling, 🕕

• While paused, Tap 🜔 to resume scrolling.

Opening ScrollAuto Window while Scrolling

While scrolling, 💿

Using Gaming Menu

While playing a game, record game screen or search for walkthrough sites and make gaming screen and other settings.

Gaming Menu Settings

Make gaming screen quality and notification settings. Settable items are the following.

Item	Description
Individual Game Settings	Set whether to block notifications and incoming calls while gaming for applications with gaming menu applied.
Game image quality	Set whether to optimize image quality of games.
Performance	Set display resolution of games with gaming menu applied.
View Menu	Set whether to display the gaming menu floating icon while games are running.
How to use	Check how to use gaming menu.
Search settings	Set search strings, etc. to search on web site or within YouTube from gaming menu.
Intelligent charging	Enable smart charging and charging adapts to handset and ambient temperature for smooth, long-life operation. See "Battery Settings" for details.
App list	Set applications that have gaming menu applied.
Notify when installing.	Set whether to display a notification to activate App list when an application is installed.
FAQ	Check FAQ on Sharp Website.
Elite Gaming	Check information on Elite Gaming.

1

In Home Screen, (a) (AQUOS Tricks)



AQUOS Tricks menu opens.

2

Gaming Menu



🏁 Gaming Menu settings open.

3

Set each item

🏁 Setting is complete.

Gaming Menu Settings Operations

Setting Applications that Have Gaming Menu Applied

In Gaming Menu settings, App list 🔿 Tap application

• Tap application name to toggle on (🌑)/off (💷).

 \cdot Applications with gaming menu applied are displayed below "Individual Game Settings."

Setting Whether to Disable "Return" (Back) Action in Gesture Navigation, Automatic Brightness Adjustment, or Clip Now, etc.


Tap the application icon below "Individual Game Settings" in the Gaming Menu settings screen ラ 🌑 / 🥌 for "Behavior block"

- \cdot Set the applications to which gaming menu will be applied in App list beforehand.
- Tap 🕕 to toggle on (🌑), 🌑 to toggle off (💷).
- Behavior block \Rightarrow Tap function to block to toggle option on (✓)/off (🔳).


Setting Whether to Block Notifications while Games are Running

Tap the application icon below "Individual Game Settings" in the Gaming Menu settings screen 🔶 Block notifications while games are running

- · Set applications to which gaming menu will be applied in App list beforehand.
- Tap Block notifications while games are running to toggle on (**(**)/off (**)**).

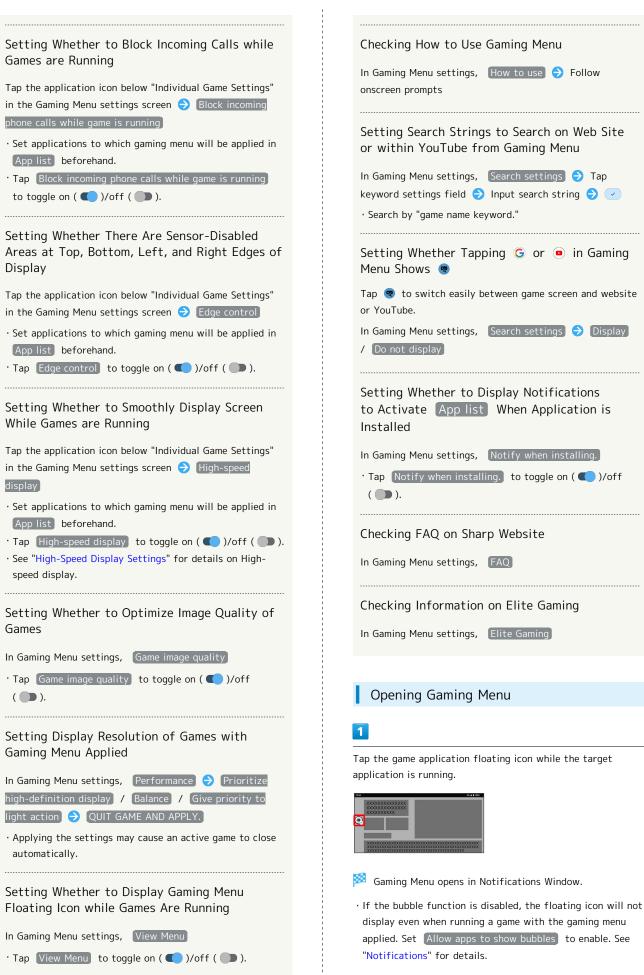

Gaming Menu Layout

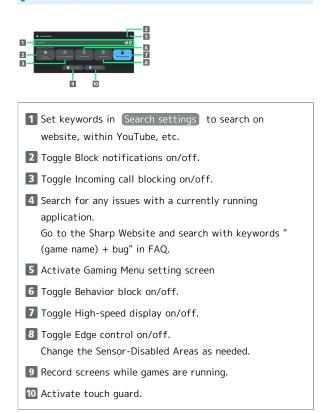

Phone


Placing/Answering Calls64	4
Optional Services6	9
Handset Phone Number7	6
Making Phone Settings7	7
Address Book74	9

Placing/Answering Calls

How to dial directly to make a call and answer a call, as well as options when a call is arriving/during a call are described.

Support for VoLTE/VoLTE (HD+) and HD Voice

Handset supports VoLTE/VoLTE (HD+) and HD Voice for high-quality call sound. See "Using VoLTE/VoLTE (HD+)" and "HD Voice" for details.

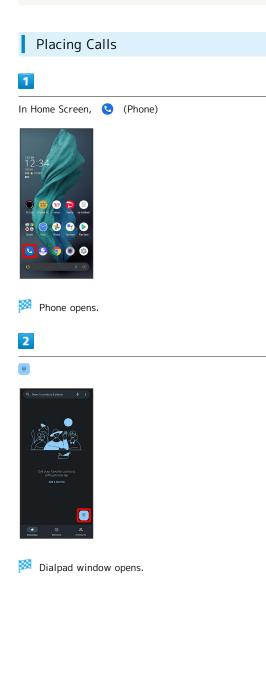

3	

Use onscreen dialpad to enter number




- \cdot Include area code for landline numbers.
- To correct number, Tap 🔕 to delete digit(s), then enter correct number.







Handset dials number. Call begins when other party answers.

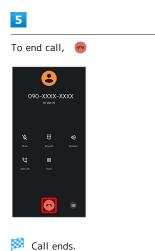

👸 Emergency Calls

Emergency Location Report

Making emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.). This system is referred to as Emergency Location Report, and notifies location based on positioning from base stations.

- \cdot Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy.
 Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report.
 However, corresponding agency may obtain location
 information in life threatening situations.
- · Location Report is not sent for calls made while outside Japan.

After Making an Emergency Call with Reject Call Enabled

Reject call is disabled for about two hours to receive calls from corresponding agency. To manually enable Reject call again after making an emergency call:

Calling Emergency Number When Handset Screen is Locked

In lock screen, Flick up \bigcirc Emergency call \bigcirc Enter number for emergency service \bigcirc \bigcirc

• Use if method for unlocking screen is setting other than None or Swipe . See "Setting Screen to Unlock by Tracing Pattern," "Requiring Lock No. (PIN) Entry for Unlocking Screen," and "Setting Screen to Unlock with Password" for details on screen lock methods.

Troubleshooting

- Q. Call does not connect
- A. Did you dial all digits for the number? Dial all digits for numbers starting with a "0" area code, etc.
- A. Is the signal weak? Change locations and call again.

Emergency Call Cautions

Areas Where Usable

Emergency calls from handset can be made only in SoftBank service areas.

Airplane Mode

Note that emergency calls cannot be made in Airplane mode. Use Quick Settings to exit Airplane mode.

Phone Window Layout




Search contacts and locations. Tap 🦺 to voice search.

2 Show call history.

1 Search field.

- 3 Show favorites.
- 4 Open menu.
- 5 Show dialpad.
- 6 Show contacts.

Phone

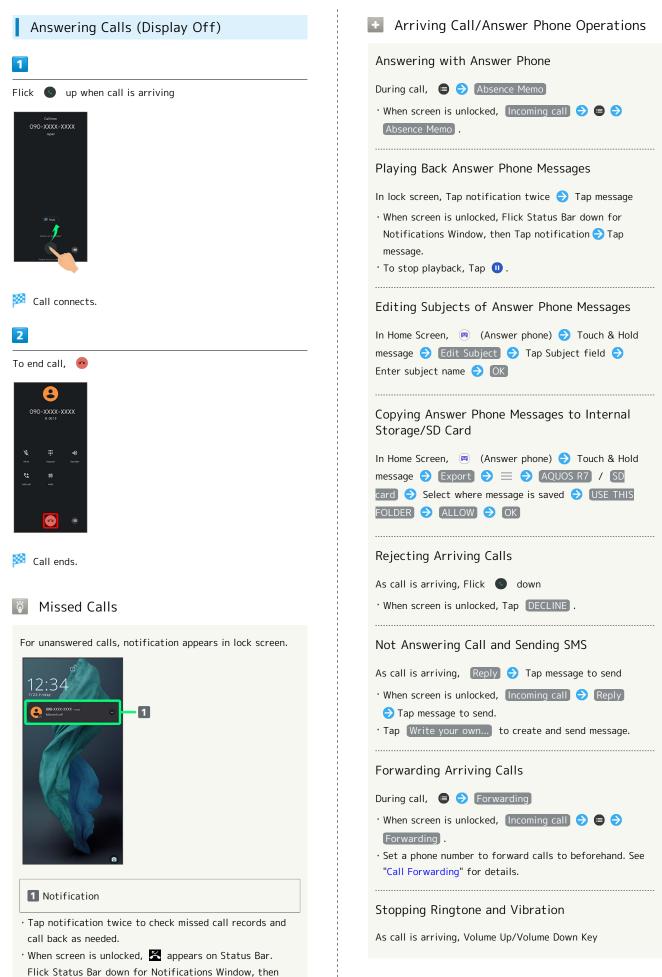

Tap notification. When CALL BACK / MESSAGE appear below notification, Tap to call back or send SMS.

Answering Calls (Display On) Call Window Layout/In-Call Operation 1 1 2 When call is arriving, ANSWER 3 8 A 4 9 5 6 10 7 1 Other party photo. 🟁 Call connects. **2** Other party name/number. 3 HD Voice (🔤)/HD+ Voice (🔤) call in progress. 2 4 Mute own voice. To end call, 🧧 5 Show dialpad. 6 Add call. 8 7 End call. 090-XXXX-XXXX 8 Call time. 9 Use Speakerphone. 10 Place call on hold. 11 Open menu. In-Call/Voice Memo Operations 🏁 Call ends. Adjusting Call Volume During call, Volume Up/Down Key Recording Call (Voice Memo) During call, 😑 🔿 Voice Memo • To end recording, Tap Stop . **Dialing Tone Referencing Contacts** During call, 😑 🔿 Address Book Playing Back Voice Memos In Home Screen, 😐 (Answer phone) ラ Voice Memo Tap Voice Memo • To stop playback, Tap 🕕 . Editing Subjects of Voice Memos In Home Screen, 🔳 (Answer phone) 🔿 Voice Memo ➔ Touch & Hold message ⋺ Edit Subject ⋺ Tap Subject field 😔 Enter subject name 😔 🛛 🛛

Phone

Copying Voice Memos to Internal Storage/SD Card

 In Home Screen, ■
 (Answer phone)
 Voice Memo

 Touch & Hold message
 Export
 ## Troubleshooting

- Q. Difficulty with call
- A. It may be difficult to make a call in a location with noise.
- A. Check the call volume when using Speakerphone. It may be difficult to make a call with a raised call volume.
- Q. The other party cannot hear me
- A. Are you covering Mic/Recorder Mic on the bottom surface of handset with your finger, etc.? Make sure not to cover Mic/Recorder Mic.
- A. Have you muted handset? The other party cannot hear you if handset is muted.
- Q. Sound experiences popping during a call
- A. Are you moving location during a call? Popping may occur when switching areas for a better signal. This is not a malfunction.

Using VoLTE/VoLTE (HD+)

VoLTE (Voice over LTE) is a system enabling voice calls over LTE networks. Compared to voice calls over conventional 3G connections, high-sound quality calls and reduced time until ringtones sound are possible. VoLTE (HD+) provides a clearer and more natural quality call than conventional VoLTE.

- VoLTE/VoLTE (HD+) are available when the counterpart model is respectively a VoLTE- or VoLTE (HD+)-compatible model from SoftBank/Y!mobile. In addition, it is necessary for both handset and the counterpart model to be within the SoftBank 4G LTE (FDD LTE) service area, with "Preferred network type" set to "5G (recommended)" or "4G", and "4G Calling" enabled.
- See "Service web page (https://www.softbank.jp/mobile/ service/global/overseas/volte/)" (Japanese) for information on countries and regions where VoLTE international roaming is supported.

VoLTE/VoLTE (HD+) Cautions

VoLTE/VoLTE (HD+) use 4G network service, and are unavailable when 4G network service is disabled on handset. If VoLTE/VoLTE (HD+) are unavailable, follow the steps below to check whether 4G network service is enabled (**O**).

In Home Screen, ④ (Settings) ⋺ Network & internet → Mobile network → Preferred network type

If disabled (), Tap 5G (recommended) / 4G to enable it ().

HD Voice

HD Voice supports a wide range of audio tones for clearer, more natural-quality voice calls.

- Available when the counterpart model is an HD Voicecompatible model from SoftBank/Y!mobile.
- HD Voice is compatible with VoLTE and 3G network. Use HD Voice with VoLTE for voice calls of even higher quality.

Optional Services


Use these optional services for voice calls:

Optional Services

The following optional services are available.

Service	Description
Call Forwarding	Divert all/unanswered calls to a preset number.
Voicemail	Divert all/unanswered calls to Voicemail Center; access messages via handset/ touchtone phones.
Call Waiting ¹	Answer calls during a call.
Group Calling ¹	Merge multiple calls.
Notify Caller ID	Send or hide your number when placing calls.
Call Barring	Restrict incoming/outgoing calls by conditions.

1 Requires separate subscription.

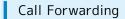



1





Phone opens.

2

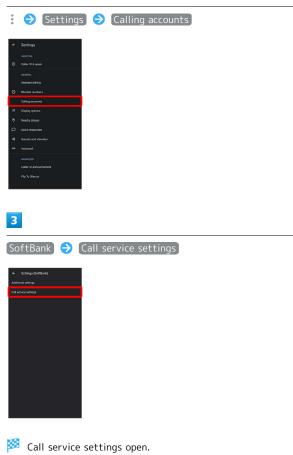

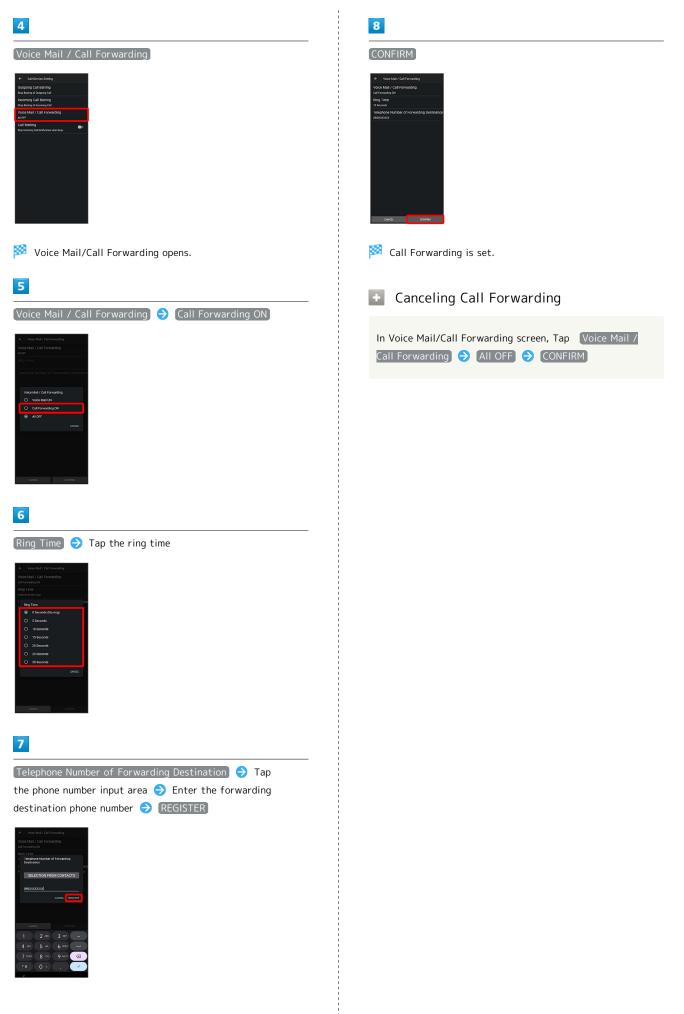

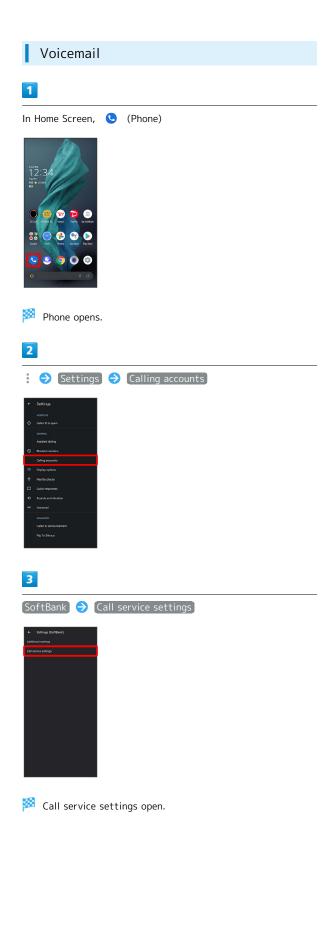

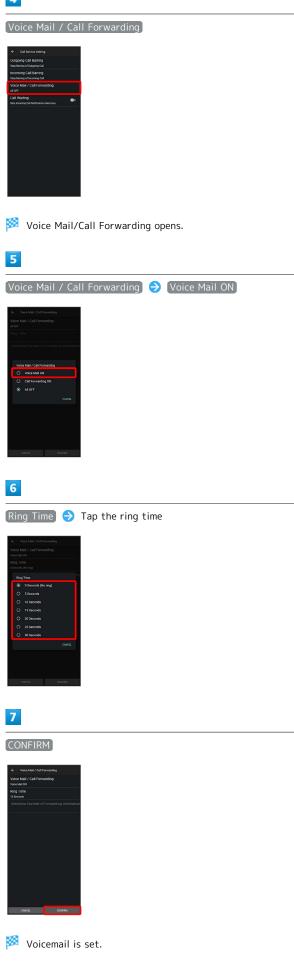

🖉 Voicemail

Voicemail and Answer Phone

Voicemail and Answer Phone differ mainly in the following ways.

- Voicemail:Messages are held at the Voicemail Center. Messages are held even when handset is not turned on or outside a service area. Message playback is subject to your subscription call charges.
- Answer Phone:Messages are held on handset. Use Answer Phone only when handset is turned on or within a service area.

When New Message is Recorded

appears on Status Bar. To play message, Tap
 Voicemail in Notifications Window, then follow voice guidance.


Canceling Voicemail

In Voice Mail/Call Fo	orwarding scree	en, Tap	Voice Mail /
Call Forwarding) Ə	AII OFF 🔿	CONFIR	M

Call Waiting

Requires separate subscription.

1			
In Home Screen,	(Phone)		
🥦 Phone opens	5.		
2			
Settings astrom astr			
3 SoftBank →	Call service se	ttings	
Entropy (Criticise) Anthone a setup: Call service setup:			

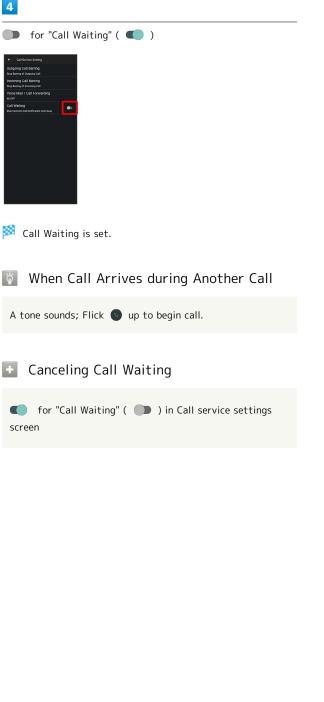



Group Calling

During a call, Add call

8

Requires separate subscription.

2

1

Enter number ଚ Call



🏁 Call is added.


- Alternatively, Flick top of dialpad window down ⋺ Contacts → Tap contact → Tap number of call to add to add call.
- Flick top of dialpad window down 🔿 Recents 🔿 Tap 📞 for Call History entry to add.

3

When call connects, Merge



🏁 Group Calling starts.

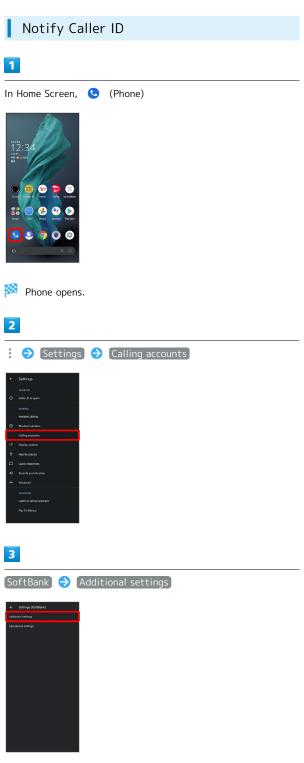

🏁 Additional settings appear.

4

Caller ID 🔿 number	Network default	/	(Hide number)	/	Show
Additional actings (SoftBank) Calar D Use default access i service to thister to narrier in					
outgoing carts					
Caller ID					
Network default Hide number					
O Show number					
OMOR					

🏁 Caller ID is set.

• Set to Network default to notify number.

Call Barring

L

Restrict calls and SMS to/from specific phone numbers.

- When attempting to place/send a call/SMS while outgoing calling is restricted, a message appears. This message may take time to appear in some areas.
- \cdot SMS may not be restricted in some areas.


Restriction	Description
	 Barring of All Outgoing Calls Restrict all outgoing calls. Barring of All Outgoing International Calls
	Restrict international calls; while outside
Outgoing Call	Japan, calls within current country are allowed.
Barring	- Barring of Outgoing International Calls except Japan
	Restrict international calls; while outside
	Japan, calls within current country and to Japan are allowed.
	- Stop Barring of Outgoing Call
	Cancel all outgoing call restrictions.
	- Barring of All Incoming Calls
	Restrict all incoming calls. - Barring of All Incoming International
Incoming Call Barring	Calls
barring	Reject calls while outside Japan.
	- Stop Barring of Incoming Call
	Cancel all incoming call restrictions.

1

In Home Screen, 🕓 (Phone)



Phone opens.

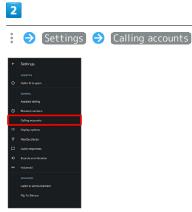

7	5
3	
SoftBank 🔿 Call service settings	
 ← Beniyag (collasiv) Zoldinuk umogo Coll anivo sentera 	
n i markanda	
Call service settings opens.	
4	
Outgoing Call Barring / Incoming Call Barring	
 ← Cal Bonus Generg Ousgang Call Berring Bit Berring of Suspect Call Homming Call Berring 	
Bis During of transport of a Voca Mar / Call Forwarding usor Call Marcha	
5	
Follow onscreen prompts	
Restriction is set.	
Call Barring Operations	
Setting Call Barring	
In Call service settings, Outgoing Call Barring / Incoming Call Barring 🔿 Tap barring method	
Canceling All Outgoing Call Restrictions	
In Call service settings, Outgoing Call Barring → Stop Barring of Outgoing Call	
Canceling All Incoming Call Restrictions	
In Call service settings, Incoming Call Barring 🔿 Stop Barring of Incoming Call	

Troubleshooting

- Q. Calling is not barred
- A. Are you using Call Forwarding or Voicemail? Calling may not be barred even if Barring of All Outgoing Calls and Barring of All Incoming Calls are set.

Handset Phone Number

Checking Your Phone Number I In Home Screen, (Settings)



Settings appear.

· Handset number is shown below "Phone number."

Making Phone Settings


Making Phone Settings

Check phone information and make settings. Settable items are the following.

Item	Description
Caller ID & spam	 See caller and spam ID Set whether to show name of caller unregistered in contacts. Filter spam calls Set whether to show information about incoming calls that are suspected to be spam. Verified Calls See the caller ID and reason for incoming calls from businesses.
Assisted dialing	 Assisted dialing Add country code candidates automatically when making calls overseas from Call History or Address Book. Default home country Set country codes to be added when using Dial Assist.
Blocked numbers	Set numbers to block calls from.
Calling accounts	 SoftBank Set caller ID and Call service settings. Make calls with Select phone number to be used for outgoing calls. Answer phone Set Answer phone. Prefix Save prefixes to add to numbers when dialing and set operation of prefixes. Sub address settings Make subaddress settings.
Display options	 Sort by Change the sort order of callers/callees in Call History. Name format Change how caller/callee names are displayed in Call History. Choose theme Set themes of () (Phone) and () (Contacts).

Nearby places	 Nearby places Set whether to show search results for nearby places. Personalized search results Set whether to show search results including search history when logging in to a Google account. Google Account Check or add a Google account when Personalized search results is enabled. Location permission is denied Tap to enable location information to search for nearby spots, and change to Location settings .
Quick	Edit an SMS message for when unable to
responses	answer a call.
Sounds and vibration	Set ringtone, notification sound, etc.
	See "Sound Settings" for details.
Voicemail	- Notifications Make notification settings. - Advanced Settings Check Voicemail settings.
Caller ID	Set text-to-speech for caller name and
announcement	phone number.
Flip To Silence	Set whether to silence an incoming call when handset is placed with its screen face down on a flat surface while ringtone is playing.

1

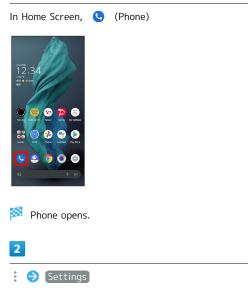



🏁 Phone settings open.

AQUOS R7

78
3
Set each item
Setting is complete.
Phone Setting Operations
Rejecting Calls from Unnotified Numbers
In Phone settings, Blocked numbers 🗲 Unknown • Tap Unknown to toggle on (())/off ()
Barring Calls from Specified Numbers
In Phone settings, Blocked numbers 🗲 Add a number Tap Number field 🗲 Enter the number 🗧 Block
Setting/Canceling Answer Phone
In Phone settings, Calling accounts → Answer phone → Settings → Answer phone → Mannermode / ON / OFF
Checking Storage Available and Recordable Number of Answer Phone Messages and Voice Memos
In Phone settings, Calling accounts → Answer phone → Settings → Current storage status
Checking Answering Message for Answer Phone
In Phone settings, Calling accounts → Answer phone → Settings → Answering message confirm → Touch & Hold "Answering message content" → Play
Setting Answering Time for Answer Phone
 In Phone settings, Calling accounts → Answer phone ◆ Settings → Answer time setting → Select time ◆ SET If arriving calls are disconnected before answer time that is set for Answer phone passes, disable Call Forwarding or Voicemail. See "Call Forwarding" and "Voicemail" for details on Call Forwarding or Voicemail.
Saving Prefixes to Add to Numbers when
Dialing
In Phone settings, Calling accounts → Prefix → Edit Prefix → Enter prefix number → OK

Setting Operation of Prefixes
In Phone settings, Calling accounts → Prefix → Prefix Preference → Always / Show Dialog every time / Never
Setting Whether "*" in Number Is Subaddress Delimiter
In Phone settings, Calling accounts 🔿 Sub address settings
• If confirmation appears, follow onscreen prompts.
Editing SMS Message to Send to Caller when Unable to Answer
In Phone settings, Quick responses → Tap message to edit → Enter message → OK

Address Book

Save phone numbers and mail addresses as well as birthdays, nicknames, etc.

Set ringtones for each contact as needed.

Address Book Caution

Contacts may be altered/lost if handset is left uncharged or due to accidents, malfunctions, repairs, handset upgrade/replacement, mishandling, etc. Back up important contacts and other data regularly. SoftBank Corp. is not liable for any damages resulting from loss/alteration of contacts.

Adding New Contacts

1





2

Contacts)



Contacts opens.





🥦 Window for saving new contact opens.

 \cdot If confirmation appears, follow onscreen prompts.



Set/enter each item \Rightarrow Save



Contact is saved.

Operations when Saving Contacts

Showing Other Savable Items

In window	for	creating	new	contact,	More fields

 \cdot Save residential address, websites, memos, etc.

Setting (Labels) Groups

In window for creating new contact, More fields → Label → Tap label (✓) → OK

Tap label to toggle selected (✓)/unselected (■).
To add a new label, in window for creating new contact,
More fields → Label → Create new... → Enter name of label → OK .

Saving Label for Phone Number, Etc.

In window for creating new contact, \checkmark \bigcirc Tap label to save

• For Custom , enter label name \Rightarrow OK .

Deleting Entered Phone Number, Etc.


In window for creating new contact, $\,\, imes\,$ for item



Syncing with Contacts on Server

Sync handset Address Book with Google contacts on server. Also sign in to a Google Account before syncing with a non-Google Account.

In Home Screen, 🔹 (Settings) ラ Passwords &
accounts \ominus Tap account to sync \ominus (Account sync) \ominus
Contacts (💽)

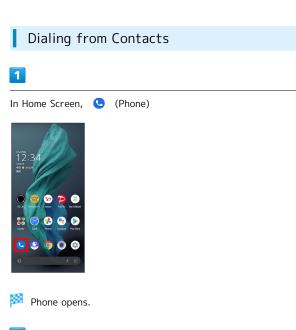



Contacts



🏁 Contacts appear.



Tap contact



🏁 Contact opens.

Phone

4

Tap number



Handset dials number. Call begins when other party answers.

• Alternatively, Tap **Call** to make a call.

AQUOS R7

Messaging

Sendir	ng Messages (+メッセージ (+Message))	84
Using	Gmail	85

Sending Messages (+メッセージ (+Message))

Sending New Messages

1





2





÷



4

New message



5 Tap recipient Daisske Harada Dalauke Horada 🏁 Message window opens. \cdot To send to a phone number/email address not saved in contacts, enter phone number/email address in Enter name and phone number field \bigcirc Tap [Add] and create message. 6 Tap message entry field ÷ 🍙 Do 7 Enter message ラ 📀 ÷ 🍘 Daisu 🏁 Message is sent.

Using Gmail

Use Gmail (Google's webmail service) as well as your work/ personal email.

Setting an Account

Set up a Google Account or an email account to use Gmail. When activating (Gmail) for the first time, account setup menu appears; complete setup.

- \cdot Account setup menu does not appear if you are already signed in to a Google Account.
- To use your existing account, information such as username (user ID), password, and server name is required.

1



2

M (Gmail)



Account setup menu opens.

 \cdot If confirmation appears, follow onscreen prompts.

3

Add an email address



4

Tap account type




5

Follow onscreen prompts

🏁 Account setup is complete.

Messaging

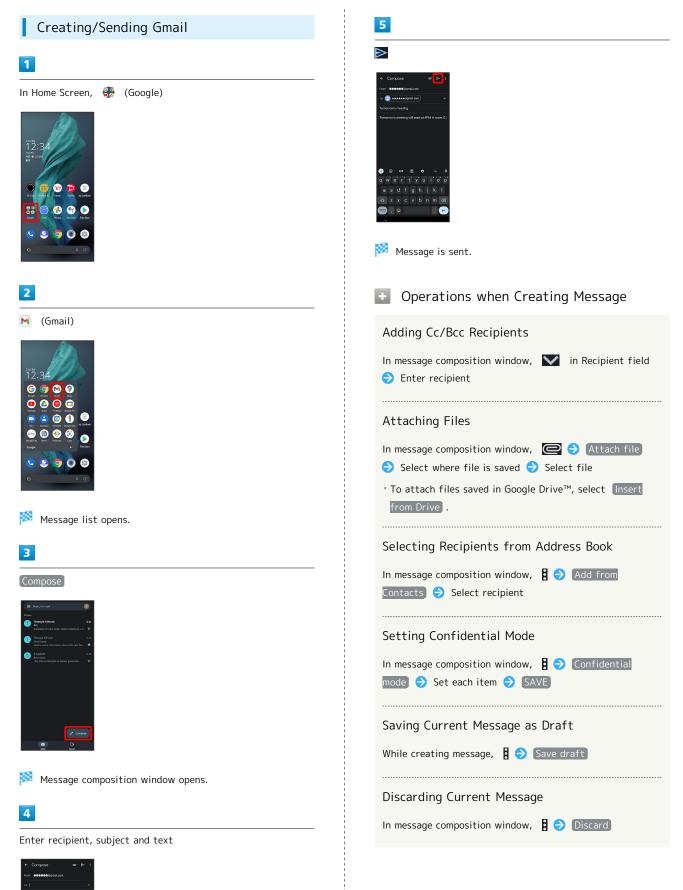

• a − ₹ ty'u't'o'p' ghjkl v bnm ©

Opening New Gmail

When message arrives, new message notification appears in lock screen.

For two or more new messages, message list opens; Tap one.
When screen is unlocked, M appears on Status Bar. Flick

1

In lock screen, Tap new message notification twice



🏁 Message window opens.

Status Bar down, then Tap notification.

- _____
- Messaging

2 ⋈ (Gmail)

1



🏁 Message list opens.

Opening Gmail

In Home Screen, 🛞 (Google)

3

Tap message



Message window opens.

Operations when Opening Messages

Replying to Messages

In message window, for message to reply to Create message
>
>

- To reply to all, in message window, **1** for message to reply to **?** Reply all .
- Alternatively, at bottom of message window, Tap Reply
 / Reply all .

AQUOS R7

Forwarding Messages

In message window,	•	for message to forward	€
Forward \ominus Create	e me	essage Ə ⊳	

• Alternatively, at bottom of message window, Tap Forward .

Resetting Messages as Unread

In message window, 🔛

 Alternatively, in message list, Tap icon for message to reset as unread (
) ⇒

Deleting Messages

In message window,

 Alternatively, in message list, Tap icon for message to delete (
 ✓)
 ✓ III.

Archiving Messages

In message window, 💽

· Alternatively, in message list, Tap icon for message to archive (\checkmark) \diamondsuit

Syncing Accounts Manually

In message list, Flick down

• Sync sent and received messages manually at any time regardless of the automatic sync settings.

Internet

Using the Internet (Chrome)......90

Using the Internet (Chrome)

Use Chrome simply by entering words to search for or URLs.

3


Enter search string or URL ⋺ 🕒

🏺 TLS

TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).

TLS Caution

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification Authorities Symantec Website Security G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

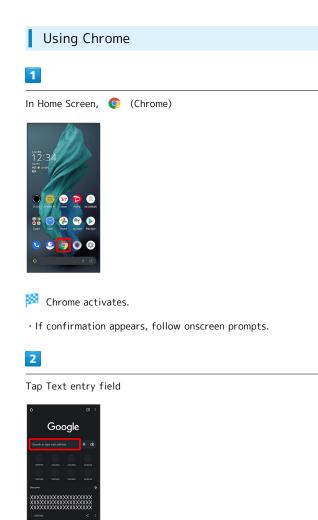

Search results appear or a Website opens. Chrome Operations **Opening New Tabs** Open multiple Websites in different tabs to switch between them easily. In Chrome, 🚦 🔿 New tab • To switch tabs, Tap 😰 and then target tab. • Number in 😰 changes with number of tabs. Viewing Websites without Leaving Browsing History, Cookies, Etc. In Chrome, 🚦 🔿 New incognito tab 🔿 Follow onscreen prompts **Opening Recent Tabs** In Chrome, 🚦 🔿 Recent tabs 🔿 Tap tab Closing Tabs In Chrome, 😰 ⋺ 🗙 for tab · Alternatively, Flick tab left/right to close. • Number in 😰 changes with number of tabs. Searching within Website In Chrome, 🚦 🔿 Find in page 🔿 Enter search text Search results are highlighted. Saving (Downloading) Images In Chrome, Touch & Hold image 🔿 Download image \cdot If confirmation appears, follow onscreen prompts. • 🗹 appears on Status Bar when image is saved (downloaded). To open the image, Tap download complete notification in Notifications Window. • Open saved (downloaded) image from 🔳 (Files), 🚷 (Photos), etc.

Opening Saved (Downloaded) Image, Etc.


In Home Screen, 🚷 (Google) ラ 📧 (Files) 🔿			
Browse ラ Downloads ラ Tap image, etc.			
· If confirmation appears, follow onscreen prompts.			

Adding Bookmarks

91

Internet

1

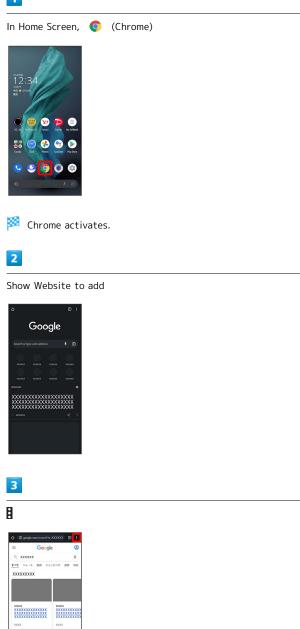

•••••••••


会 (★)

4

0 0 90

xxxxxxx

XXXXXX XXXXXX XXXXXX

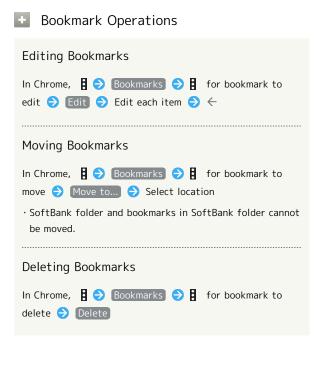

Checking Browsing History	
8	
In Home Screen, 💿 (Chrome)	
Controlled Screen, Controlled	
Chrome activates. 2	
😝 [History]	
Image: Section of the sec	
🏁 History window opens.	
3	
Tap record	
Hatory Q X Case transmit facture	






Setting Chrome

Make Chrome settings. Settable items are the following.

Item	Description		
Turn on sync	Sign in to your Google Account and make settings for bookmarks, history, etc. View account information.		
Google services	Set whether to use Google services.		
Search engine	Select a search engine.		
Passwords	Set whether to save user names and passwords by websites, confirm/delete websites that have saved passwords, etc.		
Payment methods	Set whether to automatically enter payment information in forms, and edit credit card information.		
Addresses and more	Set whether to automatically enter information such as residence addresses, phone numbers and mail addresses in forms, and edit residence addresses and other information.		
Privacy and security	Set whether to allow sites to access your payment methods, clear browsing history, etc.		
Safety check	Check whether handset is protected from unauthorized access to data and unsafe websites.		
Notifications	Make notification settings.		
Theme	Set a screen theme when using Chrome.		
Homepage	Set a homepage.		
Accessibility	Set text size, etc.		
Site settings	Set whether to allow cookies, enable JavaScript, etc.		
Languages	Make language settings.		
Lite mode	Set whether to use the Google server for faster page loading.		
Downloads	Set save destination, etc. for downloaded data.		
About Chrome	View version information, etc. about Chrome.		

2

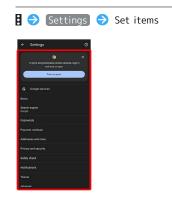

🧖 Settings are complete.

 \cdot For some items, additional settings may appear when Tapping the item.

In Home Screen, 📀 (Chrome)

Camera

Capturing Photos/Videos

Photos and videos taken with handset are saved to handset (internal storage).

To save them on SD Card, insert SD Card before using Camera, then change save location as follows.

Camera Cautions

General Use

Mind etiquette when using Camera.

Test Camera before shooting special moments. Do not use Camera in places where shooting is prohibited. Shot images may not be used/transferred without copyright holder (photographer) permission, except for personal use.

If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear images. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

Temperature of Handset During Shooting

Please note that the temperature of handset may increase due to processing when shooting for a long period of time.

🗕 Mobile Light Warning

Do not turn on Mobile Light close to eyes, look directly at Mobile Light when on, or shine Mobile Light in eyes; may affect eyesight or cause other problems.

Capturing Photos



1

· If confirmation appears, follow onscreen prompts.

(Camera)

2

Drag shooting mode at bottom to left/right and select Photo



🏁 Photo Viewfinder appears.

Drag shooting modes at bottom to left/right to select
 Portrait, M.Photo, Night, or High resolution
 from Others. See "写真撮影画面(マニュアル写真)の見
 かた(https://www.softbank.jp/mobile/support/manual/
 smartphone/aquos-r7/detail/61811/)" (Japanese) for
 manual photography, and "撮影モードを切り替える(https://
 www.softbank.jp/mobile/support/manual/smartphone/aquos-r7/detail/61810/)" (Japanese) for other shooting modes.

3

Aim Back Camera at subject



- Tap Display
 Drag brightness adjustment bar up/down to adjust brightness.
- Tap subject to focus at location Tapped. Touch & Hold subject for focus lock. To cancel, Tap area outside the focus mark.
- See "Photo Viewfinder (Back Camera/Front Camera) Layout" for details on operation in Photo Viewfinder.

O / Volume Up/Down Key




Shutter clicks and photo is saved.

 To capture continuously, Touch & Hold
 or Press Volume Up/Down Key for 1+ seconds. Continuously captured photos are saved to internal storage.

? Troubleshooting

- Q. Camera exits suddenly
- A. Continuing to use Camera while handset is warm causes warning to appear, and Camera exits.
- A. Camera exits automatically after a period of inactivity.
- Q. Images are dark/grainy
- A. Is there a strong light near the subject, or a strong light source in the screen? Avoid letting a strong light source (the sun, light, etc.) in the screen. Leaving handset in a warm place for a long time or where Camera is in direct sunlight for a long time may affect image quality.
- Q. Images captured with Mobile Light appear whitish
- A. A finger or cover near the lens can reflect light from Mobile Light and cause captured images to appear whitish.

Photo Viewfinder (Back Camera/Front Camera) Layout

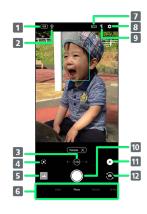

1 HDR indicator¹

- Appears when HDR function activates for capture.
- 2 Handset stable indicator² Appears when handset is stabilized.
- Zoom magnification³

Tap for zoom magnification adjustment bar. Drag left/ right to adjust $\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!$ zoom magnification.

Angle of view changes automatically according to zoom magnification.

4 Google Lens^{™2} Use Google Lens to copy text captured with Camera and

to search for products.

- 6 Shooting mode

Drag left/right to change shooting modes (Video / Photo / Portrait / M.Photo / Night ⁵ / Others).

- 7 Screen sizeChange screen size.
- 8 Settings Access various Camera settings.
- 9 Mobile Light⁶ Change Mobile Light setting.
- 10 Capture photo
- **11** Recognition icon^{2, 7}

Tap to toggle AI recognition on ()/off (). When AI recognition is enabled, scene and subject type (Person , Animals , Food , Whiteboard , Night Views (night mode)⁵) recognized by AI will be displayed.

- Front/Back Camera switchSwitch between Front Camera and Back Camera.
- 1 Displayed when Auto HDR is enabled.
- 2 Not displayed for Front Camera.
- 3 Zoom magnification is not available in some shooting modes.
- 4 Alternatively, in Photo Viewfinder, Pinch/Spread.

- 5 Capture pleasing night scenes. Avoid moving handset while capturing scene. Stabilizing handset () also allows a more pleasing scene to be captured.
- 6 For Front Camera, the entire screen lights up as a flash when enabled, allowing for bright pictures of people even when taking selfies at night (selfie flash).
- 7 Shot is captured with recognized scene or optimal quality or shutter speed for subject. After capturing subject recognized as a whiteboard/blackboard, confirmation appears. Tap Yes to correct shot to appear viewed from in front.
- Indicators shown in Viewfinder and available zoom magnification/functions/settings vary depending on Camera type and shooting mode.

Recording Videos

1

In Home Screen, 💿 (Camera)



· If confirmation appears, follow onscreen prompts.



Drag shooting mode at bottom to left/right and select Video



🏁 Video Viewfinder appears.

 Drag shooting modes at bottom to left/right to Others to select from 8K Video, Time Lapse, Slow Video,
 M.Video, or VHDR video. See "スロービデオモードで 撮る (https://www.softbank.jp/mobile/support/manual/ smartphone/aquos-r7/detail/61817/)" (Japanese) for slow video, "動画撮影画面 (マニュアルビデオ)の見かた (https:// www.softbank.jp/mobile/support/manual/smartphone/aquosr7/detail/61812/)" (Japanese) for manual video, and "撮 影モードを切り替える (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/detail/61810/)" (Japanese) for other shooting modes.

Aim Back Camera at subject



- Tap Display
 Drag brightness adjustment bar up/down to adjust brightness.
- \cdot Tap subject to focus at location Tapped. Touch & Hold subject for focus lock. To cancel, Tap area outside the focus mark.
- See "Video Viewfinder Layout" for details on operation in Video Viewfinder.

4





Video recording starts (window while capturing).

- During video capture, Tap O or Press Volume Up/Down Key to capture a photo. If <u>AI Live Shutter</u> is enabled during video shooting, the AI identifies smiling faces or the faces of dogs/cats, decides on the best image composition and automatically takes the shot.
- Enable AI Live Story, and AI may create a short movie separately from the captured video. See "AIライブス トーリーが作成したショートムービーを再生する (https:// www.softbank.jp/mobile/support/manual/smartphone/aquosr7/menu/21783/)" (Japanese) for details.

5





🏁 Tone sounds and video is saved.

? Troubleshooting

- Q. Camera exits suddenly
- A. Continuing to use Camera while handset is warm causes warning to appear, and Camera exits.
- A. Camera exits automatically after a period of inactivity.
- A. Stop recording when battery level is low. Charge handset adequately before using Camera.


Q. Images are dark/grainy


- A. Is there a strong light near the subject, or a strong light source in the screen? Avoid letting a strong light source (the sun, light, etc.) in the screen. Leaving handset in a warm place for a long time or where Camera is in direct sunlight for a long time may affect image quality.
- Q. Images captured with Mobile Light appear whitish
- A. A finger or cover near the lens can reflect light from Mobile Light and cause captured images to appear whitish.

Caution for Temperature of Handset When Shooting

Please note that the temperature of handset may increase due to processing when shooting for a long period of time.


Video Viewfinder Layout

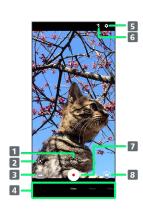

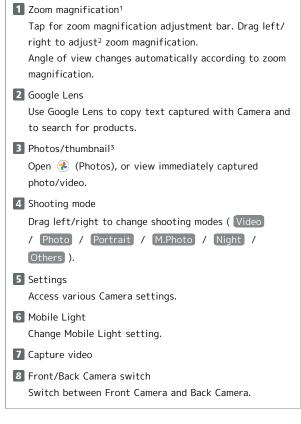

- 1 Zoom magnification is not available in some shooting modes.
- 2 Alternatively, in Video Viewfinder, Pinch/Spread.
- 3 If Al creates a short movie with <u>Al Live Story</u> enabled appears on thumbnail. Tap icon to open Short Movie Playback screen.
- Indicators shown in Viewfinder and available zoom magnification/functions/settings vary depending on Camera type and shooting mode.

Video Viewfinder Layout While Capturing

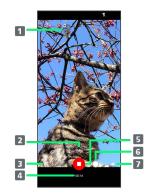

Captured photo

Displayed when a still image is captured during video shooting. When AI Live Shutter automatically shoots a photo¹, AI appears at the top of the thumbnail.

- 2 Zoom magnification Tap for adjustment bar. Drag left/right to adjust² zoom magnification.
- Confirm short movie creation³ Flashes when a short movie is finalized.
- 4 Shooting time
- 5 Stop capturing
- 6 Photo capture
- 7 Battery level
- 1 Operates when AI Live Shutter is enabled.
- 2 Alternatively, in window while capturing, Pinch/Spread.
- 3 Operates when AI Live Story is enabled.
- Indicators shown in Viewfinder and available zoom magnification/functions/settings vary depending on Camera type and shooting mode.

Music & Images

Listening to Music (YT Music)	
Viewing & Managing	Photos/Videos	(Photos) 104

Listening to Music (YT Music)

Enjoy a broad range of music contents including official albums and music videos. Playing back music saved to internal storage/SD Card is described as an example.

Sign in to a Google Account first, and in YT Music, 🔇 🔿 Settings ラ Library & downloads 🛛 and enable Show device files].

Ŵ Play Music

Playing High-Resolution Audio

Handset supports high-resolution audio playback. To play high-resolution audio, a headset or speaker (commercially available) compatible to high-resolution is required. Handset also supports Qualcomm[®] aptX[™] HD audio, Qualcomm aptX Adaptive Audio and LDAC™.

File Formats

Supported file formats:

· 3GPP, MPEG-4, ADTS raw AAC, MPEG-TS, FLAC, GSM, MIDI, RTTTL/RTX, iMelody, MP3, MKV, WAVE, OGG

Playing Music



In Home Screen, 🚼 (Google) ラ 🧿 (YT Music) 12:34 阏 🧕



 \cdot If confirmation appears, follow onscreen prompts.



Library







Albums / Songs / Artists 4 DEVICE FILES










• For Songs (in 3), Tap song directly.


Opening Music Playback Screen

While playing song, Tap playback bar at Display bottom

Music Playback Screen Layout

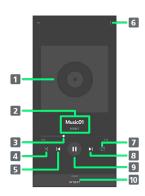


- 1 Song image.
- 2 Song title/artist.
- **3** Drag slider to adjust playback position.
- 4 Toggle shuffle playback on/off.
- **5** Play previous song/play current song from beginning.
- 6 Add to playlist, add to queue, etc.
- **7** Toggle repeat all songs, repeat current song, normal playback.
- 8 Play next song.
- 9 Pause/play.
- 10 Show list of songs.

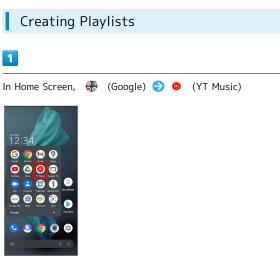

- Music opens.
- \cdot If confirmation appears, follow onscreen prompts.

2

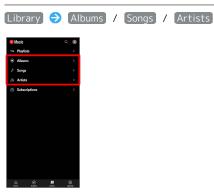


• If selecting Albums / Artists , Tap album name/artist name.

3

🖇 ଚ (Add to playlist)



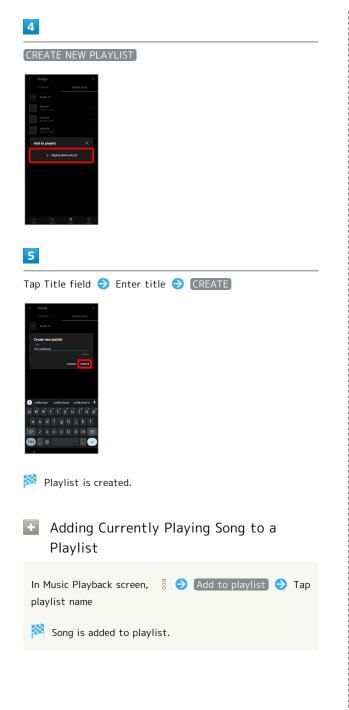

Viewing & Managing Photos/ Videos (Photos)

View photos/videos saved in internal storage, on SD Card and in Google online storage. Viewing after logging in to a Google account is described.



If no photos or videos are saved on handset or SD Card, operations such as Focus playback in file view window may be unavailable. In file view window, Tap § ⋺ Download to save files to handset.

Viewing Photos/Videos

View captured/downloaded photos and videos.

Image	File format		
Photo	JPEG, PNG, GIF, BMP, WebP, HEIF		
Video	3GPP, MPEG-4, MPEG-TS, WebM, Matroska		

1

In Home Screen, 🚷 (Photos)



🏁 Photos opens.

· If confirmation appears, follow onscreen prompts.




Tap photo/video


۲	Google	Photos	
Today			
	1		
Photos		ය. Sharing	<u>#h</u> Ubrary



🚺 Icons in Photos

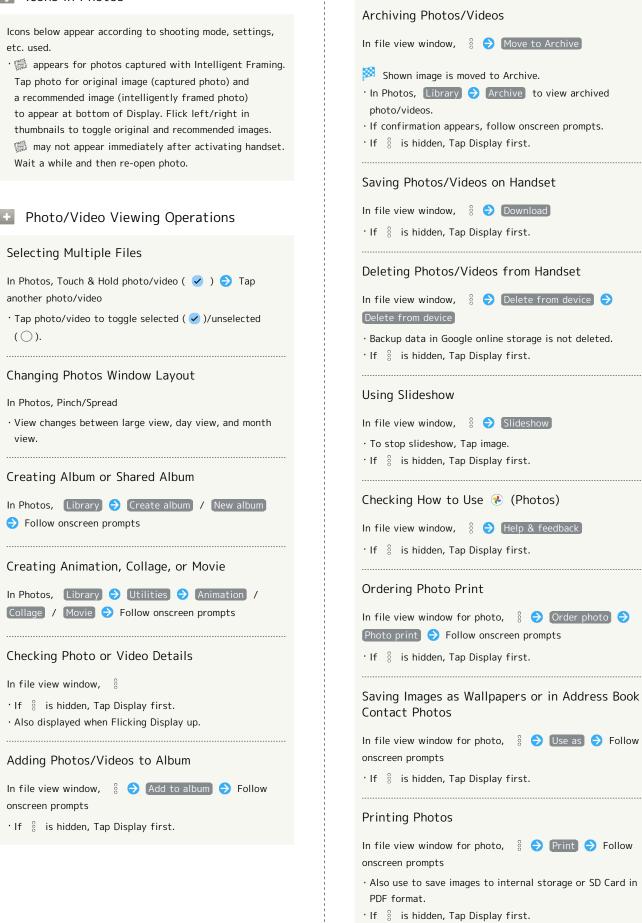

QUOS R7

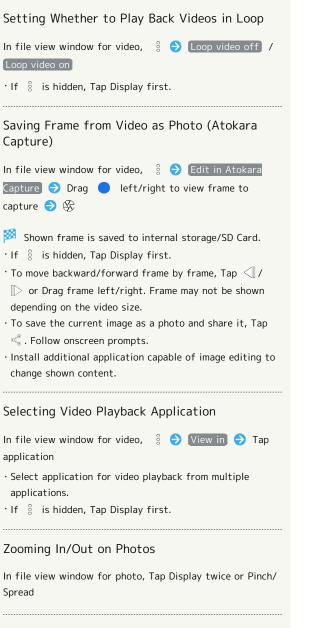

Playing Back Video Focused In

Al recognizes people and pets and zooms in automatically during playback (enlarged view).

In file view window for video, Focus playback

Video plays with main window and subwindow.

- · Tap subwindow to toggle full view/enlarged view.
- Automatically zoomed subject and zoom magnification depend on playback timing.
- To change the zoomed subject, Tap the subject to zoom in on in full view twice. AI may be unable to detect the subject (subject size, distance, speed, etc.); in this instance, subject remains the same.
- · Playback may zoom even when a subject is not present.
- The optimal zoom magnification is set according to capture size, distance to subject, etc. Zooming and zoom magnification are completely automatic.
- Unavailable with videos captured with Front Camera.

Application Basics

Confirmation when First Activating Applications	08
Applications	11
Adding/Deleting Applications	13

Confirmation when First Activating Applications

Set the operation of applications when activating for the first time.

The type and content of a confirmation differ with the application. The following explains confirmation: First things first.

Setting Required Permissions for Applications

Permit applications to use data on handset, Camera, etc. Initial setting of $\pm \pm 1^{\circ}$ is described as an example.

- Permission may also be required for applications running in the background.
- \cdot An application may not function correctly if permission to use it is not set.
- \cdot If the permission is not set twice in a row for the same privilege, confirmation will not appear.

1

In Home Screen, (エモパー)



🏁 An initial setting screen appears.

 \cdot Continue by following onscreen prompts.

2

When access permission screen for location information appears, 分かりました



3

WHILE USING THE APP



• Select **Precise** to allow the use of precise location information or **Approximate** to allow the use of approximate location information.



Set home and 次へ











完了



· Continue by following onscreen prompts.

When permission setting screen for $I \in \mathcal{N}$ appears, NEXT



8

WHILE USING THE APP / ONLY THIS TIME



• Tap ONLY THIS TIME to temporarily permit usage of application.

9

(ALLOW)



 $^{\cdot}$ Normally, select \fbox{ALLOW} to permit usage of the function.

10

ALLOW



11

(ALLOW)



12

(ALLOW)



13

設定する




14

(エモパー)



15

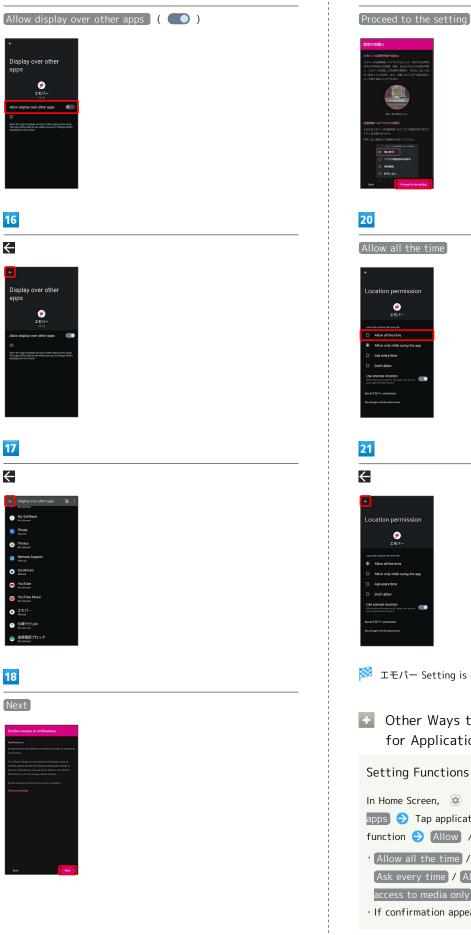

19

🏁 エモパー Setting is complete.

• Other Ways to Set Required Permissions for Applications

Setting Functions to Use by Application

In Home Screen, 😟 (Settings) ラ Apps ラ See all XX
apps ラ Tap application name ラ Permissions ラ Tap
function 🔿 Allow / Don't allow
• Allow all the time / Allow only while using the app /
Ask every time / Allow management of all files / Allow
access to media only appear for some functions.

 \cdot If confirmation appears, follow onscreen prompts.

Setting Whether to Prevent System from Resetting Application Permission

In Home Screen, 💿 (Settings) 🔿 Apps ଚ See all
XX apps ラ Tap application name ラ Permissions ラ
Remove permissions and free up space
• Tap Remove permissions and free up space to toggle
on (🚺)/off (🚺).
\cdot May not be usable with some applications.

Setting Applications with Permitted Usage by Function

In Home Screen, 😟 (Settings) ラ Privacy ラ
Permission manager 🔿 Tap function ラ Tap application
name 🔿 Allow / Don't allow
·[Allow all the time] / [Allow only while using the app] /
Ask every time / Allow management of all files / Allow
access to media only appear for some functions.
· If confirmation appears, follow onscreen prompts.

Applications

Activating Applications

1

Flick Home Screen up



2

Tap application



🏁 Application activates.

- · If confirmation appears, follow onscreen prompts.
- \cdot Some applications can be activated from Home Screen.

🖉 Using Applications

Setting Required Privileges for Using Applications

Some applications first require permission to access handset data or privileges to access important functions such as photographing.

Confirmation appears for applications requiring permission when first activated. Follow onscreen prompts.

 \cdot See "Confirmation when First Activating Applications" for details.

AQUOS R7

Function Shortcuts

With some applications, Touch & Hold for shortcuts to functions. Tap function shortcut to launch function directly.



Exiting Applications

1

Flick the edge of screen to the left or right again and again while applications are running



🏁 Home Screen returns and application exits.

• Home Screen also returns when Flicking bottom of Display up, but application does not exit. Exit it from recent apps window. See "Opening Recent Apps Window" for details.

Where to Obtain Applications & Updates

Use Google Play[™] to obtain new applications or update installed ones. See "Adding/Deleting Applications" for details.

Opening Recent Apps Window

1

Drag bottom of Display up



🏁 Recent apps window opens.

- In app list, recent apps window does not open by Dragging bottom of Display up.
- When <u>3-button navigation</u> is enabled, Tap <u>on</u> on Navigation Bar for recent apps window. See "Quick Operation Settings" and "System Settings" for details.

Opening Most Recently Activated Application

Flick bottom of Display to the right

• When 3-button navigation is enabled, Tap in recent apps window.

Recent Apps Window Layout Activate recently used applications.¹ 2 Capture Screenshots. **3** Show application menu. 4 Remove all applications from the list.² 5 Split screen (Multi-Window). 1 Flick up to remove from the application list. 2 Appears when Flicking application list to the right. **Application Menu Operations** + Checking Application Information In recent apps window, Tap icon of application in list 🔿 App info \cdot May not be usable with some applications. Capturing Screenshot of Application in Recent Apps Window In recent apps window, Screenshot \cdot May not be usable with some applications. Splitting Screen (Multi-Window) In recent apps window, Split screen 🗦 Follow onscreen prompts • In recent apps window, Tap icon of application in list 🔿 Split screen to split window. · See "Multi-Window" for details. · May not be usable with some applications. **Pinning Screen** In recent apps window, Tap icon of application in list 🔿

1

Pin 🔿 GOT IT

· Appears when "App pinning" is enabled. See "Security Settings" for details.

Adding/Deleting Applications

Download a variety of applications (free/paid) from Google Play. Change the setting of downloaded applications to enable manual or automatic updates. Sign in to a Google Account beforehand.

Getting Help with Google Play

	-	_			
In Google Play,	X	Θ	Help	&	feedback

🏁 Google Play Help window opens.

Google Play Cautions

Application Installation Disclaimer

Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC). SoftBank Corp. is not responsible in any way for userinstalled applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Google Play Operations & User Interface

Operations and user interface are subject to change due to automatic application updates or other reasons.

Installing Free Applications

1

In Home Screen, 🜔 (Play Store)



Google Play opens.

· If confirmation appears, follow onscreen prompts.

Tap free application



3

Install



Application downloads and installs.

 \cdot If confirmation appears, follow onscreen prompts.

Purchasing Applications

1

In Home Screen, 🜔 (Play Store)



🧖 Google Play opens.

 \cdot If confirmation appears, follow onscreen prompts.

2

Tap paid application





Tap price



 \cdot If payment confirmation appears, follow onscreen prompts.



[Buy]



Enter password for Google account \ominus Verify



· If confirmation appears, follow onscreen prompts.

6

OK



Application downloads and installs.

 \cdot If confirmation appears, follow onscreen prompts.

Purchased Applications

Payment

Pay once. Re-downloads of uninstalled applications are free of charge.

Use on Other Android[™] Devices

Install same application on other Android devices under same Google Account at no added cost.

Refund Requests

Request refunds within designated period. Returned applications are deleted from handset; no payment is required. One refund request per application.


In Google Play, (🔿 My apps & games 🔿 Tap application \Rightarrow Refund \Rightarrow Request refund

Application Purchase Disclaimer

Purchase applications at your own risk. SoftBank Corp. is not responsible for any disadvantage resulting for user or third parties.

Updating Installed Applications

1

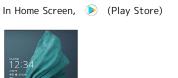



🧖 Google Play opens.

· If confirmation appears, follow onscreen prompts.

2

🔕 ⋺ [My apps & games]



3

Tap application ラ Update



🏁 Application Updates.

· If confirmation appears, follow onscreen prompts.

Making Application Update Settings

Setting Automatic Update Options

In Google Play, 🔇 🔿 Settings 🔿 Network preferences ଚ (Auto-update apps) ଚ Select update item ラ DONE

Setting Automatic Update by Application

- \cdot If confirmation appears, follow onscreen prompts.
- Tap Enable auto update to toggle on (✔)/off ().
- \cdot Automatic update is not available for some applications.

Uninstalling Applications

Applications installed via Google Play can be deleted (uninstalled).



In Home Screen, 🕟 (Play Store)



🯁 Google Play opens.

 \cdot If confirmation appears, follow onscreen prompts.





Tap application



5

Uninstall



6

Uninstall



🏁 Application is deleted.

i

Managing Data

File Stora	ge	120
Backup &	Restore	120
Importing	Data from Other Mobiles	121

File Storage

File Save Location

Save data to internal storage or SD Card. Default save location is internal storage; save location when creating data may be changed depending on application. Main file types and save locations are the following.

File Type	Description
Contacts, Bookmark, Calendar, Mail	Created files are saved to internal storage. Save locations cannot be changed.
Photos, videos	Created files are saved to internal storage.

• See "Internal Storage and SD Card" for more about SD Cards including insertion/removal procedure.

Backup & Restore

Backup/Restore Options

Backup and restore options are the following.

Option	Description
Corresponding applications	Depending on application, backup/restore settings can be changed.
Data transfer	Use Data Transfer to import data saved on SD Card with another device. See "Importing Contacts via Bluetooth® (Data Transfer)" and "Importing Data from SD Card (Data Transfer)" for details.
Transfer to other devices (e.g., PCs)	Connect handset to a PC or other device using a commercially available USB Type-C cable to exchange data.

Importing Data from Other Mobiles

Import data from other mobiles, etc. using $\mathsf{Bluetooth}^{\circledast}$ or SD Card.

Receiving Data via Bluetooth® (e.g., Address Book)

When data reception request arrives, notification appears in lock screen. To receive data: Enable Bluetooth® beforehand.

1

Tap Bluetooth[®] share notification twice



 In Home Screen, appears on Status Bar. Flick Status Bar down, then Tap Bluetooth[®] share notification.

2

ACCEPT



3

After data reception, Flick Status Bar down



Notifications Window opens.

4

Tap Bluetooth[®] share notification



5

Tap file



🏁 Data is saved.

 \cdot If confirmation appears, follow onscreen prompts.

 Opening Files Received by Bluetooth[®] Transfer



Importing Contacts via Bluetooth® (Data Transfer)

Import contacts from other mobiles using Bluetooth®.

• Enable Bluetooth® beforehand.

1

In Home Screen, 💿 (Settings)



2









[Data import] 🔿 [Smart phone]



4

Follow onscreen prompts



Mort of contacts is complete.


📒 Caution for Importing Data


Import is not available if there is only a little free space in internal storage. Process stops if Battery runs low. Operate with adequate battery charge whenever possible.

Importing Data from SD Card (Data Transfer)

Import data (Address Book, Schedule (Calendar), User dictionary, emopa) saved to SD Card on other mobiles to handset.

- \cdot Insert SD Card containing a backup file beforehand. See "Inserting SD Card" for details.
- \cdot Address Book data (contacts) may not be imported correctly depending on the device used for saving them.

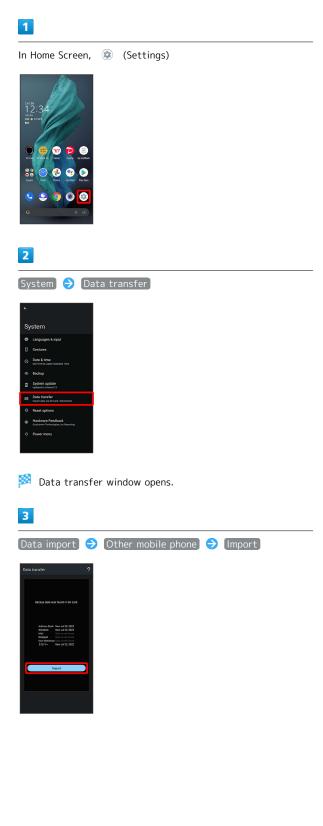

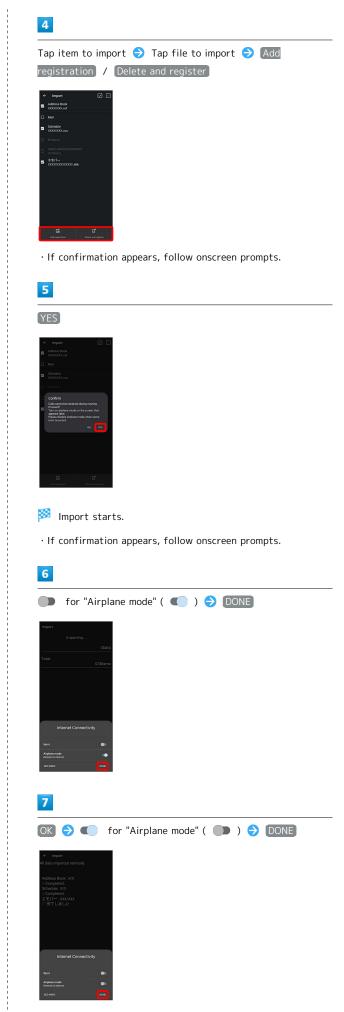

(Complete)

Minimizer Import is complete.

Cautions for Importing Data

Import is not available if there is only a little free space in internal storage. Process stops if Battery runs low. Operate with adequate battery charge whenever possible. When importing User dictionary, existing User dictionary data in internal storage is deleted.

Wi-Fi/Bluetooth®

Connecting by Wi-Fi	126
Using Bluetooth® Function	132
Using Tethering	137

Connecting by Wi-Fi

Handset supports Wi-Fi (wireless LAN). Access the Internet via household Wi-Fi networks.

Connecting Selected Access Points

In Home Screen, 💿 (Settings)





2

Network & internet




3

Wi-Fi



🏁 Wi-Fi menu opens.

4

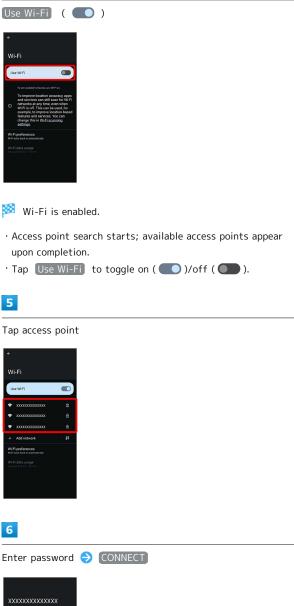



Handset connects to the access point.

- \cdot Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, check the password with your ISP.
- \cdot Depending on access point, password entry may not be required.

🚹 Wi-Fi Operations

Enabling/Disabling Automatic Use of Wi-Fi when High-Quality Network Is Saved (Home Network, Etc.)

In Wi-Fi menu,	Wi-Fi preferences	ラ [Turn on Wi-Fi	
automatically			
• Tap Turn on	Wi-Fi automatically)	to toggle on (🌑).	/
off (🔵).			

Enabling/Disabling Available Network Notifications

In Wi-Fi menu,	Wi-Fi preferences	→ Notify for public
networks		
• Tap Notify f	or public networks	to toggle on (() /

Installing Certificates

In Wi-Fi menu,	(Wi-Fi preferences) 🔶 [Install
certificates) 🔿	Follow onscreen prompts

Viewing Data Usage with Wi-Fi

In Wi-Fi menu, [Wi-Fi data usage]

Checking Access Point Activity while Connected

In Wi-Fi menu, Tap connected access point

 \cdot Connection activity, signal strength, frequency, security, etc. appear.

Share Wi-Fi Password with Other Device

Scan QR code on Display with other device to share.

In Wi-Fi menu, Tap connected access point 🔿 SHARE

🟁 QR code appears.

Disconnecting Connected Access Point

In Wi-Fi menu, Tap connected access point
DISCONNECT

• Tap CONNECT to connect to disconnected access point.


Disconnecting Saved Access Points


In Wi-Fi menu, Saved networks → Tap access point to disconnect → DISCONNECT

• Tap CONNECT to connect to disconnected access point.

Troubleshooting

- Q. Cannot detect access points
- A. There may be multiple access points using neighboring channels. In this instance, handset may not detect access points correctly.

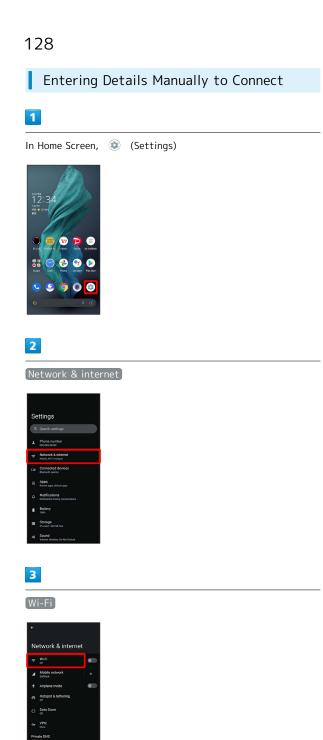

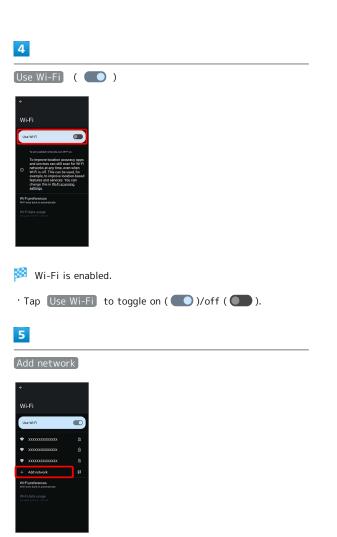

• Tap III for Add network to open QR code scan window. After scanning QR code, password is shared and Wi-Fi connection is possible.



Enter network name





Tap Security field



rettings

🏁 Wi-Fi menu opens.

Select security



9

Tap Password field



10

Enter password



11

SAVE



Handset is connected.

- \cdot Entering a password is not required if an access point is not security protected.
- \cdot If <code>SAVE</code> is hidden, tap \checkmark on the keyboard to display it.

Deleting Connected Access Points

1

In Home Screen, 🐵 (Settings)



2

Network & internet



3

Wi-Fi



🏁 Wi-Fi menu opens.

4

Tap connected access point







5

FORGET



Mandset disconnects from the access point.

 \cdot After disconnecting from an access point connection, the password may need to be entered again to reconnect.

Deleting Saved Access Points

1



2

Network & internet





[Wi-Fi]



🏁 Wi-Fi menu opens.



Saved networks



Tap access point



6

FORGET



🏁 The access point is deleted.

Using Wi-Fi Direct

Use Wi-Fi Direct to establish a Wi-Fi connection with other Wi-Fi Direct compatible devices with no need for an access point or Internet connection.

1
In Home Screen,
2
<image/>
 Wi-Fi is enabled. Tap Use Wi-Fi to toggle on ()/off ().
Wi-Fi preferences



Found Wi-Fi Direct compatible devices appear in Peer devices field.

 If target device does not appear, Tap § → Search for devices and search again.

5

Tap target device \bigcirc Follow onscreen prompts for authentication



🏁 Handset connects to the device.

- If connection is not accepted after a certain period, the connection request is canceled.
- \cdot To stop the connection, Tap the connected device \supseteq OK .


Using Bluetooth® Function

Connect handset to other Bluetooth® devices (e.g., headset) for handsfree conversations, or connect to other Bluetooth®capable mobile phones, etc. to exchange data.

Bluetooth[®] Connectivity

The Bluetooth® function is a technology that enables wireless connection with PCs, Bluetooth® devices with handsfree functionality, etc. such as the following.

Function	Description
Sound output	Listen to music, audio, etc. wirelessly.
Handsfree	Use Bluetooth [®] devices (e.g., headsets) for
conversation	handsfree conversations.
Data exchange	Exchange data with Bluetooth® devices.

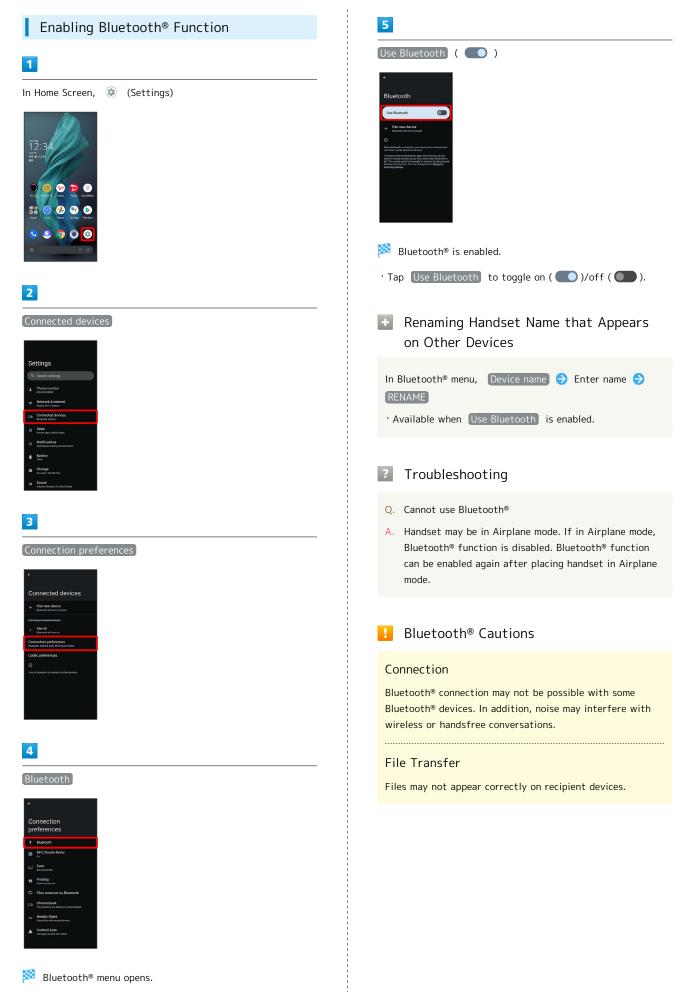

Pairing Bluetooth® Devices

Search for and pair nearby Bluetooth® devices. Paired Bluetooth® devices can be connected easily.

 \cdot Set Bluetooth® devices pair to be discoverable on handset first.

1

In Home Screen, 💿 (Settings)



2

Connected devices



3

Pair new device




Found Bluetooth[®] devices appear in Available devices field.

4

Tap target device





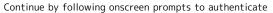



Pairing completes; handset connects to some devices (e.g., handsfree devices) automatically.

- Authentication procedure varies by device. Passkey entry may be required.
- Passkey is a 1 to 16-digit number or a set of characters/ symbols required for authentication between handset and other devices.

Connect handset and paired Bluetooth® device.

• Enable the Bluetooth[®] function on handset and the paired Bluetooth[®] device beforehand.

1

In Home Screen,	٢	(Settings)	€	Connected devices
Settings				
Q. Search settings				
Phone number ore source				
Network & internet Mobils, Wi FL barapet				
Em Connected devices Bistoch, pairing				
Hencer apps, default apps				
A Notifications Notification history, conversations				
Battery				
Storage				
Sound Yolume, vibratice, De Not Disturb				

🏁 Connected devices menu opens.



Tap target device



🏁 Handset connects to the device.

Connection by Accepting Connection Requests

Handset automatically accepts connection requests from paired devices. For unpaired devices, set handset to be discoverable, then perform pairing operation on other devices. When connection request arrives, follow onscreen prompts.

 \cdot If confirmation appears, follow onscreen prompts.



Renaming Paired Devices




Receiving Data via Bluetooth®

FORGET

FORGET DEVICE

See "Receiving Data via Bluetooth® (e.g., Address Book)" and "Importing Contacts via Bluetooth® (Data Transfer)" for details.

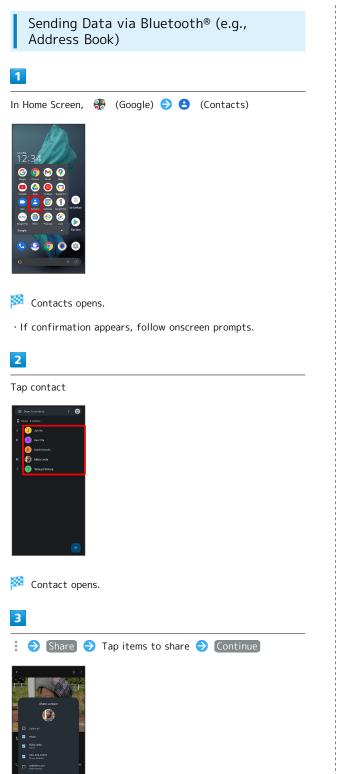

4

Bluetooth



- \cdot If confirmation appears, follow onscreen prompts.
- · If Bluetooth is hidden, Flick share menu up first.



Tap target device



🏁 Data is sent.

Sending to Several Contacts

In Contacts, Touch & Hold contact ᅌ Tap another
contact (<) 🔿 < 🔿 Bluetooth 🔿 Tap target
device

· If Bluetooth is hidden, Flick share menu up first.

Using Tethering

About Tethering

Tethering makes handset act as an external modem (like a Wi-Fi router).

Use tethering to connect a PC or game device to the Internet through handset.

- \cdot Requires separate subscription.
- \cdot Use after confirming that handset is updated to the latest system.

Setting Tethering


When using tethering, several methods are available for connecting handset with other devices.

Make settings according to connection method and status of target device beforehand.

Settable items are the following.

Item	Description
Wi-Fi hotspot	Set whether to enable tethering via Wi-Fi, and make Wi-Fi hotspot tethering settings for network name, security, password, AP frequency band, etc.
USB tethering	Set whether to enable tethering via a commercially available USB Type-C cable. Although data transfer is faster with USB 3.1, it may affect call and data transfer quality.
Bluetooth tethering	Set whether to enable tethering via Bluetooth®.
Ethernet tethering	Set whether to enable tethering with a connection using a commercially available USB wired LAN adapter and LAN cable.

1

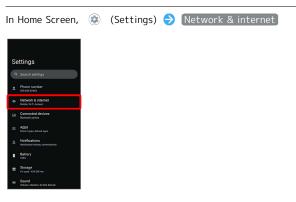

2

Hotspot & tethering



[🏁] Hotspot & tethering menu opens.

Set each item

Setting is complete.

 With Wi-Fi hotspot tethering, when 2.4 GHz + 5 GHz band is selected for the AP frequency band, handset will use
 2.4 GHz band while checking if 5 GHz band connection is available or upon detecting weather radars, etc.

Handset Settings

About Settings	140
Data Usage Settings	141
Battery Settings	146
Sound Settings	148
Display Settings	153
AQUOS Tricks Settings	159
Security Settings	
Privacy Settings	176
Location Settings	177
System Settings	178
Other Handset Settings	184

About Settings

The User Guide describes main setting options.

About Settings

Customize operation of handset functions. Tap search bar at top of Display to search for items in settings menu.

Item	Description
Phone number	Check own phone number.
Network & internet	Make network and Internet settings for Wi-Fi, mobile network, hotspot tethering, etc.
Connected devices	Make Bluetooth® and other device connection settings.
Apps	Make application settings.
Notifications	Make notification settings.
Battery	Check battery usage and save battery power by restricting some handset features.
Storage	Check memory space of internal storage, SD Card, and USB drive mount or unmount SD Card, erase data on SD Card, etc.
Sound	Set ringtone, notification sound, etc.
Display	Set Display brightness, font size, etc.
Wallpaper	Set Wallpaper.
AQUOS Tricks	Set useful functions such as ScrollAuto, Simple mode, and Clip Now.
Home applications	Change the home application.
Accessibility	Set captions, magnification gestures, and other useful accessibility functions.
Security	Make security settings including Screen lock and face authentication.
Privacy	Make settings for Google activity, application feature access history and permissions.
Location	Make settings for location information.
Safety & emergency	Make settings for emergency information and emergency calls.
Passwords & accounts	Make settings for password management and Google Autofill. Make settings to create/add accounts, sync accounts.
Digital Wellbeing & parental controls	Prevent excessive handset use by setting timers for each application or showing number of notifications received and frequency of screen unlocking, etc.
Google	Make settings for Google services.
System	Make settings for language, input, date and time, backup, reset, etc.
About phone	Check and make settings for handset information.
Troubleshooting	Check FAQ on Sharp Website and do a self-check.

1

In Home Screen, (Settings)

🏁 Settings appear.



Select item to set

Se	ttings
٩	Search settings
÷	Phone number 010-3338 statest
¢	Network & internet Mublik, Wir Ficharapot
60	Connected devices Buetooth, pairing
=	Apps Recert apps, default apps
۵	Notifications Notification history, conversations
٠	Battery 1005
-	Storage X% used -XXX 08 free
۰	Sound Volume, vibration, Do Not Disturb

🏁 Settings open.

Data Usage Settings

Check the amount of your mobile data usage (per month) and restrict usage.

Data usage is only as tracked by handset, and may differ from actual data usage statement.

Checking Application Data Usage

1

Mobile network




🏁 Mobile network window opens.

3

App data usage



Check application data usage in Mobile data usage window.

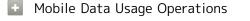

Setting Whether to Permit Restriction on Use of Data when Data Saver Set

In Mobile data usage window, Tap application name \bigcirc

Tap Unrestricted data usage to toggle on ()/off
).

· See "Network & Internet" for details on Data Saver.

Setting Whether to Alert User when Mobile Data Usage Reaches Alert Amount

In Mobile network window, Data warning & limit \supseteq


- Tap Set data warning to toggle on ()/off ().
- When data usage reaches the alert amount, M appears on Status Bar.

Setting Whether to Use Restriction on Use of Mobile Data

In Mobile network window, Data warning & limit Set data limit

- Tap Set data limit to toggle on ()/off ().
- \cdot If confirmation appears, follow onscreen prompts.
- When data usage reaches the upper limit, 💽 appears on Status Bar, and notification indicating that mobile data is disabled appears. Follow onscreen prompts.

AQUOS R7

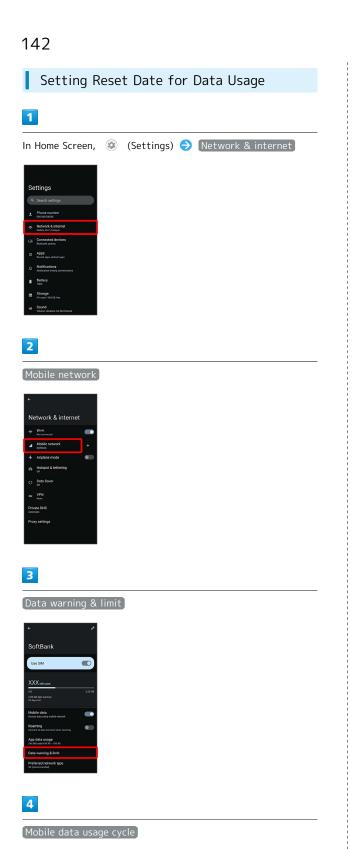



Flick date up/down to set reset date 😔 SET



🏁 Reset date is set.

Setting an Alert Amount for Increased Data Usage

1 In Home Screen, 💿 (Settings) ラ Network & internet Settings 2 Mobile network 3 Data warning & limit SoftBank Use SIM 4 Data warning

· Available when [Set data warning] is enabled.

5

Enter amount for alert ラ 🗵



🏁 Amount for data alert is set.


- Tap 🤍 to change the unit (MB or GB).
- Data usages are approximate, and may differ from the actual data usage.

Changing Automatic Data Communication & Sync Settings

Customize settings to automatically lower amount of data communication.

Change settings in the following ways.

Item	Description		
Location	Disable location information. See "Location Settings" for details.		
Automatic syncing	Disable automatic syncing of applications and data set in your account. See "Passwords & accounts" for details.		
Background data communication	Restrict background data. See "Restrict Background Mobile Data" for details.		
Communication while abroad	Set handset to not permit data while using handset abroad. See "Changing Roaming Setting" for details.		

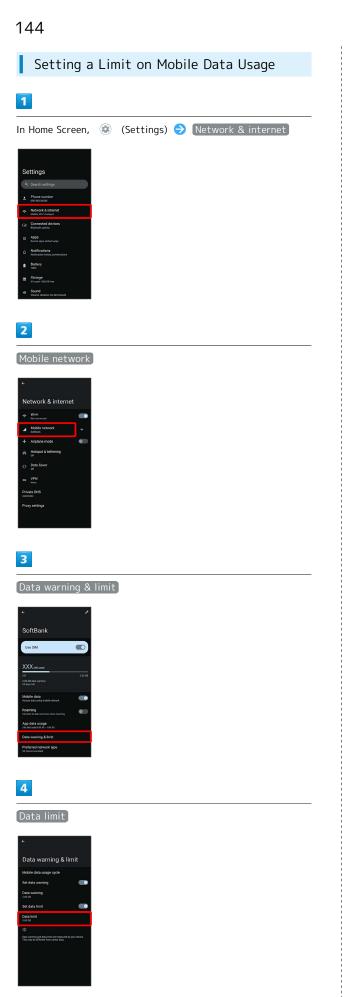

· Available when Set data limit is enabled.

5


Enter amount for limit \Rightarrow SET




🏁 Limit on data is set.

 \cdot Tap \frown to change the unit (MB or GB).

 \cdot Data usages are approximate, and may differ from the actual data usage.

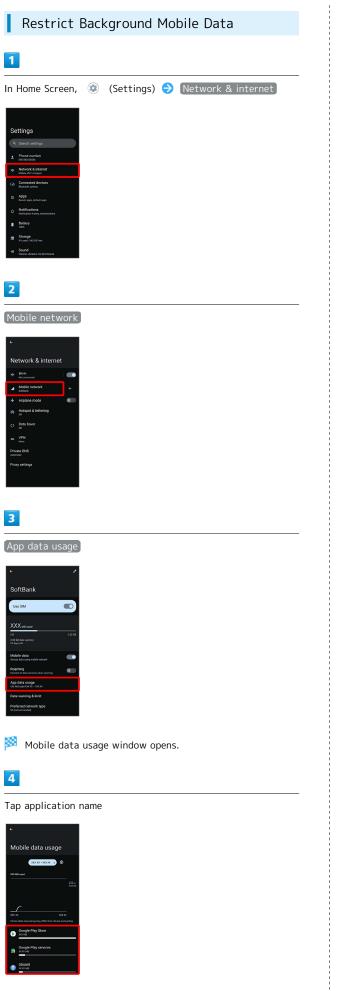

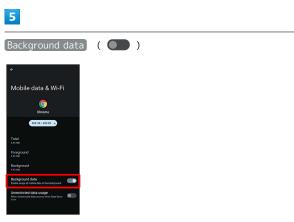

🏁 Restriction on background data is set.

• Tap Background data to toggle on ()/off ().



Battery Settings


Check battery usage, or save battery power by restricting some handset features.


Battery Settings


Settable items are the following.

Item	Description		
XX%	Check battery strength.		
健康度 (health level)	Check battery condition.		
Battery Usage	Check battery usage.		
Battery Saver	Save battery power by restricting some handset features.		
Adaptive	Set whether to limit battery usage of		
Battery	seldom-used applications.		
Intelligent Charge	Enable smart charging and charging adapts to handset and ambient temperature for smooth, long-life operation. Also set whether to stop charging when battery level reaches about 90% and change to direct charging, and whether to charge only when Display is off (screen lock) and change to direct charging when Display turns on.		
Battery percentage	Set whether to show battery strength in percent beside battery indicator on Status Bar.		

Battery Operations

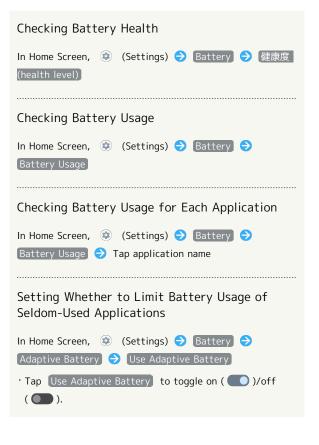

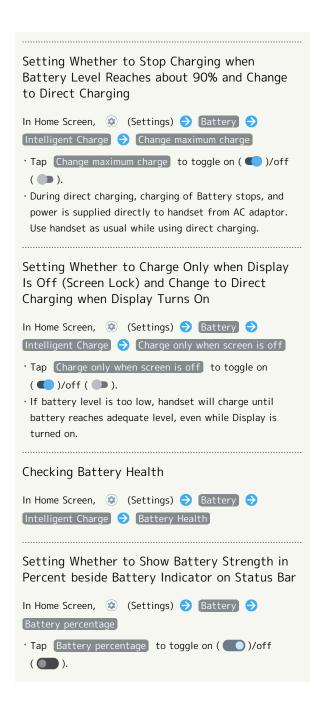

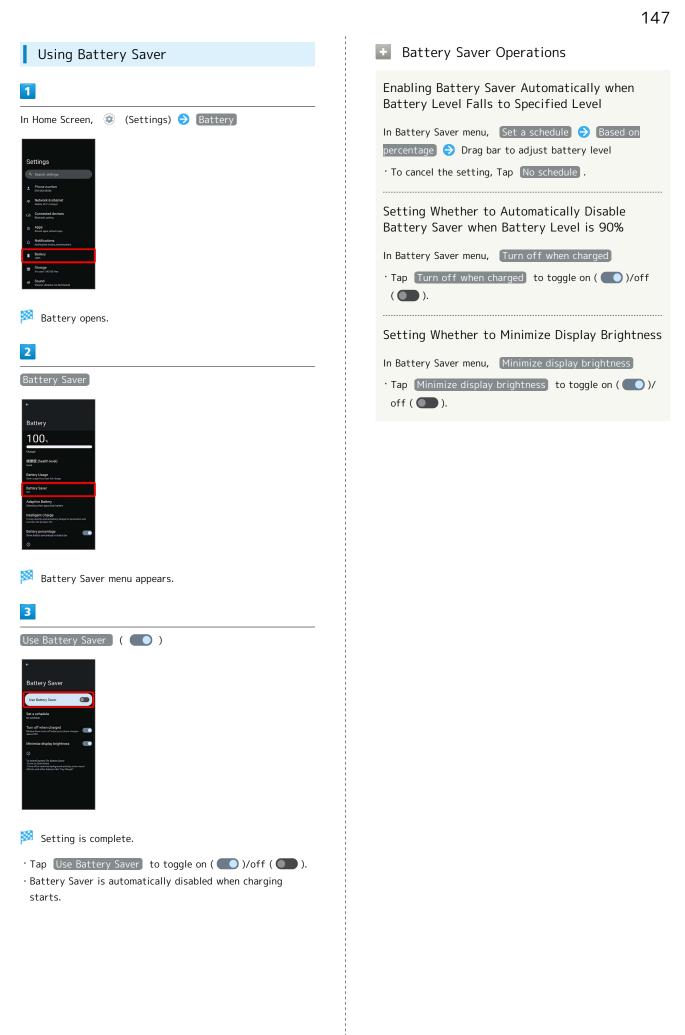

Sound Settings

Set ringtone, notification sound, etc.

Sound Settings

Settable items are the following.

Item	Description		
Media volume	Set volume for music, videos, etc.		
Call volume	Set volume for calls.		
Ring & notification volume	Set ringtones for incoming calls, etc. and volume for notifications.		
Alarm volume	Set volume for Alarm.		
Surround Plus	Set whether to enable the surround sound effect of music and video that can be heard from front, back, left, and right, when handset is held horizontally.		
Equalizer	Adjust quality of music and video.		
Do Not Disturb	Make detailed Manner mode settings.		
Phone ringtone	Set ringtone.		
Media ¹	Set whether to continue showing media player in Quick Settings after deleting controller in Notifications Window.		
Vibrate for calls	Make vibration settings for incoming calls.		
Shortcut to prevent ringing	Set whether Manner mode is activated by Pressing Power Key and Volume Up Key, etc.		
Default notification sound	Set default notification sound.		
Default alarm sound	Set default alarm sound.		
Dial pad tones	Enable/Disable dial pad tones when Tapping dialpad.		
Screen locking	Enable/Disable tone when Locking/		
sound	Unlocking Screen.		
Charging sounds and vibration	Set whether tone sounds and handset vibrates when starting charging.		
Touch sounds	Enable/Disable confirmation tones when tapping a Menu, etc		
Touch vibration	Enable/Disable vibration when tapping and pressing keys.		

1 Uses only for compatible applications.

Sound Operations

Setting Volume for Calls

 \cdot Sound plays at set volume when releasing finger from $\hfill \bigcirc$.

Setting Whether to Enable the Surround Sound Effect of Music and Video that Can be Heard from Front, Back, Left, and Right, When Handset is Held Horizontally

In Home Screen,	٢	(Settings)	€	Sound	€	Surround
Plus						

• Tap Surround Plus to toggle on ()/off ().

Adjusting Quality of Music and Video

(💽).

Activating/Canceling Do Not Disturb

In Home Screen, ② (Settings) ⋺ Sound ⊖ Do Not Disturb ⊖ TURN ON NOW / TURN OFF NOW

Setting Action for Conversations, Calls, and Messages When Do Not Disturb Is Set

 In Home Screen, ②
 (Settings)
 Sound
 Do Not

 Disturb
 ◆
 People
 ◆
 Set each item

Making Application Interruption Settings

 In Home Screen, ④ (Settings) → Sound → Do Not

 Disturb → Apps → Add apps → Follow onscreen


 prompts

Setting Whether to Allow Alarm/Media Sounds/ Touch Sounds/Reminders/Calendar events when Do Not Disturb is Set

In Home Screen, 🐵 (Settings) ラ Sound ラ Do Not
Disturb ラ (Alarms & other interruptions) ラ (Alarms)
/ Media sounds / Touch sounds / Reminders /
Calendar events
• Tap Alarms / Media sounds / Touch sounds /
Reminders / Calendar events to toggle on (🔵)/off
().



QUOS R7

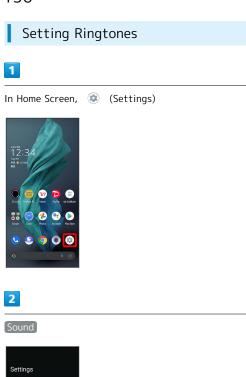

5

OK

🏁 Setting is complete.



🟁 Sound menu opens.

3

Phone ringtone



4

Tap ringtone





Setting Volume for Ringtones for Incoming Calls and Notifications

1





Sound



Sound menu opens.



Drag "Ring & notification volume" 📃 left/right



🏁 Ringtone plays to check volume.

• Drag oright to increase volume, and left to decrease volume.


Setting Volume of Music and Videos

1

In Home Screen, 🔹 (Settings)



2

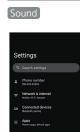


🏁 Sound menu opens.



Drag "Media volume" 🔵 left/right



🟁 Sample sound plays.

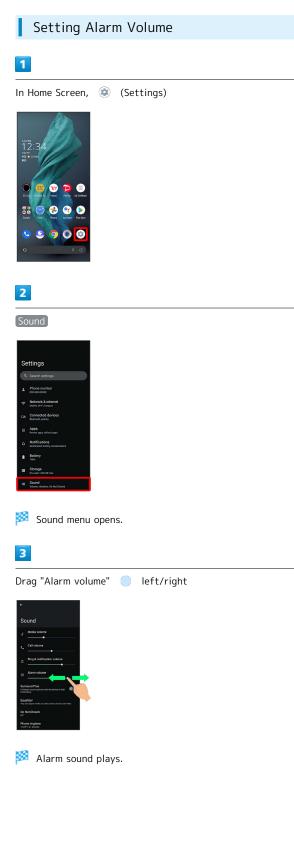

Setting Vibration for Incoming Calls L

Make vibration settings for incoming calls.



In Home Screen, 💿 (Settings) 246588 12:3 №2 98 • 27/276 0



Sound





Vibrate for calls





gradually

Never vibrate / Always vibrate / Vibrate first then ring





🏁 Setting is complete.

Display Settings

Set Display brightness, font size, etc.

Display Settings

Settable items are the following.

Item	Description		
Brightness level	Set Display brightness.		
Adaptive brightness	Set whether to automatically adjust of Display brightness for surroundings.		
Lock screen	Set notifications to show in lock screen.		
Screen timeout (Sleep)	Set a period of inactivity after which Display turns off automatically.		
Charging indicator when the screen is off	Set whether to display battery level when charging, etc. while screen is turned off (Screen Lock).		
Dark theme	Set whether to enable Dark theme and time for using Dark theme.		
Color settings to match the wallpaper	Set whether to change the color of icons and widgets to match Wallpaper.		
Font Settings	Set text size and font.		
Display size	Set the size of images, icons, etc.		
Content	Set whether to display applications,		
display settings	Wallpapers, etc. on the entire screen, using the area next to Front Camera.		
Basic settings	Set picture quality of display.		
HDR video	Set HDR video quality.		
Virtual HDR	Set whether to use HDR Video-like rendering for standard video.		
Relax View	Set whether to use RelaxView for eye- friendly image quality, and the time to use RelaxView.		
Outdoor view	Set whether screen is easier to see in bright sunlight.		
Screen color temperature	Set whether to make screen have natural tints (screen color temperature) under various lighting conditions.		
Hakkiri View	Set whether to enable Hakkiri View.		
High-speed display	Set whether to enable fast-moving videos and applications to appear smoothly. See "High-Speed Display Settings" for details.		
Auto-rotate screen	Set whether to rotate Display with handset orientation automatically.		
glove mode	Set whether to enable tap operation even with gloves on.		
Screen saver	Set screen saver images and timing for activating screen saver.		

Display Operations



153



Setting Whether to Show Content Beside Front Camera

In Home Screen, ③ (Settings) → Display → Content display settings

Tap Content display settings to toggle on ()/off
).


Off (Screen Lock)

(**()**)/off (**()**).

In Home Screen, 🤨 (Settings) 🔿 Display 🔿 Lock

• Tap Wake screen for notifications to toggle on

screen) 🔿 [Wake screen for notifications]

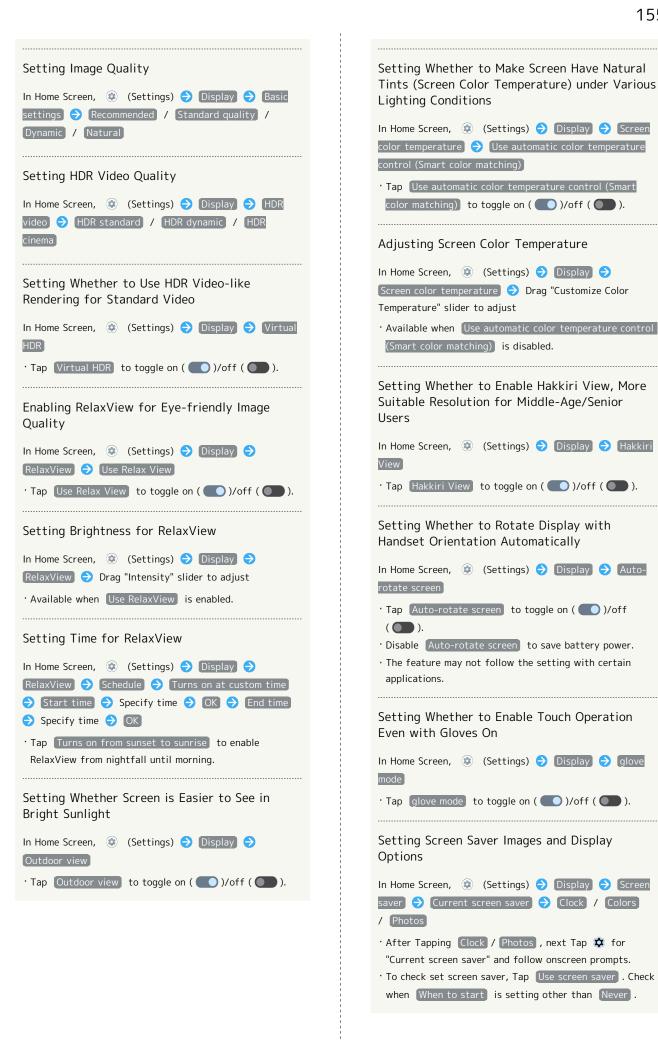



Glove Mode Cautions


Observe the following when using glove mode.

- Touch operation may not be possible depending on materials of your gloves.
- Disable glove mode () when not wearing gloves or when using handset in a bathroom.

Setting Display Timeout
1
In Home Screen, 💿 (Settings) ラ Display
Etglogy And Annu Markets Burgetons Monte Service Burgetons Monte Service Burgetons Monte Service Burgetons
AqUST Teld when instants makes and or its police Home applications Home applications
Y Accessibility, name O Security names tappen
Core Privacy Premander and an analysis and a state present data
Schafter Schafter and Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Schafter Sc
Construction & Accounts
Display menu opens.
Screen timeout (Sleep)
•
Display
Ciglatoras level
Look drophy Cook and and the second s
Charge and a factor with the Chargen of a set of the Angeler for an end of the set of the set of the Page of the set of the Angeler for the set of the
Appendent Disk them is an end of the second
3



- Set time until Display goes out.
- \cdot Set a shorter time to save battery power.

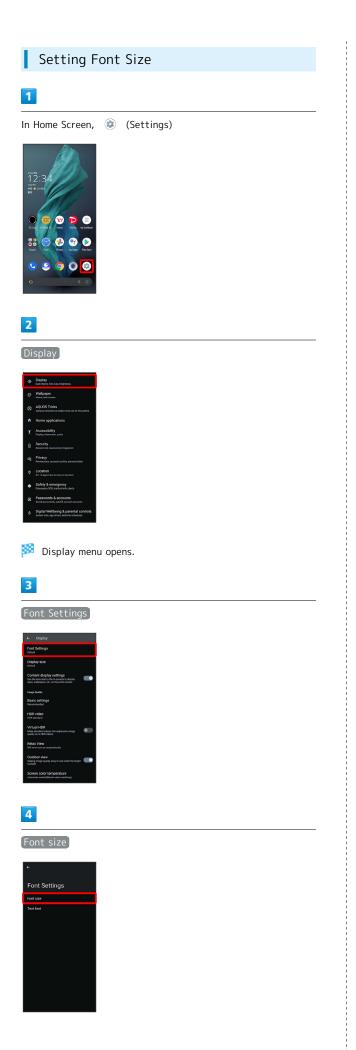


Drag	left/right
÷	



🏁 Font size is changed.

 \cdot Check the set font size in Preview.

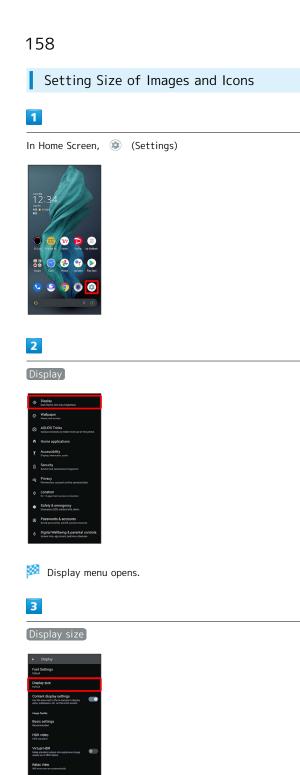





Mage and icon sizes are changed.

 \cdot The feature may not follow the setting with certain applications.

 \cdot Check the set display size in Preview.

AQUOS Tricks Settings

Set useful functions such as ScrollAuto, Simple mode, and Clip $\operatorname{\mathsf{Now.}}$

AQUOS Tricks Settings

Settable items are the following.

Item	Description		
Rich color technology Mobile	Set screen display and quality according to use. See "Display Settings" for details on each item.		
High-speed display	Set fast-moving videos and applications to appear smoothly.		
Lock Home Photo Shuffle	Change Wallpaper randomly each time lock screen/home screen appears. See "Changing Wallpaper" for details.		
Fingerprint sensor and Pay Trigger	Make settings for using Fingerprint Sensor and Pay Trigger.		
ScrollAuto	Set screen to scroll up or down automatically. See "Enabling ScrollAuto" for details.		
Clip Now	Make settings for using Clip Now. See "Capturing Screenshots (Clip Now)" for details.		
Gaming Menu	While playing a game, record game screen or search for walkthrough sites and make gaming screen and other settings. See "Using Gaming Menu" for details.		
Quick operation	Set what action occurs when pressing Power Key, and make Navigation Bar settings.		
AQUOS Home	Switch to and make settings for the AQUOS-brand home application.		
S-Shoin	Download to use the Sharp-brand keyboard "S-Shoin."		
Simple mode	Set a simple and intuitive Home Screen and easy-to-read text.		
Bright Keep	Set Display on or off by handling handset.		
Tethering Auto	Set Wi-Fi tethering to be enabled automatically when at home or in a specified location. See "テザリングオートを利用する (https:// www.softbank.jp/mobile/support/manual/ smartphone/aquos-r7/detail/61945/)" (Japanese) for details.		
Intelligent charging	Enable smart charging and charging adapts to handset and ambient temperature for smooth, long-life operation. See "Battery Settings" for details.		
ROBOQUL setting	When charging using ROBOQUL and handset is powered on, ROBOQUL swivels when Display lights up, at start of charging, for incoming calls, alarms, etc. See "Setting ROBOQUL" for details.		

High-Speed Display Settings

Set fast-moving videos and applications to appear smoothly.

1

In Home Screen,	٢	(Settings)
LC39		



2

AQUOS Tricks

	Display Dark theme, fort size, brightness
	Wallpaper Home, teck screen
۲	AQUOS Tricks various functions to make more use of this phone.
٨	Home applications
	Accessibility Display, interaction, audio
	Security Screen luck, faceconant, Engerprint
	Privacy Permissions, account activity, personal data
	Location On - X apps have access to location
*	Safety & emergency Emergency 505, medical infa, alerta
	Passwords & accounts Saved accounts, subsid, spreed accounts
	Digital Wellbeing & parental controls screen time, app times, testure schedules


AQUOS Tricks menu opens.

3

High-speed display



🏁 High-speed display window opens.

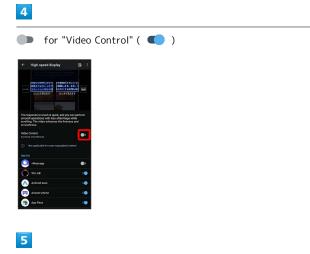

Tap application name



🧖 Setting is complete.

• Tap application name to toggle on (🌑)/off (💷).

```
    Setting Smoothness Type when
Smoothing Video
```

In Home Screen, ③ (Settings) ➔ AQUOS Tricks ➔ (High-speed display) ➔ (Video Control ➔ Increase smoothness) / Increase fineness

Cautions for Using High-Speed Display

Observe the following when using High-Speed Display. • May not be effective with some applications. In that case, disable setting. Effects may also depend on remaining battery level and temperature of handset.

- Videos above certain high quality and some copyright protected videos are not supported.
- Changing settings while the application is running may hinder effects. In that case, close the application.

Fingerprint Sensor and Pay Trigger Settings

Make settings for using Fingerprint Sensor and Pay Trigger. Settable items are the following.

Item	Description
Register	Make settings to save and authenticate fingerprints. See "Using Fingerprint Authentication Function" for details on each item.
Two-finger authentication	Set whether to allow fingerprint authentication by placing two fingers or the fingerprint sensor to unlock screen, purchase applications, etc., and log in.
Pay Trigger	Set whether to activate application by Touch & Hold of Fingerprint Sensor, and set application to activate by Touch & Hold of Fingerprint Sensor.
Tap to	
display the	
fingerprint	Set whether fingerprint sensor appears
sensor and	tapping screen while screen is turned of
clock when the screen is off	(Screen Lock).
You can unlock screen	
just by touching the	Set whether holding finger to Fingerprir
fingerprint	Sensor unlocks screen while screen is
sensor even when the	turned off (Screen Lock).
screen is	
turned off	

 Fingerprint Sensor and Pay Trigger Operations

Setting Whether to Allow Fingerprint Authentication by Placing Two Fingers on the Fingerprint Sensor to Unlock Screen, Purchase Applications, etc., and Log In

```
In Home Screen, ② (Settings) → AQUOS Tricks →
Fingerprint sensor and Pay Trigger → ● / ● for
"Two-finger authentication"
```

- \cdot Tap \bigcirc to toggle on (\bigcirc), \bigcirc to toggle off (\bigcirc).
- \cdot Set when two or more fingerprints are saved.
- · If confirmation appears, follow onscreen prompts.

Setting Whether to Use Two Fingers on All Authentication Prompts when using Two Fingers for Fingerprint Authentication

In Home Screen, 😟 (Settings) ラ [AQUOS Tricks]
⇒ Fingerprint sensor and Pay Trigger ⇒ Two-finger
authentication) 🔿 Use two-finger authentication on
all screens. / Use one-finger authentication for unlock
only.

Setting Whether to Activate Set Application when Touching & Holding Fingerprint Sensor (Activate Pay Trigger), after Unlocking Screen with Fingerprint

In Home Screen,	(Setting)	s) 🔿 🗛	QUOS Tri	icks	Ð
Fingerprint sens	or and Pay Tri	gger ラ	()		for
"Pay Trigger"					
• Tap 🌑 to to	ggle on (🗲)	, 🛑 to	toggle	off ().

Setting Applications to be Used with Pay Trigger

In Home Screen,	۲	(Settings)	€	AC	QUOS	Tricks	€
Fingerprint sense	or ar	nd Pay Trigg	jer	Ð	Pay	Trigger	
Launch app 🔶	Тар	name of ap	plica	atio	n		

Saving Applications in the List (Pay Trigger Folder) Shown after Activating Pay Trigger

In Home Screen, 🔹	(Settings) ⋺	AQUOS Tricks 🔿
Fingerprint sensor a	nd Pay Trigger	→ Pay Trigger →
Pay Trigger folder	Follow onsci	reen prompts

• Pay Trigger folder is displayed when multiple applications are saved.

Setting Whether to Open Pay Trigger Folder when Activating Pay Trigger

In Home Screen, ② (Settings) ⋺ AQUOS Tricks ⋺ Fingerprint sensor and Pay Trigger ⊖ Pay Trigger 今 Pay Trigger folder also opens at startup

 Tap Pay Trigger folder also opens at startup to toggle on ()/off ().

Setting Whether Fingerprint Sensor Appears by Tapping Screen while Screen is Turned Off (Screen Lock)

```
    In Home Screen, (a) (Settings) → AQUOS Tricks →
    Fingerprint sensor and Pay Trigger → Tap to display
    the fingerprint sensor and clock when the screen is off
    Tap to display the fingerprint sensor and clock when
    the screen is off to toggle on ( )/off ( ).
```

Setting Whether Holding Finger to Fingerprint Sensor Unlocks Screen while Screen Is Turned Off (Screen Lock)

In Home Screen, ③ (Settings) ➔ (AQUOS Tricks ➔ Fingerprint sensor and Pay Trigger) ➔ (You can unlock screen just by touching the fingerprint sensor even when the screen is turned off

 Tap You can unlock screen just by touching the fingerprint sensor even when the screen is turned off to toggle on ()/off ().

Quick Operation Settings

Set what action occurs when pressing Power Key, and make Navigation Bar settings. Settable items are the following.

Item	Description
Press and hold to activate app	Set whether long pressing Power Key starts application, and what application starts.
Press twice to activate camera	Set whether to activate Camera by pressing Power Key twice.
System navigation	Make Navigation Bar settings.

Operations with Quick Operation Settings

Setting Whether to Long Press Power Key to Start Application

In Home Screen, 🔹	(Settings) ラ 🗛 🖓 🔿
Quick operation Ə	\blacksquare / \blacksquare for "Press and hold to
activate app"	

• Tap 🕕 to toggle on (🌑), 🜑 to toggle off (💭).

Setting Application to Start by Long Pressing Power Key

 In Home Screen, ②
 (Settings)
 AQUOS Tricks

 Quick operation

 Press and hold to activate app

 Tap name of application

Setting Whether to Activate Camera by Pressing Power Key Twice

In Home Screen, ② (Settings) ⋺ AQUOS Tricks ⋺ Quick operation ⋺ Press twice to activate camera ⋺ Quickly open camera

Tap Quickly open camera to toggle on ()/off
).

Setting Whether to List Recently Used Applications by Dragging Bottom of Display Up or Tapping □

In Home Screen, 💿	(Settings) ラ 🗛 🖓
Quick operation 🔿	System navigation ラ Gesture
navigation / 3-but	ton navigation

- After selecting 3-button navigation , appears on Navigation Bar.
- Set gesture by tapping 🌣 of "Gesture Navigation." Follow onscreen prompts.

AQUOS Home Settings

Switch to and make settings for the AQUOS-brand home application.

Item	Description		
Use AQUOS Home	Tap to change Home application to AQUOS Home.		
Settings AQUOS Home	Make Home Screen settings. See "Making Home Screen Settings" for details.		

Changing Home Application to AQUOS Home

 In Home Screen, ②
 (Settings)
 AQUOS Tricks

 AQUOS Home

 Use AQUOS Home

Simple Mode Settings

Set a simple and intuitive Home Screen and easy-to-read text.

1

In Home Screen, ③ (Settings)





AQUOS Tricks



AQUOS Tricks menu opens.



Simple mode



Simple mode window opens.



Set each item

🏁 Setting is complete.

Simple Mode Operations

Setting Simple and Intuitive Home Screen and Easy-to-Read Text at Same Time

In Simple mode window, SET ALL ON \ominus YES

Setting Home Screen, Size of Text, Etc. Individually

In Simple mode window, Kantan Home / Font size
(Largest) / Hakkiri View / Batch change simple
keyboard] / [Length of press-and-hold time (longer)]
• Tap Kantan Home / Font size(Largest) / Hakkiri View
/ Batch change simple keyboard / Length of press-and-
hold time (longer) to toggle on (🌑)/off (🗩).

 \cdot If confirmation appears, follow onscreen prompts.

Bright Keep Settings

Set Display on or off by handling handset. Settable items are the following.

Item	Description
Turn screen on by holding	Set whether to turn on Display when handset is picked up (e.g., from a desk) and held still.
Keeps the display while held in hand	Set whether to keep Display from turning off while handset is held.
In the home screen, let's darken early	Set whether to darken Home Screen quickly when handset is put down (e.g., on a desk) while Home Screen is displayed.
Keep display outside of home screen	Set whether to keep Display from turning off when handset is put down (e.g., on a desk) while Display other than Home Screen is turned on.

🚹 Auto Sleep Off Operations

Setting Whether to Turn on Display when Handset Is Picked Up (E.G., from a Desk) and Held Still.

 In Home Screen,
 ③
 (Settings)
 ◆
 AQUOS Tricks
 ◆

 Bright Keep
 ◆
 Turn screen on by holding

- Tap Turn screen on by holding to toggle on ()/off
).
- Whether handset is picked up is determined from handset angle or vibration. Holding handset upright or moving while holding it may affect the determination.

Setting Whether to Keep Display On while Holding Handset

 In Home Screen,
 (Settings) → AQUOS Tricks →

 Bright Keep → Keeps the display while held in hand

- Tap Keeps the display while held in hand to toggle on
 ()/off ().
- Hand-held state is determined from handset angle or vibration. Usage status may affect determination of hand-held state.

Setting Whether to Darken Home Screen Quickly when Handset is Put Down (E.G., on a Desk) while Home Screen is Displayed

Setting Whether to Keep Display from Turning Off when Handset is Put Down (E.G., on a Desk) while Display Other Than Home Screen is Turned On

In Home Screen, 😟 (Settings) ラ AQUOS Tricks ラ
Bright Keep) 🔿 Keep display outside of home screen
 Tap Keep display outside of home screen to toggle on ()/off ().

Security Settings

Make security settings including screen lock and face authentication.

Security Settings

Settable items are the following.

Item	Description
Google Play Protect	Set whether to scan handset for security issues.
Find My Device	Set whether location is shown if handset is lost.
Security update	Check whether system updates are required via the network, and update manually as required. See "Updating the System" for details.
Screen lock	Set a screen lock.
Face authentication	When face data is saved, handset authenticates with face when Display is on, and screen unlocks.
Fingerprint	Save fingerprints. See "Using Fingerprint Authentication Function" for details.
Smart Lock	Enable handset to check whether it is being carried or for trusted place or device and unlock screen.
Device admin apps	Set whether to enable applications managing handset.
SIM card lock	Change lock and SIM PIN for SIM Card.
Encryption & credentials	Make settings for encryption and credentials.
Trust agents	Show/hide trusted agents.
App pinning	Set screen of only specified applications to be in view.
Confirm SIM deletion	Set whether to perform screen unlock operation before erasing eSIM.

Security Operations

Setting Screen Not to Lock

lock 🔿 None

In Home Screen, 😟 (Settings) 🔿 Security 🔿 Screen

- · If method for unlocking screen is setting other than None or Swipe before changing setting, first Tap Screen lock and unlock screen.
- · If confirmation appears, follow onscreen prompts.





- · Set pattern / lock no. (PIN) / password for unlocking screen beforehand.
- Tap Confirm SIM deletion to toggle on ()/off
).
- · If confirmation appears, follow onscreen prompts.

Screen Lock Cautions

Make sure to make a note of and not forget pattern / lock no. (PIN) / password set for unlocking screen. If you forget the code, visit your nearest SoftBank Shop for recovery. Note that saved files and settings will be lost.

Main Security Codes

The following are main security codes required for handset use.

Code	Description
Center Access Code	A four-digit code set in subscription contract. See "Center Access Code" for details.
SIM PIN	A code for SIM Card/eSIM. SIM PIN is 9999 by default (change as needed). See "Enabling SIM PIN" for details.
Lock No. (PIN)	A code for unlocking screen. See "Requiring Lock No. (PIN) Entry for Unlocking Screen" for details.


Center Access Code

Center Access Code is a four-digit code set in subscription contract; necessary to use optional services from landlines, etc.

- Do not forget Center Access Code. If you forget the code, contact us for recovery. For details, contact Customer Service.
- Be careful not to reveal security codes to others. If misused by others, SoftBank Corp. is not liable for any resulting damages.

Enabling SIM PIN

When SIM PIN is enabled, PIN entry is required for handset use each time handset is powered on with SIM Card installed/eSIM enabled. It is effective for preventing unauthorized use by others.

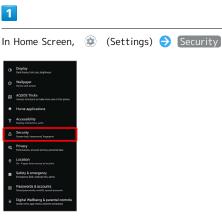

🏁 Security menu opens.



SIM card lock SIM card lock is enabled. Disabling SIM Card Lock In Security menu, SIM card lock 🍨 Lock SIM card Cock SIM card <

Enter SIM PIN 🔿 💽 (💽)


SIM PIN Entry Cautions


SIM PIN entry is required when changing SIM PIN, when powering handset on with SIM card lock enabled, etc.

- Entering incorrect SIM PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; contact Customer Service.
- Entering incorrect PUK ten consecutive times activates PUK Lock, disabling handset. For recovery, SIM Card/eSIM must be reissued at a SoftBank Shop (fees apply).

Changing SIM PIN

Enable SIM card lock first. See "Enabling SIM PIN" for details.

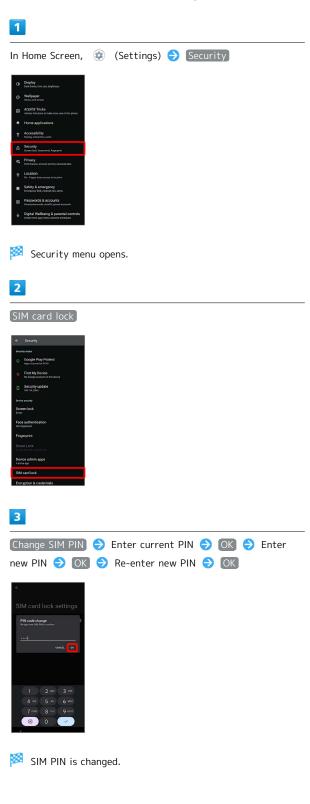

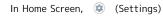



2

[Security]



🏁 Security menu opens.



Screen lock



• If method for unlocking screen before change is setting other than None or Swipe , first unlock screen.

4






🏁 Setting is complete.

 \cdot If confirmation appears, follow onscreen prompts.



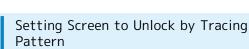

1

In Home Screen, 💿 (Settings)



2

(Security)



🏁 Security menu opens.



Screen lock



• If method for unlocking screen before change is setting other than None or Swipe , first unlock screen.



[Pattern]





Enter new pattern





Next



· Tap Clear to erase entered pattern.



Enter new pattern again

s	et a patter	n	
Draw p	attem again to c	ordern	
•	0	٥	
۰		•	
۰	0	۰	
		Gor	far

Confirm



• If method for unlocking screen before change is setting other than None or Swipe , setting is complete.

9



10


Done



Setting is complete.

Requiring Lock No. (PIN) Entry for Unlocking Screen

1

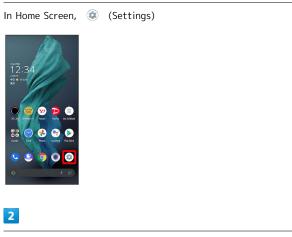


Security



Security menu opens.



Screen lock

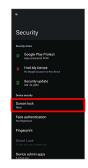

• If method for unlocking screen before change is setting other than None or Swipe , first unlock screen.

4



5

Enter new lock no. (PIN)



6

Next



• Tap Clear to erase entered lock no. (PIN).

7

Enter new lock no. (PIN) again



8

Confirm



- \cdot If method for unlocking screen before change is setting other than None or Swipe , setting is complete.
- · Tap Clear to erase entered lock no. (PIN).




Select method of notification display







🏁 Setting is complete.

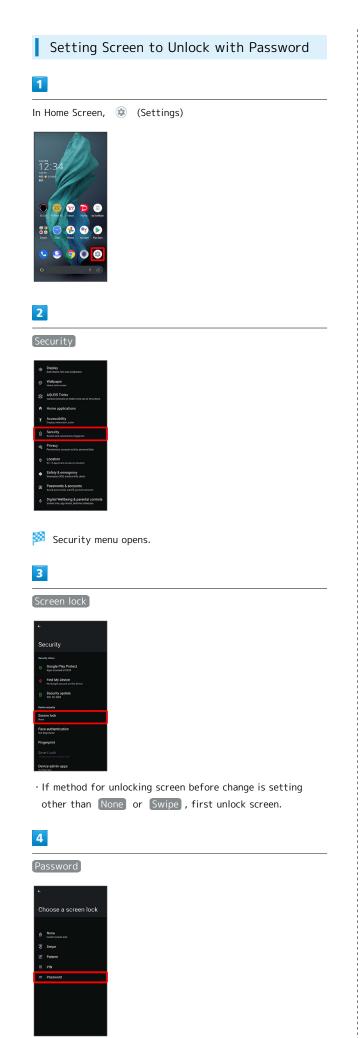

Enter new password



6

Next



· Tap Clear to erase entered password.

7

Enter new password again



8

Confirm



• If method for unlocking screen before change is setting other than None or Swipe , setting is complete.

· Tap Clear to erase entered password.

AQUOS R7

Select method of notification display



10


Done



🏁 Setting is complete.

Using Face Authentication

When face data is saved, handset authenticates with face when Display is on, and screen unlocks.

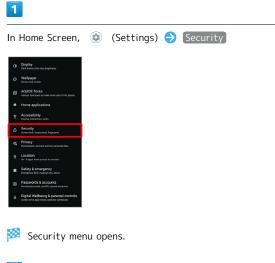



L

Face authentication





Follow onscreen prompts and set pattern / lock no. (PIN) / password for unlocking screen



- \cdot This is a backup method for unlocking the screen if unable to authenticate with your face.
- \cdot Unlocks screen when unlock method is setting other than None or Swipe .
- See "Setting Screen to Unlock by Tracing Pattern,"
 "Requiring Lock No. (PIN) Entry for Unlocking Screen," and
 "Setting Screen to Unlock with Password" for details on setting a method for unlocking screen.



5

OK



6

Align face with onscreen guides \bigcirc Tap when to unlock screen \bigcirc OK



🏁 Face data is saved.

Face Authentication Operations

Deleting Face Data

In Security menu, Face authentication → Enter pattern / lock no. (PIN) / password → Deletion of face data → Yes

Changing When to Unlock Screen after Saving Face Data

In Security menu, Face authentication → Enter pattern / lock no. (PIN) / password → Tap when to unlock screen Checking Overview and Precautions for Face Authentication after Saving Face Data

In Security menu, Face authentication → Enter pattern / lock no. (PIN) / password → A → Face authentication / Precautions

📙 Face Authentication Cautions

Cautions for Saving Face Data

Access permission for camera is required when saving face data. To permit access, Tap $\ensuremath{\mathsf{WHILE USING THE APP}}$.

• When Tapping ONLY THIS TIME / DON'T ALLOW , the face authentication may not operate normally.

Cautions for Screen Unlock Using Face Authentication

When 4 hours or longer passed after Display is turned off, the screen cannot be unlocked with face authentication. To unlock screen, use unlock method (Pattern/Lock No.(PIN)/ Password). After unlocked, the screen can be unlocked with face authentication. I

Privacy Settings

Make settings for Google activity, application feature access history and permissions.

Privacy Settings


Settable items are the following.

Item	Description
Privacy dashboard	Check applications that used location, camera, microphone, etc. in past 24 hours.
Permission manager	Set applications with permitted usage by function. See "Setting Required Permissions for Applications" for details.
Camera access	Set whether camera is accessible for all applications and services.
Microphone access	Set whether microphone is accessible for all applications and services.
Show passwords	Set whether characters remain visible for a short time as password is entered.
Notifications on lock screen	Set whether to show notifications in lock screen. See "Display Settings" for details.
Android System Intelligence	Check Android System Intelligence functions and delete stored data.
App content	Set whether to allow applications to send contents to Android System.
Show clipboard access	Set whether to display notifications when copied text, images, etc. on clipboard are used in application.
Autofill service from Google	Use Google autofill service.
Google location history	Set Google location history.
Activity controls	Manage Google activity.
Ads	Set Ads.
Usage & diagnostics	Set whether to send usage status and diagnosis information to Google automatically.

Privacy Operations

Checking Applications that Used Location, Camera, Microphone, etc. in Past 24 hours

In Home Screen, ③ (Settings) <a>> Privacy <a>> Privacy <a>> Privacy <a>> Coation / Camera / Microphone
• Tap application to check/change access permissions for functions it is using.
 Tap See other permissions to display other functions. Tap displayed function to check/change access permissions for application functions.
Setting Whether Camera is Accessible for All Applications and Services
In Home Screen, ③ (Settings) → Privacy → Camera access
• Tap Camera access to toggle on ()/off ().
Setting Whether Microphone is Accessible for All Applications and Services
In Home Screen,
• Tap Microphone access to toggle on ()/off ().
Setting Whether Characters Remain Visible for a Short Time when Password is Entered
In Home Screen, ② (Settings) → Privacy → Show passwords · Tap Show passwords to toggle on ()/off ().
Checking Android System Intelligence Functions In Home Screen, ↔ (Settings) → Privacy → Android
System Intelligence → Device learning
Setting Whether to Display Suggestions for Reply, etc., on Keyboard Suggestion Bar
In Home Screen, ③ (Settings) → Privacy → Android System Intelligence → Keyboard → /
• Tap 🚺 to toggle On (🚺), 🚺 to toggle Off ().
Deleting Data Stored by Android System Intelligence
In Home Screen,

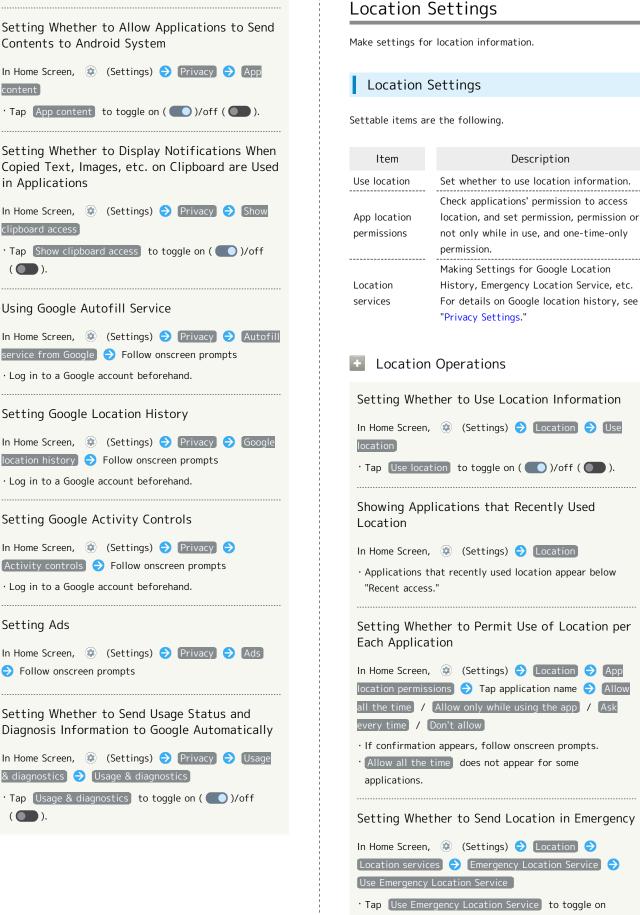

In Home Screen, 😟 (Settings) 🔿 Location 🔿 Use

Description

Tap Use location to toggle on ()/off ().

Showing Applications that Recently Used

In Home Screen, 💿 (Settings) 🔿 Location

 \cdot Applications that recently used location appear below

Setting Whether to Permit Use of Location per

In Home Screen, 😟 (Settings) ラ Location ラ App
location permissions ラ Tap application name ラ (Allow
all the time / Allow only while using the app / Ask
every time / [Don't allow]
\cdot If confirmation appears, follow onscreen prompts.
· Allow all the time does not appear for some
applications.
Setting Whether to Send Location in Emergency

In Home Screen, 😟 (Settings) ラ Location 🔿 [Location services] → [Emergency Location Service] → Use Emergency Location Service • Tap Use Emergency Location Service to toggle on (🔵)/off (🔵).



Setting Whether to Improve Location Accuracy In Home Screen, ② (Settings) ⑦ Location ⑦ Location services ⑦ Google Location Accuracy ⑦ Improve Location Accuracy Tap Improve Location Accuracy to toggle on (●)/ off (●). Managing Location Share Setting In Home Screen, ③ (Settings) ⑦ Location ⑦
Location services → Google Location Accuracy · Tap Improve Location Accuracy to toggle on ()/ off (). Managing Location Share Setting
off (). Managing Location Share Setting
In Home Screen, 🔅 (Settings) ラ Location ラ
Location services → Google Location Sharing → Follow onscreen prompts • Log in to a Google account beforehand.
Setting Whether to Use Wi-Fi Scanning to Increase Accuracy of Location
In Home Screen, ② (Settings) ⋺ Location ⋺ Location services → Wi-Fi scanning → Wi-Fi scanning · Tap Wi-Fi scanning to toggle on ()/off ().
Setting Whether to Use Bluetooth® Scanning to Increase Accuracy of Location
In Home Screen, ② (Settings) <a> Location <a> Location <a> Bluetooth scanning <a> Bluetooth scanning <a> Tap Bluetooth scanning to toggle on ()/off

System Settings

Make settings for language and input, date and time, backup, reset, etc.

System Settings

Settable items are the following.

Item	Description
Languages & input	Make settings for display language and text entry.
Gestures	Set whether to activate camera by pressing Power Key twice, or to activate Manner Mode by pressing Power Key and Volume Up Key simultaneously, etc.
Date & time	Make settings for date and time.
Backup	Make settings such as whether to back up application data, Wi-Fi passwords, etc. to Google One.
System update	Check whether system updates are required via the network, and update manually as required. See "Updating the System" for details.
Data transfer	Import data from other mobiles, etc. using Bluetooth® or SD Card. See "Importing Contacts via Bluetooth® (Data Transfer)" and "Importing Data from SD Card (Data Transfer)" for details.
Reset options	Reset network and application settings, all data on handset, etc.
Hardware Feedback	Set whether to send feedback on hardware.
Power menu	Open Power menu.

System Operations

Accessing Developer Options




🏁 Developer options open.


• If method for unlocking screen is setting other than None or Swipe , first Tap Build number 7 times and unlock screen.


Adding Languages Shown on Display

In Home Screen, 💿 (Settings) ラ System ラ
Languages & input 🔶 Languages Ə (Add a language)
➔ Tap language

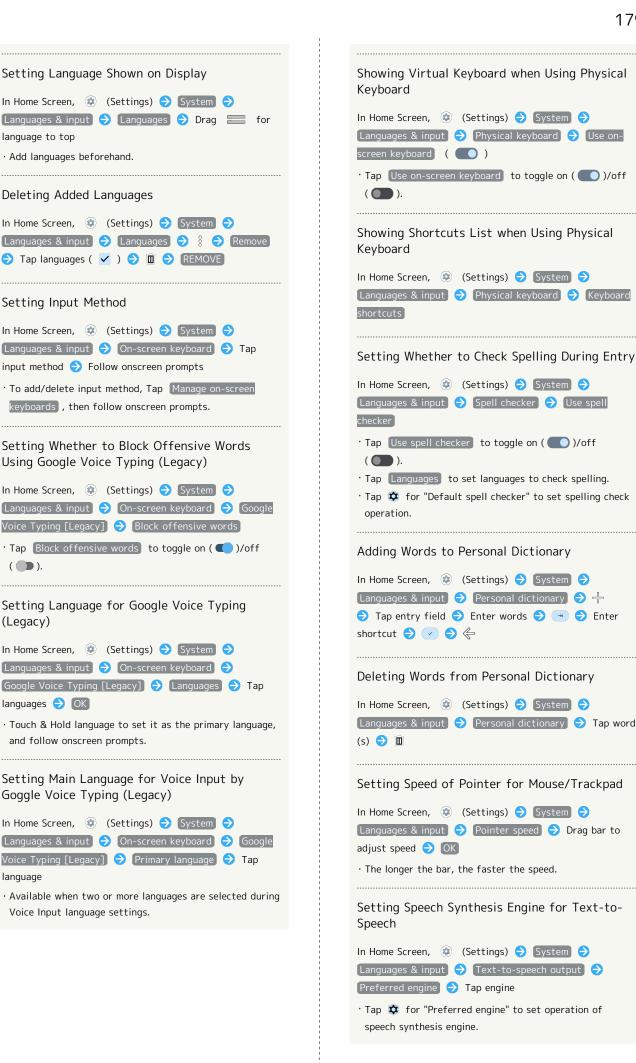

AQUOS R7

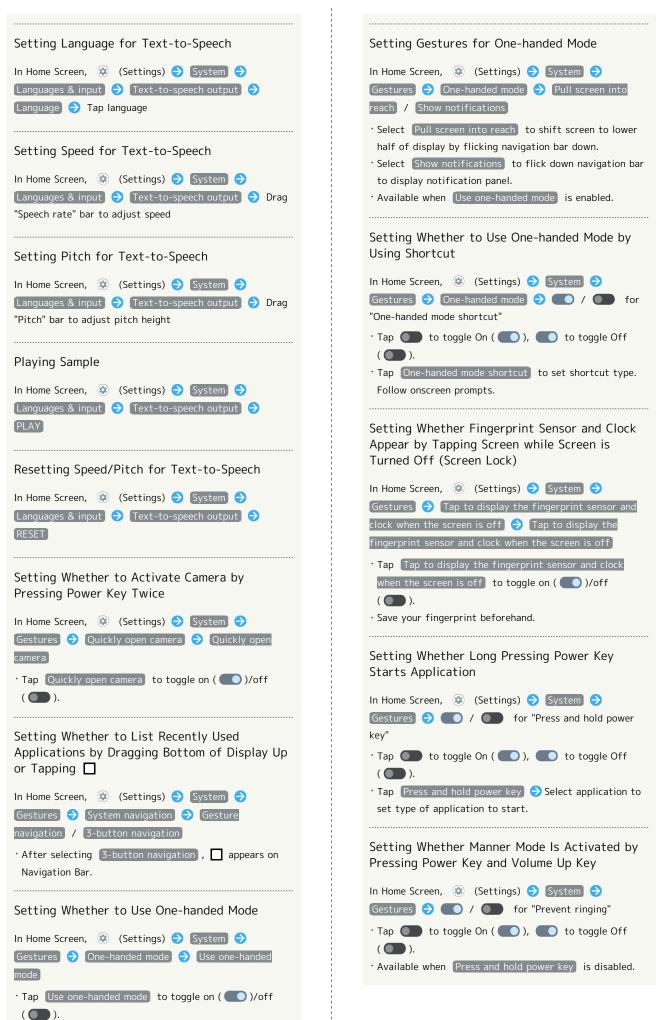

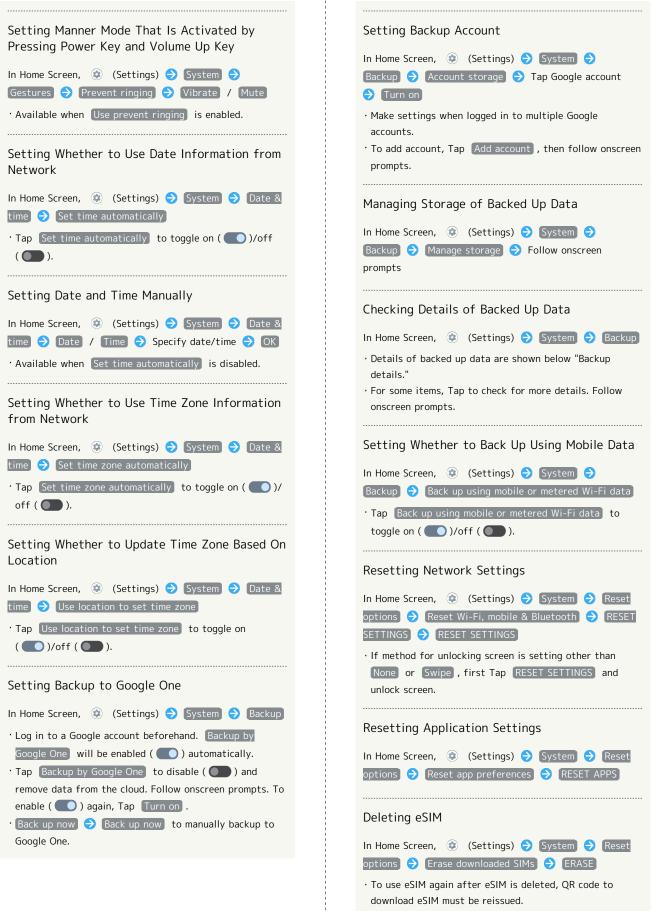

Handset Settings



Setting Whether to Send Feedback on Hardware
In Home Screen, ② (Settings) ⋺ System ⋺ Hardware Feedback ⊖ ☑ / ■
Opening Power Menu
In Home Screen, ② (Settings) ⋺ System ⋺ Power menu

Setting 24-Hour Time Indication

1

In Home Screen, 💿 (Settings)




2







Date & time

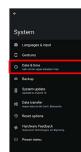



24-hour or 12-hour format is automatically set depending on your language and region.

- Tap Use locale default to toggle on ()/off ().
- When Use locale default is disabled, Tap Use 24-hour format to toggle 24-hour format ()/12-hour format ().

Resetting Handset

1

In Home Screen, 💿 (Settings)



2



3

Reset options



4

Erase all data (factory reset)



5

Erase all data



- To also erase SD Card data, Tap [Erase SD card] (🗹).
- Unlocks screen when unlock method is setting other than None or Swipe .

6

[Erase all data]



🏁 Handset is reset.

Cautions when Erasing All Data (Factory Reset)

Observe the following when erasing all data (factory reset).

- Erasing all data (factory reset) deletes all data in internal storage irreversibly. Back up important data beforehand.
- \cdot Deleted content cannot be restored. Reset with caution.

Other Handset Settings

Phone Number

See "Checking Your Phone Number" for details on phone number.

Network & Internet

Make network and Internet settings for Wi-Fi, mobile network, hotspot tethering, etc. Settable items are the following.

Item	Description
Wi-Fi	Enable Wi-Fi connection. See "Connecting by Wi-Fi" for details.
Mobile network	Configure mobile network settings. See "Global Roaming" for details on roaming, automatic network selection, and network selection. See "Data Usage Settings" for details on application data usage as well as data usage alert and limit.
Airplane mode	Set whether to stop signal-transmitting functions
Hotspot &	Make tethering settings.
tethering	See "Using Tethering" for details.
Data Saver	Make settings for Data Saver.
VPN	Add VPN destinations.
Private DNS	Set private DNS.
Proxy settings	Make proxy settings.

Network & Internet Operations

Setting Whether to Enable All Communications over Mobile Network

In Home Screen, ③ (Settings) → Network & internet → Mobile network → Use SIM
• Tap Use SIM to toggle on ()/off ().
If confirmation appears, follow onscreen prompts.
Setting Whether to Use Mobile Data
In Home Screen, 🐵 (Settings) ラ Network & internet
🔿 Mobile network 🔿 Mobile data
• Tap Mobile data to toggle on (💽)/off (💽).
Using 5G/4G LTE/4G/3G Network
In Home Screen, 💿 (Settings) ラ Network & internet
Object to the second secon
(recommended) / 4G / 3G (O)

Adding Access Points

In Home Screen, 😨 (Settings) 🔿 Network & internet
♦ Mobile network ♦ Access Point Names ♦
Tap item ラ Set/enter each item ラ 🖇 ラ Save

Deleting Added Access Points In Home Screen, 😟 (Settings) 🔿 Network & internet ♦ Mobile network ♦ Access Point Names ♦ Reset to default Setting Whether to Stop Signal-Transmitting Functions In Home Screen, 😟 (Settings) 🔿 Network & internet Airplane mode • Tap Airplane mode to toggle on ()/off (). Setting Data Saver In Home Screen, 😟 (Settings) 🔿 Network & internet ⇒ Data Saver ⇒ Use Data Saver • Tap Use Data Saver to toggle on ()/off (). Setting Whether to Exclude Application(s) from Data Saver In Home Screen, 😟 (Settings) 🔿 Network & internet 😔 Data Saver 😔 Unrestricted data ⋺ Tap application name • Tap application name to toggle on (🚺)/off (🚺). Adding VPN Destinations In Home Screen, 😟 (Settings) 🔿 Network & internet ♦ VPN ⇒ + → Set/enter details → SAVE Tap an added VPN to connect/disconnect it. Tap of to edit/delete it. Setting Private DNS In Home Screen, 🐵 (Settings) ラ Network & internet ⇒ Private DNS ⇒ Tap item ⇒ SAVE · After Tapping Private DNS provider hostname, enter hostname. Setting Proxy In Home Screen, 🐵 (Settings) ラ Network & internet ⇒ Proxy settings ⇒ Proxy/port/exclusion list ⇒ Tap item 🔿 🔿 Connecting to Network via Set Proxy

AQUOS R7

Connected Devices

Make Bluetooth® and other device connection settings. Settable items are the following.

 \cdot Names and status of devices connected by Bluetooth® and USB appear at top of Display.

Item	Description
Pair new device	Search for and pair nearby Bluetooth® devices. See "Pairing Bluetooth® Devices" for details.
Connection preferences	Make settings for Bluetooth® connection, NFC/Osaifu-Keitai® operation, etc. For details on Bluetooth®, see "Using Bluetooth® Function." For details on NFC/Osaifu-Keitai®, see "NFC/おサイフケータイ®を利用す る (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/ detail/61905/)" (Japanese). For details on files received with Bluetooth®, see "Receiving Data via Bluetooth® (e.g., Address Book)."
Codec preferences	Set codec for Bluetooth® connection.

Connected Device Operations



Making Android Auto™ Settings
 In Home Screen, (Settings) → Connected devices → Connection preferences → Android Auto → Follow onscreen prompts
Setting Codec for Bluetooth® Connection
Odec preferences → Follow onscreen prompts

Cautions for Using Cast

Connection with Miracast® device is not supported.


Apps

Make application settings. Settable items are the following.

 Any recently used applications appear in "Recently opened apps."

Item	Description
See all XX apps	Check and make settings for installed applications.
Default apps	Set applications used as default.
Screen time	Check history of total duration of handset use. Also restrict usage of individual applications. See "Digital Wellbeing & Parental Controls" for details.
Unused apps	Open unused applications.
Special app	Make settings for special application
access	access.

Application Operations

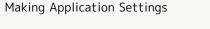

In Home Screen, 🔅	(Settings) 🤤	Apps	See all XX
apps ラ Tap applic	ation name ラ	Set each	item

View System Applications

In Home S	cre	en,	۲	(Settings)	€	Apps	€	See all XX
apps ଚ	000	€	Sho	ow system)				

Resetting Application Settings

In Home	e Sc	ree	en,	۲	(Settings)	€	Apps	€	See all XX
apps	Ð	000	€	Res	et app pref	erer	nces) 🗦		ESET APPS

Setting Digital assistant Applications

 In Home Screen,
 Image: Settings)
 Image: Apps → Default

 apps → Digital assistant app → Follow onscreen

 prompts

Setting Default Applications for Browser, Home Screen, Phone, Caller ID/Spam Applications, SMS, etc.

In Home Screen, ② (Settings) <a> Apps Default apps Browser app / Call redirecting app / Caller ID & spam app / Digital assistant app / Home app / Phone app / SMS app <a> Tap application name · Tap <a> for "Home app" to set Home Screen application.



Notifications

Make notification settings. Settable items are the following.

Item	Description
App settings	Manage notifications per application.
Notification history	Set whether to show history of recent notifications and notifications set to snoozing.
Conversations	Check conversations set as high priority or with their settings changed.
Bubbles	Set whether to allow applications to show bubbles.
Organize notifications on the lock screen	Set whether to hide notification viewed in lock screen so new notifications are easier to view.
Device & app notifications	Manage notification access permissions for devices and applications.
Notifications on lock screen	Set type of notifications to show in lock screen.
Sensitive notifications	Set whether to show sensitive notification.
Do Not Disturb	Make settings for silent mode. See "Sound Settings" for details on Do Not Disturb.
Wireless emergency alerts	Make settings for Urgent News. See "緊急速報メールを利用する (https:// www.softbank.jp/mobile/support/manual/ smartphone/aquos-r7/menu/21796/)" (Japanese) for details on emergency broadcasts.
Hide silent notifications in status bar	Set whether to hide silent notification on status bar.
Allow notification snoozing	Set whether to allow notification snoozing.
Notification dot on app icon	Set whether to show notification dot on application icon.
Enhanced notifications	Set whether notifications are reduced or silenced depending on type and usage of application that sent notifications.

Bubble Function Ğ

Bubble function is available only for compatible applications.

Notification Operations

Setting Whether to Use Notifications for Each Application In Home Screen, 💿 (Settings) 🔿 Notifications 🔿 App settings 🔿 🦳 / 🦳 for apps

App settings 🔿 🌑 / 💽 for apps
• Tap 🚺 to toggle On (🚺), 🚺 to toggle Off ().
 Tap application names to set whether to use notifications for each notification type.
Setting Whether to Show History of Recent Notifications and Notifications Set to Snoozing
In Home Screen, ③ (Settings) ➔ [Notifications] ➔ [Notification history]
• Tap Use notification history to toggle show ()/ hide ().
 Notifications received after Use notification history is enabled are shown.
Checking Conversations Set as High Priority or Changed their Settings
In Home Screen,
Setting Whether to Allow Applications to Show Bubbles
In Home Screen, ③ (Settings) → Notifications → Bubbles → Allow apps to show bubbles
 Tap Allow apps to show bubbles to toggle show ()/hide ().
Setting Whether to Hide Notification Viewed in Lock Screen so New Notifications Are Easier to View

In Home Screen, 💿 (Settings) 🔿 Notifications 🔿 Organize notifications on the lock screen • Tap Organize notifications on the lock screen to toggle on (🚺)/off (🚺).


 \cdot Notifications that cannot be deleted still appear even when Organize notifications on the lock screen is on.

 \cdot Notification Indicators on Status Bar are not hidden.

Managing Notification Access Permissions for **Devices and Applications**

In Home Screen,	۲	(Settings) Ə	Notifications	\mathbf{r}
Device & app no [.]	tifica	tions 🔿	Foll	ow onscreen pr	ompts

Setting Type of Notifications to Show in Lock Screen In Home Screen, 💿 (Settings) 🔿 Notifications 🔿 Notifications on lock screen 🔿 Show conversations, default, and silent / Hide silent conversations and notifications / Don't show any notifications Setting Whether to Show Sensitive Notifications in Lock Screen In Home Screen, 😟 (Settings) 🔿 Notifications 🔿 Sensitive notifications • Tap Sensitive notifications to toggle show (🔵)/ hide (🔵). · Sensitive notifications appears when unlock method is setting other than None or Swipe. Setting Whether to Hide Silent Notification on Status Bar In Home Screen, 😨 (Settings) 🔿 Notifications 🔿 Hide silent notifications in status bar • Tap [Hide silent notifications in status bar] to toggle show (**()**)/hide (**()**). Setting Whether to Allow Notification Snoozing In Home Screen, 😟 (Settings) 🔿 Notifications 🔿 Allow notification snoozing • Tap Allow notification snoozing to toggle show (**(**)/hide (**(**). Setting Whether to Show Notification Dot on Application Icon In Home Screen, 😟 (Settings) 🔿 Notifications 🔿 Notification dot on app icon • Tap Notification dot on app icon to toggle show (🚺)/hide (🚺). Setting Whether Notifications are Reduced or Silenced Depending on Type and Usage of Application that Sent Notifications

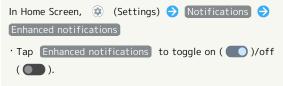

Storage

Check memory space of internal storage, SD Card and USB drive, mount or unmount SD Card, erase data on SD Card, etc. Settable items are the following.

 \cdot Available items vary depending on SD Card and USB drive status.

Item	Description
THIS DEVICE	View information on internal storage usage.
SD CARD	Check data saved on SD Card. Mount or unmount SD Card, encrypt SD Card, etc. For details on mounting/unmounting SD Card, see "Internal Storage and SD Card."
(USB drive name) ¹	Check data saved on USB drive.

 Appears when the USB host function is in use. See "USB ホスト機能を利用する (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/menu/21818/)" (Japanese) for details.

• Checking Data Saved in Internal Storage

 \cdot If confirmation appears, follow onscreen prompts.

Wallpaper

See "Changing Wallpaper" for details.

Home Applications

Change the home application. You can change to a home application installed via Google Play.

Item	Description
AQUOS Home	Change home application to AQUOS Home.
AQUOS Kantan	Change home application to AQUOS Kantan
Home	Home.

Accessibility


Set captions, magnification gestures, and other useful accessibility functions. Settable items are the following.

Item	Description
Accessibility Menu	Set whether to use Accessibility Menu to adjust volume, brightness, etc. by using shortcuts.
Select to Speak	Set whether to read out tapped text on screen, etc. by using shortcuts.
Smart Security	Set whether to use 🧕 (Smart Security), etc.
Switch Access	Set whether to operate handset using switches (Switch Access) instead of touchscreen.
TalkBack	Set whether to use text to speech in order to use handset without looking at screen.
詐欺ウォール	Set whether to use 🅙 (詐欺ウォール).
Text and display	Set size and color of text, images, and icons on Display. See "Setting Font Size" for details on Font Size. See "Setting Size of Images and Icons" for details on Size of Images and Icons.
Extra dim	Set whether to dim screen darker than minimum screen brightness.
Dark theme	Set whether to enable Dark theme and time for using Dark theme. See "Display Settings" for details.
Magnification	Set whether to enable enlarged view by using a shortcut.
Timing controls	Set time to hold down screen for Touch & Hold, to display messages for a short time, etc.
System controls	Set navigation bar, whether to end call when power key is pressed during call, and whether to automatically rotate screen according to handset orientation. See "Quick Operation Settings" and "System Settings" for details on Navigation Bar. See "Display Settings" for details on Auto- rotate Screen. See "System Settings" for details on One- handed Mode.
Vibration & haptic strength	Set whether handset vibrates for arriving calls and messages.
Caption preferences	Make settings for captions.
Audio adjustment	Set whether audio playback is monaural, and left/right balance of audio.
Accessibility shortcuts	Set size of shortcut button which opens Accessibility Menu and whether to enable shortcut from lock screen, etc.

Text-to-Make detailed voice-to-text settings. speech output See "System Settings" for details. Accessibility Operations Setting Whether to Use Accessibility Menu to Adjust Volume, Brightness, etc. by Using Shortcuts In Home Screen, 💿 (Settings) ラ Accessibility 🔿 Accessibility Menu 🔿 💽 / 💽 for "Accessibility Menu shortcut" \cdot If confirmation appears, follow onscreen prompts. • Tap 🚺 to toggle on (🚺), 🚺 to toggle off (). • Tap Accessibility Menu shortcut to set shortcut type. Follow onscreen prompts. • Tap Settings to set size of button for Accessibility Menu. Follow onscreen prompts. Setting Whether to Read Out Tapped Text on Screen by Using Shortcut In Home Screen, 💿 (Settings) 🔿 Accessibility 🔿 Select to Speak 🔿 💽 / 💽 for "Select to Speak shortcut" · If confirmation appears, follow onscreen prompts. • Tap 🔵 to toggle on (💽), 💽 to toggle off (). • Tap [Select to Speak shortcut] to set shortcut type. Follow onscreen prompts. • Tap Settings to set speed and pitch of sound, etc. Follow onscreen prompts. Setting Whether to Use 🧧 (Smart Security) In Home Screen, 💿 (Settings) 🔿 Accessibility 🔿 Smart Security 🔿 [Use Smart Security] · If confirmation appears, follow onscreen prompts. • Tap Use Smart Security to toggle on (🚺)/off (). Setting Whether to Use 🙆 (Smart Security) by Using Shortcut In Home Screen, 😟 (Settings) 🔿 Accessibility 🔿 Smart Security 🔿 🌅 / 🔵 for "Smart Security shortcut" \cdot If confirmation appears, follow onscreen prompts. • Tap 🔵 to toggle on (💽), 💽 to toggle off (). • Tap Smart Security shortcut to set shortcut type. Follow onscreen prompts.





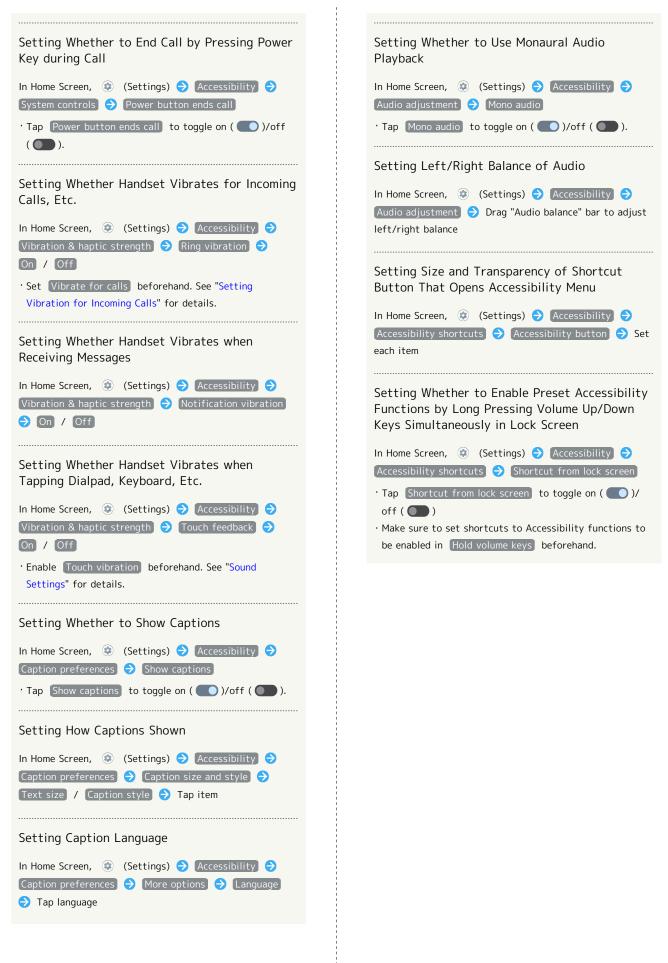

AQUOS R7

Safety & emergency

Make settings for emergency information and emergency calls. Settable items are the following.

Item	Description
OPEN EMERGENCY INFORMATION	Edit emergency information.
Emergency information	Check and edit emergency information.
Emergency SOS	Set whether to make an emergency call when Power Key is quickly pressed five or more times.
Emergency Location Service	Set whether to send location in an emergency. See "Location Settings" for details.
Wireless emergency alerts	Make settings for Urgent News. See "緊急速報メールを利用する (https:// www.softbank.jp/mobile/support/manual/ smartphone/aquos-r7/menu/21796/)" (Japanese) for details on emergency broadcasts.

Emergency Information and Emergency Call Operation

Editing Emergency Information

Save your own medical information (name, address, blood type, allergies, etc.) to handset as emergency information.



• OPEN EMERGENCY INFORMATION is erased when medical information or emergency contact information is entered.

Adding Emergency Contact





Passwords & accounts

Make settings for password management and Google Autofill. Also, make settings to create/add accounts, sync accounts. Settable items are the following.

Item	Description
Passwords	Check passwords stored in Android, Chrome, etc.
Autofill	Set whether to use Google Autofill and
service	what to enter.
Add account	Create or add accounts.
Automatically sync app data	Set whether to automatically sync data.

Password & Accounts Operations

Checking Passwords Stored in Android, Chrome, etc.

In Home Screen, ② (Settings) → Passwords & accounts → Google below "Passwords" → Follow onscreen prompts

 \cdot Log in to a Google account beforehand.

Using Google Autofill Service

In Home Screen, ② (Settings) → Passwords & accounts → Google below "Autofill service" → None / Google

· Log in to a Google account beforehand.


• Tap Add service to add Autofill service. Follow onscreen prompts.

Setting Whether to Use Google Autofill Feature

In Home Screen, ↔ (Settings) → Passwords & accounts → ↔ below "Autofill service" → Use Autofill with Google

 \cdot Log in to a Google account beforehand.

Tap Use Autofill with Google to toggle on ()/off
).

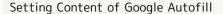

In Home Screen, ② (Settings) ⋺ Passwords & accounts ⊖ ✿ below "Autofill service" ⋺ Set each item

Adding an Account



Digital Wellbeing & Parental Controls

Prevent excessive handset use by setting timers for each application or showing number of notifications received and frequency of screen unlocking, etc. Settable items are the following.

Item	Description
XX minutes/ XX hr, XX min	View total duration of handset use today.
Dashboard	Check history of total duration of handset use. Also restrict usage of individual applications.
Bedtime mode	Activate Bedtime Mode at specified time.
Focus mode	Pause applications that might be a distraction. Also specify day and time.
Manage notifications	Manage application notifications. See "Notifications" for details.
Do Not Disturb	Make Do Not Disturb settings. See "Sound Settings" for details.
Heads Up	Set whether to alert to be aware of surroundings when using handset while walking.
Show icon in the app list	Set whether to show Digital Wellbeing as application in app list.
Set up parental controls	Set controls on usage as a parent/ guardian.

Digital Wellbeing & Parental Controls
 Operations

Checking Handset Use Time, Frequency of Notifications, and Frequency of Screen Unlocking

In Home Screen, 😟 (Settings) ラ Digital Wellbeing &
parental controls 🔿 [Dashboard] ラ [Screen time] 🔿
Screen time / Notifications received / Times opened

Checking Handset Use Time, Frequency of Notifications, and Number of Activations for Each Application

In Home Screen, 😨 (Settings) ラ Digital Wellbeing &
parental controls 🔿 Dashboard ラ Show all XX apps
⇒ Tap application name ⇒ Screen time ⇒ Screen
time / Notifications received / Times opened

 Tap Daily / Hourly to check use time, frequency of notifications, and number of activations per day or per hour.





Setting Parental Controls

 In Home Screen, (♣) (Settings) → Digital Wellbeing

 ▲ parental controls → Set up parental controls →

 Follow onscreen prompts

Google

Make settings for Google services. Settable items are the following.

· Log in to a Google account beforehand.


Item	Description
Manage your Google Account	Make settings for a Google account.
Ads	Make settings for your advertising ID.
Autofill	Set whether to autofill information saved to your Google account such as password, or your SMS verification code.
Backup	Make backup settings.
Devices & sharing	Set to whether to control directly from Notifications Window when playing media on TV or speaker equipped with Chromecast, etc. on the same Wi-Fi network, to set notifications about device near Handset, or to share files using Nearby Share.
Find My	Set whether location is shown if handset
Device	is lost.
Mobile data & messaging	Set a phone number to allow you to reset your Google account.
Parental controls	Set controls on usage as a parent/ guardian.
Personal Safety	Set whether to silence notifications while driving.
Personalize using shared data	Set whether to allow use of shared data.
Set up & restore	Make settings for work profile and nearby devices, and restore contacts from a backup.
Settings for Google apps	Make settings for recording walking and running activity, managing your weight, etc. with services such as Google Fit [™] and Google Play Instant.

About Phone

Check and make settings for handset information. Items that can be set/checked are the following.

Item	Description
Device name	Change handset name.
Phone number (sim slot 1)	Check phone number.
Phone number (sim slot 2)	Check phone number.
Legal information	Check third-party licenses, Google terms of service, etc.
Regulatory labels	Check information on Technical Conformance Certification or Checking VCCI Information.
Battery status	Check depletion of Battery.
SIM status (sim slot 1)	Check SIM Card status.
SIM status (sim slot 2)	Check SIM Card status.
Model	Check model name, serial number, etc.
IMEI (sim slot 1)	Check IMEI barcode.
IMEI (sim slot 2)	Check IMEI barcode.
Android version	Check the Android version.
IP address	Check the IP address.
Wi-Fi MAC address	Check the MAC address.
Device Wi-Fi MAC address	Check the Wi-Fi MAC address of the device.
Bluetooth address	Check the Bluetooth® address.
Up time	Check handset operation time.
Build number	Check the build number.

About Phone Operations

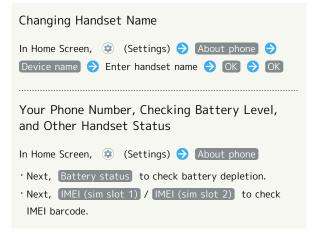

Checking Third-Party Licenses, Google Terms of Service, Etc.

Checking Technical Conformance Certification

Handset conforms to technical standards under the Radio Law and Telecommunications Business Law.

In Home Screen, 😨 (Settings) ᅌ About phone ᅌ Regulatory labels

Checking VCCI Information

Handset conforms to technical standards under the VCCI regulations, and is indicated by the conformance mark on handset electronic nameplate.

In Home Screen, 🔅	(Settings)	€	About phone	Ð
Regulatory labels				


Troubleshooting

Check FAQ on Sharp Website and do a self-check.

Item	Description
FAQ	Check FAQ on Sharp Website.
Search for settings	Search for items in settings menu.
Proficient use guide	Activate 😑 (My AQUOS) to view information on getting the most out of your AQUOS smartphone/tablet.
Improved	
camera	Set whether to zoom in on scan screen
scanning	to make it easier to read barcodes and
accuracy	text in camera mode of some payment
in the	applications.
application.	
Self check	Perform a self-check.
Power menu	Open Power menu. See "System Settings" for details.

Troubleshooting Operations

Checking FAQ on Sharp Website

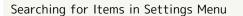

In Home Screen,	(Setting)	ngs) 🔿 Troublest	hooting
Search for s	ettings Ə	Enter search text	٥


Search results appear.

Activating (My AQUOS) to View Information on Getting the Most Out of Your AQUOS Smartphone/Tablet

In Home Screen, ⊕ (Settings) → Troubleshooting
 → Proficient use guide

Setting Whether to Zoom In on Scan Screen to Make it Easier to Read Barcodes and Text in Camera Mode of Some Payment Applications

In Home Screen, (Settings) → Troubleshooting
→ Improved camera scanning accuracy in the application.
Tap Improved camera scanning accuracy in the application. to toggle on ()/off ().
After scan is complete, reset to disable ().

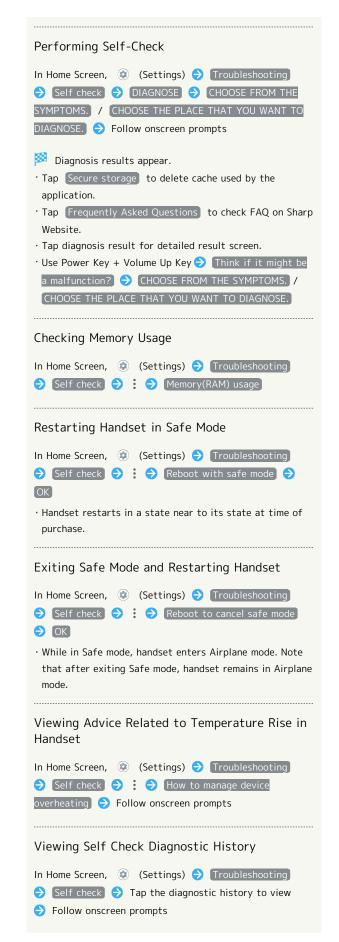

199

Global Services

Global	Roaming	202
Calling	from Outside Japan	203

Global Roaming

Handset is Global Roaming Service eligible. Use the same handset number outside Japan. Handset connects to an appropriate cellular provider


automatically by default.

A specific carrier can also be selected manually.

Change carrier and roaming settings.

Setting a Cellular Provider

1

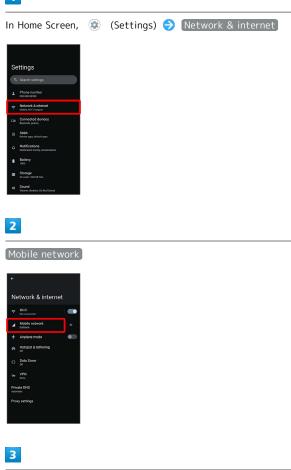

Automatically select network



Handset searches for all available networks.


4

Tap provider





• To set an appropriate cellular provider automatically, Tap Automatically select network ().

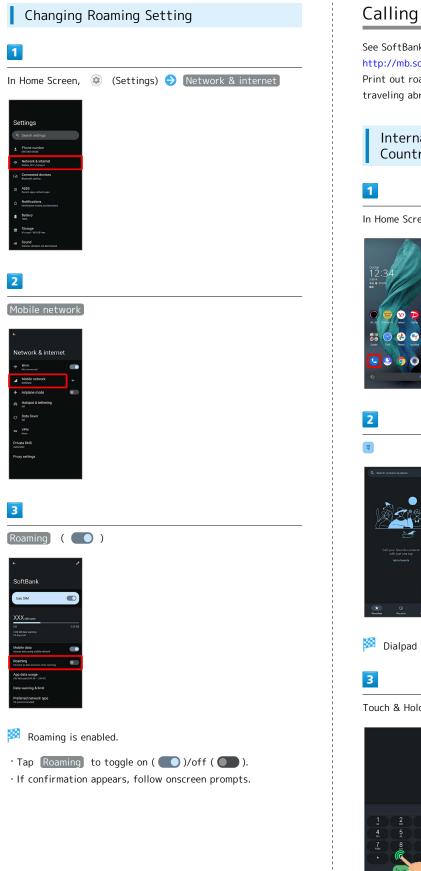

Calling from Outside Japan

See SoftBank Website to learn about roaming areas/rates, etc. http://mb.softbank.jp/en/global_services/

Print out roaming area/rate information to carry while traveling abroad as needed.

International Calls to Japan and Other Countries from Abroad

In Home Screen, 🕓 (Phone)







🏁 Dialpad window opens.

Touch & Hold 0



🏁 "+" appears.

4

Enter country code then other party number (omit first 0)



 \cdot Do not omit first O from phone numbers when dialing Italy (39).

5





🏁 Handset dials number. Call begins when other party answers.

Calling Landlines & Mobiles within Current Country

Place calls the same way you would within Japan.

 \cdot Do not enter country code or omit first O from phone numbers.



In Home Screen, 🕓 (Phone)







🏁 Dialpad window opens.



Use onscreen dialpad to enter number



Call



Handset dials number. Call begins when other party answers.

i

Global Services

For Assistance

Handset Powers Off	. 208
Handset Does Not Power On	.208
Cannot Charge / Charging Stops / Charging Is Slow	209
Battery Runs Out Quickly	. 209
Display Turns Off Suddenly	. 210
Screen Freezes / Operation Is Unstable	.210
SIM Card Not Recognized	. 211
Cannot Use SD Card	.211
Cannot Send/Receive Mail	212
Cannot Connect to Internet	.212
Cannot Talk on Phone / Cannot Hear Other Party	. 213
Cannot Use Applications	.213

Handset Powers Off

While Using Certain Applications

The application may be the cause.

Update the application if not the latest version.

If problem persists, delete the application, and check if same problem occurs again.

See "Updating Installed Applications" for details on updating applications.

See "Uninstalling Applications" for details on deleting applications.

After Installing a New Application

The new application may be the cause. Delete the application in Safe mode. See "セーフモードで起動する (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/detail/61585/)" (Japanese) for details on activating Safe mode. See "Uninstalling Applications" for details on deleting applications.

Handset Interior Is Hot

Continuing to use handset while warm may cause handset to power off as a safety precaution. Let handset cool before powering on handset.

Handset Does Not Power On

Handset Interior Is Hot

Did handset remain powered on after continuing to use handset while handset was warm? Let handset cool before powering on handset.

No Battery Charge

Was handset charged? Charge handset.

Other

Are you Long Pressing Power Key? Continue Pressing Power Key until logo appears.

Cannot Charge / Charging Stops / Charging Is Slow

Charging Does Not Start

Check the following if charging does not start.

- Is the USB Type-C plug on AC Adaptor firmly connected to handset? Unplug and plug in again firmly.
- Is the plug on AC Adaptor firmly connected to an outlet? Unplug and plug in again firmly.
- Are you using an unspecified AC Adaptor or other product? Always use specified products. In addition to being unable to charge, using an unspecified product may deteriorate Internal Battery.
- Is the USB Type-C plug on AC Adaptor soiled? Clean terminals with a clean, dry cotton swab, etc. and charge again.

Charging Stops

- Charging stops automatically if handset becomes warm. Let handset cool and start charging handset again.
- · Is Change maximum charge enabled? To check whether Change maximum charge is disabled:
- In Home Screen, ② (Settings) → Battery → Intelligent Charge → Change maximum charge (→)
- Is Charge only when screen is off enabled? To check whether Charge only when screen is off is disabled:
 In Home Screen, (④) (Settings) (◆) Battery (◆) Intelligent
 Charge (◆) Charge only when screen is off ((●))

Charging Time Long Depending on AC Adaptor

Charging may be slower when using AC Adaptor other than for rapid charging.

For information on AC Adaptor for rapid charging specified by SoftBank, see SoftBank Website.

Battery Runs Out Quickly

Battery Runs Out Quickly Even With No Operation

Some applications may use data communication even if not being operated.

Changing the setting may remedy this. Refer to "Restrict Background Mobile Data."

Battery Runs Out Quickly in Certain Location

Are you where signal is weak or have been out of service area for a long period? Calling where signal is weak or being out of service area uses a lot of Battery.

Setting Handset to Save Battery Power

Frequently illuminating Mobile Light, frequently using functions that emit sound or communicate with external devices, using a bright display, or setting a long Display-on time shorten the time that handset can be used. Use Battery Saver to avoid wasting battery. See "Using Battery Saver" for details.

Display Turns Off Suddenly

While Using Certain Applications

The application may be the cause.

Update the application if not the latest version.

If problem persists, delete the application, and check if same problem occurs again.

See "Updating Installed Applications" for details on updating applications.

See "Uninstalling Applications" for details on deleting applications.

After Installing a New Application

The new application may be the cause. Delete the application in Safe mode. See "セーフモードで起動する (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/detail/61585/)" (Japanese) for details on activating Safe mode. See "Uninstalling Applications" for details on deleting applications.

Screen Freezes / Operation Is Unstable

While Using Certain Applications

The application may be the cause.

Update the application if not the latest version.

If problem persists, delete the application, and check if same problem occurs again.

See "Updating Installed Applications" for details on updating applications.

See "Uninstalling Applications" for details on deleting applications.

After Installing a New Application

The new application may be the cause. Delete the application in Safe mode. See "セーフモードで起動する (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/detail/61585/)" (Japanese) for details on activating Safe mode. See "Uninstalling Applications" for details on deleting applications.

Handset Operates on Own Without Touching Display / No Response to Touch Operation

Press Power Key to turn off Display, Press Power Key again to turn on Display, and then operate handset.

SIM Card Not Recognized

Check the following if handset does not recognize SIM Card.

- Is SIM Card inserted correctly? Is SIM Card inserted in the correct location and in the correct orientation? Power off handset, check that SIM Card is inserted correctly, and then power on handset again. If problem persists, SIM Card may be damaged.
- Is the IC (metal) portion of SIM Card smudged (fingerprints, etc.)? Remove SIM Card, wipe soiling with a clean, dry cloth, and insert correctly.
- Is a different SIM Card inserted? An unusable SIM Card may be inserted. Check that it is the correct SIM Card.

Cannot Use SD Card

While Using Certain Applications

The application may be the cause.

Update the application if not the latest version.

If problem persists, delete the application, and check if same problem occurs again.

See "Updating Installed Applications" for details on updating applications.

See "Uninstalling Applications" for details on deleting applications.

After Installing a New Application

The new application may be the cause. Delete the application in Safe mode. See "セーフモードで起動する (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/detail/61585/)" (Japanese) for details on activating Safe mode. See "Uninstalling Applications" for details on deleting applications.


Cannot Send/Receive Mail

Airplane Mode Set Is handset in Airplane mode? 👗 appears in Status Bar when in Airplane mode. To cancel Airplane mode: In Quick Settings Window, Airplane mode On (Off) "5G"/"4G" Not Shown with Signal Strength Indicator Is Mobile data disabled? To check that Mobile data is enabled: In Home Screen, 🐵 (Settings) 🔿 Network & internet 🔿 Mobile network 🔿 Mobile data (🤍) Cannot Send with Attachment The maximum size of files that can be attached to +Message is 100 MB. To share large files, use Google Drive, etc. Cannot Receive Mail from Certain Sender Spam filter settings may be blocking delivery. Check spam filter settings. Disabled Access Point Is Set Is a disabled access point set? To reset to initial settings: In Home Screen, 🐵 (Settings) 🔿 Network & internet) 🔿 Mobile network) 🔿 Access Point Names 🔿 🖇 🔿 Reset to default In Location Where Signal Is Weak or Have Been Out of Service Area for a Long Period Check whether you are where signal is weak or out of service area. If problem persists, power handset off and then on again.

Cannot Connect to Internet

Airplane Mode Set

Is handset in Airplane mode? 🛃 appears in Status Bar when in Airplane mode. To cancel Airplane mode: In Quick Settings Window, Airplane mode On (Off)

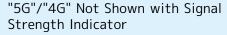

Is Mobile data disabled? To check that Mobile data is enabled:

In Home Screen, ② (Settings) → Network & internet → Mobile network → Mobile data (●)

Cannot Connect while Using Browser

The browser may have become temporarily unstable. Clearing the browser cache may remedy this. See "閲覧履歴を削除する (https://www.softbank.jp/mobile/ support/manual/smartphone/aquos-r7/detail/61792/)" (Japanese) for details on clearing the browser cache.

Cannot Connect to Internet Only When Connected by Wi-Fi

There may be a problem with the Wi-Fi connection. Check whether connection to the Internet is possible with the Wi-Fi connection disabled.

See "Deleting Saved Access Points" for details on disabling the Wi-Fi connection.

Disabled Access Point Is Set

Is a disabled access point set? To reset to initial settings: In Home Screen, ③ (Settings) → Network & internet → Mobile network → Access Point Names → § → Reset to default

In Location Where Signal Is Weak or Have Been Out of Service Area for a Long Period

Check whether you are where signal is weak or out of service area.

If problem persists, power handset off and then on again.

Cannot Talk on Phone / Cannot Hear Other Party

Cannot Make or Receive Calls

Is handset in Airplane mode? A appears in Status Bar when in Airplane mode. To cancel Airplane mode: In Quick Settings Window, Airplane mode On (Off) Is handset where signals reach? Change locations while checking the signal indication and call again.

Cannot Receive Calls

If Call Forwarding or Voicemail is set, calls may be forwarded or sent to Voicemail before being answered. See "Call Forwarding" and "Voicemail" for details.

Cannot Make Calls

Did you dial all digits for the number? Dial all digits for numbers starting with a "O" area code, etc.

Cannot Hear Other Party

Is the call volume low? Press Volume Up Key during call to increase volume.

In Location Where Signal Is Weak or Have Been Out of Service Area for a Long Period

Check whether you are where signal is weak or out of service area.

If problem persists, power handset off and then on again.

Cannot Use Applications

Cannot Install New Application

Is there only a little free space in internal storage? To check free space:

In Home Screen, 💿 (Settings) 🔿 Storage

Applications not supported by handset cannot be installed.

Cannot Activate Applications

Did you set access privileges when first activating the application? Applications cannot be activated if access is not permitted. To change settings:

In Home Screen, ② (Settings) → Apps → See all XX apps → Tap application name → Permissions → Tap function → Allow

 Allow all the time / Allow only while using the app / Ask every time / Allow management of all files / Allow access to media only appears for some functions.

Warranty/Specifications/ Customer Service

Warranty & After-Sa	les Service	
Specifications		216
Customer Service		

Warranty & After-Sales Service

Warranty

 \cdot Handset warranty is for 1 year from date of purchase.

• Repair may be made free of charge under the terms of repair service. See SoftBank Website for terms of repair service.

https://cdn.softbank.jp/mobile/set/common/pdf/legal/ spguide/common/warranty.pdf (Japanese)

• Warranty covers handset. Cables and complimentary sample accessories are not covered by warranty.

Cautions

Damages

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage or trouble of product.

Malfunction/Repairs

Information/settings on handset may be lost/changed due to malfunction or repairs. It is recommended that you keep a separate copy of contacts and other important information. SoftBank Corp. is not responsible for loss/ change of data (contacts, images, sound, etc.) or settings due to damage or repairs.

Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

After-Sales Service

To request repairs, contact Customer Service or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms of repair service.
- After the warranty period, if handset can be repaired, repairs will be made at cost.

Repair parts (for maintaining product performance) are stocked for approximately 4 years after end of production. However, repair may not be possible even at cost within this period due to stock conditions.

🗑 Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or Customer Service.

Specifications

Some information may differ due to specification changes.

Handset

Handset specifications are as follows.

- \cdot Times in the table vary with location, status, settings, etc.
- OEL Display employs precision technology; however, some pixels may remain on/off.
- Please note that the temperature of handset may increase due to processing during continuous use or when operating under high loads.

Item	Description
Dimensions (W x H x D)	Approx. 77 mm x 161 mm x 9.3 mm (without protruding parts)
Weight	Approx. 208 g
Maximum Output	0.4W (4G) 0.2W (4G LTE) 0.2W (5G (n3/n28/n77/n257))
Internal Battery Capacity	5,000 mAh
Continuous Talk Time¹	4G LTE:Approx. 2,650 minutes
Continuous Standby Time ²	4G:Approx. 520 hours 4G LTE:Approx. 520 hours 5G:Approx. 440 hours ³
Charging Time⁴	AC Adaptor (USB Type-C [®] quick charge AC Adaptor for USB PD-PPS [ZSDBAV] (SBAC22-TCPD)): Approx. 100 minutes

- 1 Average measured with handset fully charged, in strong signal conditions at rest.
- 2 Average measured with handset fully charged, without calls or operations, in strong signal conditions at rest, and with data communication and Urgent News disabled. May vary with battery strength, ambient temperature, settings, etc.
- $\ensuremath{\mathsf{3}}$ This is the approximate time in an SA environment.
- 4 Measured when charging with handset powered off.

Quick Switch Adapter

Item	Description
Length	Approx. 32 mm
Weight	Approx. 4.6 g

SIM Removal Tool

Item	Description
Length	Approx. 28 mm
Weight	Approx. 0.8 g

Materials (Handset)

Parts	Materials Used/Surface Finish
Parts	Materials Useu/Surrace FINISh
Display Surface (Glass Part), Back Cover	Tempered glass/AF coating
Outer Casing (Metal Part), Power Key, Volume Key (Up/Down), Camera Ornament, Camera Ornament Periphery, Card Tray (Exterior)	Aluminum/anodizing
Outer Casing (Opening for Earphones- Microphone Jack Part, Opening for External Connection Jack)	PBT resin (containing glass)
Camera Panel	Tempered glass/AF coating, AR coating
Card Tray	POM resin + Aluminum/anodizing
Card Tray Gasket	Silicone rubber

Materials (Quick Switch Adapter)

Parts	Materials Used/Surface Finish
USB Type-C plug (Metal part)	Stainless steel/nickel plating
USB Type-C plug (Resin part)/USB Type-A plug (Resin part)	LCP resin
USB Type-A plug (Metal part)	SPCC/nickel plating
Handset (Metal part)	Aluminum alloy/anodizing
Handset (Resin part)	PBT resin

Materials (SIM Removal Tool)

Parts	
SIM Removal	
Tool	

Stainless steel

Materials Used/Surface Finish

Customer Service

If you encounter any difficulties or are unsure of anything, contact customer service.

SoftBank Customer Support

- \cdot From a SoftBank handset, dial toll free at 157
- · From a landline/IP phone, dial toll free at 0800-919-0157
- \cdot Business hours : Call 10:00am 7:00pm / Chat 9:00am 8:00pm

Smartphone Technical Support Center

- · From a SoftBank handset, dial toll free at 151
- \cdot From a landline/IP phone, dial toll free at 0800-1700-151
- Business hours : Mon. Fri. 9:00am 7:00pm / Sat., Sun., and Holiday 9:00am - 5:00pm / 9:00am - 8:00pm (for general information)

Safety Precautions

Safety Precautions	220
Important Product Information	230
Handset & Hardware Care	231
General Notes	233
RF Exposure Information of This Product	236
Water & Dust Resistance	237

Safety Precautions

Read Safety Precautions before using handset. Observe precautions to avoid injury to self or others, or damage to property.

Safety Precautions

These labels show degree of risk from improper use.

Label	Description
	Great risk of death or serious injury ¹
	Risk of death or serious injury ¹
	Risk of minor injury ² or property damage ³

1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or longterm hospital attendance as an outpatient.

2 Minor injury: This refers to injuries, burns (high- and lowtemperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.

3 Property damage:This refers to extended damage to buildings, furniture, livestock, pets, etc.

These symbols signify prohibited/compulsory actions.

Symbol	Description
Prohibited	Prohibited actions
Do Not Disassemble	Disassembly prohibited
Avoid Liquids Or Moisture	Exposure to liquids prohibited
Do Not Use Wet Hands	Use with wet hands prohibited
Compulsory	Compulsory actions
Disconnect Power Source	Unplug from outlet

Handset, SIM Card, Quick Switch Adapter, SIM Removal Tool, AC Adaptor (Optional Accessory), Wireless Charger (Sold Separately) (Common)

🕂 DANGER

Prohibited

Do not use, store, or leave in extreme heat or where heat collects, such as fire, heat sources, under a kotatsu (blanketed warming table) or blanket, direct sunlight, inside vehicles in the hot sun, etc.

May cause fire, burns, injury, electric shock, etc.



Keep away from cooking appliances (microwave ovens, induction stoves, etc.) and pressure vessels (e.g., pressure cookers).

May cause fire, burns, injury, electric shock, etc.

Do not subject to or place directly on sand, soil, or mud. Do not touch with dirty hands.

May cause fire, burns, injury, electric shock, etc. For details on water and dust resistance, see "Water & Dust Resistance"

\bigcirc
Prohibited

Do not charge handset while it is wet with water or other liquids (drinking water, sweat, sea water, pet urine, etc.).

Do not charge handset near water (in the bathroom, near a humidifier, etc.).

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water & Dust Resistance"

Prohibited

Do not apply excessive force to or break handset. Particularly when carrying handset in your clothes pocket, do not bump it or place it between objects.

Internal Battery breakage may cause fire, burns, injury, etc.

* Examples of where to be careful

 \cdot Sitting or squatting with handset in your pants or skirt pocket

 \cdot Handset becoming caught in a sliding door or vehicle door when in a jacket pocket

 \cdot Stepping on handset when it is on something soft such as a sofa, bed, or futon or on the floor

 \cdot Handset becoming caught in a seat on a train or bus



Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.

Do not try to remove Internal Battery from handset.

May cause fire, burns, injury, etc.

Handset Back Cover cannot be removed. Do not try to remove.

May cause fire, burns, injury, etc.



Do not wet with water or other liquids (drinking water, sweat, sea water, pet urine, etc.).

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water & Dust Resistance"



Do not let water or other liquids (drinking water, sweat, sea water, pet urine, etc.) enter charging terminals or External Connection Jack.

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water & Dust Resistance"



Use optional accessories specified by SoftBank Corp.

Using third party accessories or those whose manufacturer, distributor, or specifications are unclear may result in fire, burns, injury, electric shock, etc.

A WARNING

Do not drop, stomp, throw or subject to excessive force or strong impact/vibration.

May cause fire, burns, injury, electric shock, etc.

Prohibited

Keep conductive materials (metal strip, pencil lead, etc.) away from charging terminals and External Connection Jack. Do not let dust enter them.

May cause fire, burns, injury, electric shock, etc.

Do not cover/wrap with a blanket, etc. while using or charging.

May cause fire, burns, etc.

Prohibited

Do not adhere metallic objects (e.g. stickers made of materials containing metal) on the wireless charger or handset.

It may cause fire, burns, injury, etc.

Prohibited

Do not place objects that contain metal (straps, clips, etc. made of materials containing metal) between the wireless charger and handset.

It may cause fire, burns, injury, etc.



When caring for equipment, ensure that no disinfectant or water enters gaps, Charging Terminal, External Connection Jack, Earphones-Microphone Jack, Earpiece/Speaker, Mic/ Recorder Mic, Mic, or Speaker.

Handset breakage may cause electric shock, etc.

Compulsor

When charging with wireless charger, remove any covers on handset.

Thickness of cover material or dust, etc., between handset and cover may prevent charging and/or cause fire, burns, injury, etc.

Compulsor

If charging continues even after specified Charging Time, stop charging.

Failure to do so may cause fire, burns, injury, etc. due to overcharge or for other reasons.

Compulso

When entering very dusty locations or locations where flammable gases are generated, be sure to power off handset beforehand and stop any charging in progress.

May ignite flammable gases, etc. and cause explosion, fire, etc.

Compulse

Use in facilities such as gas stations should be in accordance with the facility guidelines.

Do not charge handset in facilities such as gas stations. Take care not to drop handset in facilities such as gas stations and in particular do not use while refueling. May ignite flammable gases, etc. and cause explosion, fire, etc.



If there is abnormal odor/sound, smoke, overheating, discoloration, distortion, or other abnormalities during use, charging, or storage, do the following while exercising caution.

· Unplug from the outlet.

· Power off handset.

Failure to follow the above steps may cause fire, burns, injury, electric shock, etc.

Do not use if broken.

May cause fire, burns, injury, etc.

Do not place on unstable surfaces; take added care when vibration is set.

Handset or related hardware may fall, resulting in injury, etc.

Do not use or store in a location that is subject to excessive dust, high humidity, or high temperatures.

May cause fire, burns, electric shock, etc. For details on water and dust resistance, see "Water & Dust Resistance"

For use by a child, explain instructions and supervise use.

May cause accidental swallowing, injury, electric shock, etc.

Prohibited

Do not leave within the reach of small children or pets.

Take particular care with storage locations for small parts such as Card Tray, Quick Switch Adapter, and SIM Removal Tool.

May cause accidental swallowing, injury, electric shock, etc.

Compulsor

Use handset with caution, as it may become hot with continued use or while charging. Be careful not to place handset in clothes pocket, etc. and fall asleep, allowing unintentional continued contact.

Handset or AC Adaptor may become hot after continued use of applications, call functions, data communication and video viewing functions, etc. or while charging. Continuous direct contact with hot surfaces may cause skin redness, itching, rash, or low-temperature burns depending on your individual physical condition. Be careful when putting it in a clothing pocket or sleeping. Handset

🕂 DANGER



Do not throw into a fire or apply heat.

May cause fire, burns, injury, etc.



Do not pierce with a sharp object (nail, etc.), hit with a hard object (hammer, etc.), step on, or otherwise subject to excessive force.

May cause fire, burns, injury, etc.



If substance in handset gets in eyes, mouth, etc., rinse with clean water and consult a doctor immediately.

Substances in handset may cause loss of sight or other physical harm.

A WARNING

Do not shine Mobile Light close to eyes. Maintain a safe distance, especially from small children.

May cause visual impairment or other problems; may temporarily affect eyesight or startle, leading to injury or other accident.

Prohibited

Do not point Mobile Light at drivers when it is turned on.

May hinder driving performance, leading to an accident.

Do not stare at Display for a long period when it is flickering.

May cause spasms, loss of consciousness, etc.

Do not let water or other liquids (drinking water, sweat, sea water, pet urine, etc.) or a foreign object (metal strip, flammable material, etc.) enter SIM/SD Card Slot.

In addition, insert SIM Card and SD Card into correct openings in correct orientation.

May cause fire, burns, injury, electric shock, etc.

Do not expose Camera lens to direct sunlight for an extended period.

May cause fire, burns, injury, etc. due to light-collecting mechanism of the lens.

Do not look into Proximity Sensor.

May temporarily affect eyesight, leading to accidents.





Power off handset or activate Airplane mode before boarding an airplane.

Handset use on airplanes is restricted; follow the instructions given by the respective airlines. Radio waves may adversely affect an airplane's electronic devices.

If you engage in a prohibited activity while using handset on an airplane, you may be punished by law.



Regarding handset use in a hospital, follow the instructions given by the respective medical institution.

Power off handset where handset use is prohibited. Radio waves may adversely affect an airplane's electronic devices or electronic medical devices.

0
Compuls

When you are on a handsfree call, while ringtone is playing loudly, when in standby, etc., be sure to keep handset at a safe distance from your ears.

When you attach earphones-microphone to handset and play games, videos, or music, adjust the volume to a comfortable level beforehand.

When making a handsfree call, handset emits sound loudly. Even in standby, the ringtone or alarm may ring suddenly. Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty. In addition, not being able to hear surroundings may cause an accident.



If you have a weak heart, adjust ringtone vibration and volume as needed.

Handset suddenly vibrating and ringing for a new call may startle you and adversely affect your heart.



If you are using an electronic medical device, check with its manufacturer or vendor on radio wave effects before using handset.

Radio waves may adversely affect electronic medical devices, etc.

Compulsor

Power off handset near electronic devices that employ high precision control systems or weak signals.

Radio waves may cause electronic devices to malfunction or may adversely affect the operation.

Take added care near these devices:Hearing aids, implanted pacemakers/defibrillators and other electronic medical devices; other automatic control devices. If you are using an implanted pacemaker, implanted defibrillator, or other electronic medical device, check with its manufacturer or the vendor on radio wave effects.



If Display or Camera lens breaks, be careful with broken parts and exposed handset parts.

Touching the broken or exposed parts may cause burns, injury, electric shock, etc.

Compulsory

If Internal Battery leaks or there is abnormal odor, discontinue use immediately and keep sources of flame away.

Leaked fluid may catch fire, causing the battery to ignite, burst, etc.

Compulsory

Do not let your pet bite handset.

May cause Internal Battery to ignite, burst, overheat, or leak, causing fire, burns, injury, etc.



When using the motion sensor and electromagnetic sensor, make sure of the safety around you and hold handset firmly; do not swing with excessive force.

Failure to do so may cause injury or other accident.



If Display breaks and substance in handset leaks, do not let it get on your skin (face, hands, etc.) or clothes.

May harm sight, skin, etc.

If substance in handset gets in eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water. If substance in handset gets in eyes, mouth, etc., rinse and

consult a doctor immediately.



Do not dispose of handset with regular trash.

May cause fire, burns, injury, etc. May also adversely affect the environment. When handset is no longer needed, take it to a SoftBank shop, or follow the local regulations regarding handset collection.



If substance in Internal Battery leaks, do not let it get on your skin (face, hands, etc.) or clothes.

May harm sight, skin, etc.

If substance in handset gets in eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water.

If substance in handset gets in eyes, mouth, etc., rinse and consult a doctor immediately.



When removing SIM Card, do not scratch your fingers or other part of yourself with point of SIM Removal Tool.

May harm sight, skin, etc.

Contact with point of SIM Removal Tool may cause injury, etc.

Compulsor

Before using handset in a vehicle, check with the manufacturer or dealer of the vehicle on radio wave effects.

In rare cases, radio waves may adversely affect operation of on-vehicle electronic devices, depending on the type of vehicle. If this occurs, discontinue use immediately.

Compulso

For any skin abnormalities associated with handset use, discontinue use and consult a doctor immediately.

Handset use may cause itchiness, skin irritation, rashes, etc. depending on your physical condition. For details on materials used for handset parts, see "Materials (Handset)."

Compulso

Earpiece/Speaker, Speaker, and Camera use magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Metal strip on handset may cause injury, etc.

Compulso

See Display in a sufficiently bright place at a reasonable distance.

Seeing in a dark place or at a close distance may deteriorate vision or cause other problems.

AC Adaptor (Optional Accessory), Wireless Charger (Sold Separately)



Do not use AC Adaptor or Wireless Charger if the cord is damaged.

May cause fire, burns, electric shock, etc.

Do not touch AC Adaptor or Wireless Charger if thunder is audible.

May cause electric shock, etc.

Do not short-circuit charging terminals when AC Adaptor is plugged into the outlet. In addition, keep your hands and other body parts away from charging terminals.

May cause fire, burns, electric shock, etc.



Do not place a heavy object on top of AC Adaptor or Wireless Charger cord; do not apply excessive force by pulling, etc.

May cause fire, burns, electric shock, etc.

When plugging/unplugging AC Adaptor, keep metal objects away.

Failure to do so may cause fire, burns, electric shock, etc.

Do not use a voltage converter (travel converter for overseas use, etc.) when charging with AC Charger.

May cause ignition, overheating, electric shock, etc.



When AC Adaptor is connected to handset, do not apply excessive force to the connection.

May cause fire, burns, injury, electric shock, etc.

Do not use wireless charger to charge anything that is wet due to contact with water or other fluids (beverages, sweat, seawater, pet urine, etc.).

Do not charge handset near water (in the bathroom, near a humidifier, etc.).

It may cause fire, burns, injury, electric shock, etc.



Do not touch AC Adaptor cord, charging terminals, power plug, or Wireless Charger with wet hands.

May cause fire, burns, electric shock, etc.

Compulsory

Use at the specified power supply voltage.

When charging handset overseas, use AC Adaptor designed for overseas use.

Use at other power supply voltages may cause fire, burns, electric shock, etc.

AC Adaptor:AC 100 V (connect to a household AC outlet only)

AC Adaptor designed for overseas use:AC 100 V - 240 V (connect to a household AC outlet only)



Wipe off any dust on the power plug.

Using Charger when dust is on plug may cause fire, burns, electric shock, etc.



Plug AC Adaptor into the outlet firmly.

Failure to do so may cause fire, burns, electric shock, etc.



When unplugging from the outlet, grasp AC Adaptor and pull, without forcefully pulling cord.

Pulling the AC Adaptor cord may damage the cord, causing fire, burns, electric shock, etc.



If you are using an implanted pacemaker, implanted defibrillator, or other electronic medical device, consult a doctor fully before using wireless charger.

Radio waves may adversely affect operation of electronic medical devices.



When inserting/removing USB Type-C plug into/ from handset, insert/remove it straight into/ from Jack, without forcefully pulling cord.

Inserting/removing in an incorrect orientation may cause fire, burns, injury, electric shock, etc.



If charging terminals become bent or deformed, discontinue use immediately. In addition, do not use AC Adaptor by restoring the terminals to their original state.

May cause fire, burns, injury, electric shock, etc. due to short-circuiting of charging terminals.



When not using AC Adaptor, unplug it from the outlet.

Leaving it plugged in may cause fire, burns, injury, electric shock, etc.



If splashed with water or other liquids (drinking water, sweat, sea water, pet urine, etc.), unplug from the outlet immediately.

Splashing can cause short-circuiting, causing fire, burns, electric shock, etc.



Before cleaning, unplug AC Adaptor from the outlet.

Cleaning AC Adaptor without unplugging it may cause fire, burns, electric shock, etc.

Do not touch AC Adaptor for long periods when it is plugged into the outlet.

May cause burns, etc.

SIM Card

A CAUTION

Compulsor

When handling SIM Card, be careful with cut edges so as not to damage your hands or other body parts.

Cut edges may be sharp and cause injury.

Quick Switch Adapter



Do not short-circuit terminals while connected to handset. Do not touch terminals with hands, fingers or any part of body.

May cause fire, burns, electric shock, etc.

When connecting/disconnecting Quick Switch Adapter to/from handset, keep metal objects away.

May cause fire, burns, electric shock, etc.

Prohibited

Do not apply excessive force to terminals while Quick Switch Adapter is connected to handset.

May cause fire, burns, injury, electric shock, etc.



Do not touch Quick Switch Adapter with wet hands.

May cause fire, burns, electric shock, etc.



Wipe off any dust on terminals.

Using the adapter with dust may cause fire, burns, electric shock, etc.



Insert Quick Switch Adapter into handset firmly.

Failure to do so may cause fire, burns, electric shock, etc.

Compulsor

If terminal is deformed or bent, discontinue use immediately. Also, do not use handset by restoring the deformed terminal.

Short circuit of the terminals may cause fire, burns, injury, or electric shock.



Do not touch Quick Switch Adapter continuously while it is plugged into handset.

May cause burns, etc.

Compulsor

For any skin abnormalities associated with handset use, discontinue use and consult a doctor immediately.

Handset use may cause itchiness, skin irritation, rashes, etc. depending on your physical condition. For details on materials used for handset parts, see "Materials (Handset)."

SIM Removal Tool



Tip of SIM Removal Tool is pointed. Do not use pointed at yourself or others.

Doing so may allow it to strike yourself or others, causing injuries or loss of sight.

Handset Use & Electronic Medical Devices



If you are using an electronic medical device (implanted pacemaker, implanted defibrillator, etc.), carry or use handset at least 15 cm away from where the device is.

Radio waves may adversely affect operation of electronic medical devices.



Before using an electronic medical device other than an implanted pacemaker or implanted defibrillator outside a medical institution (for home treatment, etc.), check with its manufacturer on radio wave effects.

Radio waves may adversely affect operation of electronic medical devices.



In a situation where you may not be able to maintain a distance of at least 15 cm from other persons, such as when your movement is restricted, disable radio wave emission by activating Airplane mode, powering off handset, etc.

There may be persons with an electronic medical device (implanted pacemaker, implanted defibrillator, etc.) nearby. Radio waves may adversely affect operation of electronic medical devices.



Regarding handset use in a medical institution, follow the instructions given by the medical institution.

Radio waves may adversely affect operation of electronic medical devices.

Important Product Information

General Use

- If your SIM Card or handset (with SIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact Customer Service.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places; may affect calls.
- · Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- \cdot Beware of eavesdropping.
- Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.
- Eavesdropping
- Deliberate/accidental interception of communications constitutes eavesdropping.
- Beware of harmful/malicious websites. Take added care when posting personal information.
- Handset uses an OEL display.
- The same image shown continuously and at a high brightness setting may burn into Display. It is recommended that you lower Display brightness/shorten time until Display turns off (sleep). Colors on an OEL display may also appear differently when viewed at an angle.
- An export license may be required to carry handset into other countries if it is to be used by or transferred to another person. However, no such license is required when taking handset abroad for personal use on a vacation or business trip and then bringing it back.
- Export control regulations in the United States provide that an export license granted by the US government is required to carry handset into Cuba, Iran, North Korea, Sudan or Syria.
- Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC).
 SoftBank Corp. is not responsible in any way for userinstalled applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Heat from Handset Use

- Depending on how or where used, interior of handset may become hot. Handset may then power off as a safety precaution.
- Let handset cool before powering on handset.

Camera

- Mind etiquette when using Camera.
- \cdot Test Camera before shooting special moments.
- Do not use Camera in places where shooting is prohibited.
- Shot images may not be used/transferred without copyright holder (photographer) permission, except for personal use.

Urgent News (Application)

- When Urgent News is received, handset notifies user via message, alert, and by vibrating.
 - \cdot Urgent News is enabled by default (can also be disabled).

• By default, Alert sounds at maximum volume even when Manner mode is set, and vibration is enabled regardless of Manner mode setting (can be changed).

See "緊急速報メールを利用する (https://www.softbank.jp/mobile/support/manual/smartphone/aquos-r7/menu/21796/)" (Japanese) for details on Urgent News

settings. • Alerts are not received during calls/transmissions or in poor

- Alerts are not received during calls/transmissions or in poo signal conditions.
- (Alerts can be received during voice calls over VoLTE.)
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.

Technical Regulations Conformity Certification

Handset conforms to technical regulations pursuant to the Radio Law and the Telecommunications Business Law. To check technical regulations conformity certification information (e.g., \bigoplus):

In Home Screen, ② (Settings) → About phone →

Voluntary Control of Radio Interference

Handset conforms to technical regulations pursuant to the Rules for Voluntary Control Measures of VCCI; the corresponding conformity mark is shown on electronic rating plate on handset. To check the electronic rating plate: In Home Screen, ③ (Settings) → About phone → Regulatory labels

Handset & Hardware Care

- Use handset within 5°C 35°C and 35% 85% humidity. For use in bathrooms, see "Cautions for Use in a Bathroom."
- · Avoid extreme temperature or direct sunlight.
- Handset/Internal Battery may become warm during operation or while charging. This is normal.
- \cdot Warranty does not cover malfunctions resulting from misuse.
- \cdot Wipe clean with a dry, soft cloth (such as for eye glasses).
- \cdot Wiping forcefully may scratch Display.
- \cdot Allowing moisture or smudges to remain on Display may leave blemishes.
- \cdot Wiping with alcohol, thinner, benzine, detergent, etc. may remove print or fade colors.
- Avoid scratching Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
- \cdot Do not sit or squat with handset in your pants or
- skirt pocket. Be careful in particular when wearing heavy clothing.

 \cdot Do not place heavy objects on handset inside handbags, packs, etc.

- Handset back cover is not removable. Do not try to remove it; may cause damage or malfunction, or affect water and dust resistance.
- Connect only specified products to Jacks. Other devices may malfunction or cause damage.
- Do not power off while using SD Card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- If thunder is audible while outdoors, discontinue use; there is a risk of lightning strike or electric shock.
- When holding handset, do not block Earpiece, Mic, Speaker, or Recorder Mic.
- Proximity Sensor prevents Touchscreen misoperation during calls. Do not cover or place a sticker/label over Proximity Sensor; Display may remain off during calls, disabling handset operation.
- If your hair is between Earpiece and your ear during calls, Proximity Sensor may not function properly.
 Display may remain on; touching Display accidentally may end the call.
- Do not cover Light Sensor or place a sticker/label over it; may hinder ambient light detection, resulting in malfunction of Light Sensor.
- Handset Earpiece is located at the center of Display upper end. If other party's voice is hard to hear during calls, hold handset so that Earpiece is next to your earhole for better audibility.

Display (Touchscreen)

- Touchscreen is designed to be touched lightly with fingers. Do not press Display strongly with fingers or press on it with sharp objects (fingernails, ballpoint pens, pins, etc.).
- Touchscreen may not respond even if touched in these situations. Operating the display as follows may cause it to malfunction:
 - Use with gloves¹
 - Use with long fingernails
 - Use with objects on/against Display
 - Use by sticking protective film or sticker, etc. on Display
 - Use while wet
 - Use when your fingers are wet or sweaty
 - Use underwater

 \cdot When using handset with gloves on, enable glove mode. To set:

In Home Screen, ② (Settings) → Display → glove mode ()

Quick Switch Adapter

• Keep Quick Switch Adapter free of water or other liquids (drinking water, sweat, sea water, pet urine, etc.) or a foreign object such as dust.

Quick Switch Adapter is not water and dust resistant. Do not use in high humidity (e.g., bathroom) or in rain, etc. With the adapter put on your body, the moisture from perspiration may corrode the inside and cause it to malfunction.

 \cdot Clean the terminals, etc. from time to time to maintain them in clean condition.

Use in a soiled condition may prevent normal use. Avoid damaging terminal when cleaning.

- \cdot Do not drop or subject to impact. May cause malfunction or damage.
- Do not subject to strong impact. Do not deform the terminal. May cause malfunction.

SIM Removal Tool

- \cdot Do not insert SIM Removal Tool in hole other than removal hole in Card Tray.
- May cause malfunction or damage.
- · Do not apply excessive force.
- May cause malfunction or damage.
- · Follow local rules regarding collection when disposing.
- Do not use SIM Removal Tool for any purpose other than described in this guide.
- May cause malfunction or damage.
- Do not use SIM Removal Tool in other mobile terminals. May cause malfunction or damage to mobile terminal.

Earphones-Microphone

Some earphones-microphones may not work properly.

• Do not subject Earphones-Microphone Jack to strong impact while using earphones-microphone; may affect water and dust resistance.

Forcing Power Off

If handset has stopped processing or won't respond to operation, power off forcibly as follows. Press and hold Power key and Volume Up key simultaneously for at least 8 seconds.

· Display goes out and handset powers off.

Bluetooth[®] Function

SoftBank Corp. is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth[®] function.

Precautions

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

 Before using Bluetooth[®], visually check that no other radio stations sharing the same frequency band are in use nearby.
 Should interference occur between handset and other radio stations, move it to a different location or cancel Bluetooth[®] function immediately.

3. For additional information and support, contact Customer Service.

Frequency Band

This radio station utilizes 2.4 GHz band.

FH:FH-SS modulation, with a maximum interference range of about 80 m.

XX:Other modulation, with a maximum interference range of about 40 m.

It is not possible for the radio station to avoid using the frequency band of a mobile unit identification apparatus.



Wi-Fi (Wireless LAN)

Wireless LAN (hereafter "Wi-Fi") uses radio waves to enable communication between compatible devices within range. However, it is advisable for the user to configure security settings to avoid risk of data interception.

- Do not use Wi-Fi near electrical appliances, audiovisual equipment or office automation equipment; may affect Wi-Fi transmission speed, availability, clarity, etc. (Especially when a microwave oven is in use.)
- \cdot If there are multiple access points nearby, handset may not detect access points correctly.

■Precautions

The frequency band utilized by handset Wi-Fi is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

 Before using Wi-Fi, visually check that no other radio stations sharing the same frequency band are in use nearby.
 Should interference occur between handset and other radio stations, move it to a different location or disable Wi-Fi immediately.

3. For additional information and support, contact Customer Service.

· Frequency Band

This radio station utilizes 2.4 GHz and 5 GHz bands. • 2.4 GHz band

DSSS-OFDM modulation, with a maximum interference range of 40 m.



Handset supports Wi-Fi channels 1 - 13. Handset does not connect to access points set to other channels.

 \cdot Channels in 5 GHz band

Three bands are available within 5 GHz frequency band:5.2 GHz, 5.3 GHz, and 5.6 GHz (W52, W53, and W56).

- · W52 (5.2 GHz band; channels 36, 40, 44, 48)
- · W53 (5.3 GHz band; channels 52, 56, 60, 64)
- W56 (5.6 GHz band; channels 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144)

Use of 5.2 GHz or 5.3 GHz band wireless LAN for outdoor communication is prohibited by law (excluding communication with the access points and relay stations of high-output data communications systems operating in the 5.2 GHz band). Although 5.8 GHz band wireless LAN (W58/149, 153, 157, 161, 165 ch) is also available in the 5 GHz frequency band, you cannot use in Japan under the law.

■Simultaneous Use with Bluetooth®

Wi-Fi (IEEE 802.11b/g/n/ax) and Bluetooth® transmit on the 2.4 GHz band. Enabling handset Bluetooth® or using Bluetooth® devices near handset may affect Wi-Fi transmission speed, availability and clarity. Should interference occur, cancel handset Bluetooth® or discontinue Bluetooth® device use.

- \cdot Available channels vary by country.
- For use of Wi-Fi aboard aircraft, check with airline beforehand.

• In some countries/regions, there are restrictions on the use of Wi-Fi. Check the local laws and regulations before using Wi-Fi on handset abroad.

FeliCa and NFC Reader/Writer

- FeliCa and NFC Reader/Writer of handset is designated as inductive reading-and-writing communication equipment under the Radio Law.
- It uses the 13.56 MHz frequency band. If other FeliCa and NFC reader/writers are used nearby, keep an adequate distance from them.
- Also, make sure that other radio wireless stations using the same frequency bands are not nearby.
- Before using aboard an aircraft, check with the airline beforehand. Use may be restricted depending on the country.
- Be sure to check laws and other conditions of the country/ region.
- · Designation can be checked as follows.
- In Home Screen, ③ (Settings) → About phone → Regulatory labels

General Notes

"A202SH" here refers to this mobile phone "AQUOS R7."

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use Camera responsively.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without copyright holder permission may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images shot with Camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software; do not separate it from hardware in whole or part.

Open Source Software

• Handset contains software based on GNU General Public License (GPL), GNU Lesser General Public License (LGPL), and other licenses.

To check details of relevant software licenses:

• The source code of software based on GPL, LGPL, and Mozilla Public License (MPL) is provided on the following website free of charge.

http://k-tai.sharp.co.jp/support/developers/oss/ (Japanese)

Regulatory Information

In some countries/regions including Europe*1, there are restrictions on the use of 5GHz WLAN that may limit the use to indoors only.

Please check the local laws and regulations beforehand.

*1 Belgium [BE], Bulgaria [BG], Czech Republic [CZ], Denmark [DK], Germany [DE], Estonia [EE], Ireland [IE], Greece [EL], Spain [ES], France [FR], Croatia [HR], Italy [IT], Cyprus [CY], Latvia [LV], Lithuania [LT], Luxembourg [LU], Hungary [HU], Malta [MT], Netherlands [NL], Austria [AT], Poland [PL], Portugal [PT], Romania [RO], Slovenia [SI], Slovakia [SK], Finland [FI], Sweden [SE], United Kingdom (Northern Ireland) [UK(NI)], Switzerland [CH], Liechtenstein [LI], Iceland [IS] and Norway [NO].

Norway:Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of Ny-Alesund, Svalbard.

Hereby, SHARP CORPORATION declares that the radio equipment type A202SH is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://jp.sharp/k-tai/

Manufacturer's Address: SHARP CORPORATION, 1 Takumi-cho, Sakai-ku, Sakai-shi, Osaka 590-8522, Japan

Frequency Range of Supported Bands in EU

Item	Description
CS14 000	Tx 880.2 to 914.8 MHz
GSM 900	Rx 925.2 to 959.8 MHz
DCS 1800	Tx 1710.2 to 1784.8 MHz
	Rx 1805.2 to 1879.8 MHz
WCDMA FDD I	Tx 1922.4 to 1977.6 MHz
	Rx 2112.4 to 2167.6 MHz
WCDMA FDD	Tx 882.4 to 912.6 MHz
VIII	Rx 927.4 to 957.6 MHz
LTE Band 1	Tx 1922.5 to 1977.5 MHz
	Rx 2112.5 to 2167.5 MHz
LTE Band 3	Tx 1710.7 to 1784.3 MHz Rx 1805.7 to 1879.3 MHz
LTE Band 7	Tx 2502.5 to 2567.5 MHz Rx 2622.5 to 2687.5 MHz
LTE Band 8	Tx 880.7 to 914.3 MHz Rx 925.7 to 959.3 MHz
	Tx 834.5 to 859.5 MHz
LTE Band 20	Rx 793.5 to 818.5 MHz
	Tx 2572.5 to 2617.5 MHz
LTE Band 38	Rx 2572.5 to 2617.5 MHz
	Tx 2302.5 to 2397.5 MHz
LTE Band 40	Rx 2302.5 to 2397.5 MHz
	Tx 2402 to 2480 MHz
Bluetooth	Rx 2402 to 2480 MHz
WI AN 2.4 CH-	Tx/Rx 2412 to 2472 MHz (BW:20MHz)
WLAN 2.4 GHz	Tx/Rx 2422 to 2462 MHz (BW:40MHz)
	W52 (U-NII 1):
	Tx/Rx 5180 to 5240 MHz (BW:20 MHz)
	Tx/Rx 5190 to 5230 MHz (BW:40 MHz)
	Tx/Rx 5210 MHz (BW:80 MHz)
	W53 (U-NII 2A): Tx/Rx 5260 to 5320 MHz (BW:20 MHz)
	Tx/Rx 5270 to 5310 MHz (BW:40 MHz)
WLAN 5 GHz	Tx/Rx 5290 MHz (BW:80 MHz)
	W52/W53:
	Tx/Rx 5250 MHz (BW:160MHz)
	W56 (U-NII 2C):
	Tx/Rx 5500 to 5700 MHz (BW:20 MHz)
	Tx/Rx 5510 to 5670 MHz (BW:40 MHz)
	Tx/Rx 5530 to 5610 MHz (BW:80 MHz) Tx/Rx 5570 MHz (BW:160MHz)
NFC	Tx/Rx 13.56 MHz
	GPS:Rx L1 (1575.42 MHz)
	GLONASS:Rx G1 (1598.0625 to 1605.375
	MHz)
GNSS	Galileo:Rx E1 (1575.42 MHz)
	BeiDou:Rx B1 (1561.098 MHz)
	GPS:Rx L5 (1176.450 MHz)
	Galileo:Rx E5a (1176.450 MHz)

Maximum Transmit Power

ltem	Description
GSM 900	+33 dBm (Power Class 4)
DCS 1800	+30 dBm (Power Class 1)
WCDMA FDD I	+24 dBm (Power Class 3)
WCDMA FDD VIII	+24 dBm (Power Class 3)
LTE Band 1	+23 dBm (Power Class 3)
LTE Band 3	+23 dBm (Power Class 3)
LTE Band 7	+23 dBm (Power Class 3)
LTE Band 8	+23 dBm (Power Class 3)
LTE Band 20	+23 dBm (Power Class 3)
LTE Band 38	+23 dBm (Power Class 3)
LTE Band 40	+23 dBm (Power Class 3)
Bluetooth	+11.0 dBm (Power Class 1)
WLAN 2.4 GHz	+15.0 dBm
WLAN 5 GHz	+15.0 dBm
NFC	O dBµA/m at 10m

Battery Cautions

Use specified Charger only.

Non-specified equipment use may cause Internal Battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.

Battery is built into handset. Do not dispose of handset with ordinary refuse; take it to a SoftBank Shop for appropriate disposal.

Charge handset in ambient temperature 5°C - 35°C; Internal Battery may leak/overheat and performance may deteriorate outside this range.

Mobile Light

Do not shine Mobile Light in eyes. May temporarily affect eyesight or startle, leading to accidents.

Volume Level Caution

To prevent possible hearing damage, do not listen at high volume levels for long periods.



FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

■FCC Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.

2. Increase the separation between the equipment and receiver.

3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

4. Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information of This Product

[A202SH] here refers to this mobile phone [AQUOS R7] .

RF Exposure Information of This Product (for Japan)

This mobile phone [A202SH] is compliant with the Japanese technical regulations^{*1} on human exposure to radio frequency (RF) electromagnetic energy.

This mobile phone is designed to comply with the Japanese technical regulations on human exposure to RF electromagnetic energy. The regulations establish the permissive limits of the energy, that are consistent with the restrictions set by ICNIRP*² which is in collaboration with the World Health Organization (WHO) and ICES*³ of IEEE and include substantial safety margins designed to assure the safety of all persons regardless of age and health.

The permissive limits are defined as SAR (Specific Absorption Rate) for the frequencies under 6 GHz and PD (Power Density) for the frequencies over 6 GHz in the regulation. For mobile phones, the stipulated permissive levels are: SAR 2.0 W/kg, PD: 2 mW/cm². The regulations also stipulate the indication of Combined Radiation Ratio (CRR), which summarizes the compliance with the limits, on condition that mobile phone supports simultaneous transmission of the frequency bands that should be evaluated by each corresponding limit. Mobile phones which CRR is less or equal than 1 qualifies the permissive limits.

The CRR values for this mobile phone are: 0.741^{*4, *5} when tested for use at the ear, and 0.532^{*4, *5} when worn on the body. The actual SAR and PD of mobile phones while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to access the mobile network(s). There may be slight differences in SAR and PD levels for each product, but they all satisfy the permissive limits.

This mobile phone can be used at positions other than at the ear. By using accessories such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body, this mobile phone is certified the compliance with the Japanese technical regulations.

*1 The technical regulations are provided in the Article 14-2 of the Ministry Ordinance Regulating Radio Equipment. *2 International Commission on Non-Ionizing Radiation Protection

*3 ICES: International Committee on Electromagnetic Safety *4 The value is under simultaneous transmission use conditions.

*5 The values of SAR and PD that the CRR values are calculated are as follows: For temporal region (near ear), SAR: 1.481 W/kg, PD: 0 mW/cm²; For body-worn, SAR: 0.305 W/kg, PD: 0.759 mW/cm².

WHO has announced that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

For more information about RF exposure information, see the following websites:

 Ministry of Internal Affairs and Communications (MIC) https://www.tele.soumu.go.jp/e/sys/ele/body/index.htm
 Association of Radio Industries and Businesses (ARIB) https://www.arib-emf.org/01denpa/denpa02-02.html

(Japanese)

 \cdot World Health Organization

https://www.who.int/news-room/fact-sheets/detail/ electromagnetic-fields-and-public-health-mobile-phones

 \cdot List of Specific Absorption Rates (SAR) for radio waves by smartphone/3G model

https://www.softbank.jp/mobile/support/sar/ (Japanese)

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear is 0.20 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body. In this case, the highest tested SAR value is 1.11 W/kg* at the separation distance of 0.5 cm from the body. For electronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with RF exposure guidelines.

* The tests are carried out in accordance with international guidelines for testing.

Simplified Declaration of Conformity for 【A202SH】 Hereby, SHARP CORPORATION declares that the radio equipment type 【A202SH】 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:https://jp.sharp/k-tai/.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 0.31 W/kg, and when worn on the body in a holder or carry case, is 0.75 W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements

may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/ after searching on FCC ID APYHRO00315.

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at https://www.fcc.gov/general/ radio-frequency-safety-0.

FCC ID Location

The device is electronically labeled and the FCC ID can be displayed from Home Screen as follows: In Home Screen, (Settings) → About phone → Regulatory labels.

Water & Dust Resistance

Handset Water & Dust Resistance

Handset has IPX5¹-, IPX8²-equivalent water protection and IP6X³-equivalent dust protection with Card Tray closed firmly leaving no gap between handset and Card Tray.

1 IPX5 compliant means that a handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter:6.3 mm), from all directions (approximately 3 m from handset) for at least 3 minutes.

2 IPX8 compliant means that a handset continues to function as a phone after being gently submerged to the depth of 1.5 m in still tap water at room temperature, left there for approximately 30 minutes, then removed from it. 3 IP6X compliant means that a handset continues to function as a phone and its safety is maintained after being agitated in a device containing dust of 75 μ m or smaller in diameter for 8 hours and then removed from the device.

- Water and dust resistance may be affected under some circumstances. Warranty does not cover malfunctions resulting from misuse.
- Handset is compliant with IPX5 and IPX8 water protection standards as well as IP6X dust protection standard.
 However, ingress of dirt, sand, mud, metal powder, food, beverage, sea water, etc. may cause malfunction.

■Handset Care

• Close Card Tray firmly leaving no gap between handset and Card Tray. Any debris (single hair, grain of sand, minute fiber, etc.) trapped between gasket and contacting surface may allow ingress of water/dust.

• If handset is exposed to liquids with Card Tray open, they may enter handset and cause electric shock or malfunction. Discontinue use and power off.

 \cdot If handset is wet, wipe it with a dry cloth.

 \cdot Never open/close Card Tray with wet hands or while handset is wet or has a foreign object adhered to it.

• Do not use Earphones-Microphone Jack or External Connection Jack while it is wet or obstructed by sand/ dirt; may affect water and dust resistance or may cause malfunction, burns or fire due to electric shock, shortcircuiting, etc.

 \cdot Handset is only water resistant against fresh/tap water between 5°C - 35°C.

Precautions

- Do not subject handset to soap, detergent, bath powder/oil, sea/pool/spa water, hot water, etc.
- Rinse off sea/pool water, beverage, dirt, sand, mud, etc. immediately with fresh/tap water between 5°C - 35°C; residue may cause malfunction if allowed to dry.
- Do not soak handset in bath or pool; never use it in water (including key operation).
- Handset is not resistant to water pressure. Avoid highpressure water/shower (over 6 liters/min.) and water immersion.
- Do not expose handset to high humidity for long periods; avoid prolonged use in bath/shower rooms.
- Volume may be low when an opening such as Mic, Recorder Mic, Earpiece or Speaker is wet; dry handset before use (see "Drying Handset").
- AC Adaptor and other optional accessories are not waterproof or dustproof. Do not use in high humidity or where exposed to water (e.g., outdoors, in bathrooms, at sinks, etc.). May cause fire, electric shock, or malfunction.
- Do not subject handset to strong impact (e.g., from a fall); do not poke Mic, Earpiece, Speaker, Recorder Mic, etc. with a sharp object; may affect water and dust resistance.
- Avoid placing handset directly on sand. Sand may penetrate Earpiece, Speaker, etc., resulting in low volume.
- To prevent condensation, warm handset to room temperature before bringing it from a cold place into a warm place such as a bathroom. If condensation occurs, leave handset at room temperature until it is dry.
- \cdot Handset does not float on water.
- \cdot Keep handset out of heavy rain.

Cautions for Use in a Bathroom

 Do not let handset get wet with liquids other than tap water at room temperature (spa water, soapy water, detergent solutions, bubble bath water, etc.); do not submerge it in a bathtub.

May cause malfunction.

If handset gets exposed to liquids other than tap water or falls in a bathtub, wash it in the specified way.

 \cdot Use handset at 5°C - 40°C with humidity of 99% or less, for up to 2 hours.

Note that this does not guarantee continuous operation of all functions.

• After exposing handset to water, be sure to remove moisture and let it dry naturally in the way specified in "Drying Handset."

Let handset dry naturally after using it in a bathroom or when condensation occurs inside Camera lens, etc.

- · Be careful not to splash hot water on handset.
- Extreme temperature changes may cause condensation.
 Wait until handset reaches room temperature before bringing it from a cold place into a warm bathroom.
 In addition, do not splash cold water on handset when it is warm in a bathroom.
 - May cause malfunction.
- \cdot Never charge handset in a bathroom.
- Depending on the layout and condition of a bathroom, handset may not receive a signal (call functions and data communication may be unavailable).
- If operated with wet hands, handset may not respond or may malfunction.
- \cdot Do not use in a bath room with earphones or other external device connected.
- · Disable glove mode beforehand as follows.

In Home Screen, ② (Settings) → Display → glove mode ()

Charging Cautions

• Never connect a USB Type-C plug while handset or AC Adaptor is wet.

Handset is water resistant; however, if a USB Type-C plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or a USB Type-C plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.

• Do not use AC Adaptor where water is regularly in use (kitchens, bathrooms, shower rooms, etc.); may cause fire or electric shock.

Care & Maintenance

Proper care of Card Tray gasket is crucial for continued handset water and dust resistance. Observe the following:
Do not remove or damage gasket.

Keep it clean.

- \cdot If Card Tray is damaged or deformed, contact a SoftBank Shop.
- Do not insert a sharp object into Card Tray gap, Earphones-Microphone Jack or External Connection Jack.
- To maintain water and dust resistance, it is recommended to replace Card Tray every 2 years regardless of its condition. Customer-requested Card Tray replacement incurs fees and requires handset submission. For details, contact a SoftBank Shop or Customer Service.

Washing Handset

Wipe off dirt, sand, beverage, etc., gently with a cloth. Then hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at room temperature (5° C - 35° C). Wash with your hands, holding Card Tray so it makes no gap with handset; do not use a brush or sponge. Dry handset before use; after drying it well, power on.

- Before washing handset, make sure that Card Tray is closed firmly leaving no gap between handset and Card Tray.
- \cdot Do not use a washing machine or ultrasonic cleaner.
- Earphones-Microphone Jack and External Connection Jack tend to accumulate dust, sand, etc.; rinse and dry them completely before use. Any residue may cause malfunction, burns or fire.
- Do not put a cotton swab, cloth, etc. into Earphones-Microphone Jack or External Connection Jack; may affect water resistance, causing malfunction.

Drying Handset

After exposing handset to water, be sure to dry Earpiece/ Speaker, Volume Keys, Power Key, Speaker, External Connection Jack, Mic/Recorder Mic, Earphones-Microphone Jack, Mic, and Camera ornament.

1

Wipe handset surface with dry cloth

2


Holding handset firmly by its sides, shake it about 20 times



- When shaking handset, hold it firmly so as not to drop it.
- \cdot Shake with circled \bigcirc portion downward to drain water from all holes and gaps.

3

Pat against dry cloth to remove moisture from openings and arooves

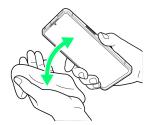

• Water may be trapped in openings; pat against a dry cloth to remove it.

4

Leave handset on dry cloth for approximately 2 - 3 hours at room temperature

Handset is dried.

Cautions

When Removing Moisture

Do not put a cotton swab, cloth, etc. into openings; may affect water and dust resistance.

After Drying Procedure

Do not use handset in wet conditions.

- \cdot Calls may fail, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit Earphones-Microphone Jack, External Connection Jack or other parts.
- \cdot Exposure to cold may freeze moisture and cause malfunction.

A

About Settings	140
About the User Guide	3
Adding/Deleting Applications	113
Address Book	
Applications	111
AQUOS Tricks Settings	159

AQUOS R7 User Guide Index

В

Backup & Restore	120
Basic Operations	
Battery Runs Out Quickly	209
Battery Settings	146

C

Calling from Outside Japan203
Cannot Charge / Charging Stops / Charging Is Slow 209
Cannot Connect to Internet212
Cannot Send/Receive Mail212
Cannot Talk on Phone / Cannot Hear Other Party 213
Cannot Use Applications213
Cannot Use SD Card211
Capturing Photos/Videos96
Capturing Screenshots (Clip Now)56
Charging Handset19
Checking Notifications (Notifications Window)52
Checking Notifications (Quick Settings Window)
Confirmation when First Activating Applications 108
Connecting by Wi-Fi126
Customer Service218

D

Data Usage Settings	141
Display Settings	153
Display Turns Off Suddenly	210

E

eSIM	 	8

B

File	Storage	120
------	---------	-----

G

General Notes	. 233
Global Roaming	202
Google Account	24

Ð

Handset & Hardware Care	231
Handset Does Not Power On	208
Handset Phone Number	76
Handset Powers Off	208
Handset Screens	44

0

Icons at Display Top (Status Bar)	50
Important Product Information	.230
Importing Data from Other Mobiles	. 121
Internal Storage and SD Card	14

Listening to Music (YT Music)10)2
Location Settings17	7

M

Making Initial	Settings 21	
Making Phone	Settings77	7

0

Optional Services69)
Other Handset Settings184	ł

P

Package Contents	6
Parts & Functions	6
Placing/Answering Calls	64
Power On/Off	20
Privacy Settings	176

R

RF Exposure I	Information of	of This	Product	236
---------------	----------------	---------	---------	-----

S

Safety Precautions	220
Screen Freezes / Operation Is Unstable	210
Scrolling Screen Automatically (ScrollAuto)	57
Security Settings	165
Sending Messages (+メッセージ (+Message))	
SIM Card	11
SIM Card Not Recognized	211
Sound Settings	148
Specifications	216
System Settings	178

Ī	

Text Entry......35

U

Unlocking Screen	27
Updating the System	
Using Airplane Mode	
Using Bluetooth® Function	132
Using Fingerprint Authentication Function	
Using Gaming Menu	59
Using Gmail	85
Using Manner Mode	32
Using ROBOQUL	40
Using Tethering	137
Using the Internet (Chrome)	90
Using Touchscreen	31

V

Viewing & Managing Photos/Videos (Photos)......104

W

Warranty & After-Sales Service	. 216
Water & Dust Resistance	. 237

AQUOS R7 User Guide

August 2022, First Edition SoftBank Corp.

Visit SoftBank Shop for assistance

Model : AQUOS R7 Manufacturer : SHARP CORPORATION