DIGNO® BX3
DIGNO® BX3 Cameraless
DIGNO® BX3 Plus
User Guide

DIGNO® BX3 DIGNO® BX3 Cameraless DIGNO® BX3 Plus User Guide Contents

Introduction	
Introduction	3
Preparing to Use Handset	
Package Contents	6
Parts & Functions	
eSIM	
USIM Card	
SD Card	
Charging Battery	
Power On/Off	
Making Initial Settings	
Setting a Google Account	
Waking Handset from Sleep	
waking riandset from Sieep	22
Pacis Operations	
Basic Operations	
Basic Operation	
Using Touchscreen	
Silent Mode	
Airplane Mode	
Text Entry	
Updating Software	28
Handset Interface	
Handset Screens	32
Status Bar	
Using Notifications Window	35
Using Quick Settings	
Phone	
Placing/Answering Calls	70
Optional Services	
Phone Number Using Contacts	
Using Contacts	47
Managaine	
Messaging	
+Message	
Using Gmail	50
Internet	
Using Chrome	54
9	
Camera	
Capturing Still Images/Videos	
Viewing Still Images/Videos (Photos)	60
Application Basics	
Applications	62
Adding/Deleting Applications	63
Wi-Fi/Bluetooth®	
Connecting by Wi-Fi	68
Using Bluetooth® Function	69

Handset Settings
Handset Settings72
Data Usage Settings73
Battery Settings74
Display Settings75
Sound & Vibration Settings75
Security & Privacy Settings76
System Settings78
Other Settings78
Global Services
Global Roaming
Making Calls while Abroad
Warranty & After-Sales Service
Specifications
Customer Service93
Safety Precautions
Safety Precautions96
General Notes
Specific Absorption Rate (SAR) for This Product105
Water/Dust/Shock Resistance Cautions106
Intellectual Property Rights110

Introduction

Thank you for purchasing DIGNO® BX3/DIGNO® BX3 Cameraless/DIGNO® BX3 Plus.

Before You Begin

- DIGNO® BX3/DIGNO® BX3 Cameraless/DIGNO® BX3 Plus are referred to as "handset" in this guide.
- \cdot Read "Safety Precautions" and this guide thoroughly beforehand for proper usage.
- \cdot Accessible services may be limited by contract conditions.
- · Unauthorized copying of any part of this guide is prohibited.
- · Guide content subject to change without prior notice.
- \cdot Contact SoftBank Customer Support, General Information if you find inaccuracies.

Guide Usage Notes

This guide describes DIGNO® BX3, DIGNO® BX3 Cameraless, and DIGNO® BX3 Plus functions.

Illustrations, operation steps, etc. are described based on ${\tt DIGNO^{\otimes}\ BX3\ Plus}.$

Note how descriptions may or may not apply as follows.

Applicability of Description	Functions
Functions unavailable with DIGNO® BX3, DIGNO® BX3 Cameraless	NFC/FeliCa®, fingerprint recognition
Functions unavailable with DIGNO® BX3 Cameraless	Functions that use Camera (still image/ video capture, face recognition, etc.)
Function descriptions based on DIGNO® BX3 Plus	Handset exterior, screen, Apps Menu, handset setting items

- \cdot Most operation descriptions are based on default settings.
- · In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.
- · In this guide, microSD™/microSDHC™/microSDXC™ Card is referred to as "SD Card."

Data Communication

- Since constant Internet connection is possible with the product, data communication may be performed automatically.
- If you transmit a large amount of data, such as when downloading applications or watching video, data communication charges become high. Therefore, subscription to the flat-rate service for data communication charges is recommended.
- Depending on the applications or service you use, data communication charge may be applied even in Wi-Fi communication.

Screenshots & Key Labels

Screenshots and Key labels are provided for reference only.

Actual handset windows, menus, etc. may differ in appearance.

Preparing to Use Handset

rackage contents
Parts & Functions 6
eSIM8
USIM Card11
SD Card12
Charging Battery16
Power On/Off16
Making Initial Settings17
Setting a Google Account19
Waking Handset from Sleep22


Package Contents

Package Contents

- · Handset (DIGNO® BX3/DIGNO® BX3 Cameraless/DIGNO® BX3 Plus)
- · AC Charger [KYCFP1]
- ・クイックスタート (Japanese)

Parts & Functions

Handset (Front)

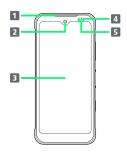


Part	Description
1 Earpiece/ Speaker	Hear the other party's voice, sound of music or video, etc. here.
2 Front Camera ¹	Use to shoot photos or videos of yourself.
3 Display	Touchscreen-type display, operate with your fingers on Display.
4 Notification/ Charging LED	Lights/flashes while charging, when powering handset on, etc.
5 Light/ Proximity Sensor	Detects surrounding brightness/prevents Touchscreen misoperation during call.

1 Not included with DIGNO® BX3 Cameraless.

Water Resistance

Handset is airtight to maintain water resistance (IPX8). Pressing handset forcefully may produce sound around Earpiece/Speaker, but this is not a function or performance abnormality.

Handset (Back/Side)

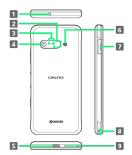

Part	Description
1 Earphone/ Microphone Jack	Connect an earphone/microphone.
2 NFC Location ¹	Hold this mark over a reader to use the NFC/FeliCa function.
3 Sub-Mic	Use when recording a movie sound.
4 Out- Camera ²	Capture photos and videos.
5 External Device Port	Connect AC Charger or USB Type-C [™] cable (sold separately)
6 Mobile Light	Use light when taking photos, etc.
7 Card Slot Cap	Insert USIM Card, SD Card.
8 Straphole	Attach a strap.
9 Mic	Speak here.

- 1 Not included with DIGNO® BX3 or DIGNO® BX3 Cameraless. A mark is imprinted at the NFC location on the DIGNO® BX3 Plus.
- 2 Not included with DIGNO® BX3 Cameraless.

Keys



Part	Description
1 Volume Up Key	Increase the volume.
2 Volume Down Key	Decrease the volume.
3 Power Key/ Fingerprint Sensor ¹	Turn Display on/off. Long Press for Emergency call/Power off/ Reboot/Screenshot menu; Long Press for power on when powered off. If your fingerprint is registered, you can unlock handset by fingerprint recognition.
4 Direct Key	Press once, twice, or long to activate the function assigned to each button operation.

1 Fingerprint Sensor not included with DIGNO® BX3 or DIGNO® BX3 Cameraless.

eSIM

eSIM is a type of SIM that is embedded in a device. If your device supports an eSIM, you only need to set up a service plan that you purchased with eSIM and start using it. You don't need a USIM card.

Handling eSIM

To learn about setting up your service plan with eSIM, see the following website.

https://www.softbank.jp/mobile/support/product/sim/

Download your service plan with eSIM

1



2

[SIM]



· If USIM Card is not inserted, proceed to step 4.



Add SIM



4

Download a new eSIM



Scan a QR code



- · This step may not be needed and skipped. In that case, the screen shows next step.
- · If using DIGNO® BX3 Cameraless, Tap Need help? Enter it manually \Rightarrow Enter code \Rightarrow Continue.

6

[Download]



Enter carrier confirmation code

Continue



8

[Close]



- Your service plan with eSIM is downloaded.
- Tap Settings to set eSIM. Continue by following onscreen instructions.

Enable or disable eSIM

Method to disable eSIM is described as an example.





2





3





eSIM is disabled.

· Use SIM () > Turn on to enable eSIM.

Erase your service plan with eSIM

1

In Home Screen, (Settings) (Settings) Network & internet



2

SIM

Select eSIM



3

[Erase SIM]



4

[Erase]



Your service plan with eSIM is erased.

Restart your service plan with eSIM after erasing it

Your service plan with eSIM is not terminated by erasing it. To restart it, you need a new QR code to download the plan again.

USIM Card

USIM Card is an IC card containing phone number and other customer information.

Handling USIM Card

For USIM card handling, see following items.



1 IC chip

For USIM card handling, see website below.

https://www.softbank.jp/mobile/support/protect/usim/

- · Always keep the IC chip clean.
- · Wipe clean with a dry, soft cloth.
- · Avoid applying labels. May damage USIM Card.

USIM Card Cautions


Observe the following when using USIM Card.

- Customer is responsible for any damage caused by inserting USIM Card in an other-brand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- · USIM Card is the property of SoftBank Corp.
- · USIM is replaceable (at cost) in case of loss/damage.
- Return USIM Card to SoftBank Corp. when cancelling subscription.
- Returned USIM Cards are recycled for environmental purposes.
- Note that USIM Card specifications and performance may change without notice.
- · It is recommended that you keep a separate copy of information that is stored on USIM Card. SoftBank Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your USIM Card or handset (USIM Card inserted) is lost/ stolen. For details, contact Customer Service.
- When inserting/removing USIM Card, always power off beforehand.
- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. SoftBank Corp. does not guarantee operation whatsoever.

Inserting USIM Card




Remove USIM Card/SD Card Tray from handset

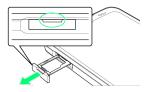

 Pull out gently in direction shown with fingernail in groove without bending.




Insert USIM Card

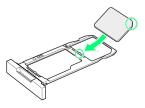

- Noting location of notch in USIM Card, insert with the IC (metal) part facing down. Inserting in the wrong orientation may allow USIM Card to fall out, or cause handset damage/ malfunction.
- Slide in USIM Card in direction shown, being careful not to damage notch on USIM Card/SD Card Tray.
- Make sure USIM Card is inserted completely in USIM Card/SD Card Tray and not jutting upward.



Insert USIM Card/SD Card Tray in handset

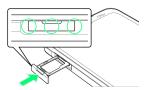


- USIM Card is inserted.
- \cdot Insert gently in direction shown without bending.
- Note orientation of USIM Card/SD Card Tray. Inserting in the wrong orientation may allow USIM Card to fall out, or cause handset damage/malfunction.
- Press firmly where circled O, and check that Card Slot Cap is not jutting out from handset.

Removing USIM Card




Remove USIM Card/SD Card Tray from handset

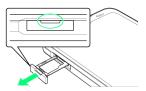

 \cdot Pull out gently in direction shown with fingernail in groove without bending.




Remove USIM Card from USIM Card/SD Card Tray

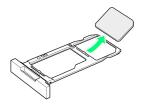

3

Insert USIM Card/SD Card Tray in handset

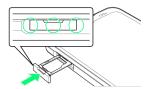

USIM Card is removed.

- \cdot Insert gently in direction shown without bending.
- Note orientation of USIM Card/SD Card Tray. Inserting in the wrong orientation may allow USIM Card to fall out, or cause handset damage/malfunction.
- \cdot Press firmly where circled \bigcirc , and check that Card Slot Cap is not jutting out from handset.

SD Card

Handset supports SD Cards up to 1 TB. Some SD Cards may not operate properly.

When using a new SD card for the first time, always format it on handset.

SD Card Cautions

Data

Information stored on SD Card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. SoftBank Corp. is not responsible for damages from data that is lost or changed.

Reading/Writing Data

Never power off while reading or writing data.

Battery Level

A low battery charge may prevent reading/writing to SD $\ensuremath{\mathsf{Card}}$


Handling SD Card

Use/store SD Cards away from the reach of infants. May cause choking if swallowed.

Inserting SD Card




Remove USIM Card/SD Card Tray from handset

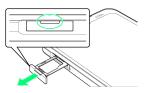

 Pull out gently in direction shown with fingernail in groove without bending. 2


Set SD Card in USIM Card/SD Card Tray

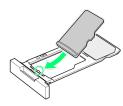

- \cdot Noting orientation of SD Card, insert with the terminal side facing down. Inserting in the wrong orientation may allow SD Card to fall out, or cause handset damage/malfunction.
- \cdot Slide in SD Card in direction shown, being careful not to damage notch on USIM Card/SD Card Tray.
- \cdot Make sure SD Card is inserted completely in USIM Card/SD Card Tray and not jutting upward.



Insert USIM Card/SD Card Tray in handset

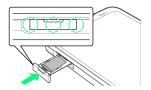

- SD Card is inserted.
- · Insert gently in direction shown without bending.
- · Note orientation of USIM Card/SD Card Tray. Inserting in the wrong orientation may allow USIM Card or SD Card to fall out, or cause handset damage/malfunction.
- \cdot Press firmly where circled \bigcirc , and check that Card Slot Cap is not jutting out from handset.

Formatting SD Card



In Home Screen, (Settings)





2

Storage









4





[Format]





[Format]



7

[Format]



8

[Done]



Handset erases all data in SD Card.

■ Formatting SD Card Cautions

Observe the following when formatting SD Card.

- \cdot Formatting erases all data on SD Card. Carefully check any SD Card that was used on another device before formatting.
- \cdot Charge Battery while formatting, or format with adequate battery charge.

Unmounting SD Card

In Home Screen,



(Settings)



2

Storage



3

This device 🗦 SD card







4








SD card is safely ejected" appears, and SD Card is unmounted.

Removing SD Card


Remove USIM Card/SD Card Tray from handset

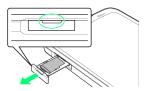


· Pull out gently in direction shown with fingernail in groove without bending.

2

Remove SD Card from USIM Card/SD Card Tray

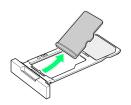

Insert USIM Card/SD Card Tray in handset

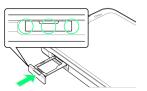

SD Card is removed.

- \cdot Insert gently in direction shown without bending.
- \cdot Note orientation of USIM Card/SD Card Tray. Inserting in the wrong orientation may cause handset damage/ malfunction.
- \cdot Press firmly where circled \bigcirc , and check that Card Slot Cap is not jutting out from handset.

Charging Battery

Charging Cautions

Never connect USB Type-C plug while handset or peripheral equipment is wet.

Charging with AC Charger

Be sure to use an AC Charger specified by SoftBank. For information on AC Charger and other peripheral devices, see SoftBank Website.

Charging with included AC Charger [KYCFP1] is described as an example.




Insert USB Type-C plug of AC Charger into External Device Port



· Holding plug by connector, insert without bending as shown.




Plug AC Charger into household AC outlet

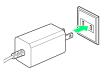

Notification/Charging LED lights up red when charging starts. Notification/Charging LED lights up green when charging ends.



When charging ends, unplug AC Charger from outlet, and disconnect from handset

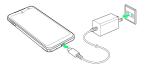

Charging ends.

Power On/Off

Powering On



Long Press Power Key/Fingerprint Sensor



- Start Screen appears.
- · See "Unlocking Start Screen" to unlock Start Screen.
- When handset is powered on for the first time, Long Press Power Key/Fingerprint Sensor for at least 5 seconds. After that, charge handset sufficiently.
- · Startup wizard appears the first time handset is powered on. See "Making Initial Settings" to make settings.

Powering Off



Long Press Power Key/Fingerprint Sensor



2

Power off



Handset powers off.

Making Initial Settings

When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google™ account, and other settings. Follow onscreen instructions to set items.

Making Initial Settings



Select language 🗦 Start



2

Select Wi-Fi network to connect to



- To skip Wi-Fi settings, select Set up offline . Continue by following onscreen instructions.
- To skip Wi-Fi settings with USIM Card inserted, select Use mobile network for setup / Set up offline . Continue by following onscreen instructions.



Follow onscreen instructions



- \cdot If Wi-Fi network selection screen appears, select Wi-Fi network to connect to again.
- · If USIM Card is inserted, proceed to step 5.



Download eSIM following onscreen instructions



5

Don't copy



• Tap Next to copy data from another mobile. Follow onscreen instructions.



Follow onscreen instructions



- For details on Google accounts, see "Setting a Google Account."
- · If not making Google account settings, Tap Skip 🥎 Skip



Follow onscreen instructions





[Accept]





Follow onscreen instructions



 \cdot If not setting a security method for Start Screen, Tap $$\operatorname{\mathsf{Skip}}$$.



Follow onscreen instructions





Follow onscreen instructions

- Tap Add a card to save credit card information. Follow onscreen instructions.
- · If not saving credit card information, Tap Skip .



Follow onscreen instructions to make other settings



· If not making other settings, Tap No thanks to complete settings.



[Next]



Settings are complete.

Setting a Google Account

Use a Google account and get more convenience with Google services. A Google account is required to use some services or fully use some applications.

Google Account Cautions

Be careful not to forget your Google account mail address or password.

Creating a Google Account

1

In Home Screen, (Settings)



2

Passwords & accounts



3

Add account



4

[Google]



Window for logging in to a Google account opens.

5

Create account



6

For my personal use



To create an account for a child or business management,
 Tap [For my child] / [For work or my business] and follow onscreen instructions.

7

Enter first name

Enter last name

Next





Enter date of birth \bigcirc Select gender \bigcirc Next





Select username (mail address)
Next



To create a username (mail address) you prefer, Tap Create
 your own Gmail address
 Enter username (mail address)
 Next

10

Enter password
Next



11

Yes, I'm in



- · If not adding a phone number, Tap Skip .
- \cdot To add a phone number for security purposes only, Tap $$\operatorname{\textsc{More}}$ options . Continue by following onscreen instructions.



[Next]



13



14

Follow onscreen instructions



15

[Accept]



Account is created.

Logging In with a Google Account

1

In Home Screen, (Settings)



2

Passwords & accounts



3

Add account



4

[Google]



Window for logging in to a Google account opens.

5

In window for logging in to a Google account, enter mail address or phone number
Next



6

Enter password
Next



7

Follow onscreen prompts

You are logged in to your Google account.

Waking Handset from Sleep

Display goes out after a set period of inactivity.

Alternatively, Press Power Key/Fingerprint Sensor to enter sleep manually. This saves battery power and prevents accidental Touchscreen operation.

Sleep

Display goes out after a set period of inactivity to save power (sleep).

Touchscreen becomes inoperative and prevents accidental operation.

· Press Power Key/Fingerprint Sensor while Display is on to enter sleep manually.

If Handset Enters Sleep while Music Playing

Music continues to play. After pressing Power Key/ Fingerprint Sensor while Display is off (sleep), operation panel appears in Start Screen (operation depends on application being used).

Unlocking Start Screen



In Sleep mode, Press Power Key/Fingerprint Sensor



Start Screen appears.



Drag/Flick screen



- Start Screen is unlocked.
- · If Pattern / PIN / Password is set for Start Screen, follow onscreen instructions to unlock.
- Security method for Start Screen can be changed. See "Security & Privacy Settings" for the security method.
- Registering your face enables you to unlock security of Start Screen by auto face recognition when Display is turned on. Unavailable with DIGNO® BX3 Cameraless.
- Registering your fingerprint enables you to unlock security of Start Screen by touching Power Key/Fingerprint Sensor when Display is turned on. Unavailable with DIGNO® BX3 or DIGNO® BX3 Cameraless.

Basic Operations


Basic Operation	24
Using Touchscreen	24
Silent Mode	25
Airplane Mode	27
Text Entry	27
Undating Software	28

Basic Operation

Selecting Options and Navigating Screens

Tap items, icons, onscreen keys, etc. to open assigned items.

• Flick Screen from left edge to inner side to go back to previous screen.

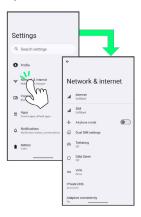

Menu Operations

Tap : for available settings and items.



Screens may also have settings and items that are available by Touching & Holding Display.



Using Touchscreen

Handset uses a touchscreen-type Display. Operate with your fingers on Display.

Tap

Contact Display lightly and briefly.



Touch & Hold

Contact Display lightly; release finger when screen changes.



Drag

Touch icon or other item lightly, move it where desired, and release finger.




Swipe/Flick

Contact Display lightly, then brush screen up/down or left/



Pinch/Spread

Contact Display lightly, then close/widen fingers.

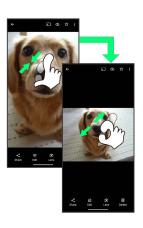

Silent Mode

Mute ringtones and other handset sounds to avoid disturbing others around you.

Silent Mode Cautions

Camera shutter, video start/stop tones, Alarm, and video/ music audio are not muted even in Silent mode.

Using Silent Mode (Vibrate)

Press Volume Up/Down Key



While volume adjust bar appears, <a> (OFF) <a> • (Vibrate)





🔀 Icon changes to 🚨 (Vibrate), and handset enters Silent mode (Vibrate).

Using Silent Mode (Vibrate)

From Quick Settings Enter Silent mode (Vibrate) from Quick Settings. Flick Status Bar down using two fingers 🗦 Manner mode OFF) Exiting Silent Mode (Vibrate) Press Volume Up/Down Key 🗦 While volume adjust bar appears, (Vibrate) 🔵 🐧 (OFF)

icon changes to 🚇 (OFF), and Silent mode is disabled.

Using Silent Mode (Mute)



Press Volume Up/Down Key



2

While volume adjust bar appears, (OFF) 🗦 🔌 (Mute)



Icon changes to (Mute), and handset enters Silent mode (Mute).

Using Silent Mode (Mute)



Using Silent Mode (Drive)



Press Volume Up/Down Key




2

While volume adjust bar appears, (OFF) 🗦 🚍 (Drive)



Icon changes to (Drive), and handset enters Silent mode (Drive).

Using Silent Mode (Drive)

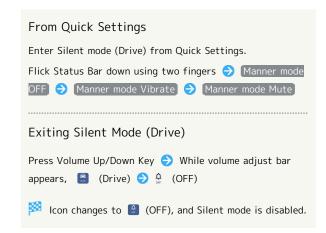

Airplane Mode

Disable all functions that emit signals. Handset remains powered on.

Using Airplane Mode



Flick Status Bar down using two fingers



Quick Settings open.

2

Airplane mode



Handset is in Airplane mode.

 \cdot Use same operation again while in Airplane mode to cancel.


Text Entry

Keyboards

Use onscreen keyboards for text entry.

- To switch between keyboards, Tap in keyboard
 Languages English (US) QWERTY / Handwriting
 / QWERTZ / AZERTY / Dvorak / Colemak / PC / Morse
 code (✓) Done .
- · To hide keyboard, Tap 🗸 .

QWERTY Keyboard Layout

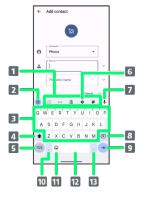

- 1 Shortcuts for frequently used functions (Toolbar)
- 2 Show all tool items Also customize Toolbar
- 3 Enter characters
- 4 Toggle uppercase/lowercase
- 5 Switch to number/symbol keyboard
- 6 Show settings menu
- 7 Activate voice input
- 8 Delete character to left of cursor
- Insert line break or move to next entry field; confirm current characters
- Enter a ","; Long Touch for settings menu/enable Onehanded mode
- 11 Enter emoji / stickers / GIFs /emoticons
- 12 Enter space
- 13 Enter a "."; Long Touch for symbols

Switching Keyboards

In a text entry window, Tap 🔞





Keyboard switches.

Updating Software

Check whether updates are required via the Internet, and update as required.

Before Updating Software

Saved data may be lost depending on condition of handset (malfunctioning, damaged, wetted, etc.). It is recommended that you back up important data before updating software. SoftBank Corp. is not responsible for damages from loss of data.

Software Update Cautions

During Update

Handset cannot be used until software is updated. It may take time to update software.

When a device is running software update, don't remove a USIM card from the device or turn its power off. Doing so can cause failure of the update and result in the device that may be inoperable or malfunction. If the device is inoperable or malfunctions, contact Customer Service.

Signal during Update

Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during an update may cause an update failure. An update failure may disable handset.

Updating Software



In Home Screen, (Settings) (System)

Security & privacy
App security, device lock,

About phone







[System update]





Follow onscreen prompts

Software update starts.

Handset Interface

Handset Screens	52
Status Bar	34
Using Notifications Window	35
Using Quick Settings	36

Handset Screens

Home Screen & Apps Menu

Most handset operations start in Home Screen (appears at power on) or in $\ensuremath{\mathsf{Apps}}$ Menu.





Home Screen Layout



Part	Description
1 Status Bar	Flick down for Notifications Window. Flick down using two fingers for Quick Settings.
2 Standby area	Place application shortcuts, folders, widgets freely.
3 Quick launch area	Tap an icon to launch application or function. Customize Home Screen with application shortcuts, widgets, and folders.
4 Navigation Bar	Flick to operate.

Toggling Home Screen Sheets

Flick Home Screen left/right to toggle sheets.

 \cdot In any Home Screen sheet, Flick upward to return to Home Screen top sheet.



Navigation Bar

Flick to operate icons on Navigation Bar (Display bottom) for the following functions/operations.



Operation	Description
Flick upward	Return to Home Screen.
Flick upward and stop finger	Open listing of recently used applications and activate or delete applications.
Flick right	Switch to app used immediately before.
a 1 (rotate sideways) / a 1 (rotate upright)	The screen changes to portrait/landscape orientation.

1 Appears when Auto-rotate screen is disabled and handset is rotated upright/sideways.

Portrait Orientation & Landscape Orientation

When handset is rotated sideways, appears on Navigation Bar. Tap to change screen to landscape orientation. To change to portrait orientation, rotate handset upright and Tap to . When Auto-rotate screen is enabled and handset is rotated sideways, screen automatically changes to landscape orientation.

 \cdot Depending on the current screen, the orientation may not change even by changing handset orientation.



Multi-Window

Split screen to view and operate 2 applications.

Activate the 2 applications beforehand. Viewing and operating (Contacts) and (Phone) is described as an example.

 \cdot Multi-Window is unavailable with some applications.



Flick Navigation Bar upward and stop finger



History of recently used applications opens.



Tap application to use



3

Split screen



Multi-Window opens, and application appears at top of Display.

4

From application history at bottom of Multi-Window, Tap next application



Tapped application opens.

Multi-Window Operations

Switching between Applications

Flick Navigation Bar upward and stop finger
Tap application to use

· Activate application beforehand.

Exiting Multi-Window

Flick pane bar () up or down

Capturing Screenshots

Press Power Key/Fingerprint Sensor and Volume Down Key at the same time.



- · Alternatively, Long Press Power Key/Fingerprint Sensor Screenshot or Flick Navigation Bar upward and stop finger (*) Screenshot .
- · View captured screenshots in 🚷 (Photos), etc.
- · Screenshot capture may not work depending on the application or function.

Status Bar

Status Bar appears at the top of Display. Notification Indicators for new mail, etc. and Status Indicators for handset appear here.

Status Bar Layout



- 1 Notification Indicators
- 2 Status Indicators

Main Notification Indicators

Notification Indicators appearing in Status Bar include the following.

Indicator	Description
M	New Gmail™
	New Text Message (SMS)/+Message
랊	New Message (Auto Answering)
C	Dialing/Call Arriving/in Progress
×	Missed Call
<u>م</u>	New Message (Voicemail)
33	Calendar Event Notification
©	Alarm Sounding/Snoozing/Unchecked Alarm
×	Timer Running
Ō	Stopwatch Running
A	Urgent News
<u>1</u>	Data Uploading
U	Data Downloading
⊳	Application Update Notification
*:	Sharing File via Bluetooth®
	Readying SD Card

Main Status Indicators

Status Indicators appearing in Status Bar include the following.

Indicator	Description
=	Auto Answering Set
*	Bluetooth® Connected
4	Silent Mode (Vibrate)
Ř	Silent Mode (Mute)
=	Silent Mode (Drive)
5G ∡	Voice service/Data communication available (5G)¹
4G ∡	Voice service/Data communication available (4G LTE/4G) ²
5G ∡	Voice service unavailable/Data communication available (5G)¹
4G ∡ ,	Voice service unavailable/Data communication available (4G LTE/4G) ²
	Voice service available/Data communication unavailable
Z.	Voice service/Data communication unavailable
	Wi-Fi Connected
	Signal Strength
R	Roaming
∱	Airplane Mode
0	Charge Battery
	Battery Charged
7	Battery Charging
	Battery Care Mode
7	Glove Touch Mode (On) Set
0	Obtaining Location
<u>©</u>	Talking Using Speaker
D	Start Using Camera
•	Start Using Mic

- 1 Even if "5G" appears on Display (upper part), 4G communication may be used, changing the icon to "4G."
- 2 Handset supports FDD-LTE (SoftBank 4G LTE) and AXGP (SoftBank 4G); indicator appears when handset is connected to either. Handset connects to SoftBank 4G first.

Using Notifications Window

Flick Status Bar down to open Notifications Window. Open Notification Indicators to check details.

Opening Notifications Window



Flick Status Bar down



Notifications Window appears.

Closing Notifications Window

Flick Notifications Window up

 \cdot Alternatively, Flick Navigation Bar upward to close Notifications Window/Quick Settings.

Notifications Window Layout



- 1 Show notifications (incoming calls, etc.) and active functions
- 2 Use notification content¹
- 3 Manage notifications
- 4 Erase all notifications
- 1 Usable functions differ with each notification. For example, dialing or SMS are available with a new call notification. For example, dialing or SMS are available with a new call notification.

Using Quick Settings

Flick Notifications Window down to access Quick Setting. Tap icons to toggle functions on/off, etc.

Opening Quick Settings




Flick Status Bar down



Notifications Window appears.

2

Flick Notifications Window down

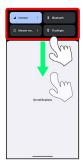

Quick Settings open.

· Alternatively, Flick Status Bar down using two fingers.

Quick Settings Operations

Closing Quick Settings

Flick Quick Settings up

 \cdot Alternatively, Flick Navigation Bar upward to close Quick Settings.

Arranging Quick Settings

Add, delete, and change order of functions in Quick Settings.

Quick Settings Layout



- 1 Adjust brightness
- 2 Mobile network/Wi-Fi on/off
- 3 Enter Manner mode
- 4 Auto-rotate on/off
- 5 Airplane mode on/off
- 6 Show handset settings
- 7 Bluetooth® on/off
- 8 Flashlight on/off
- Battery Saver on/off
- 10 Night Light on/off
- 11 Edit Quick Settings
- 12 Show Power Menu
- 13 Screen record on/off
- 14 Show Quick Share
- 15 Camera access on/off
- 16 Scan QR codes
- 17 Microphone access on/off
- 18 Show security & privacy settings

Phone

Placing/Answering	Calls 38
Optional Services	40
Phone Number	46
Using Contacts	47

Placing/Answering Calls

How to dial directly to make a call and answer a call, as well as options when a call is arriving/during a call are described.

Phone Function

Emergency Location Report

Making emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.). This system is referred to as Emergency Location Report, and notifies location based on positioning from base stations and GNSS satellite information.

- · Location Report does not incur registration/transmission
- · Location/signal conditions affect positioning accuracy. Always provide location and call purpose.
- \cdot Hiding Caller ID (using 184, etc.) cancels Location Report. However, corresponding agency may obtain location information in life threatening situations.
- · Location Report is not sent for calls made while outside Japan.

VoLTE/VoLTE (HD+) and HD Voice

Handset supports VoLTE/VoLTE (HD+) and HD Voice for higher voice call quality.

Hints

- Q. Difficult to talk on handset
- A. It may not be possible to make a call properly in a noisy location.
- A. When calling using Speaker, check the call volume. Raising the call volume may make calling difficult.
- Q. Sound pops momentarily during a call
- A. Are you changing location while calling? Sound pops when signal is weak and handset switches to a different area. This is not a malfunction.

Emergency Call Cautions

Areas Where Usable

Emergency calls from handset can be made only in SoftBank service areas.

Airplane Mode

Note that emergency calls cannot be made in Airplane mode.

Placing Calls

In Home Screen,



(Phone)



Phone opens.

Dialpad



Call window opens.



Tap dialpad to enter the other party's number



· Enter area code first for calling landline numbers.

4






Handset dials number. Call begins when other party answers.

5

To end call, 🙃



- Call ends.
- Calling an Emergency Number when Start Screen Is Locked

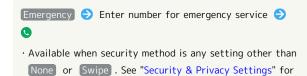

- ? Hints
- Q. Call does not connect

Start Screen security.

- A. Was the number dialed using the area code? Dial the number starting with "O."
- A. Are signal conditions poor? Call again after moving where signal is good.

Answering Calls



When call arrives, Drag 🕓 to right



- Call begins.
- · If Step-up ring volume is on, ringtone volume gradually increases for a call from the same number within 10 minutes after a missed call.



To end call, 📀



- 🔀 Call ends.
- Arriving Call Operations

Cancelling Ringtone


Press Volume Up/Down Key or Power Key/Fingerprint Sensor when call is arriving

Rejecting Arriving Calls

Drag o to left when call is arriving

In-Call Screen Layout/In-Call Operations

During a call, Tap icons to use the following functions.

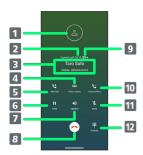

- 1 Show image registered for contact
- 2 Show call time
- 3 Show name/number of other party
- 4 Record call
- 5 Call another party
- 6 Place call on hold
- 7 Call using Speaker
- 8 End call
- Galling using HD Voice
- 10 Set call quality
- 11 Mute your voice to the other party
- 12 Show dialpad
- When USIM Card and eSIM Are Used at the Same Time

SIM in use appears.

Optional Services

This handset is compatible with SoftBank Optional Services.

Optional Services

The following optional services are available.

Service	Description
Call	Divert calls to a preset number when out
Forwarding	of service area or unable to answer.
Voicemail	Divert calls to a Voicemail Center to take messages when out of service area or
	unable to answer.
Call Waiting ¹	Answer calls during a call.
Group Calling ¹	Merge multiple calls.
Notify Caller	Send or hide your number when placing
ID	calls.
Call Barring	Restrict incoming/outgoing calls by conditions.

1 Requires separate subscription

Using Call Forwarding

1

In Home Screen, (Phone)



Phone opens.

2

Settings \Rightarrow Calls



🌠 Call settings open.

When USIM card and eSIM are used at the same time, Tap
 Settings
 Calling accounts
 Tap SIM to set.

3

Call service settings



4

Voice Mail / Call Forwarding



5





6

Ring Time Select ring time



7





🏁 The forwarding number is set.



[Confirm]



Call Forwarding is set.

Using Voicemail



In Home Screen, (Phone)





Phone opens.













🌠 Call settings open.

 \cdot When USIM card and eSIM are used at the same time, Tap















Call service settings



4

Voice Mail / Call Forwarding



5





6

Ring Time Select ring time



7

Confirm



Voicemail is set.

• oo appears in Status Bar for new message. Flick Status Bar downward, Tap Voicemail notification, and follow voice guidance.

Using Call Waiting

Requires separate subscription.

1

In Home Screen, (Phone)



Phone opens.

2





- Call settings open.
- \cdot When USIM card and eSIM are used at the same time, Tap
 - **⋮** → Settings → Calling accounts → Tap SIM to set.

3

Call service settings



4





- Call Waiting is set.
- · Tap to toggle on ()/off ().
- · When call arrives during another call, tone sounds. Drag 🕓 to right to begin call.

Using Group Calling

Requires separate subscription.



During a call, Add call



2

Enter number 🔵 🕓





3

When call connects, Merge calls



Group Calling starts.

Using Caller ID Notification

In Home Screen,





Phone opens.

2





Settings open.

3





Notify Caller ID is set.

· Tap Accept Caller ID to toggle on ()/off ().

Using Call Barring

Restrict outgoing/incoming calls and SMS messages for specified phone number.

- \cdot When attempting to place/send a call/SMS while outgoing/ incoming call is restricted, a message appears. Message may take time to appear in some areas.
- $\boldsymbol{\cdot}$ Depending on areas, sending SMS may not be restricted.



In Home Screen, (Phone)





Phone opens.











Call settings open.

 \cdot When USIM card and eSIM are used at the same time, Tap

















4

Outgoing Call Barring / Incoming Call Barring



5

Tap outgoing/incoming restriction



Call Barring is set.

Phone Number

Checking Your Phone Number




In Home Screen, (Settings)



2

[Profile]

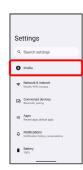

Mark phone number.

Using Contacts

Save phone numbers, mail addresses, etc. to Contacts.

Contacts Cautions

Information saved in Contacts may be lost or changed if Battery is left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. SoftBank Corp. is not responsible for any damages from lost or changed contacts.

Adding New Contacts

1

In Home Screen, 😃 (Contacts)



Contacts appear.

2

[Contacts]



3

1



 \cdot If confirmation appears, follow onscreen instructions.

4

Enter items




5

Save



Contact is added.

■ Saving Contacts from Call Window

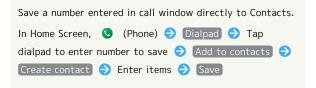

Messaging

+Message	50
Using Gmail	50

+Message

Using +Message

For information on +Message, see this SoftBank Website. https://help.mb.softbank.jp/app/plusmessage/sp/ (Japanese)

Using Gmail

Gmail is Google's webmail service. Use this service to exchange email.

Creating/Sending Mail



In Home Screen, 🚷 (Google)









Mail list opens.

3

[Compose]



Mail composition window opens.



Enter recipient/subject/mail text ♦ ▶



Mail is sent.

Operations when Composing Mail



Internet

Hsina	Chrome	54
OSILIG	· CIII OIIIC	

Using Chrome

Use Chrome simply by entering words to search and URLs.

ÿ TLS

TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).

TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification DigiCert Japan G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

Using Chrome

1

In Home Screen, (Chrome)



- Chrome opens.
- \cdot If confirmation appears, follow onscreen instructions.
- \cdot Tapping Web links within text messages automatically opens Chrome.



Tap Entry field





Enter search words or URL 🔵 🔍



- Search results appear or a Website opens.
- Opening New Tabs

Open several tabs to switch between Websites easily.

In Chrome, New tab

Adding Bookmarks

1

In Home Screen, (Chrome)



Chrome opens.

2

Show Website to add



3

:



4

☆



Current Website is added to Bookmarks.



Camera

Capturing Still	Images/Videos	58
Viewina Still Ir	mages/Videos (Photos)	60

Capturing Still Images/Videos

File Format for Still Images/Videos

File Format for Still Images

File format for still images is JPEG.

File Format for Videos

File format for videos is MPEG-4.

Camera Cautions

If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

Mobile Light Warning

Do not shine Mobile Light close to eyes. Do not look directly at Mobile Light when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

Capturing Still Images

In Home Screen, (Camera)





Viewfinder appears.

2

Flick Viewfinder left/right to select Pro photo / Photo







Aim Camera at subject 🔵 🔘







Shutter clicks and still image is saved.

 $\dot{}$ Touch & Hold \bigcirc to shoot continuously.

Capturing Videos

In Home Screen,

(Camera)





Viewfinder appears.

2

Flick Viewfinder left/right to select Video / Pro video







3

Aim Camera at subject 🗦 💿



Video recording starts.

 \cdot Tap $\, \bigcirc \,$ while recording a video to capture a still image. The still image is saved at the size set with $\begin{tabular}{l} Aspect\ ratio \end{tabular}$.

4

To stop recording, $\ lacktriangledown$



Video recording stops and video is saved.

Viewing Still Images/Videos (Photos)

Show still images and videos downloaded or captured with Camera. Log in to your Google account beforehand.

Opening Still Images/Videos

Show captured or downloaded still images and videos. Supported file formats:

Туре	File Format
Still image	JPEG, GIF, PNG, BMP, WebP
Video	MP4, 3GPP, TS, WebM



In Home Screen, (Photos)



- Still image/video list opens.
- \cdot If confirmation appears, follow onscreen instructions.



Tap still image/video



- Still image/video appears.
- Zooming Still Images

When viewing still image, Tap Display twice or Pinch.

Application Basics

Applications	62	1
Adding/Deleting	Applications63	5

Applications

Setting Required Permissions for Applications

Set the operation of applications when activating for the first time.

The type and content of a confirmation differs with the application. Activating (Sound Recorder) for the first time is described as an example.

· An application may not function correctly if permission to use it was not set.





Sound Recorder window opens.



(Allow)



Settings are complete.

· For several functions, continue in the same way.

 Other Ways to Set Required Permissions for Applications

Setting Functions to Use for Each Application

In Home Screen, (Settings) Apps See all

XX apps Tap application Permissions Tap

function Allow / Don't allow

XX in See all XX apps indicates number of installed applications.

Depending on function, items other than Allow / Don't allow may appear.

Setting Applications with Permitted Usage for Each Function

In Home Screen, (Settings) Security & privacy

Privacy Permission manager Tap function

Tap application Allow / Don't allow

Depending on application or function, items other than

Allow / Don't allow may appear.

Adding/Deleting Applications

Download a variety of applications (free/paid) from Google Play. Change the setting of downloaded applications to enable manual or automatic updates. Log in to your Google account beforehand.

Installing Applications

Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC). SoftBank Corp. is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Installing Free Applications

1

In Home Screen, (Play Store)



- Google Play appears.
- \cdot If confirmation appears, follow onscreen instructions.



Tap free application



3

[Install]



Application is downloaded and installed.

Purchasing Paid Applications



In Home Screen, (Play Store)





Google Play appears.

 \cdot If confirmation appears, follow onscreen instructions.



Tap paid application



Tap amount



· If payment confirmation appears, follow onscreen instructions.



Follow onscreen instructions



· If confirmation appears, follow onscreen instructions.

Purchased Applications

Payment


Pay only once. Redownloads of uninstalled applications are free of charge.

On Other Android Devices

Install an application on any Android device under the same Google account for free.

Requesting Refunds

Refund is possible within a limited time. By requesting a refund, the application is deleted and the charge is cancelled. A refund request is valid only once per one application.

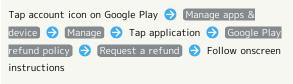

Purchasing Applications

Purchase applications at your own risk. SoftBank Corp. is not responsible for any disadvantage resulting for user or third parties.

Updating Applications

1

In Home Screen, (Play Store)




- Google Play appears.
- \cdot If confirmation appears, follow onscreen instructions.





- Application is downloaded and installed.
- \cdot If confirmation appears, follow onscreen instructions.

Setting Application Updates

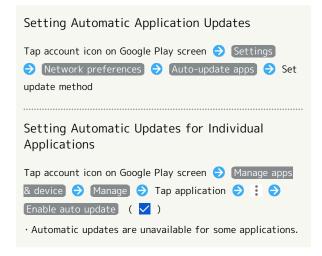

Wi-Fi/Bluetooth®

Conne	cting by '	Wi-	-Fi	68
Using	Bluetooth	n®	Function	69

Connecting by Wi-Fi

Handset supports Wi-Fi (wireless LAN). Access the Internet via a household Wi-Fi connection environment.

Connecting Selected Access Points

1

In Home Screen, (Settings)



2

Network & internet



3

[Internet]



Internet settings open.

4

Wi-Fi ()



Wi-Fi is enabled.

· Tap Wi-Fi to toggle on ()/off ().



Tap access point



6

Enter password
Connect



Handset is connected.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information.
 For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

Using Bluetooth® Function

Connect to a Bluetooth®-capable wireless phone, etc. for calls or to a hands-free device such as a headset.

- ? Hints
- Q. Cannot use Bluetooth®
- A. Is handset in Airplane mode? If in Airplane mode, Bluetooth® function is disabled. Bluetooth® function can be enabled again after placing handset in Airplane mode.
- Bluetooth® Function Cautions

Information may not appear correctly on both devices depending on the transferred data.

Enabling Bluetooth® Function


1

In Home Screen, (Settings)



2

Connected devices

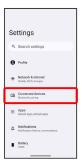

3

Connection preferences



4

Bluetooth



Bluetooth® settings open.

5

Use Bluetooth ()



- Bluetooth® function is enabled.
- · To disable Bluetooth® function, Tap Use Bluetooth ().

Handset Settings

nanuset settings
Data Usage Settings73
Battery Settings74
Display Settings75
Sound & Vibration Settings75
Security & Privacy Settings76
System Settings78
Other Settings78

Handset Settings

Handset Settings

In Home Screen, ((Settings) to customize operation of handset functions. Handset settings include the following

Item	Description
Profile	Check and edit your phone number, e-mail address, etc.
Network & internet	Make network and Internet settings for Wi-Fi, mobile networks, Airplane Mode,
	etc.
Connected devices	Make settings for Bluetooth® connection, etc.
Apps	Make settings for installed applications.
Notifications	Make notification settings.
Battery	Check Battery usage and make settings to save battery power.
Direct key	Make settings for Direct Key.
	Check space in internal storage and on SD
	Card/USB Storage. Also erase SD Card/USB
Storage	storage data or mount/unmount SD Card/
	USB storage.
Sound &	Make ringtone, operation tones, and other
vibration	sound settings.
Dicplay	Make settings for Display brightness, font
Display	size, etc.
Wallpaper &	Change wallpaper or make settings for
style	style, etc.
Switch home	Switch the Home screen to Simple Home or
арр	Standard Home.
A 21- 2121	Set captions, magnification gestures, and
Accessibility	other useful accessibility functions.
	Make settings for Start Screen security,
Security &	SIM lock, etc., as well as regarding privacy
privacy	such as app permissions or password
	display.
Location	Make location settings.
	Make settings for emergency information/
Safety &	emergency call such as medical
emergency	information or emergency contacts for
	first responders to see in emergency.
Passwords &	Create/add accounts and sync accounts.
accounts	
Digital	
Wellbeing	Check handset usage habits at a glance
& parental	and get more offline time.
controls	
Google	Make settings for Google services.
	Check and make settings for language and
System	keyboard, date and time, backup, reset,
	etc.
About phone	Check device name or own phone number,
	etc.



In Home Screen, (Settings)





Handset settings open.




Set items



Settings are made.

Data Usage Settings

Data Usage Operations

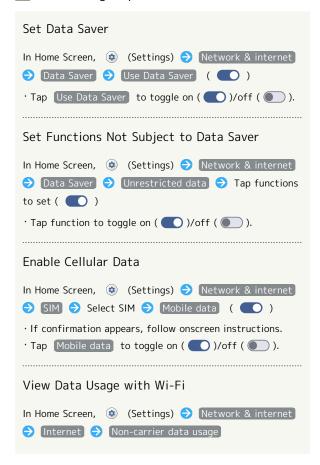

Data Usage Settings





2

SIM)



3

Select SIM



Data usage window opens.

Battery Settings

Battery Settings

Check Battery consumption settings and Battery usage. Settable items are the following.

Item	Description
XX%	Check Battery, time remaining, etc.
Battery usage	Check handset usage since last full charge and check or make settings for battery usage for each app.
Battery Saver	Set Battery saver.
Battery percentage	Set showing battery percentage in status bar.
Battery Care Mode	Enable Battery Care Mode.
Battery health	Check battery charging capacity.

Using Battery Care Mode

Avoid charging completely to keep Battery optimal and longer-



In Home Screen, (Settings) (Settings)









2

Battery Care Mode



[Use Battery Care Mode] → [Restart]







Handset restarts and Battery Care Mode is ON.

 \cdot If Battery Care Mode is ON, charging will stop at 85%. However, battery percentage is displayed as "100%." Battery icon changes to 1.

Display Settings

Display Settings

Make settings for Display brightness, Wallpaper, etc. Settable items are the following.

Item	Description
Brightness level	Set brightness of Display.
Adaptive	Enable adjustment of brightness for
brightness	surroundings.
Lock screen	Set notification operations, etc. on Start Screen.
Sleep time	Set a period of inactivity after which Display turns off automatically.
Keep screen on while holding	Set whether to turn on Display while holding handset.
Dark theme	Set dark theme on/off and make schedule settings.
Display size	Set the size of font and icons appearing
and text	in Display as well as text contrast, etc.
Night Light	Tint screen amber.
Glove touch	Enable Touch action when wearing gloves.
Pocket mode	Set whether to reduce unintended touch operations while handset is in a pocket or bag, etc.
Auto-rotate	Set whether to rotate Display with
screen	handset orientation automatically.
Screen saver	Set screen saver.
Display quick settings	Set whether to show Quick Settings Panel.

Sound & Vibration Settings

Sound & Vibration Settings

Make ringtone, operation tones, vibration intensity and other sound settings. Settable items are the following.

Item	Description
Media volume	Set volume for music, videos, etc.
Call volume	Set volume for call.
Ring volume	Set volume for Phone ringtone, etc.
Notification volume	Set volume for notifications.
Alarm volume	Set volume for alarm.
Manner mode	Mute ringtones and other handset sounds to avoid disturbing others around you.
Phone ringtone	Set Phone ringtone.
Live Caption	Set whether to generate captions automatically when handset detects speech.
Media	This option allows users to make settings such as hiding the media player after it completes media playing.
Vibration pattern	Set vibration pattern.
Vibration &	Set vibration intensity for incoming call,
haptics	notifications, and tapping operation.
Default notification sound	Set notification sound.
Default alarm sound	Set alarm sound.
Dial pad tones	Set operation sound in call window on/off.
Screen locking sound	Set unlocking sound for Start Screen security on/off.
Charging sounds and vibration	Set charging start sound and vibration on/ off.
Charged sounds and vibration	Set charging end sound and vibration on/ off.
Tap & click sounds	Set Tapping sound on/off.
Do Not Disturb	Set/cancel Do not disturb. Make settings such as notification action when Do Not Disturb is set.

Security & Privacy Settings

Security & Privacy Settings

Make settings for Lock Screen security, USIM Card lock, etc. Settable items are the following.

 \cdot Displayed items depend on the setting.

access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to Use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when appeaccess copied texts or images. Show passwords Set whether entered passwords are visible.		
App security issues. Device unlock Set Start Screen security. Check that your Google Account is protected, and check the security of your saved password. Device finders Device finders Update OS and security patches. Permission manager View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when approaccess copied texts or images. Show passwords Set whether entered passwords are visible.	Item	Description
Account security Check that your Google Account is protected, and check the security of your saved password. Set location to be shown if handset is lost. System & Update OS and security patches. Permission manager View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when appead access copied texts or images. Show passwords Set whether entered passwords are visible.	App security	
Account security protected, and check the security of your saved password. Device finders System & Update OS and security patches. Permission manager View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Mic. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when appeaccess copied texts or images. Show passwords Set whether entered passwords are visible.	Device unlock	Set Start Screen security.
Device finders lost. System & updates Update OS and security patches. Permission manager View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when apps access copied texts or images. Show passwords Set whether entered passwords are visible.		protected, and check the security of your
Update OS and security patches. Permission manager View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when apps access copied texts or images. Show passwords Set whether entered passwords are visible.	Device finders	
View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when apps access copied texts or images. Show passwords Set whether entered passwords are visible.	•	Update OS and security patches.
Set whether to allow app or services to access location information. · Activity controls		View and edit app permissions. Privacy dashboard Show apps which used permissions within 24 hours. Ads Control the ads you see. Health Connect Set whether to allow apps and services to access health data. Data sharing updates for location Show apps having a changed method for sharing user location information. Camera access¹ Set whether to allow app or services to use Camera. Microphone access Set whether to allow app or services to use Mic. Show clipboard access Set whether to show a message when apps access copied texts or images. Show passwords Set whether entered passwords are visible. Location access Set whether to allow app or services to access location information.

allow Google to save.

- · Notifications on lock screen

 Control how notifications show on Start

 Screen.
- \cdot Show media on lock screen Set whether to show Media Player in Start Screen.
- · App content

Set whether to allow apps to send contents to Android system.

- · Android System Intelligence Show suggestions based on interaction with other users or used apps/contents.
- · Autofill service from google

Fill in forms with information saved in Google Account like passwords by one tap.

· Usage & diagnostics

Set whether to send usage and diagnostics information to Google.

· Extended Unlock

More security & privacy Enable handset to check if it is being carried and to check for trusted place or device and unlock Start Screen.

 $\cdot \ \mathsf{Android} \ \mathsf{Safe} \ \mathsf{Browsing}$

Set whether notification is shown when a possibly harmful website is detected.

· Device admin apps

Set whether to enable device administration functionality.

· SIM lock

Make settings for SIM lock.

 \cdot Encryption & credentials

Make settings for encrypt handset data and set credentials storage.

· Trust agents

Set whether to show trusted agents.

 $\cdot \; \mathsf{App} \; \mathsf{pinning}$

Set to keep only screen of specified application in view.

· Confirm SIM deletion

Set to verify it is you before erasing a downloaded SIM.

- 1 Not settable with DIGNO® BX3 Cameraless.
- Setting Handset Not to Lock Start
 Screen



Enabling USIM/eSIM PIN

When PIN is enabled, a window for entering PIN appears to allow handset use each time handset is powered on with USIM Card installed/eSIM activated.

1



2



 \cdot When USIM card and eSIM are used at the same time, select SIM to set.

3



PIN Cautions

PIN is enabled.

Entering incorrect PIN 3 consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; For details about PUK, contact Customer Service. Entering incorrect PUK ten consecutive times locks USIM Card/eSIM, disabling handset. For recovery, USIM Card/eSIM must be reissued at a SoftBank (fees apply).

Changing USIM/eSIM PIN

First enable USIM/eSIM PIN to change PIN.

1



2



When USIM card and eSIM are used at the same time, selections SIM to set.

3





PIN is changed.

System Settings


System Settings

Check and make settings for language and input, date and time, backup, and reset, etc. Settable items are the following.

Item	Description
Languages	Make settings for display language.
Keyboard	Make settings for text entry.
Gestures ¹	Set whether to enable Camera activation when Power Key/Fingerprint Sensor is Pressed twice, and set Navigation Bar, One-handed mode, etc.
Date & time	Make settings for date and time.
Auto power on/off	Set time and day to power off handset automatically.
Auto power on	Set whether to start handset automatically when charged during power off.
Backup	Backup application data, call history, etc. to Google server.
System update	Make settings for system update. For details, see "Updating Software."
Reset options	Reset network settings, application settings, erase eSIMs, and initialize data.

1 Gesture for activating Camera not included with DIGNO® BX3 Cameraless.

Languages & Input Operations

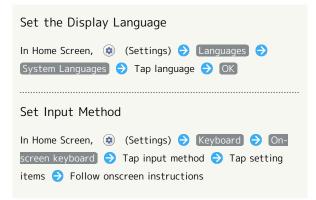


Other Settings

Profile

Check and edit your phone number, e-mail address, etc.

Profile Operations

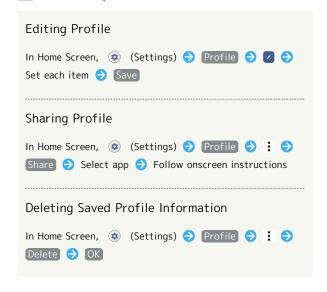

Network & Internet Settings

Make network and Internet settings for Wi-Fi, mobile networks, data usage, etc. Settable items are the following.

Item	Description
Internet	Enable mobile network or Wi-Fi connection. For details, see "Connecting by Wi-Fi."
SIM	Set a network type, etc. For details, see "Global Roaming."
Airplane mode	Disable all settings that emit signals. Handset stays powered on.
Dual SIM	Select SIM to use, and check SIM
settings	information.
Tethering	Make tethering settings.
Data Saver	Turn off background data generated by some apps.
VPN	Add a VPN.
Private DNS	Make private DNS settings.
Adaptive connectivity	Set whether to manage network connection automatically.

Connected Devices Settings

Make settings for Bluetooth® connection and other settings. Settable items are the following.

Item	Description
Pair new device	Search for and pair nearby Bluetooth® devices.
Saved devices	Check and make settings for Bluetooth® devices paired before.
Connection	Make settings for Bluetooth® connection,
preferences	Cast etc.

Apps Settings

Make settings for installed applications. Settable items are the following.

Item	Description
See all XX apps	Check and make settings for installed applications.
Default apps	Make settings for default applications.
Screen time	View time spent in apps.
Unused apps	Delete unused apps to increase storage space or delete app permissions.
App battery usage	Set battery usage per app.
Special app access	Make settings for access of Special applications.

Notifications Settings

Make notification settings. Settable items are the following.

 \cdot Displayed items depend on the setting.

Item	Description
App settings	Make notification settings for each applications
Notification history	View Notification history.
Conversations	Check notifications of conversation with high priority.
Bubbles	Set whether to show notifications of conversation with a floating icon.
Device & app notifications	Manage apps which can read notifications.
Notifications on lock screen	Control how notifications show on Start Screen.
Sensitive notifications	Set whether to show sensitive notifications in Lock Screen.
Do Not Disturb	Set/cancel Do Not Disturb. Make settings such as notification action when Do Not Disturb is set.
Flash notifications	Set whether Mobile Light or Display flashes when notification received or alarm sounds.
Wireless emergency alerts	Make settings for Emergency alerts.
Hide silent notifications in status bar	Set whether to show silent notifications in Status Bar.
Allow notification snoozing	Set whether to allow notification snoozing.
Notification dot on app icon	Set whether to show notification dot on app icon.
LED indicator	Set whether Notification/Charging LED notifies user of missed calls, new mail, battery charge, etc.
Enhanced	Set whether to show suggested operations

notifications

or replies.

Direct Key Settings

Make settings for functions to activate by pressing Direct Key on sides of handset. Settable items are the following.

Item	Description
Single press	Set function to activate by pressing once.
Double press	Set function to activate by pressing twice.
Press and hold	Set function to activate by long press.
Answer and end call	Set whether to answer/end a call by Long- Pressing Direct Key.
Wake up device	Set whether to activate app even while Screen is off.

Storage Settings

Check space in internal storage and on SD Card/USB Storage. Also erase SD Card/USB storage data or mount/unmount SD Card/USB storage. Settable items are the following.

Item	Description	
This device	View information on internal storage usage.	
SD card	Make settings and check total space/free space for SD Card.	
USB storage name	Make settings for USB storage and check storage space.	

Wallpaper & Style Settings

Make settings for wallpaper or color of Home Screen or Lock Screen. Settable items are the following.

Item	Description	
Clock color & size	Set color and size of clock.	
System colors	Change the color pattern of the screen.	
Change wallpaper	Change wallpaper.	
Shortcuts	Set whether to show shortcuts in Start Screen.	
Show		
notifications	Set whether to show notifications in	
on the lock	Start Screen.	
screen		
More lock	Set information to appear in Start Screen.	
screen options		
Themed icons	Set whether to show corresponding app icons in plain color.	

Switch Home App Settings

Switch Home Screen app. Settable items are the following.

Item	Description	
Simple Home	Simple Home Screen arranging necessary information and frequently used functions to find them easily	
Standard Home	Standard Home Screen	

Accessibility Settings

Set captions, magnification gestures, and other useful accessibility functions. Settable items are the following.

Item	Description	
セキュリティ One	Make セキュリティOne (Security One) settings.	
TalkBack	Set handset to read out screen information.	
Select to Speak	Set whether to speak tapped item.	
Display size and text	Set the size of font and icons appearing in Display or text contrast.	
Color and motion	Set color correction, color inversion, Dark theme, remove animation, etc.	
Extra dim	Set whether to reduce brightness of Display more.	
Magnification	Set whether to enlarge view by Triple- Tapping or using accessibility key.	
Accessibility Menu	Set whether to use accessibility menu.	
Switch Access	Set handset to be controllable by one or several switches.	
Timing controls	Set response time for long pressing Screen or set time to display temporary messages, etc.	
System controls	Set Navigation mode, One-handed mode, Auto-rotate screen, etc.	
Vibration & haptics	Set vibration intensity for incoming call, notifications, and tapping operation.	
Live Caption	Set whether to generate captions automatically when handset detects speech.	
Caption preferences	Make settings for captions.	
Audio description	Set whether to read descriptions of movie or TV program compatible with Audio description.	
Flash notifications	Set whether Mobile Light or Display flashes when notification received or alarm sounds.	
Audio adjustment	Set whether to use monaural audio or balance left-right sound.	
Accessibility shortcuts	Make settings for accessibility shortcuts	
Text-to- speech output	Set the engine for text readout, as well as change the readout speed and play a sample.	

Location Settings

Make location settings. Settable items are the following.

Item	Description	
Use location	Turn on or off Location Information.	
Recent access	View apps that accessed your handset's location information.	
App location permissions	View and change permissions ("Allow all the time," "Allow only while using the app," "Ask every time," "Don't allow") for app to access your handset's location.	
Location services	Make settings for location history, location accuracy, location sharing, emergency location service, etc.	

Safety & Emergency Settings

Make settings for medical information in emergency or emergency call. Settable items are the following.

Item	Description	
Open Personal Safety	Show emergency contacts, medical information, etc.	
Medical information	Register medical information.	
Emergency contacts	Set emergency contacts.	
Emergency SOS	Set whether to use emergency SOS and make settings for operations when activating emergency SOS, making a call to emergency service, sharing information with emergency contacts, etc.	
Crisis alerts	Set whether to activate Crisis alerts.	
Emergency Location Service	Set whether to send current location information in emergency.	
Earthquake alerts	Set whether to activate Earthquake alerts.	
Unknown tracker alerts	Set whether to detect unknown trackers.	
Wireless emergency alerts	Make settings for Wireless emergency alerts.	

Passwords & Accounts Settings

Create/add accounts and sync accounts. Settable items are the following.

Item	Description
Passwords	Make settings for password manager.
Autofill service	Make settings for Autofill service.
Add account	Create or add accounts.
Automatically	Set permissions for syncing data
sync app data	automatically.

Digital Wellbeing & Parental Controls Settings

Check handset usage habits at a glance and get more offline time. Settable items are the following.

 $\boldsymbol{\cdot}$ Displayed items depend on the handset status.

Item	Description		
XXhr, XXmin	Check total handset usage time for the day.		
Dashboard	Check history of total handset usage time. Limit usable time for each application.		
Bedtime mode	Change Display to monochrome, halt notifications, etc. at preset time.		
Focus mode	Pause app which prevents you from concentrating.		
Manage notifications	Make notification settings for applications.		
Do Not Disturb	Set/cancel advanced notification management. Make settings such as notification action when advanced notification management is set.		
Heads Up	Set whether to display notification which urges you to stop using handset while walking.		
Show icon in the app list	Enable Digital Wellbeing icon to be shown in app list.		
Parental controls	Supervise handset remotely with family link app for parents and restrict usage time.		

Google Settings

Make settings for Google services together at the same time. Settable items are the following.

Item	Description	
Ads	Make settings for your advertising ID.	
Autofill	Set whether to enter information such as password or SMS confirmation code saved in your Google account automatically.	
Backup	Make settings for backup.	
Devices & sharing	Make settings for Chromecast or Chromebook™, and nearby devices, and share files using Quick Share.	
Find My Device	Set whether to show handset location if it is lost.	
Kids and Family	Make settings for parental controls.	
Mobile data & messaging	Make settings for phone number, etc. for setting up a Google Account again.	
Personalize using shared data	Set whether to use shared data.	
Set up & restore	Make settings for a nearby device/work profile and restore contacts.	
Settings for Google apps	Make settings for Google Fit, which records walking and running activity and manages your weight, etc., and Google Play Instant.	
Personal Safety	Set whether to detect unknown trackers.	

About Phone

Check device name or own phone number, etc. Settable items are the following.

Item	Description
Device name	View/change the device name.
Phone number (sim slot 1/2)	View your device's phone number.
Legal information	View legal information.
Technical regulations conformity certification	View technical regulations conformity certification.
SIM status (sim slot 1/2)	View information stored in the SIM.
Model	View device's model name and serial number.
EID	Show EID.
IMEI (sim slot 1/2)	View device's IMEI information.
Android version	View the versions of Android OS.
IP address	View the device's IP address.
Wi-Fi MAC address	View the device's Wi-Fi MAC address.
Device Wi-Fi MAC address	View the device's Device Wi-Fi MAC address.
Bluetooth	View the device's Bluetooth® address.
Up time	View screen time.

Global Services

Global	Roaming	86
Making	Calls while Abroad	87

Global Roaming

Handset is Global Roaming Service eligible. Use the same handset number outside Japan.

Handset connects to an appropriate cellular provider automatically by default. A specific carrier can also be selected manually.

Change communications method and roaming settings as needed.

Setting a Cellular Provider

1



2

[SIM]



3

Select SIM



4

Automatically select network ()



- Handset searches for available network.
- · If (Automatically select network) is off (), Tap (Choose network).

5

Tap provider

- Cellular provider is set.
- To set an appropriate cellular provider automatically, Tap Automatically select network ().
- · If using handset in Japan, set Automatically select network on (). To select a provider manually, select SoftBank . Connection is only possible by selecting SoftBank.

Changing Data Roaming Setting

In Home Screen, ◎ (Settings) → Network & internet







2

SIM



3

Select SIM



4







- Data roaming is enabled.
- Tap Roaming to toggle on ()/off ().
- · If confirmation appears, follow onscreen instructions.

Making Calls while Abroad

See SoftBank Website to learn about roaming areas/services,

https://www.softbank.jp/en/mobile/service/global/

International Calls to Japan and Other Countries from Abroad

In Home Screen, (Phone)





Phone opens.



[Dialpad]



Call window opens.



Touch & Hold 0



"+" is entered.

4

Enter country code then other party number (omit first 0)



 \cdot Do not omit first O from phone numbers when dialing Italy (39).







🏁 Handset dials number. Call begins when other party answers.

Calls to Landline Phones/Cell Phones in Country of Stay

Place calls the same way you would within Japan.

 $\boldsymbol{\cdot}$ Do not enter country code or omit first 0 from phone numbers.



In Home Screen, (Phone)





Phone opens.



[Dialpad]



Call window opens.



Tap dialpad to enter the other party's number









Handset dials number. Call begins when other party answers.

Warranty/Specifications/ Customer Services

Warranty	& After-Sales	Service	92
Specificat	ions		92
Customer	Service		93

Warranty & After-Sales Service

Warranty

- The warranty period is 1 year from the date of newly purchase.
- Free repairs will be done based on terms of repair service.
 Terms of repair service is referred to SoftBank website.
 https://www.softbank.jp/mobile/support/product/warranty/ (Japanese)
- Warranty covers only handset and AC Charger [KYCFP1].
 Accessories such as cables are not covered by terms of repair service.

Cautions

Damages

Handset resistance is verified under test conditions, and operation is not guaranteed to operate properly in actual use under all conditions. Non-breakage and non-malfunction is not guaranteed.

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files (contacts/images/sound etc.) or settings due to accident or repair.

Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

After-Sales Service

To request repairs, contact Customer Service or a nearby SoftBank Shop. Have details of symptoms ready.

- \cdot During the warranty period, repairs are made under the terms of repair service.
- · After the warranty period, if handset can be repaired, repairs will be made at cost. The functional parts necessary to repair the handset will be available for 4 years generally after the manufacture is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.

👸 Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or Customer Service.

Specifications

Handset

Item	Description			
Weight	· DIGNO® BX3 Approx. 180g · DIGNO® BX3 Cameraless Approx. 179g · DIGNO® BX3 Plus Approx. 182g			
Continuous Talk Time¹	· DIGNO® BX3, DIGNO® BX3 Cameraless Approx. 2130 minutes (4G LTE) · DIGNO® BX3 Plus Approx. 2090 minutes (4G LTE)			
Continuous Standby Time ²	DIGNO® BX3, DIGNO® BX3 Cameraless Approx. 710 minutes (5G)³ Approx. 790 minutes (4G LTE) Approx. 790 minutes (AXGP) DIGNO® BX3 Plus Approx. 590 minutes (5G)³ Approx. 690 minutes (4G LTE) Approx. 690 minutes (AXGP)			
Charging Time (handset power off)	AC Charger (KYCFP1): Approx. 170 minutes			
Dimensions (W x H x D)	Approx. 72 ×157 ×10.9 mm (excluding projections)			

- 1 Average for a fully charged Battery and normal signal reception at a single location.
- 2 Average for a fully charged Battery and normal signal reception at a single location without being in call or operation. Value when data transmission is disabled. Time varies with conditions of usage (charge, temperature, etc.) and function settings.
- 3 Standby time for 5G is an approximate time in the 5G standalone environment.

Materials

· Handset

Parts	Material/Finishing
Outer Case (Display Side)	PC + GF resin/Texturing
Outer Panel (Back), Power Key (without Fingerprint Sensor), Volume Up/ Down Key, Direct Key	PC resin/Texturing
Power Key (with Fingerprint Sensor)	Epoxy resin/Coating
Card Slot Cap	PC resin + LSR/Texturing
Display	Strengthened glass/Antifouling coating
Speaker Hole Mesh	Nylon resin/Water-repelling treatment
Camera Plate, Mobile Light	PMMA resin
USIM Card/SD Card Tray	POM resin

· AC Charger (KYCFP1) (Supplied)

Parts	Material/Finishing
Main Unit (Outer Case)	PC resin
Cord	PVC
Power Plug	Zinc/Nickel plating
Charging Terminal	Stainless/Nickel plating

Customer Service

If you encounter any difficulties or are unsure of anything, contact customer service.

SoftBank Customer Support

- · From a SoftBank handset, dial toll free at 157
- · From a landline, dial toll free at 0800-919-0157
- Business hours : Call: 10:00am 7:00pm/Chat: 9:00am 8:00pm

Smartphone Technical Support Center

- \cdot From a SoftBank handset, dial toll free at 151
- · From a landline, dial toll free at 0800-1700-151
- · Business hours : Mon. Fri. 9:00am 7:00pm/Sat., Sun., and Holiday 9:00am 5:00pm/9:00am 8:00pm (for general information)

Safety Precautions

Safety Precautions	. 96
General Notes	103
Specific Absorption Rate (SAR) for This Product	105
Water/Dust/Shock Resistance Cautions	106
Intellectual Property Rights	110

Safety Precautions

For proper handset use, carefully read Safety Precautions beforehand. Keep this guide for future reference. Observe these safety precautions to prevent injury or damage to property.

Safety Precautions

Risks of injury or damage from improper use are categorized by levels.

Mark	Descriptions		
⚠ DANGER	Great risk of death or serious injury ¹ from improper use		
<u>∧</u> WARNING	Risk of death or serious injury ¹ from improper use		
⚠ CAUTION	Risk of injury ² or damage to property ³ from improper use		

- Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having side effects or requiring hospitalization or long-term treatment.
- 2 Injury includes: Physical injury, high-temperature burns, low-temperature burns, electric shock, and other conditions not requiring hospitalization or long-term treatment.
- 3 Damage to property includes: Incidental damage to structures and household property and/or to pets and livestock.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions			
Prohibited	Action prohibited			
Do Not Disassemble	Disassembly prohibited			
Avoid Liquids Or Moisture	Exposure to liquids prohibited			
Do Not Use Wet Hands	Handling with wet hands prohibited			
Compulsory	Compulsory actions			
Disconnect Power Source	Unplug power cord from outlet			

Handset, USIM Card, AC Charger

⚠ DANGER



Do not use, store, or leave handset or related hardware in places subject to high temperatures or where heat collects (near an open flame or heating equipment, under a kotatsu or blanket, in direct sunlight, or inside a car on a hot day).

May cause fire, burns, injury, electric shock, etc.



Do not place handset or related hardware in or near a microwave oven, induction cooktop, etc. or pressure cooker.

May cause fire, burns, injury, electric shock, etc.



Keep power plug, Charging Terminal, and External Device Port free of water or other liquids (drinking water, sweat, sea water, pet urine, etc.). Do not charge handset while it is wet or near water (in the bathroom, near a humidifier, etc.).

May cause fire, burns, injury, electric shock, etc. For details on water resistance, see "Water/Dust/Shock Resistance".



Do not apply excessive force to or break handset. Particularly when carrying handset in your clothes pocket, do not bump it or place it between objects.

Internal Battery breakage may cause fire, burns, injury,

- * Examples of where to be careful
- · Sitting or squatting with handset in your pants or skirt pocket
- \cdot Handset becoming caught in a sliding door or vehicle door when in a jacket pocket
- · Stepping on handset when it is on something soft such as a sofa, bed, or futon or on the floor
- \cdot Getting handset caught between the gap of a seat of train or bus



Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



Do not try to remove Internal Battery from handset.

May cause fire, burns, injury, etc.



Handset Back Cover cannot be removed. Do not try to remove. Even if handset bulges due to bulging of Internal Battery, etc., do not try to remove Back Cover or press it with excessive force.

May cause fire, burns, injury, etc.



Do not drop, stomp, throw, or otherwise subject to strong force, impact, or vibration.

May cause fire, burns, injury, electric shock, etc.



Keep conductive materials (anything metal, pencil lead, etc.) away from power plug, Charging Terminal, External Device Port, and Earphone/Microphone Jack. Do not let dust, sand, etc. enter them.

May cause fire, burns, injury, electric shock, etc.



Use only SoftBank-designated optional accessories.

Using unspecified accessories or those with unclear manufacturer, distributor, or specifications may cause fire, burns, injury, electric shock, etc.

MARNING



When caring for equipment, ensure that no disinfectant or water enters gaps, Charging Terminal, External Device Port, Earphone/ Microphone Jack, Mic or Earpiece/Speaker.

Handset breakage may cause injuries or electric shock, etc.



If charging does not complete even after specified charging time, stop charging.

Overcharging or other conditions may cause fire, burns, injury, etc.



Always turn off handset as well as stop charging before entering gas stations or other places where flammable gases or fine particulates generate.

Using handset in presence of flammable gases may cause explosion, fire, etc.



Follow the instructions of a gas station or other such location before using handset there.

Do not charge handset at a gas station, etc.

Take care not to drop handset at a gas station, etc.; in particular, do not use handset while filling.

Ignition of flammable gas may cause explosion, fire, etc.



If you notice an unusual odor, unusual sound, smoke, overheating, discoloration, deformation, etc. while using, charging or storing handset, do the following with safety and care.

- Unplug from outlet.
- Turn handset power off.

Not doing the above may cause fire, burns, injury, electric shock, etc.

⚠ CAUTION



Do not use damaged.

May cause fire, burns, injury, etc.



Do not place on an uneven or unstable surface. Be particularly careful while vibrator is activated.

May fall, leading to injury, etc.



Do not store in a humid or dusty location or any place that reaches a high temperature.

May cause fire, burns, electric shock, etc.

For details on water and dust resistance, see "Water/Dust/ Shock Resistance."



Before a child uses handset or related hardware, a parent/guardian should provide instruction and ensure proper usage.

Failing to do so may cause accidental ingestion, injury, electric shock, etc.



Do not place handset and related accessories within an infant's reach, and store them where pets cannot touch them.

In particular, take care with where small parts such as USIM Card/SD Card Tray, etc. are stored

They may swallow parts, or may cause injury, electric shock, etc.



Note that equipment may become warm if handset is used for a continued period or while charging. Be careful not to have unintended, continued contact with equipment such as by falling asleep with equipment in pocket, etc.

Handset or AC Charger may become warm when using applications, calling, exchanging data, watching videos, etc. for a continued period or when charging. Continued contact with hot parts may cause redness, itchiness, rash, low-temperature burns, etc. depending on the individual.

Handset

⚠ DANGER



Do not throw in fire or heat.

May cause fire, burns, injury, etc.



Do not pierce with a sharp object (nail, etc.), hit with a hard object (hammer, etc.), step on, or otherwise subject equipment to excessive force.

May cause fire, burns, injury, etc.



If internal matter should get in your eyes, mouth, etc., immediately rinse with clean water, and then promptly seek medical attention.

Internal matter may cause loss of eyesight, affect health,

⚠ WARNING



Do not shine Mobile Light near or photograph with Mobile Light close to someone's eyes. Especially, do not photograph infants up close.

May affect eyesight, etc. May also temporarily affect eyesight or startle, leading to injury or other accident.



Do not look at a repeatedly flickering screen for a long period.

May cause convulsions, loss of consciousness, etc.



Do not let water or other liquids (drinking water, sweat, sea water, pet urine, etc.) or a foreign object such as anything metal (cutter blades, staples, etc.), flammable material, etc. enter USIM Card/SD Card Tray Slot.

Do not mistake USIM Card and SD Card Slots.

May cause fire, burns, injury, electric shock, etc.



Do not expose Camera Lens to direct sunlight for extended period.

Concentration of light by lens may cause fire, burns, injury, etc.



Before boarding an aircraft, power off handset or place handset in Airplane mode.

Restrictions are in place for use aboard aircraft; follow airline instructions.

If any functions that power on handset automatically are activated, deactivate them.

Radio waves may affect operation of onboard electronic equipment.

Prohibited use aboard an aircraft may be punishable by law



Follow instructions of each medical institution for use in a hospital.

Power off handset where use is prohibited.

If any functions that power on handset automatically are activated, deactivate them.

Radio waves may affect operation of electronic equipment and electric medical devices.



Always keep handset away from ears when making a Speakerphone call, the ringtone is sounding loudly, or when waiting for a call.

If an earphone-microphone, etc. is attached for gaming or video/music playback, adjust to a moderate volume.

When making a Speakerphone call, handset emits sound loudly.

Even in standby, the ringtone or alarm may ring suddenly. Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty.

Too loud volume may cause inability to hear surrounding sound may also cause an accident.



Individuals with a weak heart should take care with handset vibration and ringtone settings for new calls/mail.

Handset suddenly vibrating and ringing for a new call may startle you, and affect your heart.



Individuals with an electric medical device should consult with the device manufacturer or distributor regarding any effects from electronic signals before using handset.

Radio waves may affect operation of electric medical devices, etc.



Keep handset power off near high precision electronic devices or devices using weak signals.

Radio waves may cause malfunctioning or otherwise affect electronic devices.

Devices that may be affected:

Hearing aids, implanted cardiac pacemakers and implanted defibrillators, other electric medical equipment, other automatically controlled equipment, etc. Individuals using an implanted cardiac pacemaker, implanted defibrillator, or other electric medical equipment should consult with the device manufacturer or distributor regarding any effects from electronic signals.



If Display or Camera Lens becomes damaged, be careful with shattered parts and exposed handset interior.

Touching broken portions or exposed components may cause burns, injury, electric shock, etc.



If Internal Battery leaks or emits odor, immediately discontinue use and keep away from flames.

Leaking fluid can catch fire and ignite, rupture, etc.



Do not allow pets, etc. to bite handset.

May cause Internal Battery to ignite, burst, overheat, or leak, causing fire, burns, injury, etc.

A CAUTION



Do not swing handset around by holding the strap, etc.

May cause an accident such as injury.



When using Motion Sensor, check the safety around you, hold handset firmly, and do not shake it unnecessarily.

May cause an accident such as injury.



If Display breaks and internal matter leaks, avoid getting it on your skin (face, hands, etc.), clothes, etc.

May cause harm to your vision, skin, etc.

If internal matter should get in your eyes, mouth, etc., or on your skin or clothes, immediately rinse with clean water. After rinsing your eyes, mouth, etc., promptly seek medical attention.



Do not dispose of with ordinary waste.

May cause fire, burns, injury, etc. May also degrade the environment. Bring old handsets to a SoftBank Shop or other location accepting handsets, or dispose of in accordance with local collection regulations.



If internal matter from Internal Battery leaks, avoid getting it on your skin (face, hands, etc.), clothes, etc.

May cause harm to your vision, skin, etc.

If internal matter should get in your eyes, mouth, etc., or on your skin or clothes, immediately rinse with clean water. After rinsing your eyes, mouth, etc., promptly seek medical attention.



Before using handset in a vehicle, consult with the vehicle manufacturer or distributor regarding any effects from electronic signals.

Some makes of car may have onboard electronic devices that can be affected. Immediately discontinue use if such devices are onboard.



If any skin abnormality occurs with use of handset, immediately discontinue use and seek medical attention.

May cause itchiness, rash, etc. depending on the individual. For details on materials used in handset, see "Materials."



Handset Earpiece/Speaker uses magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Attached objects may cause injury, etc.



When viewing Display, view in a sufficiently bright place with Display at an adequate distance.

Viewing in a dark place or too closely may affect vision,

AC Charger

⚠ DANGER



If thunder is audible, do not touch AC Charger.

May cause electric shock.



When plugging in/unplugging AC Charger, do not allow anything metal (metal strap, etc.) to come in contact.

May cause fire, burns, electric shock, etc.



Do not touch AC Charger cord, Charging Terminal, or power plug with wet hands.

May cause fire, burns, electric shock, etc.

⚠ WARNING



Do not use AC Charger if cable is damaged.

May cause fire, burns, electric shock, etc.



Do not short-circuit Charging Terminals while plugged in. Do not touch Charging Terminals with hands, fingers, etc.

May cause fire, burns, electric shock, etc.



Do not place heavy objects on, pull, or otherwise subject AC Charger cable.

May cause fire, burns, electric shock, etc.



Do not use a voltage converter (such as a travel converter for overseas travel) with AC Charger.

May cause ignition, overheating, electric shock, etc.



Do not apply unnecessary force to where handset and AC Charger are connected.

May cause fire, burns, injury, electric shock, etc.



Use with specified power supply and voltage.

Using the incorrect power supply and voltage may cause fire, burns, electric shock, etc.

AC Charger: 100V AC (Household AC power outlet only)



Wipe away dust on power plug.

Using with dust on plug may cause fire, burns, electric shock, etc.



When plugging in AC Charger, plug in firmly.

Failing to do so may cause fire, burns, electric shock, etc.



Hold AC Charger by body to unplug and do not pull forcefully by cord.

Pulling by cord can damage cord, causing fire, burns, electric shock, etc.



Insert or remove connector of AC Charger straight into/from Port without applying force such as pulling the cord.

Failing to do so may cause fire, burns, injury, electric shock, etc.



Stop using handset immediately if power plug or Charging Terminal is deformed or bent. Also, do not try to restore deformed parts and use them.

Broken power plug or short-circuited Charging Terminal may cause fire, burns, injury, electric shock, etc.



If not using AC Charger, unplug power plug from outlet.

Leaving plugged in may cause fire, burns, electric shock, etc.



If water or other liquid (beverage, sweat, seawater, pet urine, etc.) gets on AC Charger, immediately unplug from outlet.

Water or other liquid getting on AC Charger may cause short-circuiting, resulting in fire, burns, electric shock, etc.



Before caring for equipment, unplug from outlet.

Failing to do so may cause fire, burns, electric shock, etc.

⚠ CAUTION



Do not be touching AC Charger for a long period while plugged in.

May cause burns, etc.

USIM Card

⚠ CAUTION



When handling USIM Card, be careful not to scratch fingers, etc. on notch.

The notch may be sharp and may cause injury.

Handset Use & Electronic Medical Equipment

№ WARNING



If you are using, or are likely to be around other persons using an implanted pacemaker, implanted defibrillator, or other electronic medical device, carry or use handset at least 15 cm away from where the device is.

Radio waves may adversely affect operation of electronic medical devices.

In a situation where you may not be able to maintain a distance of at least 15 cm from other persons, such as when your movement is restricted, disable radio wave emission by activating Airplane mode, powering off handset, etc.



When using electronic medical equipment (other than implanted cardiac pacemaker/defibrillator) outside of medical institutions, consult device manufacturer about the influence of radio waves.

Radio waves may interfere with the operation of electric medical equipment.



Follow instructions of each medical institution for use of handset in a hospital.

Radio waves may affect operation of electric medical devices.

General Notes

Observe the following for optimal performance. Please use handset after reading carefully.

General Use

- · Do not use in places with much dust or vibration.
- · Use of handset near a landline phone, TV, or radio may affect the image and sound quality of the equipment.
- · Never modify handset. Use of modified handset is a violation of the Radio Law and Telecommunications Business Law.

Handset has received certification of compliance with technical standards as a specific wireless device based on the Radio Law as well as compliance with technical standards as a device based on the Telecommunications Business Law, indicated by the "technical conformity mark

😭 ." To check certification: In Home Screen, 💿 (Settings)





Removing screws and modifying handset interior voids technical conformity certification. Using handset with its technical conformity certification voided infringes on the Radio Law and Telecommunications Business Law, and handset should never be used in this condition.

· AC Charger is for domestic use only. Do not use abroad.

Precautions

- · Excess weight on handset may damage Display or internal parts, resulting in malfunction. Do not sit with handset in pocket or place at bottom of bag with other heavy objects. Even without exterior damage, it will not be covered under warranty.
- Do not use the following items in extreme temperatures or high humidity (use in temperatures between 5°C - 35°C and humidity within 35% - 85%).
- -AC Charger
- · Do not use the following items in extreme temperatures or high humidity. Use in temperatures between 5°C - 35°C and humidity within 35% - 90% (limited use in temperatures between 36°C - 40°C).
- DIGNO® BX3 / DIGNO® BX3 Cameraless / DIGNO® BX3 Plus handset
- · Internal Battery has a usable life. Internal Battery is near the end of its usable life if performance does not recover even after charging or if it bulges. Replace in these instances. For replacement, visit a SoftBank Shop or contact Customer Service. Life depends on conditions of usage.
- · Do not dispose of handset together with ordinary trash. Cooperate with collection of old handsets to assist environmental conservation and effective use of resources. Used Internal Batteries are collected at venues such as SoftBank Shops.



· If not using AC Charger, unplug from outlet.

Touchscreen

- · Operate Touchscreen with fingers for touch operation. Do not operate with a pen, pencil, or other pointed object. In addition to not operating correctly, it may scratch or damage Display.
- Touch screen may not operate or may misoperate in the following instances.
- · Stickers or commercially-available sheets are adhered to Display
- · Display is soiled
- · Operation with fingernails
- · Operation with foreign matter on Display

Camera

- · Do not leave Camera Lens under direct sunlight. May burn or fade colors of elements.
- · Note that viewing photo viewfinder continuously for a long period while capturing photos and repeatedly using video capture for a long period will cause a portion of handset to become warm, and may cause low-temperature burns if in prolonged contact.

Volume

· Listening at loud volume for an extended period may affect hearing.

Rising Handset Temperature

· You may also not be able to recharge depending on the connection environment. Some functions, such as charging, may then stop as a safety precaution. Note: Continuing to use handset while warm will cause handset to power off.

Urgent News (Application)

- · Urgent news reception is enabled by default.
- · If Always alert at full volume is disabled, alert does not sound during Silent Mode. To disable, follow steps below. In Home Screen, ◎ (Settings) ◆ Notifications ◆ (Wireless emergency alerts) → (Always alert at full volume ()
- · Vibration is enabled by default. To disable, follow steps



- · Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- · When urgent news reception is enabled, handset standby time becomes shorter.
- · SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing, or reception/ reception failure.

Bluetooth®

· Frequencies

Handset Bluetooth® function uses 2400 MHz - 2483.5 MHz frequencies in the 2.4 GHz band.

2.4FH1/XX4: Uses 2.4 GHz band, FH-SS and other modulation, with a maximum interference range of 40 m.

: Utilizes 2400 MHz - 2483.5 MHz band without mobile device bandwidth differentiation.



- · Bluetooth® Cautions
- · Handset Bluetooth® function is certified as conforming to Japanese domestic and FCC standards. Use is restricted in some countries/regions. Confirm local laws before use abroad.
- The 2.4 GHz band used by handset Bluetooth® function is shared by other devices. Handset Bluetooth® function tries to minimize effects of other devices using the same bandwidth, but connection speed and distance may be reduced or function may be disconnected.
- \cdot Connection speed and distance vary depending on distance between connected devices, obstacles, and Bluetooth® devices.
- Before Using Bluetooth®
 Bluetooth® operating frequency band is used by industrial, scientific, consumer and medical equipment including microwave ovens, other similar radio stations, premises radio stations for identifying mobile units used in manufacturing lines (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereafter, "other radio stations").
- 1. Before handset use, be sure "other radio stations" are not in use nearby.
- 2. If handset radio waves interfere with "other radio stations," promptly move or power off.
- 3. For further information, visit a SoftBank Shop or contact Customer Service.
- \cdot All handset operations when connected with a Bluetooth®-compatible device are not verified and therefore not quaranteed.
- · Handset supports the Bluetooth®-standard security function for secure radio communication. However, be careful when using Bluetooth®, as security may be insufficient depending on conditions of usage or settings.
- · SoftBank Corp. accepts no liability for data/information leaks during communication using Bluetooth®.

Wi-Fi (Wireless LAN)

- · Wi-Fi Cautions
- · Handset WLAN function is certified as compliant with Japanese domestic and FCC standards. Use of WLAN is restricted in some countries/regions. Check the laws and regulations of the country/region before using handset abroad.
- \cdot The 2.4 GHz band used by handset Wi-Fi function is shared by other devices. Handset Wi-Fi function tries to minimize effects of other devices using the same bandwidth, but connection speed and distance may be reduced or function may be disconnected.
- \cdot Connection speed and distance vary depending on distance between connected devices, obstacles, and Wi-Fi devices.



· Cautions on Using 2.4 GHz Band

Wi-Fi operating frequency band is used by industrial, scientific, consumer and medical equipment including microwave ovens, other similar radio stations, premises radio stations for identifying mobile units used in manufacturing lines (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereafter, "other radio stations").

- 1. Before handset use, be sure "other radio stations" are not in use nearby.
- 2. If handset radio waves interfere with "other radio stations," promptly move or power off.
- 3. For further information, visit a SoftBank Shop or contact Customer Service.
- Frequencies

Handset Wi-Fi function uses 2400 MHz - 2483.5 MHz frequencies in the 2.4 GHz band.

Uses 2.4 GHz band, DS-SS/OFDM modulation, with a maximum interference range of 40 m. $\,$

: Utilizes 2400 MHz - 2483.5 MHz band with mobile device bandwidth differentiation.



· Cautions on Using 5 GHz Band

Use of 5.2 GHz or 5.3 GHz band (W52/W53) for outdoor communication is prohibited by the Radio Law (excluding communication with the base stations or land mobile relay stations of high-output data communications systems operating in the 5.2 GHz band). Handset uses the following channels.

- · W52 (5.2 GHz band/36, 40, 44, 48 ch)
- · W53 (5.3 GHz band/52, 56, 60, 64 ch)
- · W56 (5.6 GHz band/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144 ch)
- \cdot All handset operations when connected with a Wi-Fi-compatible device are not verified and therefore not guaranteed.
- \cdot Handset supports the Wi-Fi-standard security function for secure radio communication. However, be careful when using Wi-Fi, as security may be insufficient depending on conditions of usage or settings.
- · SoftBank Corp. accepts no liability for data/information leaks during communication using Wi-Fi.

Specific Absorption Rate (SAR) for This Product

[A401KC] / [A402KC] / [A403KC] here refers to this mobile phone [DIGNO® BX3] / [DIGNO® BX3 Cameraless] / [DIGNO® BX3 Plus] .

Specific Absorption Rate (SAR) Information of This Product (for Japan)

This mobile phone [A401KC]/ [A402KC]/ [A403KC] complies with the Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of the Japanese technical regulations regarding exposure to radio waves (*1) and the limits of exposure recommended in the international guidelines, which are equivalent to each other. The international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The technical regulations and the international guidelines set out the limits of exposure to radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of human tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use near the head is 0.662 W/kg (*2), and that when worn on the body is 0.752 W/kg (*2). There may be slight differences of the SAR values in individual product, but they all satisfy the limit.

The actual value of SAR of this mobile phone while operating can be well below the indicated above. This is due to automatic changes in the power level of the device to ensure it only uses the minimum power required to access the network.

This mobile phone can be used at positions other than against your head. By using accessories such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body, this mobile phone is certified the compliance with the Japanese technical regulations.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website: https://www.tele.soumu.go.jp/e/sys/ele/index.htm

Association of Radio Industries and Businesses Website:

https://www.arib-emf.org/01denpa/denpa02-02.html (in Japanese only)

- *1 The technical regulations are provided in Article 14-2 of the Radio Equipment Regulations, a Ministerial Ordinance of the Radio Act.
- *2 Including other radio systems that can be simultaneously used with 5G/LTE.

FCC RF Exposure Information

This mobile phone [A401KC]/ [A402KC]/ [A403KC] is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy required by the Federal Communications Commission (FCC). The limit is based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations as required by the FCC. The highest SAR value for this handset when tested for use near the head is 0.773 W/kg, and that when worn on the body as shown below is 0.650 W/kg.

Body-worn Operation: This mobile phone was tested for typical body-worn operations with the separation distance of 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain the above separation distance between the user's body and the mobile phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with the FCC RF exposure requirements and should be avoided.

The FCC has granted an equipment authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure requirements. Filed SAR information of this mobile phone can be found by searching FCC ID JOYPC9699 in the FCC ID Search webpage: https://www.fcc.gov/oet/ea/fccid.

 $\label{eq:Additional} \mbox{Additional information on SAR can be found on the FCC} \mbox{ website at } \\$

https://www.fcc.gov/general/radio-frequency-safety-0.

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC Compliance Information

The product is certified by Federal Communications Commission (FCC).

The FCC ID of this product is JOYPC9699.

Or you can check as follows.

How to check:







Technical regulations conformity certification

Water/Dust/Shock Resistance Cautions

Water/Dust/Shock Resistance

Handset has IPX5*1 and IPX8*2 water resistance and IP6X*3 dust resistance when Card Slot Cap is closed firmly. Handset also has shock resistance compliant with MIL standards*4 (Kyocera testing methods).

- *1 IPX5: handset retains phone functioning after being subjected to a jet flow (12.5 L/min) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from the handset) for 3 minutes or more.
- *2 IPX8: phone unit experiences no seepage and retains phone functioning after it is slowly submerged to depth of 1.5 m in standing tap water at room temperature, left there for approximately 30 minutes and then taken out.
- *3 IP6X: indicates that handset is able to prevent intrusion of dust after being placed in a test device with 75 µm or smaller particles for 8 hours.
- *4 Compliance with MIL standards Compliance with original drop test in addition to 20 durability test items of MIL-STD-810H as defined by the U.S. Department of Defense.
- \cdot Shock resistance assumes usual everyday use. The product might break if subjected to excessive shock such as being thrown or dropped forcibly. Even if handset continues to function normally, dropping it may cause scratches, etc.

Handset resistance is verified under test conditions, and operation is not guaranteed to operate properly in actual use under all conditions. Non-breakage and non-malfunction is not quaranteed.

Usage Cautions

- Close Card Slot Cap firmly. A completely closed cover quarantees waterproof/dustproof performance.
- Never open or close Card Slot Cap with wet hands or while handset is wet.
- Do not immerse or splash handset in/with any liquid (alcohol, sea water, pool water, hot spring water, water with soap, detergent or bath salt, softdrink, alcoholic beverage, seasoning, etc.) other than tap water. Do not use where exposed to pet urine.
- If splashed, immediately rinse with tap water.
- Do not place directly on a sandy beach, etc. Sand, etc. entering Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack may affect volume, or entering handset may cause overheating or malfunction.
- \cdot Do not use under water.
- Do not use for a long period or store in a high-humidity location such as a bath room or kitchen.
- Moisture may remain even after draining water. While it does not hinder use, do not place wet handset near items you do not want to become wet. Be careful when placing in clothes or a bag which may become wet.
- · If water remains in External Device Port, do not use it.
- · If water collects in Mic or Earpiece/Speaker and temporarily affects sound, drain water.
- Handset is not designed to resist water pressure. Do not subject directly to high water pressure or immerse for a long period in water.
- · Do not wash in a washing machine, sonic washer, etc.
- Do not immerse in a bathtub. Handset is not designed to be heat resistant.
- · Condensation from rapid changes in temperature may cause malfunction.
- Before bringing handset into a bath room or other warm place from a cold place, let it adjust to room temperature.
- · Handset does not float on water.

Card Slot Cap

- · Completely close Card Slot Cap. Anything tiny (a single hair, etc.) caught in sealing surfaces may allow ingress of water.
- · Avoid opening and closing Card Slot Cap while wearing gloves. Anything tiny (a single hair, etc.) caught in sealing surfaces may allow ingress of water. When closing Cover, wipe away any moisture or dirt with a dry, clean cloth, even if it only appears very small.
- · A deteriorating or damaged Card Slot Cap will not allow handset to be water resistant.

Installing Card Slot Cap

 For details on installing Card Slot Cap, see "Inserting USIM Card."

If Liquid Other than Water Is on Handset

- \cdot Wiping may be done using a soft cloth dampened with isopropyl alcohol, ethanol, or sodium hypochlorite.
- · Handset can be washed with low-pressure water flow (6 L/min or less tap water at room temperature (between 5°C and 35°C)), holding it approximately 10 cm below the faucet or shower head.

· If soiled, hold handset making sure Card Slot Cap cannot open, and hand-wash without using a brush.

After Becoming Wet with Water

 After handset has become wet with water, drain water and wipe away moisture with a dry, clean cloth. In cold regions, any moisture on handset may freeze. Using handset with frozen moisture may cause malfunction.
 Do not leave wet.

Rubber Gasket

- Rubber gasket on back of Card Slot Cap is important to handset water and dust resistance. Do not remove or scratch it. Do not allow dirt to get on gasket. If rubber gasket becomes scratched or deformed, contact your nearest SoftBank Shop or Customer Service for parts replacement. Note that repairs may be for a fee depending on the condition of handset.
- Be careful not to pinch rubber gasket when attaching Card Slot Cap. Forcing it on with rubber gasket pinched will scratch gasket and may affect water resistance. Anything tiny (a single hair, etc.) caught in sealing surfaces may allow ingress of water.
- Any liquid other than water on gasket may affect gasket durability.
- Do not insert anything pointed in Card Slot Cap gap. May damage or deform handset, and may scratch gasket and allow ingress of water.

Heat Resistance

• Do not immerse or splash with hot water. Do not expose to hot air as in a sauna or from a dryer. Handset is not designed to be heat resistant.

Dust Resistance

• If any dust is on handset, immediately rinse or otherwise remove completely before using handset.

Shock

 While handset is shock resistant, shock resistance assumes usual everyday use. Handset may break if subjected to excessive shock such as being thrown or dropped forcibly.

Parts Replacement

To maintain water and dust resistance, it is recommended to replace parts every 2 years regardless of their condition. Handset can be submitted for parts replacement at a fee. Contact your nearest SoftBank Shop or Customer Service for parts replacement.

When Using a Foam Type Hand Soap/ Body Soap



Remove the cables from handset completely and turn it off



Wash your hands and wipe off water on them, apply a foam type hand soap/body soap on your palms and lather well, and then hold handset and rub front/back surface with the same strength





Rinse front/back surface and each key until foams of hand soap/body soap are removed completely



- With Card Slot Cap still attached, rinse the following locations with fairly low-pressure water (6 L/min or less).
- Wash the holes of Mic, Earpiece/Speaker, External Device
 Port, or Earphone/Microphone Jack, etc. for approximately
 30 seconds with running water.
- As remaining foams may cause malfunction, rinse handset well until foams are removed completely.


4

Drain the holes of Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack, etc. sufficiently

· For details on draining, see "If Exposed to Water."



Dry handset sufficiently and check if any waterdrops remain on it

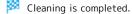

- \cdot Never charge while handset is wet.
- · For details on drying, see "If Exposed to Water."

Cautions If Using Foam Hand Soap/Foam Body Soap

Observe the following if using foam hand soap/foam body soap.

- Be sure to remove any store-bought accessories (straps, etc.) Check precautions given for store-bought accessories.
- * Store-bought protective sheets can peel.
- Be sure to use foam-type hand soap or body soap by a domestic brand.
- Do not mix different types of foam hand soap/foam body soap.
- Do not use: alkaline hand soap/body soap or business hand soap/body soap, soap, detergent, bath salts, shampoo, rinse, facial cleanser, makeup remover, toothpaste, etc. If on handset, immediately rinse with water.
- \cdot Handset is not designed to resist water pressure. Do not subject directly to high water pressure or immerse for a long period in water.
- · If soap residue from foam hand soap/foam body soap is noticeable, wipe with a cotton swab dampened with citrate diluted to about 1.5% (1.5 g citric acid with 100 ml water). Next, rinse again so no citrate is remaining.


When Using Alcohol, etc.



Remove the cables from handset completely and turn it off



Apply small amount of isopropyl alcohol (99.7 % or less), ethanol (99.5 % or less), or sodium hypochlorite (1.0 % or less) to a lint-free soft cloth and wipe handset with it

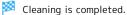

· Always carefully read instructions for using any of isopropyl alcohol (99.7% or less), ethanol (99.5% or less), or sodium hypochlorite (1.0% or less) sold as a disinfectant. Improper use can pose risks to health and as a flammable substance.

Cautions If Using Alcohol

Observe the following if using alcohol.

- Be sure to remove any store-bought accessories (straps, etc.) Check precautions given for store-bought accessories.
 - * Store-bought protective sheets can peel.
- · Before caring for handset, check that Card Slot Cap is closed firmly.

If Exposed to Water

Using handset with any moisture on it may allow moisture to collect in Mic, Earpiece/Speaker, External Device Port, or Earphone/Microphone Jack, and may cause sound to be inaudible or may wet clothing, bag, etc. Follow steps below to drain water.



Wipe handset with a lint-free clean, dry cloth





Shake handset as shown until there is no more wetting





- · Earpiece/Speaker side: at least 20 times each
- · Mic: at least 20 times each
- · Check first that it is safe around you to shake handset.
- · Hold handset firmly so as not to drop it when draining water.



Press a lint-free clean, dry cloth into gaps (Mic, External Device Port, Earphone/Microphone Jack, Earpiece/Speaker, etc.) to remove any water





After removing as much water as possible, leave handset at room temperature for at least 1 hour



Water is drained.

- · Some water may still remain in handset. Do not leave handset beside/in items that you do not want to get wet (clothing, bag, etc.).
- · When powering on handset, check that no moisture is remaining particularly in External Device Port. Powering on with moisture on handset may damage External Device Port.

When Charging

Accessories and optional parts are not waterproof/dustproof. Check the following when and after charging.

- · Never charge handset while it is wet. May cause fire, burns, injury, electric shock, etc.
- · Check that handset is not wet. Before charging wet handset, first drain well, then wipe away moisture with a dry, clean cloth, and let dry at room temperature for at least an hour before charging.
- · Do not touch a specified AC Charger with wet hands. May cause electric shock.
- · Use a specified AC Charger where not exposed to water, and do not use them near water sources (bath room, shower, sink, basin, etc.). May cause fire, burns, electric shock, malfunction, etc. Even when not charging, do not bring in a bath room, etc. May cause fire, burns, electric shock, malfunction, etc.
- · Be sure to completely wipe away any liquid in External Device Port that is not water. Check that no moisture or dirt remains before use. For details, see "Usage Cautions."

Intellectual Property Rights

Copyrights/Portrait Rights

- · Copying, changing, editing, etc. of images, video, or audio captured with handset may not be done without the copyright/portrait right holder's permission except for personal use. Refrain from using or changing another's portrait or name without permission. Doing so may infringe on their right of portrait or other right.
- · Also when publishing captured images of others to Internet websites, etc., take adequate care with copyrights or portrait rights. Note that capturing photos or videos or audio at demonstrations, performances, or exhibitions may be restricted even if only for personal use.
- Handset cannot be used to transfer copyrighted images and sound except as within the scope stipulated by copyright law.

You may not perform or be involved in changing, translating/adapting, reverse engineering, reverse compiling, or reverse assembling of the software or any part thereof installed in handset.

Handset may not be taken out of Japan except for where permitted by law.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

Trademarks

Company names and product names in this guide are the trademarks or registered trademarks of each company.

The TM and ® marks are sometimes abbreviated in this guide.

- Microsoft®, Excel®, and PowerPoint® are registered trademarks of US Microsoft Corporation in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle Corporation and its subsidiaries and affiliates in the United States and other countries. Company names, product names, etc. appearing in the text may be trademarks or registered trademarks of each company.
- · QR code is a registered trademark of Denso Wave Inc.
- The microSD logo, microSDHC logo, and microSDXC logo are trademarks of SD-3C, LLC.



• The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and these trademarks are under license to Kyocera Corporation.



· This product has passed certification testing as established by Wi-Fi Alliance® to guarantee the interconnectivity of wireless LAN devices based on wireless LAN standard IEEE 802.11, and has been designated as Wi-Fi CERTIFIED™. Interconnection with products having the Wi-Fi logo is guaranteed. It is compliant with IEEE 802.11a, IEEE 802.11b, IEEE 802.11g, IEEE 802.11n, and IEEE 802.11ac. Wi-Fi® and the Wi-Fi CERTIFIED logo are registered trademarks of Wi-Fi Alliance®.

Wi-Fi CERTIFIED™ is a trademark of Wi-Fi Alliance®.



- · USB Type-C[™] is a trademark of USB Implementers Forum.
- This product includes software developed by the OpenSSLProject for use in the OpenSSL Toolkit. (https://www.openssl.org/)
- This product includes cryptographic software written by EricYoung(eay@cryptsoft.com)
- · Google, Android, Google Play, and other marks are trademarks of Google LLC.
- is a trademark or registered trademark of NFC Forum, Inc. in the United States and other countries.
- · FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark or trademark of Sony Group Corporation or its affiliates.
- This product is covered by one or more claims of the HEVC patents listed at the URL below.

patentlist.accessadvance.com (https://accessadvance.com/ hevc-advance-patent-list/)



- \cdot "DIGNO" and "glove touch" are registered trademarks of Kyocera Corporation.
- ・The "SoftBank" and "ソフトバンク" names and logos are trademarks or registered trademarks of SoftBank Group Corp. in Japan and other countries.
- · Yahoo!, ヤフー, the Yahoo! JAPAN logo, and the Y! logo are registered trademarks or trademarks of LY Corporation in Japan.
- Other company names, product names, and service names in this guide are the trademarks or registered trademarks of each company.
- The user is granted a license to use the software installed in handset and described in this guide. Note the following when using the software.
- (a) You must not copy, distribute, modify, analyze, reverseengineer, or derive the source code of the software in its entirety or in part.
- (b) You must not export the software in its entirety or in part in violation of law or regulation.
- (c) No warranty is implied for the software's merchantability, fitness for any particular purpose, non-infringement of third-party intellectual property rights, etc.

However, use of software included in the software is based on GNU General Public License (GPL), GNU Library/ Lesser General Public License (LGPL) or other open-source software licenses and use of software under license to Kyocera Corporation is subject to the terms and conditions of each software license with priority. For information on open-source software, see "Open-Source Software" as given expressly below.

Open-Source Software

This product contains open source software complying with licensing conditions of GNU General Public License (GPL), GNU Library/Lesser General Public License (LGPL), and other open-source software.

For specific conditions of GPL, LGPL, and other licensing, refer to "About phone" on this product. For details, see the Kyocera Corporation website.

This product contains software with copyrights belonging to Kyocera Corporation as well as software under license to Kyocera Corporation. Copyrights to software contained in this product and designed/developed by Kyocera Corporation in compliance with the standards and licenses of open-source software are those of Kyocera Corporation and third parties, and the customer may not distribute, copy, modify, publicly transmit, etc. the software without the consent of Kyocera Corporation, except for any scope of use as permissible by copyright law or any scope of use as permitted separately by Kyocera Corporation.

DIGNO® BX3 DIGNO® BX3 Cameraless DIGNO® BX3 Plus User Guide Index

A
Adding/Deleting Applications
B
Basic Operation24 Battery Settings74
C
Capturing Still Images/Videos
D
Data Usage Settings73 Display Settings75
eSIM8
G
General Notes
Handset Screens
0
Intellectual Property Rights110 Introduction3
M
Making Calls while Abroad
Optional Services
P

Parts & Functions 6
Phone Number46
Placing/Answering Calls38
Power On/Off16
S
Safety Precautions96
SD Card12
Security & Privacy Settings76
Setting a Google Account19
Silent Mode25
Sound & Vibration Settings75
Specific Absorption Rate (SAR) for This Product105
Specifications92
Status Bar34
System Settings78
Text Entry27
U
Updating Software
USIM Card11
Using Bluetooth® Function 69
Using Chrome54
Using Contacts47
Using Gmail50
Using Notifications Window35
Using Quick Settings36
Using Touchscreen24
Viewing Still Images/Videos (Photos)60
W
Waking Handset from Sleep22
Warranty & After-Sales Service
Water/Dust/Shock Resistance Cautions106
<u></u>

DIGNO® BX3
DIGNO® BX3 Cameraless
DIGNO® BX3 Plus
User Guide

December 2024, First Edition SoftBank Corp.

Visit SoftBank Shop for assistance

 $\sf Model: DIGNO^{\scriptsize @}\ BX3/DIGNO^{\scriptsize @}\ BX3$ Cameraless/DIGNO^{\tiny @}\ BX3 Plus Manufacturer: KYOCERA Corporation