

# motorola edge 60s pro

## User Guide



## motorola edge 60s pro User Guide Contents

### Introduction

|                           |   |
|---------------------------|---|
| About the User Guide..... | 3 |
|---------------------------|---|

### Getting Started

|                               |    |
|-------------------------------|----|
| Parts & Functions.....        | 6  |
| eSIM.....                     | 7  |
| USIM Card.....                | 11 |
| Charging Battery.....         | 12 |
| Power On/Off.....             | 13 |
| Making Initial Settings.....  | 14 |
| Setting a Google Account..... | 16 |
| Unlocking Screen.....         | 20 |

### Basic Operations

|                        |    |
|------------------------|----|
| Basic Operation.....   | 22 |
| Using Touchscreen..... | 22 |
| Do Not Disturb.....    | 23 |
| Airplane Mode.....     | 24 |
| Text Entry.....        | 25 |
| Updating Software..... | 26 |

### Handset Interface

|                                 |    |
|---------------------------------|----|
| Handset Screens.....            | 30 |
| Status Bar.....                 | 31 |
| Using Notifications Window..... | 32 |
| Using Quick Settings.....       | 32 |

### Phone

|                              |    |
|------------------------------|----|
| Placing/Answering Calls..... | 36 |
| Optional Services.....       | 38 |
| Phone Number.....            | 43 |
| Using Contacts.....          | 43 |

### Messaging

|                                  |    |
|----------------------------------|----|
| Sending Messages (+Message)..... | 46 |
| Using Gmail.....                 | 47 |

### Internet

|                   |    |
|-------------------|----|
| Using Chrome..... | 50 |
|-------------------|----|

### Camera

|                                           |    |
|-------------------------------------------|----|
| Capturing Still Images/Videos.....        | 54 |
| Viewing Still Images/Videos (Photos)..... | 56 |

### Application Basics

|                          |    |
|--------------------------|----|
| Applications.....        | 58 |
| Adding Applications..... | 59 |

### Wi-Fi/Bluetooth

|                                |    |
|--------------------------------|----|
| Connecting by Wi-Fi.....       | 64 |
| Using Bluetooth® Function..... | 65 |

### Handset Settings

|                       |    |
|-----------------------|----|
| Handset Settings..... | 68 |
|-----------------------|----|

|                                  |    |
|----------------------------------|----|
| Data Usage Settings.....         | 69 |
| Display Settings.....            | 70 |
| Home & lock screen Settings..... | 70 |
| Sound & vibration Settings.....  | 72 |
| Battery Settings.....            | 73 |
| Security & privacy Settings..... | 73 |
| System Settings.....             | 75 |
| Other Settings.....              | 76 |

## Global Services

|                                |    |
|--------------------------------|----|
| Global Roaming.....            | 84 |
| Making Calls while Abroad..... | 85 |

## Warranty/Specifications/Customer Service

|                                     |    |
|-------------------------------------|----|
| Warranty & After-Sales Service..... | 90 |
| Specifications.....                 | 90 |
| Customer Service.....               | 91 |

## Safety Precautions

|                                              |     |
|----------------------------------------------|-----|
| Safety Precautions.....                      | 94  |
| Material List.....                           | 102 |
| Important Product Information.....           | 103 |
| Bluetooth®/Wi-Fi (WLAN).....                 | 106 |
| Cautions on Water/Dust/Shock Resistance..... | 107 |
| Intellectual Property Rights.....            | 109 |
| RF Exposure Information of This Product..... | 111 |

## About the User Guide

Most operation descriptions are based on default settings. Unless noted otherwise, descriptions are for Home Screen. Some operation descriptions may be simplified.

### Before Using This Product

Read "Quick Start" and "[Safety Precautions](#)" on the User Guide thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

### Data Communication

- Handset is designed to be always connected to the Internet. Some functionality, such as data syncing, initiate transmission automatically.
- Large-volume data communication (application downloads, video viewing, etc.) incur expensive transmission fees. Subscription to a flat-rate data plan is strongly recommended.
- Depending on applications and services used, transmission fees may be incurred even while connected by Wi-Fi®.

### Screenshots & Key Labels

Screenshots in the User Guide may differ in appearance with actual Display. Key labels in the User Guide are simplified for description purposes and differ with actual Display.

### Other Notations

In the User Guide, the product is referred to as "handset."

 


# Getting Started

- Parts & Functions..... 6
- eSIM..... 7
- USIM Card..... 11
- Charging Battery..... 12
- Power On/Off..... 13
- Making Initial Settings..... 14
- Setting a Google Account..... 16
- Unlocking Screen..... 20


# Parts & Functions

## Handset (Front)

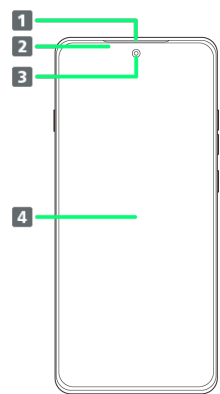


| Part                                    | Description                                                                                                    |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------|
| 1 Earpiece/ Speaker                     | Hear the other party's voice. Listen to music, video, and other audio when playing back media.                 |
| 2 Proximity/ Environmental Light Sensor | Detects closeness to ear during a call, to turn Display on or off, and automatically adjust Display backlight. |
| 3 Front Camera                          | Use to shoot photos or videos of yourself.                                                                     |
| 4 Display                               | Handset uses a touchscreen-type Display. Operate with your fingers on Display.                                 |

## Handset (Back/Side)

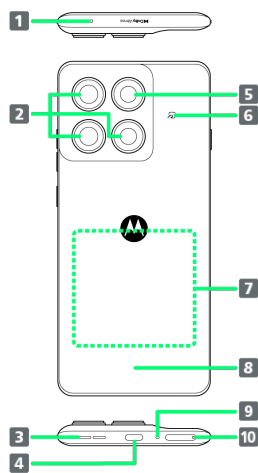 

| Item                         | Description                                              |
|------------------------------|----------------------------------------------------------|
| 1 Mic                        | Use when capturing videos or calling using speakerphone. |
| 2 Rear Camera                | Capture still images and videos.                         |
| 3 Speaker                    | Listen to music, video sound, etc.                       |
| 4 USB Type-C™ Port           | Connect USB Type-C cable, etc.                           |
| 5 LED Flash                  | Use as a light when taking photos, etc.                  |
| 6 NFC FeliCa Touchpoint      | Hold up to a reader/writer to use NFC/ Osaifu-Keitai®.   |
| 7 Wireless Charging Position | Position wireless charger.                               |
| 8 Back Cover                 | Back Cover on handset is not removable.                  |
| 9 Mic/ Recorder Mic          | Speak here. Use as a mic when capturing videos.          |
| 10 SIM Card Tray             | Install/remove USIM Card.                                |

## Handset Keys

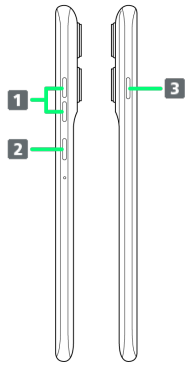 

| Part                          | Description                                                                                     |
|-------------------------------|-------------------------------------------------------------------------------------------------|
| <b>1</b> Volume Key (Up/Down) | Adjust Volume.                                                                                  |
| <b>2</b> Power Key            | Turn Display on/off.<br>Press and Hold to power on or open Gemini™.                             |
| <b>3</b> AI Key               | Press twice or Long Press to open AI functions. For details on AI Key, see "Gestures Settings." |

## eSIM

eSIM is an integrated SIM already built into handset. An eSIM-capable handset allows you to use a phoneline simply with a contract subscription and configuring handset, without the needed replacement of USIM cards.

### Handling eSIM

 
For eSIM handling, see the following website.

<https://www.softbank.jp/mobile/support/product/sim/esim/> (Japanese)

## Downloading eSIM


1

Click Home Screen up → (Settings) → Network & internet

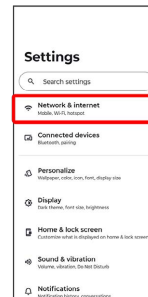


2

 SIMs & mobile network

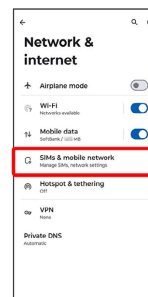


3

 Download new SIM

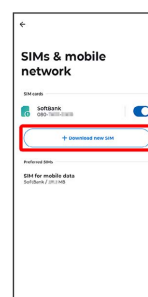

4

## Set up an eSIM

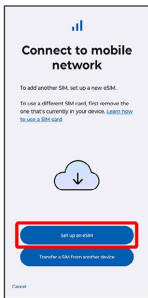 

5

## Scan the QR code



- Handset may not display the above step, and instead go to the next step, depending on your conditions of usage.

 
6

## Set up




7

## Enter a verification code → Continue

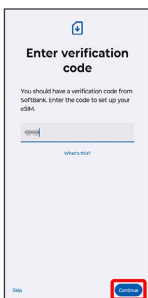

8

## Close

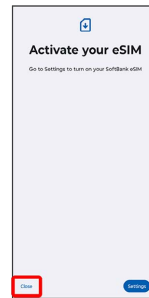 


🚩 eSIM download is completed.

- Tap **Settings** to enable eSIM. Continue by following onscreen instructions.

## Enabling/Disabling eSIM

 
1

Flick Home Screen up ➡ (Settings) ➡ Network & internet

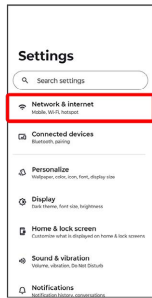


2

 SIMs & mobile network

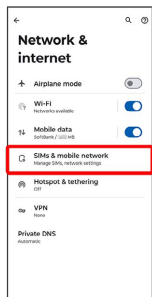

3

 Select eSIM

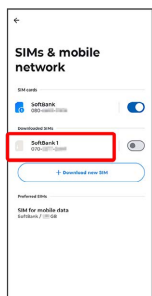


4

Use this SIM



5

 Turn on

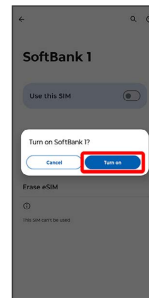


 eSIM changes between enabled and disabled.

## Erasing eSIM

 
1

Click Home Screen up → (Settings) → Network & internet

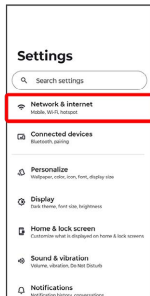


2

 SIMs & mobile network

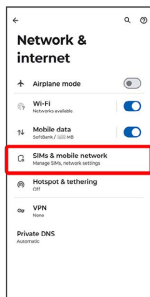


3

 Select eSIM

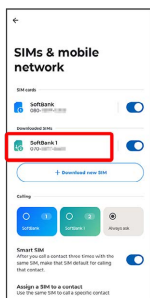


4

 Erase eSIM

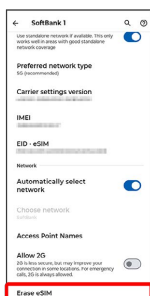

5

 Erase

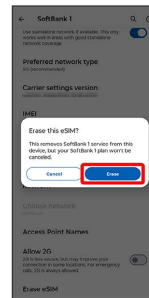

 eSIM is erased.

 After Erasing eSIM

To use an eSIM again after having erased it, the QR code for downloading an eSIM must be reissued.

Erasing an eSIM does not cancel your subscription contract.

## USIM Card

USIM Card is an IC card containing phone number and other customer information.

### Handling USIM Card

For USIM Card handling, see following items.



#### **1** IC chip

For USIM Card handling, see following SoftBank Mobile Website.

<https://www.softbank.jp/mobile/support/protect/usim/>  
(Japanese)

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage USIM Card.

### USIM Card Cautions

Observe the following when using USIM Card.

 
- Customer is responsible for any damage caused by inserting USIM Card in an other-brand IC card reader, etc. The company is not responsible in such case.
- USIM Card is the property of the company.
- USIM is replaceable (at cost) in case of loss/damage.
- Return USIM Card to the company when cancelling subscription.
- Returned USIM Cards are recycled for environmental purposes.
- Note that USIM Card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on USIM Card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your USIM Card or handset (USIM Card inserted) is lost/stolen. For details, contact [Customer Service](#).
- Always power off handset before inserting/removing USIM Card.
- Some services, functions, etc. may have restrictions when an other-carrier USIM card is used. SoftBank Corp. does not guarantee operation whatsoever.

### Inserting USIM Card


Always power off beforehand.

**1**


Insert SIM Removal Pin (complimentary sample) in hole in SIM Card Tray

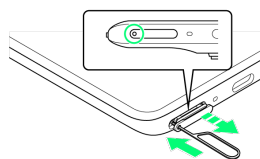
**2**

 Pull out SIM Card Tray

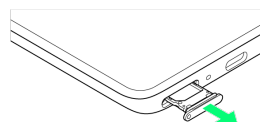
**3**

 
Set USIM Card in SIM Card Tray

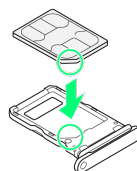

- Place gently, noting orientation of USIM Card (notch/IC (gold) chip facing up).
- Make sure USIM Card is in SIM Card Tray securely.

**4**

 Insert SIM Card Tray in SIM Card Tray Slot straight

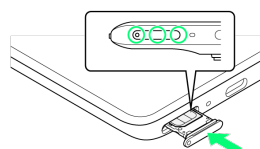

 USIM Card is inserted.


- Press firmly where circled O, and make sure there is no gap between handset and SIM Card Tray.

## Removing USIM Card

 Always power off beforehand.


1

Insert SIM Removal Pin (complimentary sample) in hole in SIM Card Tray

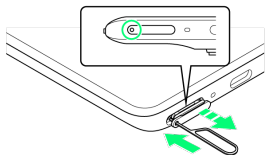


2

 Pull out SIM Card Tray




3

 Remove USIM Card from SIM Card Tray

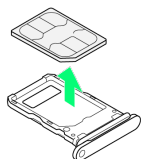

4

 Insert SIM Card Tray in SIM Card Tray Slot straight

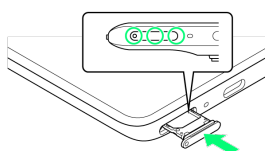

USIM Card is removed.

- Press firmly where circled O, and make sure there is no gap between handset and SIM Card Tray.

## Charging Battery

### Charging Cautions

Never connect USB Type-C plug while handset or peripheral equipment is wet.

### Charging with AC Charger

 
Use supplied 125W TurboPower™ Charger (complimentary sample) and USB Cable (complimentary sample), or use an optional AC Charger specified by SoftBank (USB Type-C™ rapid charging AC Charger with USB PD-PPS capability [ZSDBAV] (SB-AC22-TCPD)).

For information on AC Charger and other peripheral devices, see SoftBank Website.

Charging with supplied 125W TurboPower Charger (complimentary sample) and USB Cable (complimentary sample) is described as an example.


1

Insert USB Type-C plug of USB Cable (complimentary sample) into USB Type-C Port

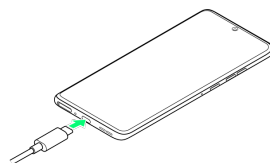


2

 Insert USB Type-C plug of USB Cable (complimentary sample) into USB Type-C port of 125W TurboPower Charger (complimentary sample).



3

 
Insert power plug of 125W TurboPower Charger (Complimentary Sample) into household AC

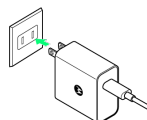

Charging starts.

4

 When charging is complete, unplug power plug of 125W TurboPower Charger (Complimentary Sample) and remove USB Type-C plug of USB Cable (complimentary sample) from handset

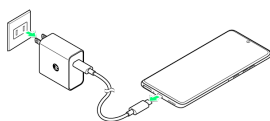

 Charging ends.

### Enabling Charge boost

If you charge handset rapidly at the maximum speed with 125W TurboPower Charger (complimentary sample), follow the procedures below to enable **Charge boost**.

 
Flick Home Screen up   (Settings)  **Battery**  
 **Charge boost**  **Use charge boost** (  )

## Power On/Off

### Powering On

1

Power Key (Press and Hold)

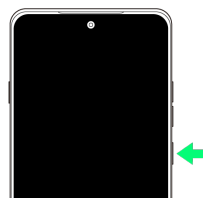


 Lock Screen appears.

- For details on unlocking screen, see "[Unlocking Screen](#)."
- Startup screen appears the first time handset is powered on. For details on initial settings, see "[Making Initial Settings](#)."

### Powering Off

 
1

Press Power Key and Volume Up Key

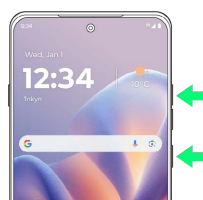

2

**Power off**

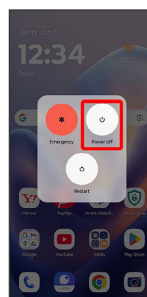 

 Handset powers off.

## Making Initial Settings

When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google account, and other settings. Follow onscreen instructions to set items. To use USIM Card, insert USIM Card before powering on handset.

### ! eSIM Cautions

When using eSIM, do the following before powering on.

- Remove USIM Card from handset.
- Make sure that handset can connect to the Wi-Fi network.
- Have the QR code ready for eSIM registration.

## Making Initial Settings

 
1

日本語 (日本) → English → United States → Start



2

Follow onscreen instructions to transfer settings or data

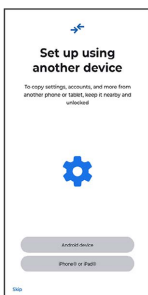

- Tap **Android device** / **iPhone® or iPad®** to copy settings or accounts from another handset, etc., and follow onscreen instructions.
- If not copying settings or accounts from another handset, etc., Tap **Skip**.

3

 
Follow onscreen instructions to set Wi-Fi



- To skip Wi-Fi settings while using USIM Card, Select **Use mobile network for setup** / **Set up offline**. Continue by following onscreen instructions.


4

Make settings for privacy and security → **Accept & continue**

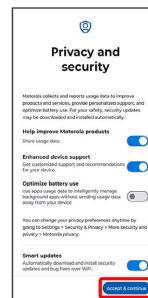

5

 
Follow onscreen instructions to set a Google account

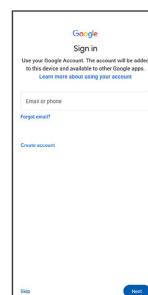

- For details on Google accounts, see "[Setting a Google Account.](#)"
- If not making Google account settings, Tap **Skip** → **Skip**.


6

 Select items to set → I agree

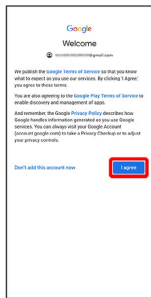

7

 
Follow onscreen instructions to set screen lock / unlocking using fingerprint

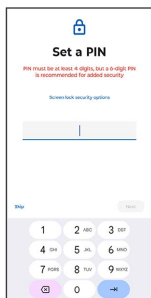

· If not making settings, Tap Skip → Skip .

8

 
Follow onscreen instructions to transfer data

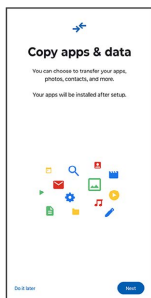

- If not copying data from another handset, etc., Tap Do it later → Do it later .
- To copy data from another handset on which a Google account is set, Tap Next , then follow onscreen instructions.


9

 Select items to set → Accept

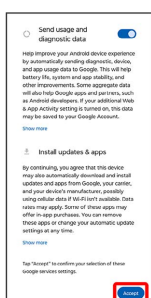

10

 
Follow onscreen instructions to set Gemini, etc.

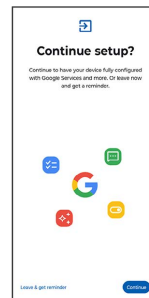

· To complete setup later, Tap Leave & get reminder .

11

 
OK

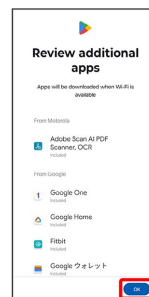

12


Follow onscreen instructions to stay in touch with Motorola

 → Next

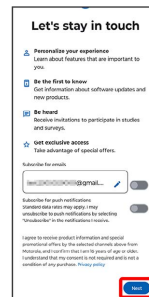

13

 Follow onscreen instructions to set Glance → Next

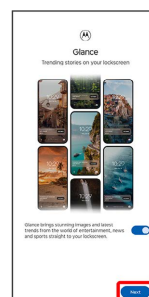

- If confirmation appears, follow onscreen instructions.
- See "[Changing Glance Settings](#)" for details on Glance.

 
14

Set the style of navigation bar, etc. → **Next**



15

Set the theme → **Next**

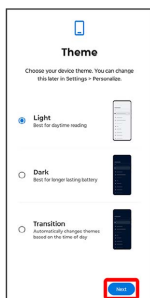

🚩 Settings are complete.

- If confirmation appears, follow onscreen instructions.

## Setting a Google Account

Use a Google account and get more convenience with Google services. A Google account is required to use some services or fully use some applications.

 
### ! Google Account Cautions

Be careful not to forget your Google account mail address or password.

## Creating a Google Account


1

Flick Home Screen up

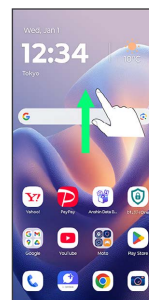


2

 ⚙️ (Settings)

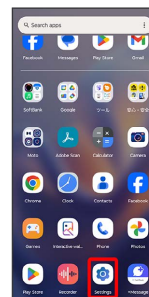


3

 Passwords, passkeys & accounts

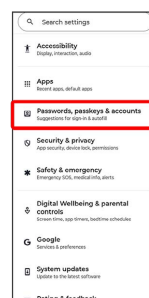


4

 Add account

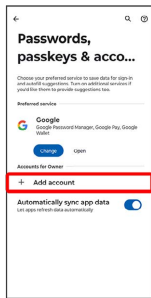

5

 
Google

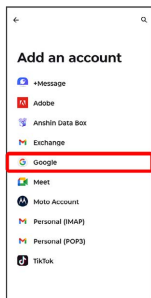

Window for logging in to a Google account opens.


6

 Create account

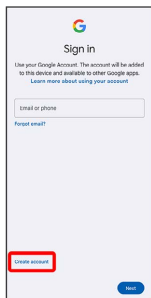


7

 For my personal use

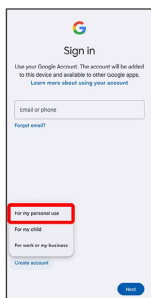

8

 Enter first name → Enter last name → Next

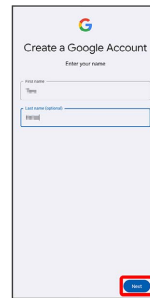


9

Enter date of birth and gender → Next



10

 
Select mail address → Next

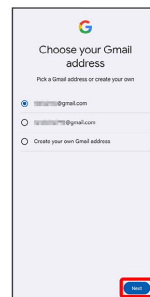

To create a Gmail™ address, **Create your own Gmail address** → Enter username (mail address) → Next .

11

 
Enter password → Next

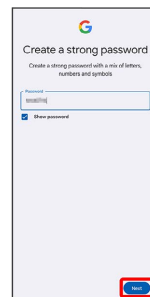

Next




 I agree

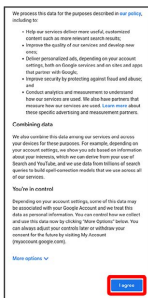


- To set how your phone number will be used if adding one, Tap **More options** . Continue by following onscreen instructions.

 Set Google service → Accept

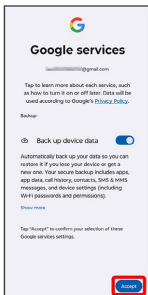

 Account is created.

## Logging In with a Google Account

 
Flick Home Screen up

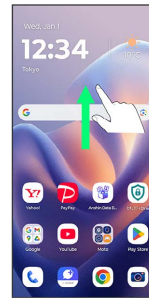


(Settings)

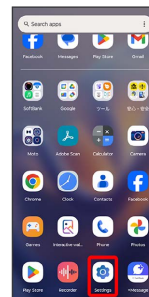 

Passwords, passkeys &amp; accounts

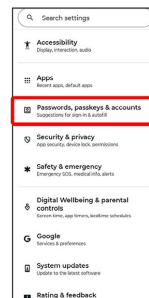 


Add account

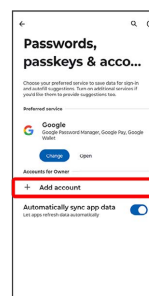 

5

 
Google

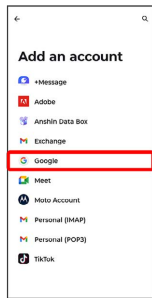

Window for logging in to a Google account opens.


6

 Enter mail address Next

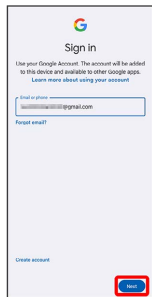


7

 Enter password Next

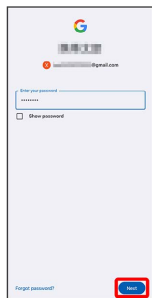


8

 I agree

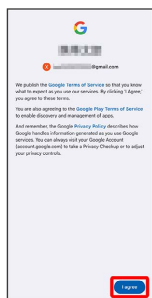

9

 Set Google service Accept

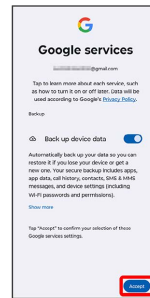


You are logged in to your Google account.

# Unlocking Screen
 
## Screen Lock

Display goes out after a set period of inactivity to save battery power (screen locked).

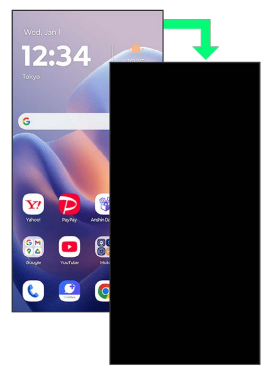

· Press Power Key while Display is on to lock screen manually.


### When Screen Locks during Music Playback

 Music playback continues. While Display is off (screen is locked), Press Power Key to use operation panel in Lock Screen (operation may differ with application).

## Unlocking Screen

1

When screen is locked, Power Key

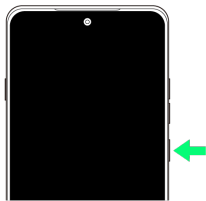

 Lock Screen appears.

2

Flick lock screen up



 Screen is unlocked.

· The method for unlocking the screen can be changed.

# Basic Operations

 
|                        |    |
|------------------------|----|
| Basic Operation.....   | 22 |
| Using Touchscreen..... | 22 |
| Do Not Disturb.....    | 23 |
| Airplane Mode.....     | 24 |
| Text Entry.....        | 25 |
| Updating Software..... | 26 |

## Basic Operation

### Selecting Options and Navigating Screens

Tap items, icons, onscreen keys, etc. to open assigned items.


- Tap  to go back to previous screen.

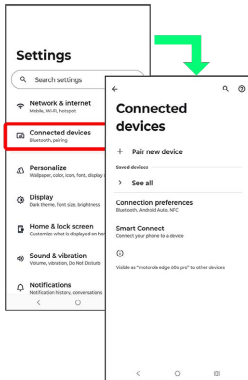

### Menu Operations


1

 Tap  for available settings and items.

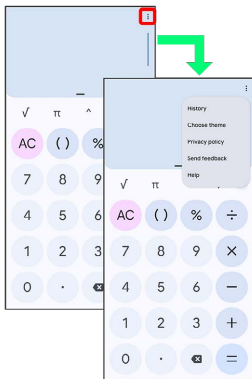

2

 Screens may also have settings and items that are available by Touching & Holding Display.

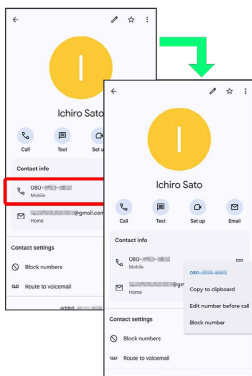


## Using Touchscreen

Handset uses a touchscreen-type Display. Operate with your fingers on Display.


### Tap

 Contact Display lightly and briefly.

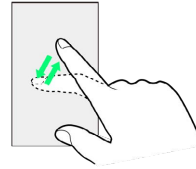


### Touch & Hold

 Touch screen lightly and hold it for a while. When the screen changes, release finger.

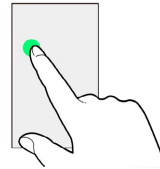


### Drag

 Touch icon or other item lightly, move it where desired, and release finger.




### Flick (Swipe)

 Contact Display lightly, then brush screen up/down or left/right.

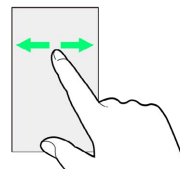

## Pinch/Spread

 Contact Display lightly, then close/widen fingers.

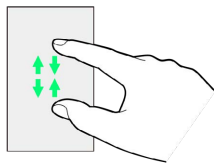

## Do Not Disturb

Mute ringtones and other handset sounds to avoid disturbing others around you.

### ! Do Not Disturb (Vibration/Mute) Cautions

Camera shutter, video start/stop tones, alarms, media, etc. sound even in Do Not Disturb (vibration/mute).

- Alarms and media can be muted with "Do Not Disturb (Silent mode)" setting. For details, see "[Sound & vibration Settings](#)."

 
### Entering Do Not Disturb (Vibration)

1

Press Volume Key



2

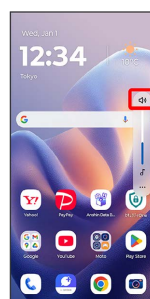

Icon changes to , and handset enters Do Not Disturb (vibration).


## Entering Do Not Disturb (Mute)

 1

Press Volume Key




2

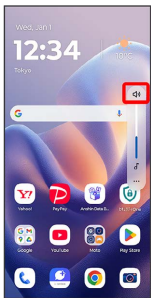

3

 While volume adjustment bar is shown, 

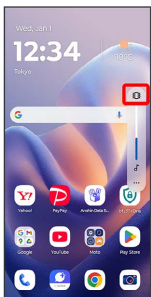

 Icon changes to , and handset enters Do Not Disturb (mute).


## Airplane Mode

 Disable all functions that emit signals. Handset remains powered on.

### Using Airplane Mode

1


Flick Status Bar down

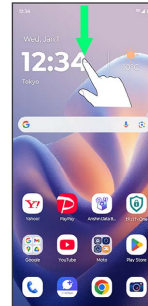

 Notifications Window opens.

2

 
Flick Notifications Window down

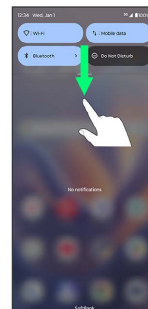

 Quick Settings open.


3

 Flick Quick Settings left

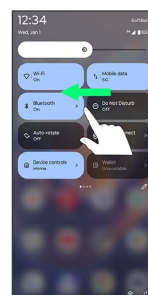

4

 Airplane mode (On)

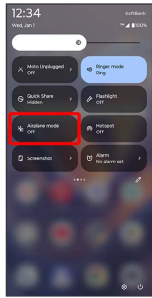

 Handset is in Airplane mode.

- Use same operation again while in Airplane mode to cancel.

## Text Entry

### Keyboards

Use onscreen keyboards in Display for text entry.

In 12 keys keyboard, multiple characters are assigned to each key. In QWERTY and other keyboards, a single letter is assigned to each key. "Handwriting" for entering handwritten characters is also available.

- To hide keyboard, Tap .

### + Keyboard Operations

#### Setting Keyboard to Use

In a text entry window,   Languages  English (US)  Select keyboard  Done

- Set several keyboards.

 
#### Switching Keyboards

Set several keyboards to switch between.

In a text entry window, 

- Alternatively, Long Press   Tap keyboard to switch to.

## QWERTY Keyboard Layout

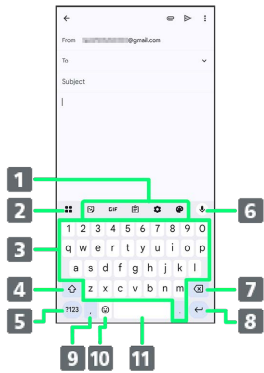

- 1 Show shortcuts for frequently used functions (Toolbar).
- 2 Show icons not displayed on Toolbar.
- 3 Enter characters.
- 4 Switch between all lower case and sentence case. Double-Tap for all upper case.
- 5 Toggle entry modes.
- 6 Use voice input.
- 7 Delete character to left of cursor.
- 8 Insert line break; confirm current characters Touch & Hold to set one-handed mode.
- 9 Enter a comma. Touch & Hold to show character input setting screen or to set one-handed mode.
- 10 Show emoji, emoticons, etc. With several set keyboards, to switch between keyboards.
- 11 Enter a space.

## Switching Character Types (Entry Modes)

1

In QWERTY keyboard, Tap



Entry mode switches.

- To enter more symbols, Tap .
- Tap to back to alphabet mode.

## Updating Software

Automatically download the latest software via the Internet. Software is updated when handset restarts at a specified time.

### Before Updating Software

Saved data may be lost depending on condition of handset (malfunctioning, damaged, exposure to water, etc.). It is recommended that you back up important data regularly. SoftBank Corp. is not responsible for damages from loss of data.

### Software Update Cautions

#### During Update

Never remove USIM Card or power off handset during a software update. Doing so may cause the update to fail. A software update failure may disable handset. If handset becomes disabled, contact [Customer Service](#).

#### Signal during Update

 
Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during an update may cause an update failure. An update failure may disable handset.

## Enabling Smart Updates

Set handset to automatically download software updates when available.


1

Flick Home Screen up (Settings)

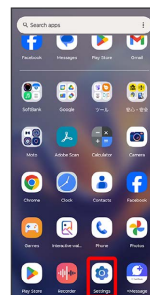

2

 System updates → Smart updates

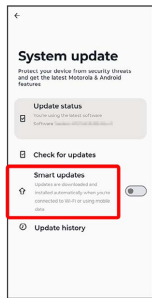

Smart update details open.

3



Smart updates are enabled.

### + Setting Time to Restart

Select restart time in smart update details.

 
• For **Custom time**, set start time → **OK**.

## Updating Software Manually

Check for software updates, and update manually as required.


1

Click Home Screen up → (Settings) → System updates

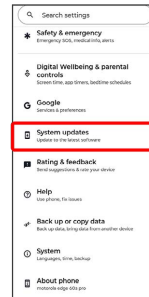

2

 Check for updates

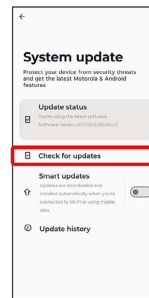

3

Update now



The latest software is installed.

• If confirmation appears, follow onscreen instructions.

Restart now



 Handset restarts, and software is updated.

# Handset Interface

- Handset Screens..... 30
- Status Bar..... 31
- Using Notifications Window..... 32
- Using Quick Settings.....32

# Handset Screens

 
## Home Screen Layout



| Item                | Description                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------|
| 1 Status Bar        | Flick down for Notifications Window.<br>Flick down using two fingers for Quick Settings.        |
| 2 Customize Area    | Place application shortcuts, folders, widgets freely.                                           |
| 3 Favorites Tray    | Place application shortcuts, folders, etc.<br>Appears even when Home Screen sheets are toggled. |
| 4 Navigation Button | Tap icons to access functions. For details on Navigation Button, see "Navigation Button."       |


## Toggling Home Screen Sheets

When there are several Home Screen sheets, Flick Home Screen left/right to toggle sheets.

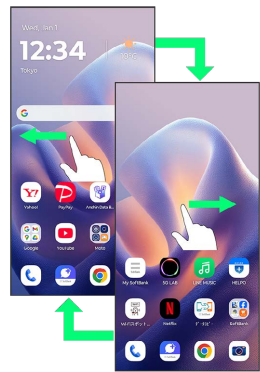

## Navigation Button

 Tap Navigation Buttons at Display bottom for functions/operations. for functions/operations.  
Also use gesture action. For details, see "Gestures Settings."

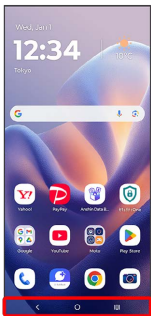


| Item            | Description                                                                                                             |
|-----------------|-------------------------------------------------------------------------------------------------------------------------|
| ◀ (Back)        | Return to previous screen. Appears as <input checked="" type="checkbox"/> for onscreen keyboard; Tap to close keyboard. |
| ⬢ (Home)        | Return to Home Screen.<br>Touch & Hold for searching by circling or tapping items on Display.                           |
| ⌂ (Recent apps) | Show history of used applications to activate/exit them.                                                                |

## Portrait Orientation & Landscape Orientation

 ⌂ appears at Display bottom when handset is rotated horizontally. ⌂ to change screen to landscape orientation. To change to portrait orientation, rotate handset vertically and Tap ⌂.

Set "Auto-rotate screen" to on to change screen to landscape orientation automatically when handset is rotated horizontally. For details on Auto-rotate screen, see "Display Settings."

• Depending on the current screen, the orientation may not change even by changing handset orientation.

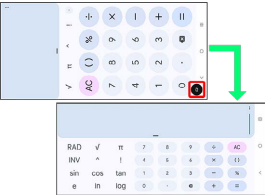

## Status Bar

Status Bar appears at the top of Display. Notification Indicators for new mail, etc. and Status Indicators for handset appear here.

### Status Bar Layout



- 1 Notification Indicators
- 2 Status Indicators

### Main Notification Indicators

Notification Indicators appearing in Status Bar include the following.

| Indicator | Description                                        |
|-----------|----------------------------------------------------|
|           | New Gmail                                          |
|           | New Text Message (SMS) / +Message                  |
|           | Error/Caution                                      |
|           | Wi-Fi Open Network Available                       |
|           | USB Device Connected                               |
|           | Call Arriving/Dialing                              |
|           | Calling                                            |
|           | Call on Hold                                       |
|           | Missed Call                                        |
|           | New Message (Voicemail)                            |
|           | Calendar Event Notification                        |
|           | Alarm Sounding/Snoozing/Unchecked Alarm/Next Alarm |
|           | Timer Running                                      |
|           | Stopwatch Running                                  |
|           | New Emergency Alerts                               |
|           | Data Uploading                                     |
|           | Data Downloading                                   |
|           | Application Update Available                       |
|           | Application Installation Complete                  |
|           | Sharing File via Bluetooth®                        |
|           | Low Battery Alert (20% or less)                    |
|           | System Update Notification                         |

### Main Status Indicators

Status Indicators appearing in Status Bar include the following.

| Indicator | Description                                                                |
|-----------|----------------------------------------------------------------------------|
|           | Bluetooth® Connected                                                       |
|           | Do Not Disturb (Silent Mode)                                               |
|           | Do Not Disturb (Vibration)                                                 |
|           | Do Not Disturb (Mute)                                                      |
|           | Voice Service and Data Communication Available (5G) <sup>1, 2</sup>        |
|           | Voice Service and Data Communication Available (4G LTE/4G) <sup>2, 3</sup> |
|           | Wi-Fi Connected                                                            |
|           | Roaming                                                                    |
|           | Voice Service Unavailable                                                  |
|           | Voice Service and Data Communication Unavailable                           |
|           | Out of Service Area/Searching for Network                                  |
|           | Airplane mode                                                              |
|           | Charge Battery                                                             |
|           | Battery Low                                                                |
|           | Battery Charged                                                            |
|           | Charging                                                                   |
|           | Battery Saver Set                                                          |
|           | Obtaining Location                                                         |
|           | Alarm Set                                                                  |
|           | NFC On                                                                     |

- 1 Although "5G" may appear in standby (top of Display), this may change to "4G" with data communication then being by the 4G network.
- 2 If "5G" or "4G" does not appear, data communication is unavailable regardless of if appears.
- 3 Handset supports FDD-LTE (SoftBank 4G LTE) and AXGP (SoftBank 4G); indicator appears when handset is connected to either. Handset connects to SoftBank 4G first.

 
# Using Notifications Window

Flick Status Bar down to open Notifications Window. Open Notification Indicators to check details.

## Opening Notifications Window

1

Flick Status Bar down

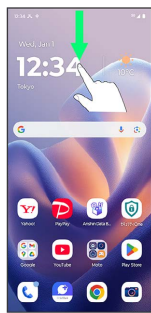

Notifications Window opens.

## + Closing Notifications Window

Flick screen up

## Notifications Window Layout



- 1 Show portion of Quick Settings
- 2 Show notifications (incoming calls, etc.) and active functions
- 3 Show silent notifications
- 4 Manage notifications
- 5 Use notification details<sup>1</sup>
- 6 Delete all notifications<sup>2</sup>

1 Available applications depend on notification.  
2 Some notifications may not be deleted.

# Using Quick Settings

Flick Notifications Window down to access Quick Settings. Tap icons to toggle functions on/off, etc.

## Open Quick Settings

1

 
Flick Status Bar down



Notifications Window opens.

2

Flick Notifications Window down

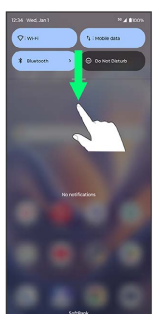

Quick Settings open.

· Alternatively, in Home screen, Flick Status Bar down using two fingers.

## + Quick Settings

### Closing Quick Settings

Flick screen up

---

### Arranging Quick Settings

Add, delete, and change order of functions in Quick Settings.

In Quick Settings, Follow onscreen instructions and Drag icon

## Quick Settings Layout



 
- 1 Adjust brightness
- 2 Wi-Fi on/off
- 3 Bluetooth® on/off
- 4 Auto-rotate on/off
- 5 Open Device controls settings
- 6 Mobile data on/off
- 7 Do Not Disturb (Silent mode) on/off
- 8 Open Smart Connect
- 9 Open Wallet



- 1 Open Moto Unplugged
- 2 Quick Share settings
- 3 Airplane mode on/off
- 4 Capture Screenshot
- 5 Ringer mode settings
- 6 Flashlight on/off
- 7 Hotspot on/off
- 8 Alarm settings



- 1 Open GIF maker
- 2 Night Light on/off
- 3 Screen record start/stop
- 4 Set permission to access Camera
- 5 Battery Saver on/off
- 6 Show cast screen
- 7 Set permission to access Mic
- 8 NFC on/off

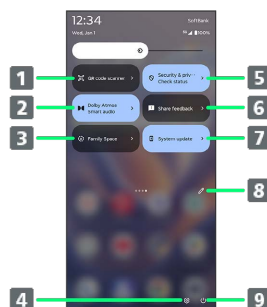

- 1 Open to scan QR code
- 2 Open Dolby Atmos settings
- 3 Open Family Space
- 4 Show handset settings
- 5 Check security & privacy status
- 6 Send feedback
- 7 Check system updates
- 8 Edit Quick Settings
- 9 Show power menu



# Phone

- Placing/Answering Calls.....36
- Optional Services.....38
- Phone Number.....43
- Using Contacts.....43

## Placing/Answering Calls

How to dial directly to make a call and answer a call, as well as options when a call is arriving/during a call are described.

### Phone Function

#### Emergency Location Report

Making emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.). This system is referred to as Emergency Location Report, and notifies location based on positioning from base stations.

- Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy. Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report. However, corresponding agency may obtain location information in life threatening situations.
- Location Report is not sent for calls made while outside Japan.
- Only VoLTE (LTE network) can be used for connecting domestic emergency services.
- Making emergency calls (110, 118, or 119) is not available in Japan if USIM Card is not inserted in handset or eSIM is disabled.

#### VoLTE/VoLTE (HD+) and HD Voice

Handset supports VoLTE/VoLTE (HD+) and HD Voice for higher voice call quality.

### Hints

Q. Difficulty during call

- A. It may not be possible to make a call properly in a noisy location.
- A. When calling using Speaker, check the call volume. Raising the call volume may make calling difficult.

Q. Sound pops momentarily during a call

- A. Are you changing location while calling? Sound pops when signal is weak and handset switches to a different area.

 
### Areas Where Emergency Calls Can Be Made

Emergency calls from handset can be made only in SoftBank service areas.

## Placing Calls


1

In Home Screen,  (Phone)

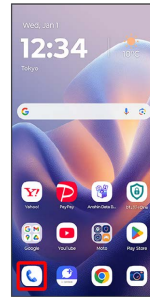

 Phone opens.

 2

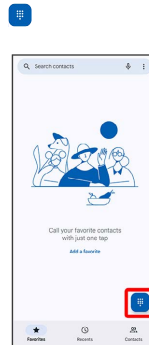

 Call window opens.

3

Tap dialpad to enter the other party's number



- Enter area code first for calling landline numbers.

4

Call



Handset dials number. Call begins when other party answers.

5

To end call,



Call ends.

Calling the Emergency Number When the Phone's Screen is Locked

Flick Lock Screen up → Emergency call → Enter number for emergency service → Call

· This method is available when method for unlocking screen is a setting other than None or Swipe . For details on unlocking screen, see "Security & privacy Settings."

Hints

- Q. Call does not connect
- A. Was the number dialed using the area code? Dial the number starting with "0."
- A. Are signal conditions poor? Call again after moving where signal is good.

Answering Calls

1

 
Flick up when call is arriving



Call begins.

2

To end call,

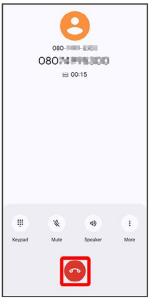

Call ends.

Arriving Call Operations

Cancelling Ringtone


Press Volume Key when call is arriving

Rejecting Arriving Calls

Flick down when call is arriving

## In-Call Screen Layout/In-Call Operations

 During a call, Tap icons to use the following functions.

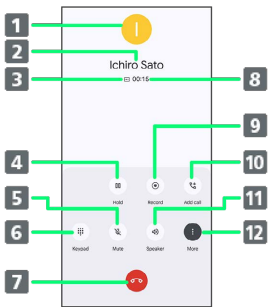

- 1 Show image registered for contact
- 2 Show name/number of other party
- 3 Appears for high-quality sound calls <sup>1</sup>
- 4 Place call on hold <sup>2</sup>
- 5 Mute your voice to the other party
- 6 Show dialpad
- 7 End call
- 8 Show call time
- 9 Record call <sup>2</sup>
- 10 Call another party <sup>2</sup>
- 11 Call using Speaker
- 12 Show/hide **Hold** , **Record** , and **Add call**

1 Appears for calls with HD Voice, and for calls with VoLTE (HD+).

2 Appears when tapping **More** .

## Optional Services

Use the following optional services.

### Optional Services

The following optional services are available.

 
| Service                     | Description                                                                                                                     |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Call forwarding             | Divert calls to a preset number when out of service area or unable to answer.                                                   |
| Voicemail Plus <sup>1</sup> | Divert calls to a Voicemail Center to take messages when out of service area or unable to answer.                               |
| Call Waiting <sup>1</sup>   | Answer calls during a call.                                                                                                     |
| Group Calling <sup>1</sup>  | Merge multiple calls.                                                                                                           |
| Notify Caller ID            | Send or hide your number when placing calls.                                                                                    |
| Call Barring                | Restrict incoming/outgoing calls by conditions.                                                                                 |
| Spending Limit <sup>1</sup> | If your spending exceeds the specified amount, outgoing calls (voice calls, mails, or packet communications) will be suspended. |
| Number Block <sup>1</sup>   | Set to block received prank calls or nuisance calls in the future.                                                              |

1 Requires separate subscription

## Using Call Forwarding

1


In Home Screen,  (Phone)

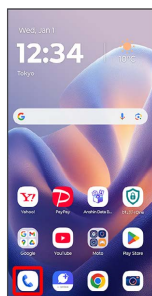

2

  Settings  Calling accounts  SoftBank 

 Call service settings

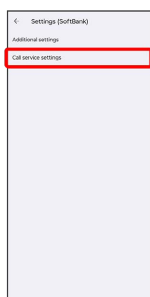


 Call service settings open.

· If you set 2 SIMs, Tap **Calling accounts** , and then select a SIM.


3

 Voice Mail / Call Forwarding

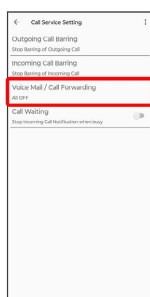


4

 Voice Mail / Call Forwarding  Call Forwarding ON

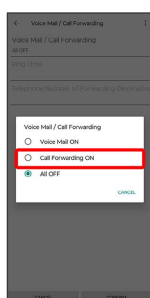

5

 Ring Time  Select ring time

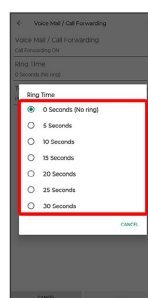

6

Telephone Number of Forwarding Destination  Tap phone number field  Enter phone number to forward to 

REGISTER



7

CONFIRM




 Call Forwarding is set.

## Using Voicemail Plus

 Requires separate subscription.


1

In Home Screen,  (Phone)

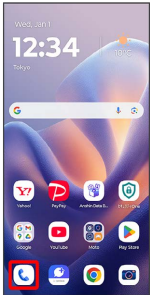

2

   Settings  Calling accounts  SoftBank   
Call service settings

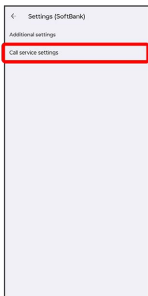


 Call service settings open.

· If you set 2 SIMs, Tap **Calling accounts** , and then select a SIM.


3

 Voice Mail / Call Forwarding

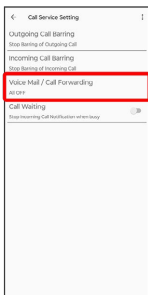


4

 Voice Mail / Call Forwarding  Voice Mail ON

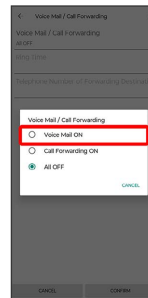

5

 Ring Time  Select ring time

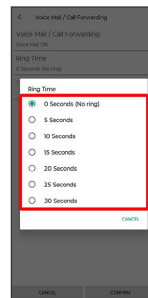

6

CONFIRM



 Voicemail Plus is set.


·  appears in Status Bar for new message. Dial "1416" then follow voice guidance.

## Using Call Waiting

 Requires separate subscription.

1


In Home Screen, (Phone)

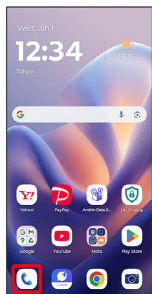

2

Settings → Calling accounts → SoftBank →

 Call service settings

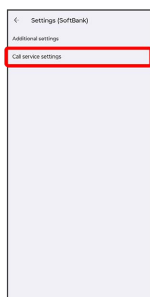


Call service settings open.

- If you set 2 SIMs, Tap **Calling accounts**, and then select a SIM.

3

 for Call waiting ( )

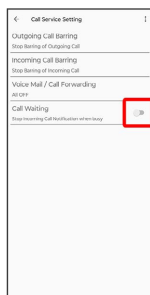

Call Waiting is set.


- Tap icon to toggle on ( )/off ( ).
- When a second call arrives during a call, Call Waiting tone is heard. To end current call and answer second call, Tap **Answer & end other call**. To place current call on hold and answer second call, Flick up.

## Using Group Calling

 Requires separate subscription.


1

During a call, **More** → **Add call**

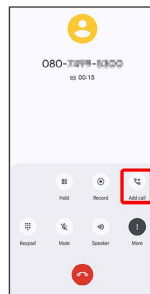


2

 Enter number → **Call**

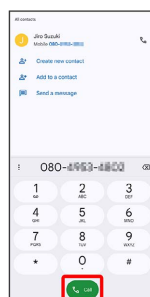

3

 When the other party answers, **More** → **Merge**

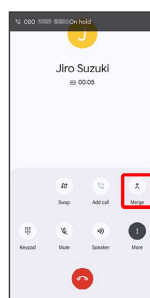


Group Calling starts.

Using Caller ID Notification


1

 In Home Screen,  (Phone)

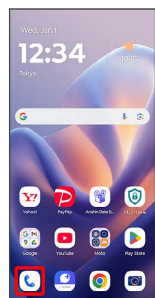

2

 
  Settings  Calling accounts  SoftBank   
Additional settings

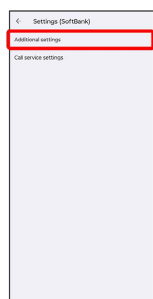

· If you set 2 SIMs, Tap **Calling accounts** , and then select a SIM.

3

 Caller ID  Network default / Hide number / Show number

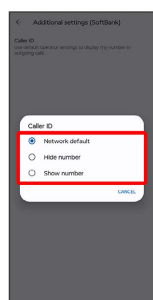

 Caller ID is set.

 
Using Call Barring

Restrict calls and SMS to/from specific phone numbers.

· It may not be possible to restrict outgoing SMS in some areas.

1

In Home Screen,  (Phone)

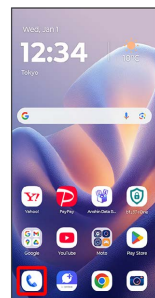

2

  Settings  Calling accounts  SoftBank   
Call service settings

 


 Call service settings open.

· If you set 2 SIMs, Tap **Calling accounts** , and then select a SIM.

3

Outgoing Call Barring / Incoming Call Barring  Select outgoing/incoming restriction

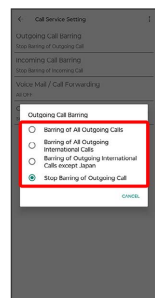


 Call Barring is set.

## Phone Number
 
### Checking Your Phone Number


1

Flick Home Screen up → (Settings) → About phone

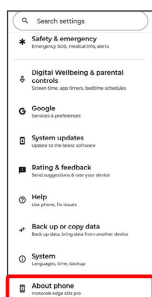

2

#### Device details

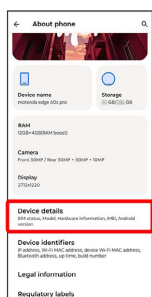 

Handset number is shown below "SIM card status"/"eSIM status."

- Handset number is also shown below "Phone number · SIM card"/"Phone number · eSIM."

## Using Contacts

Save phone numbers, mail addresses, etc. to Contacts.

 
### Contacts Cautions

Information saved in Contacts may be lost or changed if Battery is left uncharged for a long period. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. SoftBank Corp. is not responsible for any damages from lost or changed contacts.

### Adding New Contacts

1

In Home Screen, (Google)

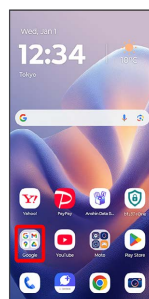

2

 
(Contacts)



Contacts appear.

- If confirmation appears, follow onscreen instructions.

3

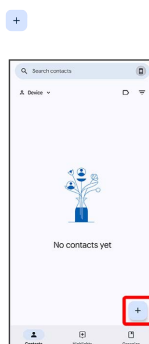

4

Enter items

A screenshot of the 'Create contact' form. The form has a title bar with a close button (X), the text 'Create contact', a 'Save' button, and a counter '1'. Below the title bar is a circular profile picture placeholder with a camera icon and the text 'Add picture'. The form fields are grouped into sections: 'Name' (First name, Last name, Phonetic last name, Phonetic middle name, Phonetic first name), 'Company', 'Phone' (Phone, Mobile), and 'Email' (Email). A red rectangular box highlights the 'Name' section fields.

5

Save

A screenshot of the 'Create contact' form, similar to the one in step 4. The 'Save' button in the top right corner is highlighted with a red rectangular box. The form fields are now populated with example data: First name: John, Last name: Doe, Company: ABC, Phone: 080-1234-5678, Mobile: 090-1234-5678.

🚩 Contact is added.

+ Saving Contacts from Dialing Screen

Save a number entered in dialing screen directly to Contacts.

In Home Screen, 📞 (Phone) ➡️ 📞 ➡️ Tap dialpad to enter number to save ➡️ **Create new contact** ➡️ Enter each item ➡️ **Save**

# Messaging

 
|                                  |    |
|----------------------------------|----|
| Sending Messages (+Message)..... | 46 |
| Using Gmail.....                 | 47 |

# Sending Messages (+Message)

## Sending New Messages


1

In Home Screen,  (+Message)

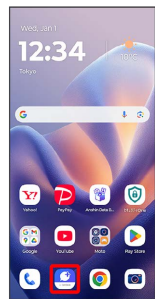

2

 Message

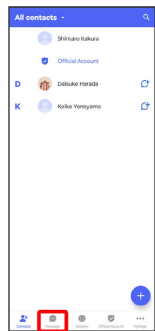

3

+



 
4

New message



5

Tap destination

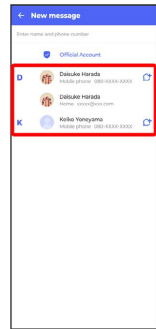


 Message window opens.

- To send to a phone number/email address not saved in contacts, Tap "Enter name and phone number" field at top of Display and enter the phone number/email address  **Add** and create message.

6

 Tap message entry field

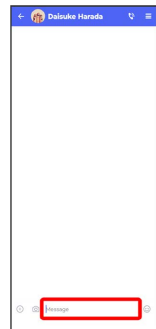

7

Enter message → →



 Message is sent.

## Using Gmail

 
Gmail is Google's webmail service. Use this service to exchange email.

### Creating/Sending Mail

1

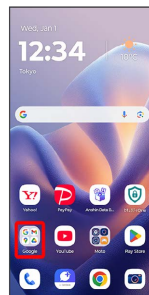In Home Screen,  (Google)

 
2

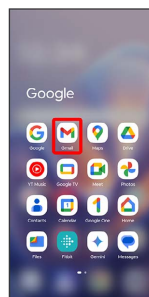 (Gmail)
 Mail list opens.

• If confirmation appears, follow onscreen instructions.


3

 Compose

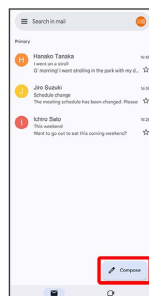
 Mail composition window opens.

4

 Enter recipient/subject/mail text

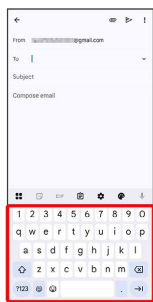

5



 Mail is sent.

 Operations when Composing Mail

Adding Cc/Bcc

In mail composition window,  for recipient  Enter recipient

Attaching Files

In mail composition window,   Attach  Select file to attach

Save Mail Being Composed as a Draft (Send Later)

In mail composition window,   Save draft

Delete Mail Being Composed

In mail composition window,   Discard  Discard

# Internet

Using Chrome..... 50

## Using Chrome

Use Chrome simply by entering words to search and URLs.

### TLS

TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).

 
### TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification DigiCert Japan G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

## Using Chrome

1

In Home Screen,  (Chrome)

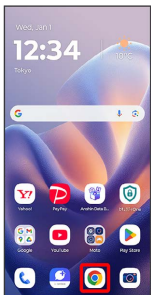


 Chrome opens.

- If confirmation appears, follow onscreen instructions.


2

 Tap entry box

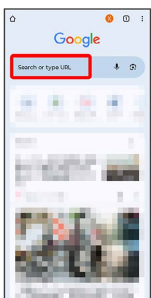


3

 Enter search string or URL

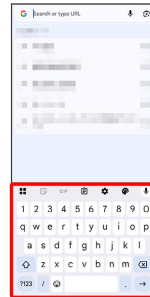

4

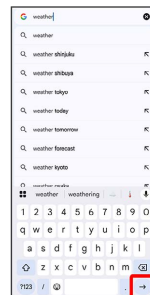 

 Search results appear or a Website opens.

### Opening New Tabs

Open several tabs to switch between Websites easily.

In Chrome,   New tab

 
 New tab appears.

- To switch tabs, Tap  and then target tab. Number in icon changes with number of open tabs.

Adding Bookmarks

1

In Home Screen,  (Chrome)

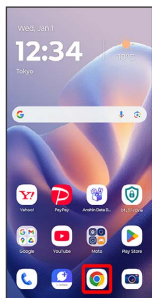


 Chrome opens.

2


Show Website to add



 3

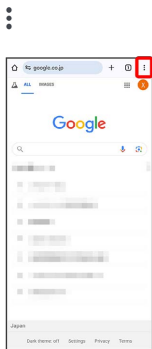

4

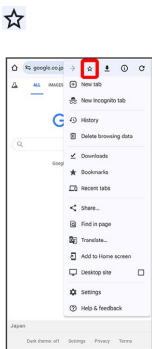 

 Current Website is added to Bookmarks.

 Bookmark Operations

Editing Bookmarks

In Chrome,   **Bookmarks**  Touch & Hold target bookmark    Edit items  

Deleting Bookmarks

In Chrome,   **Bookmarks**  Touch & Hold target bookmark  



# Camera

- Capturing Still Images/Videos..... 54
- Viewing Still Images/Videos (Photos)..... 56

## Capturing Still Images/Videos



### File Format for Still Images/Videos

#### File Format for Still Images

File format for still images is JPEG.

#### File Format for Videos

File format for videos is MP4.



### Camera Cautions

#### If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

#### Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.



 
### LED Flash Warning

Do not shine LED Flash close to eyes. Do not look directly at LED Flash when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

## Capturing Still Images

1

In Home Screen,  (Camera)

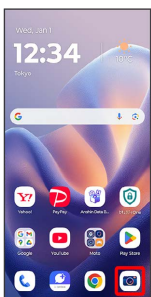

· If confirmation appears, follow onscreen instructions.

2

PHOTO

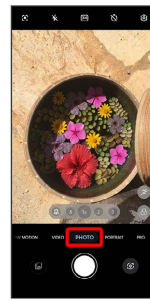 


Photo Viewfinder appears.

· Alternatively, Drag the shooting mode left/right to switch.

3

Aim Camera at subject   /Volume Key

 


Shutter clicks and still image is saved.

Capturing Videos

1


In Home Screen,  (Camera)

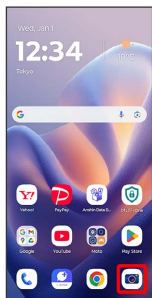

· If confirmation appears, follow onscreen instructions.

2

 VIDEO

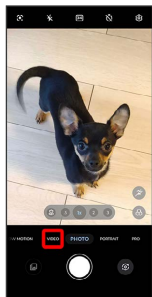


 Video Viewfinder appears.

· Alternatively, Drag the shooting mode left/right to switch.

3

 Aim Camera at subject   /Volume Key

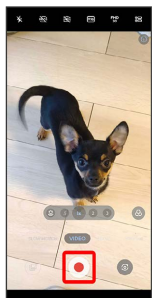

 Video recording starts.

4

To end capture,  /Volume Key



 Video recording stops and video is saved.

# Viewing Still Images/Videos (Photos)

 
View still images/videos saved in internal storage or in Google online storage. Viewing after logging in to a Google account is described.

## Showing Still Images/Videos

Show captured or downloaded still images and videos.

1

In Home Screen,  (Google)

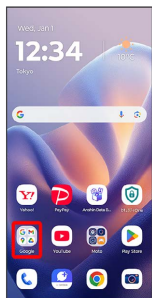

2

 (Photos)



 Still image/video list appears.

- If confirmation appears, follow onscreen instructions.

3

Tap still image/video



 Still image/video window opens.

- Tap video in still image/video list to play back video automatically.
- To select other files, return to still image/video list and select file, or Flick still image/video window left or right and select.

## + Zooming In/Out on Still Images/Videos

In still image/video window, Tap Display twice or Pinch.

# Application Basics

|                          |    |
|--------------------------|----|
| Applications.....        | 58 |
| Adding Applications..... | 59 |

# Applications

 
## Setting Required Permissions for Applications

Set the operation of Apps when activating for the first time. The type and content of a confirmation differs with the applications. Activating  (Files) for the first time is described as an example.

- An application may not function correctly if permission to use it was not set.

1

In Home Screen,  (Google)

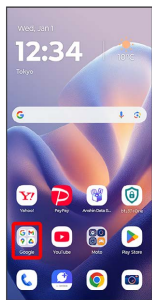

2

 
 (Files)



- If confirmation appears, follow onscreen instructions.

3

Allow

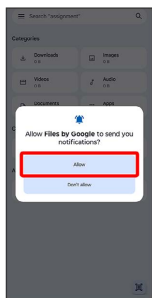

 Settings are complete.

- For several functions, continue in the same way.

## + Other Ways to Set Required Permissions for Applications

### Setting Functions to Use for Each Application

Flick Home Screen up   (Settings)    
  Tap application    
 Tap function  Tap required permission

### Setting Applications with Permitted Usage for Each Function

Flick Home Screen up   (Settings)        
 Tap function  Tap application  Tap required permission

## Adding Applications

Download a variety of applications (free/paid) from Google Play™. Change the setting of downloaded applications to enable manual or automatic updates. Log in to your Google account beforehand.

 
### ! Installing Applications

Many different kinds of applications can be installed on handset from Google Play (provided by Google). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

### Installing Free Applications

1

In Home Screen,  (Play Store)

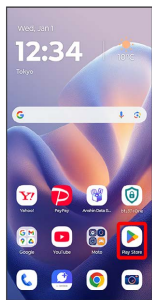


 Google Play appears.

· If confirmation appears, follow onscreen instructions.


2

 Tap free application

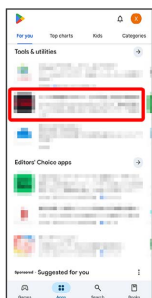

3

 Install

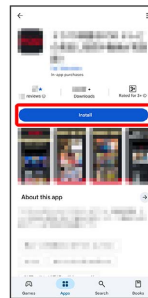


 Application is downloaded and installed.

· If confirmation appears, follow onscreen instructions.

Purchasing Paid Applications

1

 In Home Screen,  (Play Store)

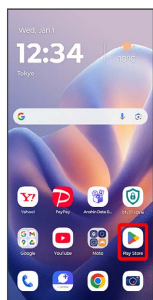


 Google Play appears.

- If confirmation appears, follow onscreen instructions.


2

 Tap paid application

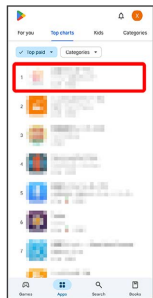

3

 Tap amount

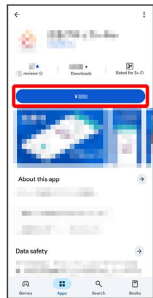

 Follow onscreen instructions. After following instructions, the application is downloaded and installed.

 Purchased Applications

Payment

Pay only once. Redownloads of uninstalled applications are free of charge.

On Other Android™ Devices

Install an application on any Android device under the same Google account for free.

 Requesting Refunds

Refund is possible within a limited time. By requesting a refund, the application is deleted and the charge is cancelled. A refund request is valid only once per one application.

In Google Play, Tap account icon at top right  **Manage apps & device**  **Manage**  Tap application  **Refund**  **Request refund**


 Purchasing Applications

Purchase applications at your own risk. SoftBank Corp. is not responsible for any disadvantage resulting for user or third parties.

## Updating Applications

 1

In Home Screen,  (Play Store)

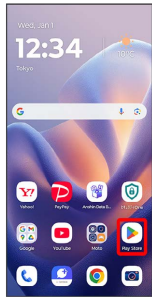


 Google Play appears.

- If confirmation appears, follow onscreen instructions.


2

 Tap account icon at top right  Manage apps & device

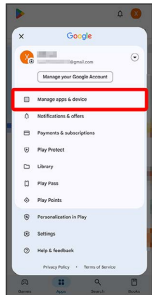

3

 Manage  Tap application to update  Update

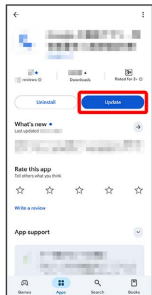

 Application is updated.

- If confirmation appears, follow onscreen instructions.

## + Setting Application Updates

### Setting Automatic Updates for Applications

In Google Play, Tap account icon at top right 

Settings  Network preferences  Auto-update  
apps  Select update method (  )  ←

### Setting Automatic Updates for Individual Applications

In Google Play, Tap account icon at top right  Manage  
apps & device  Manage  Tap application    
 Enable auto update (  )

- Automatic updates cannot be enabled for some applications.



# Wi-Fi/Bluetooth

|                                |    |
|--------------------------------|----|
| Connecting by Wi-Fi.....       | 64 |
| Using Bluetooth® Function..... | 65 |

 
## Connecting by Wi-Fi

Handset supports Wi-Fi (wireless LAN). Access the Internet via a household Wi-Fi connection environment.

### Connecting Selected Access Points

1

Flick Home Screen up

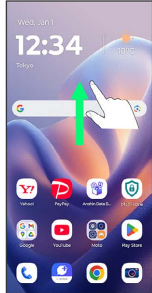


2

(Settings)




3

 Network & internet

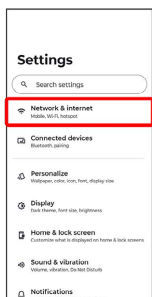

4

 Wi-Fi

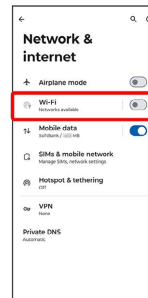

Wi-Fi settings open.

- If confirmation appears, follow onscreen instructions.

5

Wi-Fi ( )

 


Wi-Fi is enabled.


- Tap **Wi-Fi** to toggle on ( )/off ( ).

6

Tap Wi-Fi network

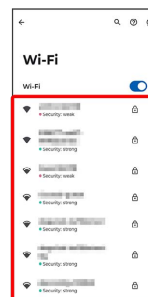

7

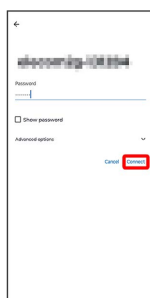 Enter password → **Connect**

 Handset is connected.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if a Wi-Fi network is not security protected.

## Using Bluetooth® Function

Connect to a Bluetooth®-capable wireless phone, etc. for calls or to a hands-free device such as a headset.

### ? Hints

**Q.** Cannot use Bluetooth®

**A.** Is handset in "Airplane mode"? If in Airplane mode, Bluetooth® function is disabled. Bluetooth® function can be enabled again after placing handset in Airplane mode.

### ! Bluetooth® Function Cautions

#### Connection

Bluetooth® connection may not be possible with some Bluetooth® devices. In addition, noise may interfere with wireless or hands-free conversations.

 
#### File Transfer

Files may not appear correctly on recipient devices.

## Enabling Bluetooth® Function


1

Flick Home Screen up

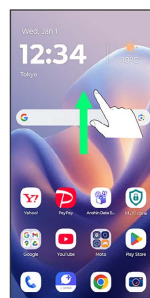


2

  (Settings)

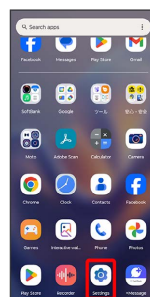


3

 Connected devices

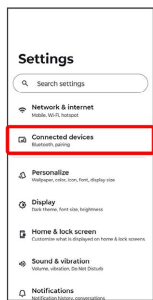


4

 Connection preferences

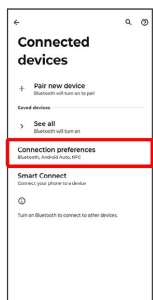

5

 
Bluetooth

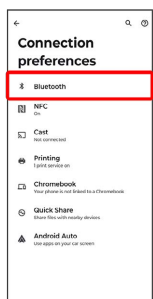

Bluetooth® settings open.

6

 Use Bluetooth (  )

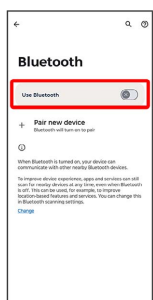

Bluetooth® function is enabled.

· Tap **Use Bluetooth** to toggle on (  )/off (  ).

# Handset Settings

- Handset Settings.....68
- Data Usage Settings.....69
- Display Settings.....70
- Home & lock screen Settings.....70
- Sound & vibration Settings.....72
- Battery Settings.....73
- Security & privacy Settings.....73
- System Settings.....75
- Other Settings.....76

# Handset Settings

Main setting options are described.

## Handset Settings

Customize operation of handset functions. Handset settings include the following items.

| Item                                  | Description                                                                                                                                               |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Network & internet                    | Make settings for Wi-Fi, SIM, mobile networks, data usage, etc.                                                                                           |
| Connected devices                     | Make connection settings to other devices, such as Bluetooth® connection.                                                                                 |
| Personalize                           | Customize wallpaper, theme, color, font style, etc.                                                                                                       |
| Display                               | Set screen brightness, font size, etc.                                                                                                                    |
| Home & lock screen                    | Customize displayed contents on Home and Lock screen.                                                                                                     |
| Sound & vibration                     | Make ringtone, operation tones, and other sound settings.                                                                                                 |
| Notifications                         | Set functions for notifications.                                                                                                                          |
| Gestures                              | Make settings for gesture operation.                                                                                                                      |
| Battery                               | Check Battery usage and make settings to save battery power.                                                                                              |
| Storage                               | Check internal storage and USB drive, mount USB drive, and delete data on USB drive.                                                                      |
| Location                              | Make Location settings.                                                                                                                                   |
| Accessibility                         | Set captions, magnification gestures, and other useful accessibility functions.                                                                           |
| Apps                                  | Make application settings.                                                                                                                                |
| Passwords, passkeys & accounts        | Create/add accounts, sync accounts, etc.                                                                                                                  |
| Security & privacy                    | Set security functions such as screen lock and fingerprint authentication, and make privacy settings such as the permission manager and password display. |
| Safety & emergency                    | Make settings for emergency contacts, emergency alerts, etc.                                                                                              |
| Digital Wellbeing & parental controls | Manage time that handset is used, and set controls on usage as a parent/guardian.                                                                         |
| Google                                | Make settings for Google services.                                                                                                                        |
| System updates                        | Check for updates, and make settings for smart updates.<br>For details, see " <a href="#">Updating Software</a> ."                                        |
| Rating & feedback                     | Send feedback on your handset experience.                                                                                                                 |
| Help                                  | View handset help.                                                                                                                                        |
| Back up or copy data                  | Make settings for backup or copy data.                                                                                                                    |
| System                                | Make settings for language and input, date and time, backup, reset, etc.                                                                                  |

About phone      Check handset name, own phone number, etc.

1

 
Flick Home Screen up ➡ ⚙️ (Settings)



Handset settings open.

2

Select item to set

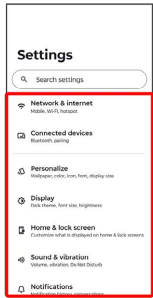

Settings open.

## Data Usage Settings

Check cellular data usage and set limit.

### + Data Usage Operations

#### Set Data Saver

Flick Home Screen up → (Settings) → Network & internet → Mobile data → Data saver → Use Data Saver (  )

· Tap Use Data Saver to toggle on (  )/off (  ).

#### Setting Functions Not Subject to Data Saver

Flick Home Screen up → (Settings) → Network & internet → Mobile data → Data saver → Unrestricted mobile data → Tap application not to be subject (  )

· Tap application to toggle on (  )/off (  ).

#### Enabling Cellular Data

Flick Home Screen up → (Settings) → Network & internet → SIMs & mobile network → SoftBank → Use this SIM

- If you set 2 SIMs, Tap SIMs & mobile network , and then select a SIM.
- Tap Use this SIM to toggle on (  )/off (  ).
- If confirmation appears, follow onscreen instructions.

#### Viewing Data Usage with Wi-Fi

 
Flick Home Screen up → (Settings) → Network & internet → Wi-Fi → Non-carrier data usage

- If confirmation appears, follow onscreen instructions.

## Checking Application Data Usage


1

Flick Home Screen up → (Settings) → Network & internet

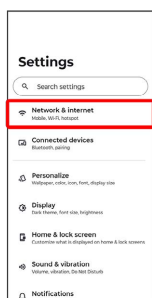


2

### Mobile data

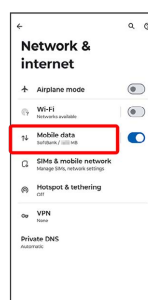 

3

 XXXX used (XXXX represents data usage amount)

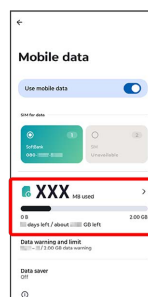

Check usage in the application data usage window.

- If you set 2 SIMs, Tap XXXX used (XXXX represents data usage amount) of the SIM for which you check data usage amount.

## Display Settings

Set screen brightness, font size, etc.

### Display Settings

Settings can be made for the following items.

| Item                    | Description                                                                   |
|-------------------------|-------------------------------------------------------------------------------|
| Brightness level        | Set brightness of Display.                                                    |
| Adaptive brightness     | Enable adjustment of brightness for surroundings.                             |
| Dark theme              | Set functions for Dark theme.                                                 |
| Colors                  | Set screen color.                                                             |
| Display size and text   | Set the size of images, icons, text, etc. in Display.                         |
| Display refresh rate    | Set the refresh rate.                                                         |
| Full screen             | Set the range of display when in full screen for individual applications.     |
| Auto-rotate screen      | Set whether to rotate Display with handset orientation automatically.         |
| Color contrast          | Set the color contrast                                                        |
| Edge Lights             | Set whether to light Display edges when an alert or notification is received. |
| Night Light             | Set whether Display blue light is reduced.                                    |
| Flicker prevention      | Enable handset to prevent screen from flickering in dark conditions.          |
| Screen timeout          | Set a period of inactivity after which Display turns off automatically.       |
| Screen saver            | Set screen saver.                                                             |
| Screen record           | Make settings for recording screen.                                           |
| Three finger screenshot | Enable screenshots to be captured by placing three fingers on screen.         |
| Swipe to split          | Enable screen to be split by Dragging middle of screen left or right.         |
| Smart Connect           | Link handset image to a monitor or similar device.                            |

## Home & lock screen Settings

### Home & lock screen Settings

Settings can be made for the following items.

| Item           | Description                                                      |
|----------------|------------------------------------------------------------------|
| Home settings  | Customize style, icon size, app labels, etc.                     |
| Control center | Select the method to access to notifications and Quick settings. |
| Lock screen    | Make settings for notifications shown on Lock screen.            |

## Changing Glance Settings

Use Glance to set recommended Wallpapers to Lock Screen.

1

Flick Home Screen up → (Settings)



 
2

Home & lock screen




3

Lock screen

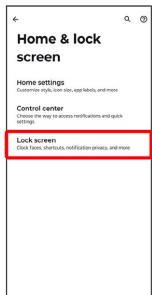

4

 Glance

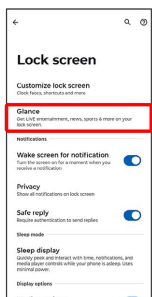

5

Turn on ( ☒ )



Setting is complete.

- Tap **Turn on** to toggle on ( ☒ )/off ( ☐ ).
- If confirmation appears, follow onscreen instructions.

### + Using Cellular Data to Update Glance

Flick Home Screen up → (Settings) → Home & lock screen → Lock screen → Glance → Update content over mobile data ( ☒ )

- Tap **Update content over mobile data** to toggle on ( ☒ )/off ( ☐ ).

# Sound & vibration Settings

Make ringtone, operation tones, and other sound settings.

## Sound & vibration Settings

Settings can be made for the following items.

| Item                                  | Description                                                                                 |
|---------------------------------------|---------------------------------------------------------------------------------------------|
| Do Not Disturb                        | Make settings for Do Not Disturb (Silent mode).                                             |
| Flip for DND                          | Enable Do Not Disturb (Silent mode) when handset is placed with its screen face down.       |
| Pick up to silence                    | Enable ringtone for incoming call to be muted by lifting handset.                           |
| Media volume                          | Set volume for music, videos, etc.                                                          |
| Audio will play on                    | Set a device for audio output.                                                              |
| Call volume                           | Set volume for call.                                                                        |
| Ring volume                           | Set volume for Phone ringtone, etc.                                                         |
| Notification volume                   | Set volume for notification.                                                                |
| Alarm volume                          | Set volume for alarm.                                                                       |
| Multi-volume                          | Adjust volume of individual applications by Pressing Volume Key while using an application. |
| Phone ringtone · SIM card             | Set Phone ringtone for USIM Card.                                                           |
| Phone ringtone · eSIM                 | Set Phone ringtone for eSIM.                                                                |
| Default notification sound            | Set notification sound.                                                                     |
| Default alarm sound                   | Set alarm ringtone.                                                                         |
| Dial pad tones                        | Enable confirmation tones when Dialpad Tapped.                                              |
| Screen locking sound                  | Set whether to make a sound when handset is locked/unlocked.                                |
| Tap & click sounds                    | Set whether to make a sound for tapping.                                                    |
| Screenshot sound                      | Set whether to make a sound when capturing a screenshot.                                    |
| Vibration & haptics                   | Make vibration settings.                                                                    |
| Always show icon when in vibrate mode | Enable icon to appear in Status Bar when in Do Not Disturb (vibration).                     |
| Charging sounds and vibration         | Enable tone and handset to vibrate at start of charging.                                    |
| Dolby Atmos                           | Make settings for Dolby Atmos sound.                                                        |

|                |                                                                                           |
|----------------|-------------------------------------------------------------------------------------------|
| CrystalTalk AI | Enable background noise while in a call or recording audio to be reduced.                 |
| Media          | Set whether to hide the media player on Quick Settings when a media playback is finished. |
| Media controls | Enable operation for media with Volume Key while screen is turned off (screen lock).      |
| Live Caption   | Set captions to be generated automatically for speech audio.                              |

## Battery Settings

Check Battery usage and make settings to save battery power.

### Battery Settings

Items that can be checked, set are the following.

| Item                                            | Description                                                                                        |
|-------------------------------------------------|----------------------------------------------------------------------------------------------------|
| XX% About<br>XX hr, XX min<br>left <sup>1</sup> | Check battery and remaining time.                                                                  |
| Battery saver                                   | Enable Battery saver function.                                                                     |
| Battery usage                                   | Check usage since last full charge.                                                                |
| Charge boost                                    | Set whether to use charge boost.                                                                   |
| Manage<br>background<br>apps                    | Enable battery life to be extended by managing applications running in the background.             |
| Optimized<br>charging                           | Set handset to learn charging time patterns and optimize charging to extend battery life.          |
| Overcharge<br>protection                        | Set whether to use overcharge protection.                                                          |
| Slow charging<br>notification                   | Enable notification to appear when handset is not being optimally charged with a wireless charger. |
| Adaptive<br>Battery                             | Enable limiting of battery usage of seldom-used applications.                                      |
| Battery<br>percentage                           | Set whether to show remaining battery level on Status bar.                                         |

1 Screen view may differ depending on usage.

## Security & privacy Settings

Set security functions such as screen lock and fingerprint authentication, and make privacy settings such as the permission manager and password display.

### + Setting Screen Not to Lock

Flick Home Screen up → (Settings) → Security & privacy → Device unlock → Screen lock → None

· If method for unlocking screen is setting other than None or Swipe before changing setting, first Tap Screen lock and unlock screen.

### Security & privacy Settings

Settings can be made for the following items.

| Item             | Description                                                                                                                                                                                                                                                                                                                                          |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| App security     | Scan and check handset for security issues.                                                                                                                                                                                                                                                                                                          |
| Device unlock    | <ul style="list-style-type: none"> <li>Screen lock</li> <li>Set method for unlocking screen.</li> <li>Fingerprint</li> <li>Set fingerprints.</li> <li>Face Unlock</li> <li>Make Face Unlock setting.</li> <li>Theft protection</li> <li>Set to protect your personal data by locking screen or erasing data if handset is stolen or lost.</li> </ul> |
| Account security | Diagnose the security of your Google account.                                                                                                                                                                                                                                                                                                        |
| Device finders   | <ul style="list-style-type: none"> <li>Set location to be shown if handset is misplaced.</li> <li>Security update</li> <li>Check for updates, and make settings for smart updates.</li> </ul>                                                                                                                                                        |
| System & updates | <ul style="list-style-type: none"> <li>For details, see "<a href="#">Updating Software</a>."</li> <li>Google Play system update</li> <li>Update OS and security patches.</li> <li>Backup</li> <li>Back up data to a Google server.</li> </ul>                                                                                                        |

 
|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Privacy controls        | <ul style="list-style-type: none"> <li>• Permission manager</li> </ul> <p>Check application permissions.</p> <ul style="list-style-type: none"> <li>• Ads</li> </ul> <p>Make settings for your advertising ID.</p> <ul style="list-style-type: none"> <li>• Health Connect</li> </ul> <p>Make settings for app permission to access to Health Connect.</p> <ul style="list-style-type: none"> <li>• Data sharing updates for location</li> </ul> <p>Check apps whose methods to share location are updated.</p> <ul style="list-style-type: none"> <li>• Camera access</li> </ul> <p>Allow applications and services to access Camera.</p> <ul style="list-style-type: none"> <li>• Microphone access</li> </ul> <p>Allow applications and services to access Mic.</p> <ul style="list-style-type: none"> <li>• Show clipboard access</li> </ul> <p>Set whether to show notifications when apps access text or image on clipboard.</p> <ul style="list-style-type: none"> <li>• Show passwords</li> </ul> <p>Enable passwords to be visible as passwords are entered.</p> <ul style="list-style-type: none"> <li>• Location access</li> </ul> <p>Set whether to use location, or check apps which have access to it.</p> <ul style="list-style-type: none"> <li>• Activity controls</li> </ul> <p>Set whether to save activities of website or apps.</p> |
|                         | <p>Check applications that have recently used permissions.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                         | <p>Make settings for showing notifications in Lock Screen, and enable handset diagnostic and other information to be sent to Google automatically. Also, make settings for SIM lock, app pinning, etc.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Privacy dashboard       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| More security & privacy |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## Enabling USIM PIN

When PIN is enabled, a window for entering PIN appears to allow handset use each time handset is powered on with USIM Card installed/eSIM enabled.


1

Flick Home Screen up → (Settings) → Security & privacy

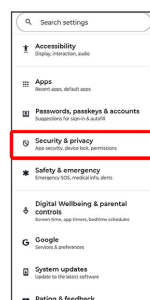


2

 More security & privacy → SIM lock

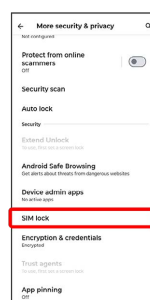

3

 Lock SIM → Enter PIN → OK

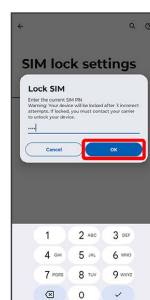

 PIN is enabled.

- If confirmation appears, follow onscreen instructions.

## PIN Cautions

 
Entering incorrect PIN three consecutive times activates PIN Lock. To cancel, Personal Unlocking Key (PUK) is required. For PUK, contact [Customer Service](#). Entering incorrect PUK ten consecutive times locks USIM Card/eSIM, disabling handset. For recovery, USIM Card/eSIM must be reissued by SoftBank (fees apply).

## Changing USIM PIN

First enable USIM PIN to change PIN.


1

Flick Home Screen up → (Settings) → Security & privacy

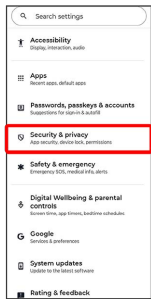

2

 More security & privacy → SIM lock

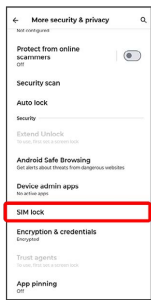

3

Change SIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK



 PIN is changed.

## System Settings

Make settings for language and input, date and time, backup, reset, etc.

## System Settings

Settings can be made for the following items.

| Item          | Description                                                                                                 |
|---------------|-------------------------------------------------------------------------------------------------------------|
| Languages     | Set functions for displayed language and text-to-speech output.                                             |
| Keyboard      | Set functions for keyboard.                                                                                 |
| Date & time   | Set functions for date and time.                                                                            |
| Backup        | Back up data to a Google server.                                                                            |
| Reset options | Reset settings, initialize data, erase any eSIMs, etc.                                                      |
| Performance   | Enable application usage patterns to be learned so they activate quickly, and use of storage to expand RAM. |

### + Languages & Input Operations

#### Set the Display Language

Flick Home Screen up → (Settings) → System → Languages → System Languages → Add a language → Select a language to add → Drag = to show to top of list → Change

- For some languages, select language and then region.

#### Set the App Language

Flick Home Screen up → (Settings) → System → Languages → App languages → Select app → Select language

- For some languages, select language and then region.

#### Set Keyboard/Voice Input

Flick Home Screen up → (Settings) → System → Keyboard → On-screen keyboard → Tap keyboard to set/voice input method → Tap item → Follow onscreen instructions

# Other Settings

## Network & internet Settings

Make settings for Wi-Fi, SIM, mobile networks, data usage, etc. Settable items are the following.

| Item                  | Description                                                                                                                                                                |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Airplane mode         | Disable all functions that emit signals.<br>Handset stays powered on.<br>For details, see " <a href="#">Airplane Mode</a> ."                                               |
| Wi-Fi                 | Enable Wi-Fi connection.<br>For details, see " <a href="#">Connecting by Wi-Fi</a> ."                                                                                      |
| Mobile data           | Make settings for mobile data or SIM.<br>For details, see " <a href="#">Data Usage Settings</a> ."                                                                         |
| SIMs & mobile network | Make settings for USIM Card, downloaded eSIMs, preferred network type, etc.<br>For details on cellular providers and data roaming, see " <a href="#">Global Roaming</a> ." |
| Hotspot & tethering   | Use handset as a Wi-Fi router to connect a PC or game device to the Internet.                                                                                              |
| VPN                   | Set VPN access points.                                                                                                                                                     |
| Private DNS           | Set Private DNS.                                                                                                                                                           |

## Connected devices Settings

Make connection settings to other devices, such as Bluetooth® connection. Settings can be made for the following items.

- Names and status of connected devices appear at top of Display.

| Item                   | Description                                            |
|------------------------|--------------------------------------------------------|
| Pair new device        | Search for and pair nearby Bluetooth® devices.         |
| Saved devices          | Paired devices appear.                                 |
| Connection preferences | Make settings for using Bluetooth®, NFC, casting, etc. |
| Smart Connect          | Link handset image to a monitor or similar device.     |

## Personalize Settings

Customize theme, color, font style, etc. Settings can be made for the following items.

| Item                  | Description                                                 |
|-----------------------|-------------------------------------------------------------|
| Wallpaper             | Make Wallpaper settings.                                    |
| Colors                | Change basic color, Wallpaper color, etc.                   |
| Themes                | Change handset theme.                                       |
| Fonts                 | Change font.                                                |
| Icon shape            | Change icon shape.                                          |
| Lock screen           | Customize displayed contents on Lock screen.                |
| Display size and text | Set the size of images, icons, text, etc. in Display.       |
| Layout                | Change Home Screen layout.                                  |
| Fingerprint animation | Set animation style of Fingerprint Sensor.                  |
| Sounds                | Change ringtone, notification ringtone, and alarm ringtone. |
| Dark mode             | Switch to a light mode, dark mode, etc.                     |
| Edge light            | Set Edge light color, conditions for activating it, etc.    |

## Notifications Settings

Set functions for notifications. Settable items are the following.

| Item                                    | Description                                                                                          |
|-----------------------------------------|------------------------------------------------------------------------------------------------------|
| App notifications                       | Manage notifications for each app.                                                                   |
| Notification history                    | Show recent and snoozed notifications.                                                               |
| Conversations                           | Show conversations set as high priority.                                                             |
| Bubbles                                 | Enable some chat applications to be shown as floating icons over other applications.                 |
| Notification read, reply & control      | Set whether to allow applications and devices to access notifications.                               |
| Notifications on lock screen            | Make settings for showing notifications on Lock screen.                                              |
| Sensitive notifications <sup>1</sup>    | Set whether to show sensitive notifications on Lock screen.                                          |
| Skip lock screen <sup>2</sup>           | Enable Lock Screen to be skipped after unlocking with Face Unlock.                                   |
| Do Not Disturb                          | Make settings for Do Not Disturb (Silent mode).                                                      |
| Flash notifications                     | Set whether to blink camera light or Display when a notification is received or when an alarm rings. |
| Wireless emergency alerts               | Make settings for emergency alerts.                                                                  |
| Hide silent notifications in status bar | Set whether to silent notification icons on Status bar.                                              |
| Allow notification snoozing             | Set notifications to be snoozable.                                                                   |
| Notification dot on app icon            | Set whether to show notification dot on app icon.                                                    |
| Enhanced notifications                  | Set suggested actions and replies to appear.                                                         |

<sup>1</sup> Appears when method for unlocking screen is "Pattern" / "PIN" / "Password."

<sup>2</sup> Available when face is saved with "Face Unlock."

### + Setting Applications that Have Notifications Blocked

Block all notifications from certain applications.

Flick Home Screen up → (Settings) → Notifications → App notifications → Most recent → All apps → for application to have notifications blocked ( ☐ )

## Gestures Settings

Make settings for gesture operation. Settings can be made for the following items.

| Item                    | Description                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------|
| System navigation       | Set the system navigation.                                                                                               |
| Sidebar                 | Enable Sidebar to appear for quick multitasking, and set applications to appear when Flicking Sidebar left.              |
| One-handed mode         | Make settings for one-handed mode and use smaller screen easier to operate with one hand.                                |
| Swipe to split          | Enable screen to be split by Dragging middle of screen left or right.                                                    |
| Three finger screenshot | Enable screenshots to be captured by placing three fingers on screen.                                                    |
| Power key               | Set an application to activate by pressing Power Key twice or pressing and holding Power Key.                            |
| AI Key                  | Set an operation to perform by pressing and holding AI Key or pressing AI Key twice.                                     |
| Media controls          | Enable operation for media with Volume Key while screen is turned off (screen lock).                                     |
| Quick Launch            | Enable custom action by Double-Tapping background. Set music playback/pause, screenshot capture, etc. as custom actions. |
| Quick Capture           | Enable Camera to open by rolling your wrist quickly twice.                                                               |
| Fast Flashlight         | Enable flashlight to turn on/off with two chopping motions of handset.                                                   |
| Lift to unlock          | Enable screen to unlock when handset is picked up.                                                                       |
| Pick up to silence      | Enable ringtone for incoming call to be muted by lifting handset.                                                        |
| Flip for DND            | Enable Do Not Disturb (Silent mode) when handset is placed with its screen face down.                                    |

### + Setting Power Off by Pressing and Holding Power Key

Flick Home Screen up → (Settings) → Gestures → Power key → Press & hold → Power menu

 Digital Assistant is disabled from activating, and power menu appears when Power Key is Pressed and Held.

## Storage Settings

Check internal storage and USB drive, mount USB drive, and delete data on USB drive. Settings can be made for the following items.

| Item                    | Description                                                        |
|-------------------------|--------------------------------------------------------------------|
| This device / USB drive | Check used space and total space in internal storage/on USB drive. |
| Free up space           | Free up space by deleting temporary files, etc.                    |

## Location Settings

Make Location settings. Settings can be made for the following items.

| Item                     | Description                                                                     |
|--------------------------|---------------------------------------------------------------------------------|
| Use location             | Enable use of location information.                                             |
| Recent access            | Show apps which requested location.                                             |
| App location permissions | Make settings for using location for each app.                                  |
| Location services        | Make settings for Google Location services, Wi-Fi and Bluetooth® scanning, etc. |

## Accessibility Settings

Set captions, magnification gestures, and other useful accessibility functions. Settings can be made for the following items.

| Item                    | Description                                                                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Family Space            | Enable user accessibility functions with  (Family Space).             |
| Moto AI Assistant       | Set whether to use Moto AI Assistant.                                                                                                                    |
| セキュリティ One              | Enable user accessibility functions with  (セキュリティOne (Security One)). |
| TalkBack                | Set accessibility service (TalkBack) to read out screen information.                                                                                     |
| Select to Speak         | Enable Tapped items on Display to be read out.                                                                                                           |
| Display size and text   | Set the size of images, icons, text, etc. in Display.                                                                                                    |
| Color and motion        | Make settings for color and animations.                                                                                                                  |
| Extra dim               | Enable screen to dim more than brightness set in "Brightness level."                                                                                     |
| Magnification           | Set screen to be enlargeable.                                                                                                                            |
| Accessibility Menu      | Enable use of large menu.                                                                                                                                |
| Switch Access           | Enable use of an external switch for operating handset.                                                                                                  |
| Timing controls         | Set detection time for Touch & Hold on Display.                                                                                                          |
| System controls         | Make settings for system navigation, one-handed mode, etc.                                                                                               |
| Vibration & haptics     | Make vibration settings.                                                                                                                                 |
| Live Caption            | Set captions to be generated automatically for media playback.                                                                                           |
| Caption preferences     | Make settings for captions.                                                                                                                              |
| Audio description       | Enable readout of onscreen explanations for movies, etc.                                                                                                 |
| Flash notifications     | Set whether to blink camera light or Display when a notification is received or when an alarm rings.                                                     |
| Hearing devices         | Make settings for a hearing aid paired to handset.                                                                                                       |
| Audio adjustment        | Enable monaural audio, and set left-right audio balance.                                                                                                 |
| Accessibility shortcuts | Set size of accessibility button, etc.                                                                                                                   |
| Text-to-speech output   | Set the engine for text readout, as well as change the readout speed and play a sample.                                                                  |

## Apps Settings

Make application settings. Settings can be made for the following items.

| Item                 | Description                                                  |
|----------------------|--------------------------------------------------------------|
| Recently opened apps | Recently opened applications appear.                         |
| See all XX apps      | Check and make settings for installed applications.          |
| Default apps         | Set applications, etc. that launch as standard applications. |
| Cloned Apps          | Create cloned applications                                   |
| Screen time          | Check usage for applications.                                |
| Cloud media app      | Set access cloud media from.                                 |
| App lock             | Make settings for application protection.                    |
| Unused apps          | Check unused applications.                                   |
| Special app access   | Make settings for special access.                            |

## Passwords, passkeys & accounts Settings

Create/add accounts, sync accounts, etc. Settings can be made for the following items.

| Item                        | Description                                                                                                    |
|-----------------------------|----------------------------------------------------------------------------------------------------------------|
| Preferred service           | Set whether to use Autofill with Google, or set preferred services for saving sign-in information or autofill. |
| Accounts for Owner          | Show accounts added to handset.                                                                                |
| Add account                 | Create/add accounts.                                                                                           |
| Automatically sync app data | Set whether to sync app data automatically.                                                                    |

## Safety & emergency Settings

Make settings for emergency contacts, emergency alerts, etc. Settings can be made for the following items.

| Item                                | Description                                                                                        |
|-------------------------------------|----------------------------------------------------------------------------------------------------|
| Open Personal Safety                | Share emergency and use safety check function.                                                     |
| Medical information                 | Check and edit your medical information.                                                           |
| Emergency contacts                  | Check and add emergency contacts.                                                                  |
| Emergency SOS                       | Enable an emergency SOS to be sent by Pressing Power Key five times quickly.                       |
| Crisis alerts                       | Enable notifications to be received for disaster information in the vicinity.                      |
| Emergency Location Service          | Enable location to be sent when making an emergency call.                                          |
| Earthquake alerts                   | Enable an alarm when an earthquake is detected near your current location. Not supported in Japan. |
| Unknown tracker alerts              | Enable alerts to receive notification when an unknown tracker is detected.                         |
| Silence notifications while driving | Enable handset to enter Do Not Disturb (Silent mode) automatically when driving.                   |
| Wireless emergency alerts           | Make settings for emergency alerts.                                                                |

## Digital Wellbeing & parental controls Settings

Manage time that handset is used, and set controls on usage as a parent/guardian. Settings can be made for the following items.

| Item                             | Description                                                                                |
|----------------------------------|--------------------------------------------------------------------------------------------|
| TODAY XX minute(s)/XX hr, XX min | Check usage for applications.                                                              |
| View activity details            | Check history of total handset usage time. Also, restrict usage time for each application. |
| App limits                       | Set upper limit of daily usage time for each application.                                  |
| Bedtime mode                     | Change Display to monochrome or enter Do Not Disturb (Silent mode) at preset time.         |
| Focus mode                       | Pause distracting apps.                                                                    |
| Screen time reminders            | Set whether to check application usage time by reminders.                                  |
| Manage notifications             | Manage notifications for each app.                                                         |
| Do Not Disturb                   | Make settings for Do Not Disturb (Silent mode).                                            |
| Heads Up                         | Set whether to enable notification to pay attention when using handset while walking.      |
| Show icon in the app list        | Enable icons to be shown in app list.                                                      |
| Set up parental controls         | Set controls on smartphone usage as a parent/guardian.                                     |

## Google Settings

Make settings for Google services. Settings can be made for the following items.

If Google account is set, Tap **All services** to show following items.

| Item                          | Description                                                                                                                                                                              |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connected apps                | Make settings for applications connected to Google account.                                                                                                                              |
| Google Fit                    | Make settings for Google Fit, which records walking or running, or manage your weight, etc.                                                                                              |
| Google Play Instant           | Make settings for Google Play Instant.                                                                                                                                                   |
| Google Wallet                 | Make settings for Google Wallet.                                                                                                                                                         |
| Search, Assistant & Voice     | Make settings for Search, Google Assistant, Voice, etc.                                                                                                                                  |
| Cast options                  | Set whether to control cast media directly from media control notifications while playing media via a TV or speaker equipped with Chromecast, etc. on the same Wi-Fi network as handset. |
| Chromebook                    | Connect handset to Chromebook.                                                                                                                                                           |
| Cross-device services         | Make settings for sharing video calls, etc. with multiple devices using the same Google account.                                                                                         |
| Devices                       | Make settings for notifications regarding nearby devices to handset.                                                                                                                     |
| Matter devices                | Make settings for devices compatible with Matter.                                                                                                                                        |
| Quick Share                   | Make settings for Quick Share.                                                                                                                                                           |
| Thread networks               | Make settings for Thread networks.                                                                                                                                                       |
| Ads                           | Make settings for your advertising ID.                                                                                                                                                   |
| Personalize using shared data | Set whether to share data which applications and providers saved on handset with Google applications.                                                                                    |
| Phone Number Verification     | Set whether to enable auto phone number verification.                                                                                                                                    |
| Usage & diagnostics           | Set whether to send diagnostic data and device/app usage data to Google automatically.                                                                                                   |
| Autofill with Google          | Make settings for Autofill with Google.                                                                                                                                                  |
| Passkeys and devices          | Make settings for passkeys and devices.                                                                                                                                                  |
| Phone number sharing          | Make settings for a phone number to share.                                                                                                                                               |
| SMS verification codes        | Make settings for autofill for verification codes.                                                                                                                                       |
| Backup                        | Make settings for backup.                                                                                                                                                                |
| Google Contacts sync          | Make settings for contacts sync.                                                                                                                                                         |

|                                     |                                                                                  |
|-------------------------------------|----------------------------------------------------------------------------------|
| Restore contacts                    | Restore contacts from a backup.                                                  |
| Set up nearby device                | Make settings for nearby devices.                                                |
| Family group                        | Create a family group (up to six members) to share Google services.              |
| Parental controls                   | Set controls on smartphone usage as a parent/guardian.                           |
| Find Hub                            | Set up security in case handset is lost.                                         |
| Theft protection                    | Protect your personal data using protection functions if handset is stolen.      |
| Unknown tracker alerts              | Enable alerts to receive notification when an unknown tracker is detected.       |
| Silence notifications while driving | Enable handset to enter Do Not Disturb (Silent mode) automatically when driving. |
| Set up your work profile            | Make settings for your work profile.                                             |
| Location Accuracy                   | Set whether to improve location accuracy.                                        |
| Give feedback                       | Send feedback to Google.                                                         |

## Back up or copy data Settings

Make settings for backup or copy data. Settable items are the following.

| Item                           | Description                             |
|--------------------------------|-----------------------------------------|
| Back up data                   | Make settings for data to backup.       |
| Copy data using Android Switch | Set items to copy using Android Switch. |

## About phone

Check handset name, own phone number, etc. Items that can be checked, set are the following.

| Item               | Description                                                                         |
|--------------------|-------------------------------------------------------------------------------------|
| Device name        | Check/change handset name.                                                          |
| Storage            | Check storage usage.<br>For details, see " <a href="#">Storage Settings</a> ."      |
| RAM                | Check total working memory amount.                                                  |
| Camera             | Check the number of pixels of Front Camera and Rear Camera.                         |
| Display            | Check Display size.                                                                 |
| Device details     | Check information such as Android OS version, phone number of USIM/eSIM, IMEI, etc. |
| Device identifiers | Check information such as handset IP address, MAC address, etc.                     |
| Legal information  | Check legal information.                                                            |
| Regulatory labels  | Check regulatory labeling.                                                          |



# Global Services

|                                |    |
|--------------------------------|----|
| Global Roaming.....            | 84 |
| Making Calls while Abroad..... | 85 |

## Global Roaming

Handset supports global travel. Use handset's phone number as it is abroad.

 
At time of purchase, handset is preset to connect automatically to an appropriate carrier in user's current area. A specific carrier can also be selected manually.

Change communication method and data roaming settings.

### Setting the Carrier


1

Flick Home Screen up → (Settings) → Network & internet

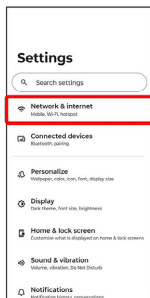

2

 SIMs & mobile network

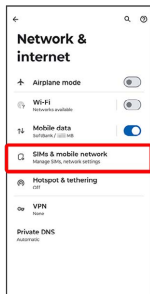

3

SoftBank → Automatically select network ( )



Disable ( ) to search for available networks.

· If you set 2 SIMs, Tap SIMs & mobile network , and then select a SIM.

4

Tap network to connect to




The selected carrier is set.

## Changing Data Roaming Setting

 
1

Flick Home Screen up ➡ (Settings) ➡ Network & internet

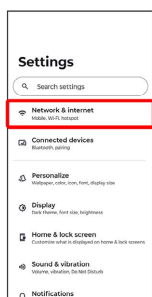


2

 SIMs & mobile network

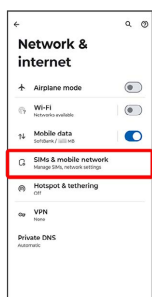

3

 SoftBank ➡ Roaming ( ☒ )

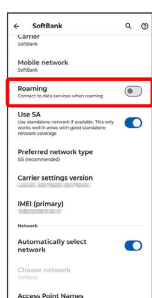

🚩 Data roaming is enabled.

- If you set 2 SIMs, Tap **SIMs & mobile network**, and then select a SIM.
- Tap **Roaming** to toggle on ( ☒ )/off ( ☐ ).
- If confirmation appears, follow onscreen instructions.

## Making Calls while Abroad

Bring "Overseas User Guide" when going abroad.

 
For details, see the following website.

[https://www.softbank.jp/mobile/set/common/p/pdf/international/roaming/global\\_service\\_international\\_guide.pdf](https://www.softbank.jp/mobile/set/common/p/pdf/international/roaming/global_service_international_guide.pdf)  
(Japanese)

## International Calls to Japan and Other Countries from Abroad


1

In Home Screen, (Phone)

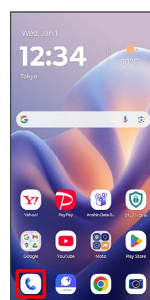

🚩 Phone opens.

 
2

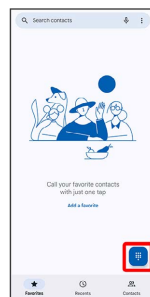

🚩 Call window opens.

3

 
Touch & Hold 0

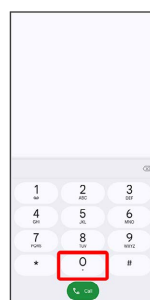

🚩 "+" appears.

4

 Enter country code then other party number (omit first 0)

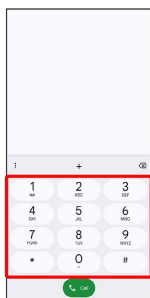

- Do not omit first 0 from phone numbers when dialing Italy (39).

5

Call



 Handset dials number. Call begins when other party answers.

 
Calls to Landline/Cell Phones in Country of Stay

Place calls the same way you would within Japan.

- Do not enter country code or omit first 0 from phone numbers.


1

In Home Screen,  (Phone)

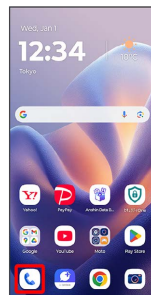

🚩 Phone opens.

 
2

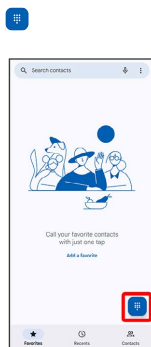

🚩 Call window opens.

3

 Tap dialpad to enter the other party's number

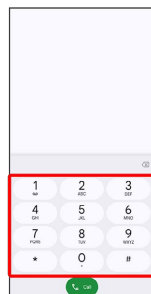

4

Call



 Handset dials number. Call begins when other party answers.



Warranty/Specifications/  
Customer Service

Warranty & After-Sales Service..... 90  
Specifications.....90  
Customer Service..... 91

## Warranty & After-Sales Service

### Warranty

- The warranty period is 1 year from the date of newly purchase.
- Repairs will be done based on terms of repair service. Terms of repair service is referred to SoftBank website.  
<https://www.softbank.jp/mobile/support/product/warranty/> (Japanese)
- Warranty covers only handset. Accessories such as cables are not covered by terms of repair service.

### Cautions

#### Damages

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

#### Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files (contacts/images/sound etc.) or settings due to accident or repair.

#### Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

### After-Sales Service

To request repairs, contact [Customer Service](#) or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms of repair service.
- After the warranty period, if handset can be repaired, repairs will be made at cost. The functional parts necessary to repair the handset will be available for 4 years generally after the manufacture is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.

### Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or [Customer Service](#).

## Specifications

### Handset

| Item                    | Description                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------------------|
| Weight                  | Approx. 184 g                                                                                               |
| Continuous Talk Time    | (FDD-LTE) Approx. 3020 minutes                                                                              |
| Continuous Standby Time | 4G (AXGP): Approx. 575 hours<br>4G (FDD- LTE): Approx. 575 hours<br>5G (SA): Approx. 510 hours <sup>1</sup> |
| Charging Time           | 125W TurboPower™ Charger (complimentary sample): Approx. 28 minutes                                         |
| Dimensions              | Approx. 161 x 73 x 8.0 mm                                                                                   |

1 5G standby time is approximate time in 5G standalone environment.

### 125W TurboPower Charger (Complimentary Sample)

| Item       | Description                                                                             |
|------------|-----------------------------------------------------------------------------------------|
| Input      | AC 100 to 240 V 50/60 Hz 1.7 A                                                          |
| Output     | DC 5.0 V 3.0 A/DC 9.0 V 3.0 A/DC 15.0 V 3.0 A/DC 20.0 V 6.25 A/DC 5.0 to -20.0 V 6.25 A |
| Dimensions | Approx. 29 x 56 x 72 mm                                                                 |

### USB Cable (Complimentary Sample)

| Item       | Description |
|------------|-------------|
| Dimensions | Approx. 1 m |

### SIM Removal Pin (Complimentary Sample)

| Item       | Description           |
|------------|-----------------------|
| Dimensions | Approx. 36.2 x 7.4 mm |

## Customer Service

---

If you encounter any difficulties or are unsure of anything, contact customer service.

### SoftBank Customer Support

- From a SoftBank handset, dial toll free at 157
- From a landline, dial toll free at 0800-919-0157
- Business hours: Call 10:00am - 7:00pm / Chat 9:00am - 8:00pm

### Smartphone Technical Support Center

- From a SoftBank handset, dial toll free at 151
- From a landline, dial toll free at 0800-1700-151
- Business hours: Mon. - Fri. 9:00am - 7:00pm / Sat., Sun., and Holiday 9:00am - 5:00pm / 9:00am - 8:00pm (for general information)



# Safety Precautions

- Safety Precautions.....94
- Material List..... 102
- Important Product Information.....103
- Bluetooth®/Wi-Fi (WLAN)..... 106
- Cautions on Water/Dust/Shock Resistance..... 107
- Intellectual Property Rights.....109
- RF Exposure Information of This Product..... 111

# Safety Precautions

Read safety precautions before using handset.  
Observe precautions to avoid injury to self or others, or damage to property.

## Safety Precautions

These labels indicate the degree of risk from improper use.  
Make sure you thoroughly understand their meanings before reading on.

| Mark                                                                                             | Descriptions                                                                           |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
|  <b>DANGER</b>  | Great risk of death or serious injury <sup>1</sup> from improper use                   |
|  <b>WARNING</b> | Risk of death or serious injury <sup>1</sup> from improper use                         |
|  <b>CAUTION</b> | Risk of minor injury <sup>2</sup> or damage to property <sup>3</sup> from improper use |

- 1 Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having side effects or requiring hospitalization or long term treatment.
- 2 Minor injury includes: Physical injury, high temperature burns, low temperature burns, electric shock, and other conditions not requiring hospitalization or long-term treatment.
- 3 Damage to property includes: Incidental damage to structures and household property and/or to pets and livestock.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

| Mark                                                                                                        | Descriptions                  |
|-------------------------------------------------------------------------------------------------------------|-------------------------------|
|  Prohibited              | Prohibited actions            |
|  Do Not Disassemble      | Disassembly prohibited        |
|  Do Not Use Wet Hands    | Use with wet hands prohibited |
|  Compulsory              | Compulsory actions            |
|  Disconnect Power Source | Unplug AC Charger from outlet |

Handset, 125W TurboPower Charger (Complimentary Sample), USB Cable (Complimentary Sample), Wireless Charger (Commercially Available), USIM Card, SIM Removal Pin (Complimentary Sample), (Common)

## DANGER



Do not use, store, leave in a high temperature or heat accumulating place (e.g. near fire or heater appliances, under kotatsu or bedding, in direct sunlight, inside a sun-heated car, etc.)

May cause fire, burns, injury, electric shock, etc.



Do not put in or place nearby cooking appliances such as a microwave oven, or IH cooking heater, or high-pressure container such as pressure cooker.

May cause fire, burns, injury, electric shock, etc.



Avoid Charging Terminals or External Device Port being exposed to liquids such as water (drinking water, sweat, sea water, urine of pets, etc.) Do not charge when handset is wet or where handset can come in contact with water, such as a bath room or near a humidifier.

May cause fire, burns, injury, electric shock, etc.  
For water resistance, see "[Cautions on Water/Dust/Shock Resistance](#)."



Do not subject handset to excessive force or break it. Especially when carrying it in your pocket, do not hit it or press it between other objects.

Internal Battery breakage may cause fire, burns, injury, etc.

\* Take additional care in instances such as the following:

- Sitting or squatting with the product in your pants or skirt pocket
- The product becoming caught in a sliding door or vehicle door when in a jacket pocket
- Stepping on the product when it is on something soft such as a sofa, bed, or futon or on the floor
- Getting the product caught in the seat on a train or bus



Do not disassemble, modify, or solder.

May cause fire, burns, injury, electric shock, etc.



Do not try to remove Internal Battery.

May cause fire, burns, injury, etc.



Back Cover on handset is not removable. Do not try to remove. Also do not try to remove Back Cover or try to press it in if handset is bulging, such as if Internal Battery is swollen.

May cause fire, burns, injury, etc.



Use optional accessories specified by SoftBank.

Using unspecified accessories or those of unknown manufacture, origin, or specification may cause fire, burns, injury, electric shock, etc.

## **WARNING**



Do not drop, stomp, throw, or otherwise subject to strong force, impact, or vibration.

May cause fire, burns, injury, electric shock, etc.



Do not allow anything conductive (metal, pencil lead, etc.) to come in contact with Charging Terminals, USB Type-C Port, or dust or sand to enter equipment.

May cause fire, burns, injury, electric shock, etc.



Do not adhere anything metal (stickers/straps/clips containing metal material, etc.) to a wireless charger (commercially available) or handset, or do not put such materials between a wireless charger or handset.

May cause fire, burns, injury, etc.



Remove any covers from handset before charging with a wireless charger (commercially available).

Cover material/thickness or any dirt lodged between handset and the cover may prevent handset from charging properly, and may result in fire, burns, injury, etc.



Power off handset near electronic devices that use precision control or faint signals.

Radio waves may cause electronic devices to malfunction or may adversely affect the operation.

\* Take additional care near these devices:

Hearing aids, implanted pacemakers, implanted defibrillators, other electronic medical equipment, and other automatically controlled devices or equipment. For users of implanted pacemakers, implanted defibrillators, other electronic medical equipment, check with the equipment vendor or distributor for information about the effects of radio waves.



Stop charging if not complete when the prescribed charging time has passed.

Overcharge may occur resulting in fire, burns, injury, etc.



Compulsory

Always turn off handset before entering a place where flammable gas may be present, or a place where dusts are generated. Stop charging handset if charging it.

Ignition of flammable gas may cause explosion, fire, etc.



Compulsory

Follow the instructions of a gas station or other such location before using handset there.

Do not charge handset at a gas station, etc.

Take care not to drop handset at a gas station, etc.; in particular, do not use handset while filling.

Ignition of flammable gas may cause explosion, fire, etc.



Compulsory

Take the following actions, exercising caution, in case of abnormal smell, noise, smoke, heat generation, discoloring or deformation while using, charging, or storing.

-Disconnect the power plug from an outlet

-Power off handset

Continued use may cause fire, burns, injury, electric shock, etc.

## ⚠ CAUTION



Prohibited

Do not use damaged handsets or related accessories.

May cause fire, burns, injury, etc.



Prohibited

Do not place handset on unstable/uneven surfaces. Be extra careful while the vibrator is set.

Handset may drop and cause injury.



Prohibited

Do not use or store handset and related accessories in humid, dusty, or high-temperature places.

May cause fire, burns, electric shock, etc.

For water and dust resistance, see ["Cautions on Water/Dust/Shock Resistance."](#)



Prohibited

Do not allow children to use handset or related accessories in the wrong way. Guardians should supervise use by children.

May cause accidental swallowing, injury, electric shock, etc.



Prohibited

Do not place handset and related accessories within an infant's reach or where pets have access to them.

In particular, take care with where small parts are stored, such as SIM Card Tray and SIM Removal Pin (complimentary sample).

May cause accidental swallowing, injury, electric shock, etc.



Compulsory

Handset temperature may become high when used continuously or while charging. Avoid continued contact with handset for a long time involuntarily such as by placing handset in clothes pocket, falling asleep, etc.

Handset or AC Charger (optional accessory) may become hot after continued use of applications, call functions, data communication, video viewing functions, etc. or while charging. Continued contact with a high-temperature area may cause redness, itching, rash of skin, or low-temperature burns depending on the user's physical condition.

## Handset

### DANGER



Prohibited

Do not throw handset into a fire or apply heat.

May cause fire, burns, injury, etc.



Prohibited

Do not penetrate with a sharp object (nail), hit with a hard objects (hammer), stomp, or otherwise subject handset to strong force.

May cause fire, burns, injury, etc.



Compulsory

If the internal substance of handset gets into your eyes, mouth, etc., immediately rinse with clean water and consult a doctor.

May cause loss of sight, medical problem, etc.

### WARNING



Prohibited

Do not shine LED Flash or photograph with it flashing close to someone's eyes. In particular, keep away from infants.

May harm eyesight. Flash/Photo Light may impair vision or frighten others causing accidents such as injury.



Prohibited

Do not look at a repeatedly blinking screen for a long time.

May cause twitches, loss of consciousness, etc.



Prohibited

Do not allow liquids such as water (drinking water, sweat, sea water, urine of pets, etc.) or foreign objects such as anything metal (cutter blades, staples, etc.), flammable material, etc. in SIM Card Tray Slot.

Do not insert USIM Card in the wrong position or orientation.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not expose the camera lens to direct sunlight, etc. for a long time.

May cause fire, burns, injury, etc. due to light-condensing of lens.



Prohibited

Do not look into Proximity/Environmental Light Sensor.

May affect eyesight or lead to an accident.



Compulsory

Power off handset or set to Airplane mode before boarding an aircraft.

Use of handset on board an airline is restricted. Follow the airline's instructions.

Handset radio waves may affect electronic devices of the aircraft.

Prohibited use aboard an aircraft may be subject to penalty by law.



Compulsory

For use in hospitals, follow the medical facility's instructions.

Power off handset in a place where its use is prohibited. Handset radio waves may affect electronic devices or other electronic medical equipment.



Compulsory

Always keep handset away from your ear when calling hands free, ringing loudly for incoming calls, or during standby.

Adjust the sound volume adequately when playing games or playing back videos or music with an earphone/microphone, etc. connected to handset.

Handset sound is loud when calling hands free. Even in standby, the ringtone or alarm may ring suddenly. Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty. Too loud volume may cause inability to hear ambient sound and may also cause an accident.



Compulsory

Users with heart conditions should adjust vibration and ringtone volume as needed.

Handset suddenly vibrating and ringing for a new call may startle and affect persons with heart conditions.



Compulsory

When using electric medical equipment, etc., check with the equipment vendor or distributor for information about the effects of radio waves.

Handset radio waves may affect electronic medical equipment.



Compulsory

If Display or Camera lens is broken, do not touch the broken components or exposed inside of handset.

Touching the broken or exposed part may cause burns, injury, electric shock, etc.



Compulsory

If Internal Battery leaks or has an unusual smell, immediately stop using, and keep away from fire.

The leaked fluid may catch on fire causing ignition, explosion, etc.



Compulsory

Do not allow a pet, etc. to bite handset.

Internal Battery may ignite, explode, overheat, or leak causing fire, burns, injury, etc.

## ⚠ CAUTION



Prohibited

When using the motion sensor, ensure the safety of the surroundings and hold handset firmly, not swinging around more than necessary.

Failure to do so may cause accidents such as injury.



Prohibited

If Display is broken, do not allow the leaked internal substance to contact the skin of your face or hands, or clothes.

May cause injury to eyes, skin, etc.

If the internal substance gets into your eyes, mouth, etc., or contacts your skin or clothes, immediately rinse with clean water.

Also, in case it gets into your eyes, mouth, etc., immediately consult a doctor after rinsing.



Prohibited

Do not dispose handset together with ordinary trash.

May cause fire, burns, injury, etc. Also, may cause environmental destruction. Bring unnecessary handset into a sales outlet such as a SoftBank Shop or follow the municipality instructions for recycling.



Prohibited

If the internal fluid is leaked from Internal Battery, do not allow it to contact the skin of your face or hands, or clothes.

May cause injury to eyes, skin, etc.

If the internal substance gets into your eyes, mouth, etc., or contacts your skin or clothes, immediately rinse with clean water.

Also, in case it gets into your eyes, mouth, etc., immediately consult a doctor after rinsing.



Prohibited

When removing USIM Card, be careful not to scratch yourself (fingers, etc.) with point of SIM Removal Pin (complimentary sample).

Contact with point of SIM Removal Pin (complimentary sample) may cause injury, etc.



Compulsory

Before using handset in a car, check with the car manufacturer or dealer for information about the effects of radio waves.

Handset radio waves may affect the vehicle's electronic equipment in some car models. In that case, stop using handset immediately.



Compulsory

If skin abnormalities develop during use, immediately stop using handset and consult a doctor.

Continuing its use may cause itching, rashes, eczema, or other symptoms depending on the user's physical condition. For the material of each part, see "[Material List](#)."



Compulsory

Earpiece/Speaker, Speaker, and Vibrator use magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Adhered objects may cause injury, etc.



Compulsory

Watch Display in a well-lit place with enough distance kept.

Watching in a dark place or getting too close to Display may reduce visual acuity, etc.

125W TurboPower Charger  
(Complimentary Sample), USB Cable  
(Complimentary Sample), Wireless  
Charger (Commercially Available)

## WARNING



Prohibited

Do not use USB cable (complimentary sample) or wireless charger (commercially available) if the cord is damaged.

May cause fire, burns, electric shock, etc.



Prohibited

If thunder is audible, do not touch 125W TurboPower Charger (complimentary sample), USB cable (complimentary sample), or wireless charger (commercially available).

May cause electric shock, etc.



Prohibited

Do not short circuit Charging Terminals when it is connected to a power outlet. Also, do not allow body parts such as your hands or fingers to contact Charging Terminals.

May cause fire, burns, electric shock, etc.



Prohibited

Do not put heavy objects on USB cable (complimentary sample) or wireless charger (commercially available) or pull it strongly.

May cause fire, burns, electric shock, etc.



Prohibited

When plugging or unplugging 125W TurboPower Charger (complimentary sample) to or from a power outlet, do not allow metals to come in contact.

May cause fire, burns, electric shock, etc.



Prohibited

Do not use a voltage converter (such as a travel converter for overseas use) when charging with 125W TurboPower Charger (complimentary sample).

May ignite, overheat, cause electric shock, etc.



Prohibited

Do not apply unnecessary force to the connection part when handset and 125W TurboPower Charger (complimentary sample) are connected.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not charge anything that is wet with liquids such as water (drinking water, sweat, sea water, urine of pets, etc.) using a wireless charger (commercially available).

Do not charge where exposed to water (bath room, near a humidifier, etc.).

May cause fire, burns, injury, electric shock, etc.



Do Not Use  
Wet Hands

Do not touch the cord of USB cable (complimentary sample), Charging Terminals, power plug, or wireless charger (commercially available) with wet hands.

May cause fire, burns, electric shock, etc.



Compulsory

Use with specified power supply and voltage.

Also, use AC Charger for overseas use when charging abroad.

Using the incorrect power supply and voltage may cause fire, burns, electric shock, etc.

125W TurboPower Charger (complimentary sample): 100V AC (household AC power outlet only)

AC Charger for overseas use: 100 V to 240 V AC (household AC power outlet only)



Compulsory

Wipe off dust on the power plug.

Using with dust adhered may cause fire, burns, electric shock, etc.



Compulsory

Insert 125W TurboPower Charger (complimentary sample) in outlet firmly.

Failure to do so may cause fire, burns, electric shock, etc.



Compulsory

When unplugging from an outlet, grasp USB cable (complimentary sample) plug and do not pull cord or otherwise subject to excessive force.

The cord of USB cable (complimentary sample) may be damaged if it is pulled out and it may cause fire, burns, electric shock, etc.



Compulsory

Persons with an implanted pacemaker, defibrillator, or other electronic medical equipment should consult carefully with a doctor before using a wireless charger (commercially available).

Handset radio waves may affect electronic medical equipment.



Compulsory

Insert or remove the plug of USB cable (complimentary sample) straight against the port without applying force such as pulling the cord.

Incorrect insertion or removal may cause fire, burns, injury, electric shock, etc.



Compulsory

Stop using handset immediately if Charging Terminals are deformed or bent. Or, do not use AC Charger even with the deformation fixed.

Charging Terminals may short-circuit causing fire, burns, injury, electric shock, etc.



Disconnect Power Source

Unplug power plug of 125W TurboPower Charger (complimentary sample) when not using it.

Keeping the power plug connected may cause fire, burns, electric shock, etc.



Disconnect Power Source

If liquid such as water (drinking water, sweat, seawater, urine of pets, etc.) gets on equipment, immediately disconnect the power plug from an outlet.

Liquid on equipment may result in short-circuit causing fire, burns, electric shock, etc.



Disconnect Power Source

When cleaning, disconnect the power plug from an outlet.

Failure to do so may cause fire, burns, electric shock, etc.

## ⚠ CAUTION



Prohibited

Do not touch 125W TurboPower Charger (complimentary sample) that is connected to an outlet continuously.

May cause burns, etc.

## USIM Card

## ⚠ CAUTION



Compulsory

When handling USIM Cards, be careful of the cut surface so as not to hurt your body parts such as fingers.

Cut surface may be sharp and may cause injury, etc.

## SIM Removal Pin (Complimentary Sample)

## ⚠ WARNING



Prohibited

Tip of SIM Removal Pin (complimentary sample) is pointed. Do not use pointed at yourself or others.

May allow it to strike yourself or others, causing injuries or loss of sight.

## ⚠ CAUTION



Prohibited

Do not place within reach of infants.

They may swallow it or choke, or may cause injury, etc.

Handling near Electronic Medical Equipment

⚠ WARNING



Compulsory

If you have an electric medical device such as an implanted pacemaker or implanted cardioverter defibrillator, or if there may be someone with such a device around you, keep handset at least 15 cm away from the device.

Handset radio waves may affect electronic medical equipment. Switch handset not to emit radio waves (Airplane mode, power handset off, etc.) beforehand when people around you may come closer than 15 cm to you where you cannot move freely.

---



Compulsory

When using electronic medical equipment (other than implanted pacemakers/defibrillators) outside medical facilities, check with the equipment vendor or distributor for information about the effects of radio waves.

Handset radio waves may affect electronic medical equipment.

---



Compulsory

Observe each medical facility's instruction when using handset.

Handset radio waves may affect electronic medical equipment.

Material List

motorola edge 60s pro Main Unit

| Part                                                                 | Material/Surface Treatment                            |
|----------------------------------------------------------------------|-------------------------------------------------------|
| Display,<br>Camera Lens,<br>LED Flash                                | Strengthened glass/-                                  |
| Camera Ring                                                          | Aluminum/anodizing, glossy processing                 |
| Middle Frame                                                         | PC + 10% GF/matte processing, glossy processing (rim) |
| Volume Key<br>(Up/Down),<br>Power Key, AI<br>Key                     | Aluminum/sand blasting + anodizing                    |
| Cling (Paper<br>Protective<br>Sheet)                                 | Tracing paper/matte oil                               |
| Back Cover<br>(PANTONE<br>Shadow,<br>PANTONE<br>Calcite)             | GF + silicone/antifouling coating, matte processing   |
| Back Cover<br>(PANTONE<br>Dazzling Blue)                             | GF + PU leather/antifouling coating, matte processing |
| Motorola<br>Logo<br>(PANTONE<br>Shadow,<br>PANTONE<br>Dazzling Blue) | PET + PC/hard coating, matte processing               |
| Motorola<br>Logo<br>(PANTONE<br>Calcite)                             | PET/hard coating, matte processing                    |
| SIM Card<br>Tray (Outer<br>Part)                                     | PC/matte processing                                   |
| SIM Card<br>Tray (Card<br>Mounting<br>Part)                          | Stainless steel/-                                     |
| SIM Card<br>Tray (Frame)                                             | PC + 20% GF/-                                         |
| SIM Card<br>Tray (Seal)                                              | Liquid silicone rubber/-                              |
| IMEI Label (on<br>SIM Tray)                                          | PET/laminating                                        |

### 125W TurboPower Charger (Complimentary Sample)

| Part                      | Material/Surface Treatment  |
|---------------------------|-----------------------------|
| Outer Case                | PC/-                        |
| Outer Case<br>(Nameplate) | PC/laser printing           |
| Power Plug                | Copper alloy/nickel plating |
| Wrapping<br>Paper         | Pulp paper/gloss oil        |

### USB Cable (Complimentary Sample)

| Part                                     | Material/Surface Treatment     |
|------------------------------------------|--------------------------------|
| USB Type-C<br>plug (Outer<br>Case)       | TPE/-                          |
| USB Type-C<br>plug (Metal<br>Shell Part) | Stainless steel/nickel plating |
| Cable                                    | TPE/-                          |
| Wrapping<br>Paper                        | Pulp paper/gloss oil           |

### SIM Removal Pin (Complimentary Sample)

| Part               | Material/Surface Treatment |
|--------------------|----------------------------|
| SIM Removal<br>Pin | Stainless steel/-          |

## Important Product Information

### Handset, 125W TurboPower Charger (Complimentary Sample), USB Cable (Complimentary Sample), USIM Card, SIM Removal Pin (Complimentary Sample), (Common)

- Do not expose to water.  
125W TurboPower Charger (complimentary sample), and USB Cable (complimentary sample) are not waterproof. Avoid using in humid places such as a bathroom and exposing it to rain. Contact to dampness from sweat by wearing on your body may cause corrosion inside resulting in malfunction. If malfunction is determined to be caused by above water exposures, warranty will not apply to repair. In the case that repair is possible, repair charge is incurred.
- Avoid using handset in extremely high or low temperatures or in high humidity. Always use within temperatures of -20°C to 60°C and humidity of 0% to 85%.
- Do not use in these locations.
  - Where there is much humidity, dust, or vibration
  - Near a landline, TV, radio, etc.
- Note that handset temperature may become high when used for a long time, especially in high-temperature conditions.
- Discontinue using handset temporarily if its temperature becomes high. Prolonged contact with handset when at a temperature may cause low-temperature burns.
- Avoid touching handset USB Type-C Port. Static electricity may affect internal components.
- Use a soft, dry cloth to clean any oil, splashing, or other hard-to-remove soiling. Do not operate with fingernails to prevent scratching Display. Wiping with alcohol, thinner, benzene, detergent, etc. may remove print or fade colors.
- Occasionally clean terminals with a dry, cotton swab etc. Dirt on terminals may cause power shut-off or insufficient charging. Take care not to damage terminals when cleaning.
- Avoid removing USIM Card when saving or transmitting data with handset. May erase data or affect handset.
- A flashing screen while playing games or watching videos may cause dizziness or convulsions. If you experience these symptoms, consult a doctor.
- Do not place handset near magnetic objects such as magnetic stripe cards. Information saved on memory cards and credit cards may be corrupted by handset's magnetic field.
- Handset uses metal components. A user may experience itching, a rash, skin irritation, or other symptoms depending on their physical condition and health.
- Do not paint handset. Coating may penetrate handset and cause malfunction.

## Internal Battery

- Battery is built in and is not removable.
- Internal Battery is capable of charging and discharging at least several hundred times, but will ultimately wear out. Internal Battery needs to be replaced if operating time shortens noticeably. Replace Internal Battery.
- Internal Battery replacement incurs fees and requires handset submission to a SoftBank Shop. Contact a SoftBank Shop or [Customer Service](#). Do not use replace by yourself; may cause fire, explosion, etc.
- Battery is depleted faster when communication functions such as Bluetooth® and Wi-Fi® are enabled. It is recommended that you disable these functions when not in use.
- Battery is depleted faster when Display is at a bright setting. Use "Brightness level" to set a lower brightness and save battery power.

## Lithium-Ion Battery

- Handset uses a lithium-ion battery. Lithium-ion batteries are recyclable precious resources. Bring them to the nearest shop with the Mobile Recycle Network mark.



Li-ion 00

## Charging

- Always use 125W TurboPower Charger (complimentary sample) and USB Cable (complimentary sample), or the SoftBank specified optional AC Charger (USB Type-C™ rapid charging AC Charger with USB PD-PPS capability [ZSDBAV] (SB-AC22-TCPD), etc.). See SoftBank Website for AC Charger or other peripheral equipment. Using other charging equipment may cause Internal Battery leakage, overheating, or fire. SoftBank Corp. is not responsible for damages whatsoever from accidents or problems arising from use of other charging equipment.
- Do not force handset and USB Cable (complimentary sample) to connect if it is difficult to connect them.
- When plugging in 125W TurboPower Charger (complimentary sample), do not allow anything that conducts electricity (anything metal, pencil lead, etc.) to come in contact with plug. May cause electric shock, short-circuiting, fire, etc.
- Connect 125W TurboPower Charger (complimentary sample) directly into an outlet. Connection to a power bar may cause overheating and cause a fire.
- Do not subject 125W TurboPower Charger (complimentary sample) to strong impact such as by tripping on it when connected to an outlet. May cause injury or malfunction.
- Do not use 125W TurboPower Charger (complimentary sample) if plug is damaged or does not plug firmly into an outlet.
- Do not charge in these locations.
  - In direct sunlight
  - Where there is much humidity, dust, or vibration
  - Near a TV, radio, or other electric device

## To Ensure Safe Driving

- Using handset while driving risks safety. Follow laws and regulations of countries and regions where using handset. Before using handset, stop vehicle in a safe place.
- Do not store handset or supplied accessories in the same place as liquids or flammable gas. Do not place handset above where an airbag is located. May hinder an airbag when deployed.
- Accuracy of compass can be affected by electromagnetic waves, surroundings, or other magnetic objects. Compass should only be used as a reference.
- If you do not wish location information to be made known, do not use applications that record location information.
- Only viewed map should not be relied on, and should only be used as a reference when searching for places, buildings, directions, and distances. Maps, directions, and places are as provided by service providers and are always subject to change. This type of function is not supported in some locations; map routes and compass may be inaccurate, incomplete, or unsupported.

## Operating System

- Power off handset in a place where its use is prohibited or where there may be interference or risk of danger.
- Radio wave interference may cause malfunctioning or other trouble in electronic devices.
- In rare cases, using handset in some vehicles will affect the vehicle's electronic devices. Do not use handset in such cases as a safety precaution.
- Before connecting handset or supplied accessories to any other devices, read instructions included with the devices and ensure safety information is understood.
- Do not connect handset to non-compatible products.
- Using handset while walking risks safety. Avoid walking and using handset.

## Location Notification by Emergency Services

- Only VoLTE (LTE network) can be used for connecting domestic emergency services.

## Emergency Alerts

- When an emergency alert is received, handset notifies user via message, alert, and by vibrating.
- Emergency alerts are enabled by default (can also be disabled).
- By default, alert sounds at maximum volume even when Do Not Disturb is set, and vibration is enabled regardless of Do Not Disturb setting (can be changed).
- Emergency alerts are not received during calls, during data transmissions, or when signal is weak.
- \* Can be received during a voice call using VoLTE.
- Depending on usage/situation, handset may receive emergency alerts for other areas or no emergency alerts.
- SoftBank Corp. is not responsible for damages caused by using this service, including accidents resulting from received information, reception timing, or reception/reception failure.

## Display (Touchscreen)

- Touchscreen-type display, operate with your fingers on Display.
- Display is designed to be contacted lightly by your fingers. Do not press strongly with your fingers or with anything pointed (fingernails, ball-point pen, pin, etc.).
- Display may not respond to touch operation in these situations. Note that malfunction may occur.
  - Operation with gloves on
  - Operation with fingernail
  - Foreign object on Display
  - Operation with water drops or condensation on Display
  - Operation with fingers wet or sweaty
  - Operation under water
- Immediately discontinue using handset if handset Display is broken. Avoid touching or removing broken parts, and immediately contact a SoftBank Shop or [Customer Service](#).
- Immediately wipe away any liquid, metallic dust, or other matter which Display may have come in contact with.

## Volume

- Do not listen for a prolonged period at high volume; may hurt ears.



## SIM Removal Pin (Complimentary Sample)

- Do not insert SIM Removal Pin (complimentary sample) in hole other than hole in SIM Card Tray. May cause malfunction or damage.
- Do not apply excessive force. May cause malfunction or damage.
- Follow local rules regarding collection when disposing.
- Do not use SIM Removal Pin (complimentary sample) in other mobile terminals. May cause malfunction or damage to mobile terminal.

## Personal Information and Data Security

- Use of some handset functions and third-party applications may cause leakage of personal information, loss of data, or allow access by a third party. SoftBank Corp. recommends taking preventative steps to protect personal and confidential information.
- Keep handset in a safe place where it cannot be used inappropriately.
- It is recommended that you set a screen lock on handset that requires a password, Face Unlock, fingerprint authentication, etc.
- Back up personal information regularly. When changing to a different mobile terminal, always transfer or delete personal information from handset.
- Receiving unfamiliar messages or email may be sources of viruses. Do not open them, and simply delete them.
- When using handset to browse the Internet, do not access websites that are a security risk to prevent personal information from being stolen.
- Set a password for Wi-Fi tethering to prevent inappropriate access. Disable when not in use.
- Handset initiates system updates regularly to enhance security. To maintain handset security, always use the latest software. It is also recommended that you perform a regular virus scan.
- Always obtain third-party applications from official venues. Scan for viruses when downloading applications.
- Some applications request sending of location information, and share location information with the creators of the application. In such instances, handset, searched information, and diagnostic information may be sent to third-party application providers. Third-party vendors use this information to improve products and services.

## Technical Conformity

- Handset conforms to technical regulations pursuant to the Radio Law as a wireless radio station facility of a low-power data transmission system, and the mark of technical conformity can be viewed as follows:  
 Flick Home Screen up → ⚙️ (Settings) → [About phone](#) → [Regulatory labels](#)
- Handset conforms to technical regulations, and its disassembly/modification may be punishable under law.

# Bluetooth®/Wi-Fi (WLAN)

 
Connection/operation may not be possible with some Bluetooth®/Wi-Fi (wireless LAN) devices.

Handset Bluetooth®/Wi-Fi (wireless LAN) communication is secured in conformity with Bluetooth®/Wi-Fi (wireless LAN) standards, however, security may be insufficient depending on system environment and settings. Be aware of this when using Bluetooth®/Wi-Fi (wireless LAN) communication.

SoftBank Corp. is not responsible for damages from leakage of data or information occurring using Bluetooth®/Wi-Fi (wireless LAN) communication.

## Frequency Bands (2.4 GHz Band)

Frequency band used by handset Bluetooth®/Wi-Fi (WLAN) functions are as follows:



2.4: Frequency band is 2400 MHz  
FH/XX/DS/OF: Modulations are FH-SS, other modulation, DS-SS, OFDM

4: Estimated range of radio frequency interference is up to 40 m

8: Estimated range of radio frequency interference is up to 80 m

■ ■ ■ : Utilizes 2,400 MHz to 2,483.5 MHz band without mobile device bandwidth differentiation

- Available channels may vary by country.
- For use in an airplane, contact your airline.

## Frequency Bands (5 GHz Band)

In 5 GHz frequency bandwidth, handset can use 5.2 GHz (W52), 5.3 GHz (W53), and 5.6 GHz (W56) bands.

- 5.2 GHz band (W52/36, 40, 44, 48 ch)
- 5.3 GHz band (W53/52, 56, 60, 64 ch)
- 5.6 GHz band (W56/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144 ch)

Using a 5.2/5.3-GHz-band wireless LAN outdoors is prohibited by law (this does not apply to communication with access points/relay stations of high-output data communications systems operating in the 5.2 GHz band).

## Frequency Bands (6 GHz Band)

Within the 6 GHz frequency band, handset can use the 5925 to 6425 MHz band.

Handset's 6 GHz device power class is LPI (Low Power Indoor). Using a 6-GHz-band (LPI) wireless LAN outdoors is prohibited by law.

## Cautions for General Use

The frequency band used by handset Bluetooth®/Wi-Fi (wireless LAN) functions is also used for operation by household appliances (microwave ovens) and industrial/scientific/medical equipment as well as by in-place radio stations (requiring a license) and specific low-power radio stations (not requiring a license) for mobile identification as used in production lines, and by amateur radio stations (requiring a license).

1. Before using Bluetooth®/Wi-Fi (wireless LAN), check that no in-place radio stations for mobile identification, specific low-power radio stations, or amateur radio stations are in operation nearby.
2. If use of handset Bluetooth®/Wi-Fi (wireless LAN) causes interference with regard to an in-place radio stations for mobile identification, immediately change the usage frequency, or discontinue use and take measures to avoid interference (putting a partition in place, etc.).
3. If handset is otherwise a cause of interference with regard to specific low-power radio stations for mobile identification or amateur radio stations and assistance is required, contact [Customer Service](#).

## Bluetooth® and Wi-Fi (Wireless LAN)-Compatible Devices and Interference

Bluetooth® and Wi-Fi (IEEE 802.11 b/g/n/ax) use the same frequency band (2.4 GHz). Using Bluetooth® near a Wi-Fi (wireless LAN) access point or device may cause interference and affect communication speed connection. If this occurs, either distance handset and the device connecting by Bluetooth®, or turn off the Wi-Fi (wireless LAN) device so as to prevent interference.

## Wi-Fi (Wireless LAN)

Do not use where there are devices with magnetic fields (electrical products, AV/OA equipment, etc.) or where there is an electromagnetic field.

- The effect of magnetism and electrical noise may cause increased noise and prevent communication. Handset may in particular be affected by a microwave oven.
- Proximity to a TV, radio, etc. can block reception and cause a snowy TV screen.
- If multiple Wi-Fi (wireless LAN) access points using the same channel are in proximity, handset may not detect access points correctly.

## Cautions on Water/Dust/Shock Resistance

Handset has IPX8\*<sup>1</sup>/IPX9\*<sup>2</sup> water protection and IP6X\*<sup>3</sup> dust protection with SIM Card Tray closed firmly. Also, handset comprises the shock resistant performance which passed the test in accordance with United States Military Standard.

\*1 IPX8 indicates that handset functions as a phone after being slowly immersed in still tap water of room temperature to a depth of 1.5 m, and left there for approximately 30 minutes before being removed again.

\*2 IPX9 means that handset functions as a phone after being subjected to a high-pressure jet of high-temperature water for approximately 30 seconds.

\*3 IP6X means that a handset functions as a phone without particles intrusion after being agitated in a test device with 75 µm or smaller particles for 8 hours before being removed again.

Carried out a drop test compliant with MIL-STD-810H Method 516.8 Procedure IV set forth by the U.S. Department of Defense.

### What You Can Do with Waterproofness of Handset

- Use handset to talk without using an umbrella in the rain (with a rainfall of about 20 mm per hour).
- Wash handset by shaking it gently with tap water in a basin at room temperature (5°C to 35°C).
  - Hold SIM Card Tray so as not to open and wash handset by hand without using a brush, sponge, soap, or detergent, etc.
  - After washing handset, wipe both surfaces with a dry cloth and drain it.
- Use handset at a poolside. However, avoid handset being exposed to water or immerse it in pool water.

### To Maintain Water/Dust/Shock Resistance

Always check the following to maintain water/dust/shock resistance.

- Insert SIM Card Tray securely. Any debris (single hair, grain of sand, minute fiber, etc.) trapped between contacting surfaces may allow ingress of water or dust.
- Avoid poking Mic, Earpiece/Speaker, Speaker, Mouthpiece/Mic, USB Type-C Port or SIM Card Tray with anything pointed.
- Do not let handset fall. Scratches, etc. can deteriorate water/dust resistance.
- SIM and Card Tray gasket is crucial for continued handset water and dust resistance. Do not peel away or damage gasket. Also, prevent dust from adhering onto them.
- While handset is shock resistant, shock resistance assumes usual everyday use. Handset may break if subjected to excessive shock such as being thrown or dropped forcibly.
- Handset resistance is verified under test conditions, and operation is not guaranteed to operate properly in actual use under all conditions. Non-breakage and non-malfunction is not guaranteed.



### Parts Replacement

To maintain water and dust resistance, it is recommended to replace parts every 2 years regardless of their condition. Handset can be submitted for parts replacement at a fee. Contact [Customer Service](#) or a nearby SoftBank Shop.

## Usage Cautions

 
- Do not expose or immerse handset to the following types of liquid.
  - Water containing soap, detergent, or bath salt
  - Seawater or pool water
  - Hot spring or hot water
  - Medicines, cosmetics, etc.
- Do not immerse handset in hot water, use it in a sauna, or do not subject to hot airflow such as from a hair dryer.
- Do not leave wet. May short-circuit USB Type-C Port. In a cold region, handset may freeze and result in malfunction.
- To prevent condensation, let handset adjust to room temperature before bringing it from a cold location to a warm location.
- Do not use handset underwater.
- Never charge handset while it is wet.
- Do not use a washing machine to wash handset.
- Handset does not float on water.
- Do not place directly on sand, etc.
  - Sand may enter Mic, Earpiece/Speaker, Speaker, Mouthpiece/Mic, USB Type-C Port, etc. and affect sound.
  - Sand may enter holes in USB Type-C Port, etc. and affect water resistance.
  - Allowing moisture, sand, etc. to remain may cause sound to crackle.
- Do not allow moisture to remain in Mic, Earpiece/Speaker, Speaker, etc. May affect call quality.
- Included accessories and optional accessories are not water resistant/dust resistant.
- Operation is not guaranteed for all conditions of actual use. Handset will not be covered by warranty if malfunction is determined to be due to incorrect customer handling.

## Draining

If handset is wet with water, unwiped water may leak from handset. Follow the procedures below to drain handset.


**1**

Hold handset securely, and wipe off water on both surfaces with a dry and clean cloth, etc.

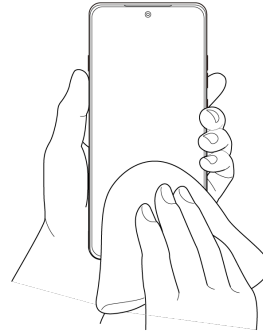

**2**

 
Hold handset securely, and shake it about 20 times until there is no more wetting (shake handset with both surfaces facing forward)

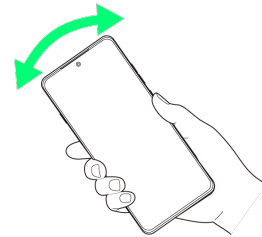

- Visually confirm that there is no waterdrop on handset.

**3**

 Press a dry and clean cloth, etc. on handset by shaking it about 10 times to securely wipe off water remaining in gaps of Mic, Earpiece/Speaker, Speaker, Mouthpiece/Mic, USB Type-C Port, etc.

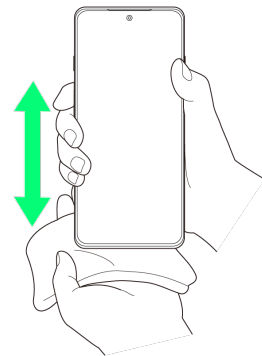

- Do not wipe off water remaining in gaps directly with a cotton swab, etc.

## 4

Wipe off water drained from handset with a dry and clean cloth, etc. thoroughly and leave handset at room temperature for a while to dry it

- If any waterdrops remain inside handset, water may be drained.

### When Charging

Check the following before and after charging.

- Make sure handset is not wet. Never charge while it is wet.
- Do not touch 125W TurboPower Charger (complimentary sample) with wet hands. May cause electric shock.
- Do not use 125W TurboPower Charger (complimentary sample) near water sources (bathroom/shower, sinks/basins, etc.). May cause fire or electric shock.

## Intellectual Property Rights

### Copyrights and Portrait Rights

Copyrighted contents you recorded or obtained from Websites pages using this product by downloading or other means, such as documents, images, music data, software, are prohibited from reproduction, transformation and transmission over public lines without consent of the copyright holders, unless intended for personal use or any other purpose permitted by law.

Note that some performances, shows, and exhibitions may not permit photography, movie shooting, or sound recording even for personal use.

You should also refrain from taking a picture of other people and disclosing it by such means as posting it on a Website without their consent because of possible infringement of their right of portrait.

## Trademarks

The names of the companies and products used in this guide are trademarks or registered trademarks of the respective companies.

The TM and ® marks are sometimes abbreviated in this instruction manual.

- SOFTBANK, SOFTBANK's equivalent in Japanese and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK GROUP CORP. in Japan and other countries.
- Yahoo!, ヤフー, the Yahoo! JAPAN logo, and the Y! logo are registered trademarks or trademarks of LY Corporation in Japan.
- LINE MUSIC is a trademark or registered trademark of LY Corporation.
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc., and is used under license to Motorola Mobility LLC.



- Wi-Fi® and Wi-Fi Direct® are trademarks or registered trademarks of Wi-Fi Alliance.



- USB Type-C™ is a trademark of USB Implementers Forum.
- "Qi" is a trademark of Wireless Power Consortium.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark or trademark of Sony Group Corporation or its affiliates.
-  is a registered trademark of FeliCa Networks, Inc.
-  is a trademark or registered trademark of NFC Forum, Inc. in the United States and other countries.
- Google, the Google logo, Android, Google Play, the Google Play logo, Gmail, the Gmail logo, Google Maps, the Google Maps logo, Google Calendar, the Google Calendar logo, YouTube, the YouTube logo, YouTube Music, the YouTube Music logo, Google Drive, the Google Drive logo, Google Photos, the Google Photos logo, Google Meet, the Google Meet logo, Google Chrome, the Google Chrome logo, Google Lens, the Google Lens logo, Google Wallet, the Google Wallet logo, Gboard, Google Home, the Google Home logo, Google TV, the Google TV logo, Google One, the Google One logo, Google Gemini, and the Google Gemini logo are trademarks or registered trademarks of Google LLC.
- Fitbit and the Fitbit logo are trademarks or registered trademarks of Fitbit, Inc. in the United States and in certain other countries.
- QR code is a registered trademark of DENSO WAVE INCORPORATED.
- Osaifu-Keitai is a registered trademark of NTT DOCOMO, INC.
- Facebook and the Facebook logo are registered trademarks of Meta Platforms, Inc.
- Adobe Scan is an either trademark or registered trademark of Adobe Inc. in the United States and/or other countries.
- Netflix is a registered trademark of Netflix, Inc.
- The Satofull name, logo, and service name are registered trademarks or trademarks of Satofull Co., Ltd. in Japan.

- MOTOROLA, the M logo, MOTO, and the MOTO family of marks are trademarks of Motorola Trademark Holdings, LLC.
- MediaTek and Dimensity are trademarks or registered trademarks of MediaTek Inc.
- Manufactured based on a license from Dolby Laboratories. Dolby, Dolby Atmos, ドルビー, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished work.
- Pantone Chip Design ©Pantone LLC, 2025. All rights reserved.  
This product is a Pantone certified product manufactured by Motorola Mobility, LLC.
- Rights to all other trademarks belong to the trademark owners.
- ©2025 Motorola Mobility LLC.
- Designed and manufactured by Motorola Mobility LLC, a 100% subsidiary of Lenovo.

## RF Exposure Information of This Product

In the User Guide, the product is referred to as "handset." "A502MO" here refers to this mobile phone "motorola edge 60s pro."

### RF Exposure Information of This Product (for Japan)

This mobile phone [A502MO] complies with the Japanese technical regulations on human exposure to radio frequency (RF) electromagnetic energy.

This mobile phone is designed in observance of the Japanese technical regulations regarding human exposure to radio waves (\*1). These technical regulations are consistent with the limits of human exposure to radio waves established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the International Committee on Electromagnetic Safety (ICES) in IEEE. The permissive limits include substantial safety margins designed to assure the safety of all persons, regardless of age and health.

The technical regulations set out limits of exposure to radio waves as the SAR (Specific Absorption Rate, for up to 6GHz) and the PD (Power Density, for above 6GHz), and the limits for the SAR and the PD for mobile phones are 2.0W/kg and 2mW/cm<sup>2</sup>, respectively. If a mobile phone supports simultaneous transmission of the frequency bands which should be evaluated in the SAR and PD, the technical regulations require that the Total Exposure Ratio (TER) should be used to indicate its compliance. The TER of less than or equal to 1 indicates the mobile phone satisfies the limits.

The TER for this mobile phone when tested for use near head is 0.97, and that when worn on the body is 0.99 (\*2, \*3). There may be slight differences of the SAR and PD values in individual product, but they all satisfy the limits. The actual SAR and PD of this mobile phone while operating can be well below the indicated above. This is due to automatic changes in the power level of the device to ensure it only uses the minimum required to access the mobile network(s).

This mobile phone can be used at positions other than against your head. By using accessories such as a belt clip holster that maintains a 0.5 cm separation with no metal (parts) between it and the body, this mobile phone is certified the compliance with the Japanese technical regulations.

The World Health Organization has stated that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

For more information about RF exposure information, see the following websites:

Ministry of Internal Affairs and Communications (MIC)  
<https://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>

Association of Radio Industries and Businesses (ARIB)  
<https://www.arib-emf.org/01denpa/denpa02-02.html>  
 (Japanese)

List of Specific Absorption Rates (SAR) information for SoftBank products  
<https://www.softbank.jp/mobile/support/sar/> (Japanese)

- \*1 The technical regulations are provided in the Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.
- \*2 Including other radio systems that can be simultaneously used with 5G/LTE.
- \*3 The values of SAR and PD that the TER values are calculated are as follows: For temporal region (near ear), SAR: 0.973 W/kg, PD: 0.967 mW/cm<sup>2</sup>; For body-worn, SAR: 1.49 W/kg, PD: 0.4886 mW/cm<sup>2</sup>.

### European RF Exposure Information

This mobile phone [A502MO] is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by the international guidelines. The guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety margins designed to assure the protection of all persons, regardless of age and health conditions. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use near head is 1.31 W/kg, and that when worn on the body at the separation distance of 0.5 cm from the body is 1.29 W/kg (\*1). For electronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with the guidelines.

- \*1 The tests are carried out in accordance with the international guidelines for testing.

Simplified Declaration of Conformity for [A502MO]  
 Hereby, Motorola Mobility LLC declares that the radio equipment type [A502MO] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<https://www.motorola.com/red>.

## FCC RF Exposure Information

This mobile phone [A502MO] is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy required by the Federal Communications Commission (FCC). The limit is based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations as required by the FCC. The highest SAR value for this handset when tested for use near the head is 1.06 W/kg, and that when worn on the body as shown below is 1.33 W/kg.

Body-worn Operation: This mobile phone was tested for typical body-worn operations with the separation distance of 0.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain the above separation distance between the user's body and the mobile phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with the FCC RF exposure requirements and should be avoided.

The FCC has granted an equipment authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure requirements. Filed SAR information of this mobile phone can be found by searching FCC ID IHDT56AU4 in the FCC ID Search webpage: <https://www.fcc.gov/oet/ea/fccid>.

Additional information on SAR can be found on the FCC website at <https://www.fcc.gov/general/radio-frequency-safety-0>.

## motorola edge 60s pro

### User Guide Index

#### A

|                           |    |
|---------------------------|----|
| About the User Guide..... | 3  |
| Adding Applications.....  | 59 |
| Airplane Mode.....        | 24 |
| Applications.....         | 58 |

#### B

|                              |     |
|------------------------------|-----|
| Basic Operation.....         | 22  |
| Battery Settings.....        | 73  |
| Bluetooth®/Wi-Fi (WLAN)..... | 106 |

#### C

|                                              |     |
|----------------------------------------------|-----|
| Capturing Still Images/Videos.....           | 54  |
| Cautions on Water/Dust/Shock Resistance..... | 107 |
| Charging Battery.....                        | 12  |
| Connecting by Wi-Fi.....                     | 64  |
| Customer Service.....                        | 91  |

#### D

|                          |    |
|--------------------------|----|
| Data Usage Settings..... | 69 |
| Display Settings.....    | 70 |
| Do Not Disturb.....      | 23 |

#### E

|           |   |
|-----------|---|
| eSIM..... | 7 |
|-----------|---|

#### G

|                     |    |
|---------------------|----|
| Global Roaming..... | 84 |
|---------------------|----|

#### H

|                                  |    |
|----------------------------------|----|
| Handset Screens.....             | 30 |
| Handset Settings.....            | 68 |
| Home & lock screen Settings..... | 70 |

#### I

|                                    |     |
|------------------------------------|-----|
| Important Product Information..... | 103 |
| Intellectual Property Rights.....  | 109 |

#### M

|                                |     |
|--------------------------------|-----|
| Making Calls while Abroad..... | 85  |
| Making Initial Settings.....   | 14  |
| Material List.....             | 102 |

#### O

|                        |    |
|------------------------|----|
| Optional Services..... | 38 |
|------------------------|----|

|                     |    |
|---------------------|----|
| Other Settings..... | 76 |
|---------------------|----|

## P

|                              |    |
|------------------------------|----|
| Parts & Functions.....       | 6  |
| Phone Number.....            | 43 |
| Placing/Answering Calls..... | 36 |
| Power On/Off.....            | 13 |

## R

|                                              |     |
|----------------------------------------------|-----|
| RF Exposure Information of This Product..... | 111 |
|----------------------------------------------|-----|

## S

|                                  |    |
|----------------------------------|----|
| Safety Precautions.....          | 94 |
| Security & privacy Settings..... | 73 |
| Sending Messages (+Message)..... | 46 |
| Setting a Google Account.....    | 16 |
| Sound & vibration Settings.....  | 72 |
| Specifications.....              | 90 |
| Status Bar.....                  | 31 |
| System Settings.....             | 75 |

## T

|                 |    |
|-----------------|----|
| Text Entry..... | 25 |
|-----------------|----|

## U

|                                 |    |
|---------------------------------|----|
| Unlocking Screen.....           | 20 |
| Updating Software.....          | 26 |
| USIM Card.....                  | 11 |
| Using Bluetooth® Function.....  | 65 |
| Using Chrome.....               | 50 |
| Using Contacts.....             | 43 |
| Using Gmail.....                | 47 |
| Using Notifications Window..... | 32 |
| Using Quick Settings.....       | 32 |
| Using Touchscreen.....          | 22 |

## V

|                                           |    |
|-------------------------------------------|----|
| Viewing Still Images/Videos (Photos)..... | 56 |
|-------------------------------------------|----|

## W

|                                     |    |
|-------------------------------------|----|
| Warranty & After-Sales Service..... | 90 |
|-------------------------------------|----|



## motorola edge 60s pro User Guide

July 2025, First Edition

SoftBank Corp.

Visit [SoftBank Shop](#) for assistance

Model : motorola edge 60s pro

Importer : Motorola Mobility Japan LLC

Manufacturer : Motorola Mobility LLC