Lenovo TAB8 User Guide

## Lenovo TAB8 User Guide Contents

Introduction	
About the User Guide	3
Getting Started	
Parts & Functions	6
eSIM	7
USIM Card	11
SD Card	14
Charging Battery	18
Power On/Off	19
Making Initial Settings	
Using a Google Account	
Unlocking Screen	26
Basic Operations	
Basic Operation	30
Using Touchscreen	
Silent Mode	
Airplane Mode	
Text Entry	
Updating Software	
Tablet Interface	
Screens	38
Status Bar	39
Using Notifications Window	
Using Quick Settings	41
Messaging	
5 5	4.4
Sending Messages (+Message) Using Gmail	
Using dilan	43
Internet	
Using Chrome	48
Camera	
Capturing Still Images/Videos	
Viewing Captured Still Images/Videos (Photos)	54
Application Basics	
Applications	EO
Adding/Deleting Application	
Adding/ Deleting Application	
Bluetooth	
Connecting by Wi-Fi	64
Using Bluetooth® Function	
Tablet Settings	
Tablet Settings	
Data Usage Settings	
Display Settings	
Sound & Vibration Settings	
Biometrics and Passwords Settings	
Security & privacy Settings	90

Battery Settings	93
General Settings	94
Other Settings	97
Global Services	
Before Using Tablet Abroad	104
Warranty/Specifications/Customer Se	rvices
Warranty & After-Sales Service	106
Specifications	106
Customer Service	107
Safety Precautions	
Safety Precautions	110
General Notes	118
Bluetooth®/Wi-Fi (Wireless LAN) Functions	121
Waterproofing/Dustproofing	122
Intellectual Property Rights	123
Radio Wave Exposure and Specific Absorption R	ate (SAR)
Information	125

#### About the User Guide

Most operation descriptions are based on default settings. Screen appearances or operation methods may be different from descriptions on the User Guide due to application update or changes of services.

Unless noted otherwise, descriptions are for Home Screen. Some operation descriptions may be omitted.

#### Before Using This Product

Read "Safety Precautions" thoroughly beforehand for proper usage.

Accessible services may be limited by subscription contract conditions.

#### Data Communication

- Tablet is designed to be always connected to the Internet.
   Communication is initiated automatically for some functions such as data syncing.
- Large-volume data communication, such as downloading applications and viewing videos, incurs expensive transmission fees. Subscription to a flat-rate plan is strongly recommended.
- Even if connected by Wi-Fi, some applications and services incur transmission fees.

#### Screenshots & Key Labels

Screenshots in the User Guide may differ in appearance with actual Display. Key labels in the User Guide are simplified for description purposes and differ with actual Display.

### Other Notations


In the User Guide, the product is referred to as "tablet." microSD™/microSDHC™/microSDXC™ Card is referred to as "SD Card."

## Getting Started

Parts & Functions	6
eSIM	
USIM Card	.11
SD Card	.14
Charging Battery	18
Power On/Off	19
Making Initial Settings	19
Using a Google Account	22
Unlocking Screen	26


## Parts & Functions

## Tablet (Front)

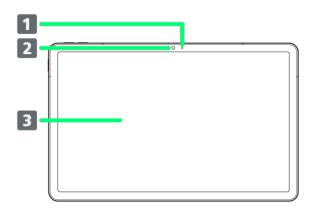


Part	Description
<b>1</b> Brightness Sensor	Detects ambient light level, etc.
2 Front Camera	Use to shoot photos or videos of yourself.
3 Display	Touchscreen-type display, operate with vour fingers on Display.

## Tablet (Back and Sides)

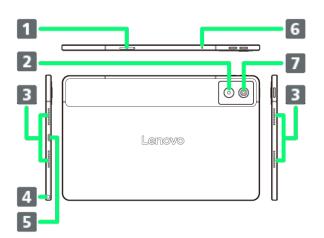

Part	Description
1 USIM/SD Card Tray	Install/remove USIM Card and SD Card.
2 Light	Use to shoot photos or videos of yourself.
3 Speaker	Listen to music, video sound, etc.
4 Headphone Port	Connect headphones, etc.
5 USB Type- C™ Port	Connect Micro USB Cable.
6 Mic	Use such as when recording video.
7 Camera	Capture photos and videos.

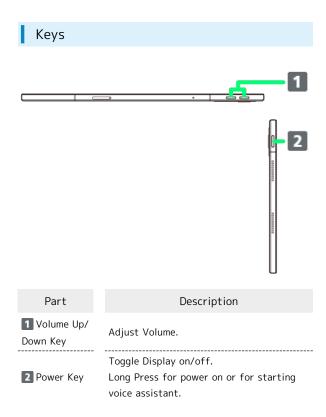

#### eSIM

eSIM is an integrated SIM already built into tablet. An eSIM-capable tablet allows you to use a phoneline simply with a contract subscription and configuring tablet, without the needed replacement of SIM cards.

### Handling eSIM

For eSIM handling, see the following website. https://www.softbank.jp/mobile/support/product/sim/esim/ (Japanese)

#### Downloading eSIM


1

In Home Screen, (Settings)




2

#### Mobile network

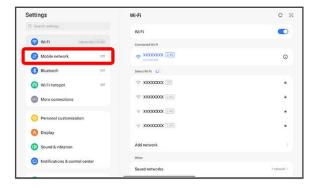


3

#### Setup eSIM card

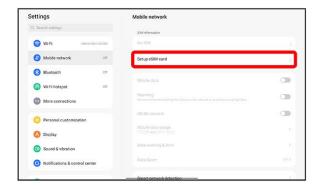

4

#### Set up an eSIM

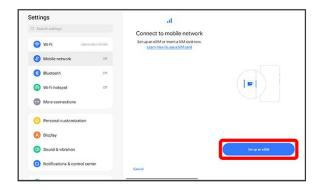


5

#### Scan the QR code



 $\cdot$  This step may not be needed and skipped. In that case, the screen shows next step.

[Set up]

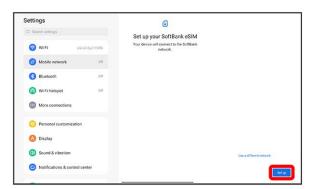

7

Enter a verification code 

Continue



8

(Finish)



Your service plan with eSIM is downloaded.

#### Enabling/Disabling eSIM


1

In Home Screen, 💿 (Settings)



2

#### Mobile network

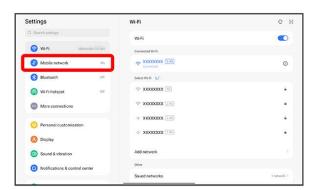

3

#### [SoftBank]



[More]




5

**(\$)** 




6

[Disable]

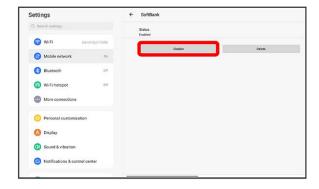

7

[Disable]

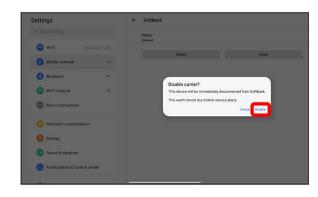

You can set disabling eSIM.

· Tap Enable in Step 6 to enable eSIM.

### Deleting eSIM


1

In Home Screen, (Settings)



2

#### [Mobile network]

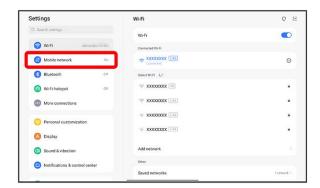


3

#### SoftBank)




4

#### [More]

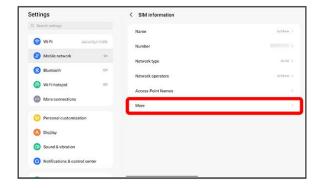


5



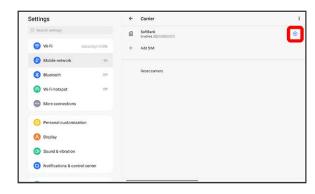


6

#### [Delete]

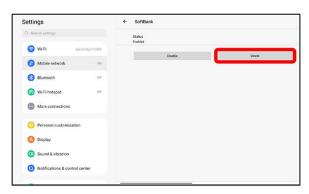

#### Delete

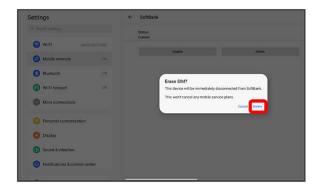

Your service plan with eSIM is erased.

# Restart Your Service Plan with eSIM after Erasing It


Your service plan with eSIM is not terminated by erasing it. To restart it, you need a new QR code to download the plan again.

#### **USIM** Card

USIM Card is an IC card containing customer information.

#### Handling USIM Card

For USIM card handling, see following items.

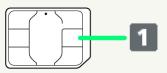

1 IC chip

For USIM Card handling, see following Website. https://www.softbank.jp/mobile/support/protect/usim/ (Japanese)

- · Always keep the IC chip clean.
- · Wipe clean with a dry, soft cloth.
- · Avoid applying labels. May damage USIM Card.

#### USIM Card Cautions

Observe the following when using USIM Card.


- Customer is responsible for any damage caused by inserting USIM Card in an other-brand IC card reader, etc.
   The company is not responsible in such case.
- $\cdot$  USIM Card is the property of the company.
- $\cdot$  USIM is replaceable (at cost) in case of loss/damage.
- · Return USIM Card to the company when cancelling subscription.
- Returned USIM Cards are recycled for environmental purposes.
- · Note that USIM Card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on USIM Card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your USIM Card or tablet (USIM Card inserted) is lost/ stolen. For details, contact Customer Service.
- Always power off tablet before inserting/removing USIM Card.
- Some services, functions, etc. may have restrictions when an other-carrier USIM card is used. SoftBank Corp. does not guarantee operation whatsoever.

#### Inserting USIM Card

Always power off beforehand.




Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

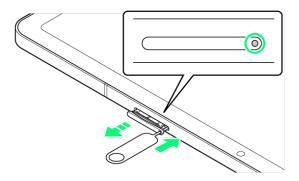




Pull USIM/SD Card Tray straight out

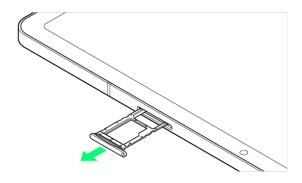




Set USIM Card in USIM/SD Card Tray

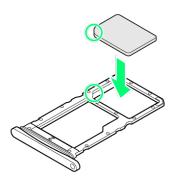

- $\cdot$  Place gently, noting orientation of USIM Card (notch/IC (gold) chip facing down).
- $\cdot$  Make sure USIM Card is in USIM/SD Card Tray securely.



Insert USIM/SD Card Tray straight in USIM/SD Card Slot

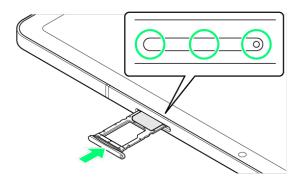



USIM Card is inserted.


 $\cdot$  Press firmly where circled  $\bigcirc$ , and make sure there is no gap between tablet and USIM/SD Card Tray.

#### Removing USIM Card

Always power off beforehand.




Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

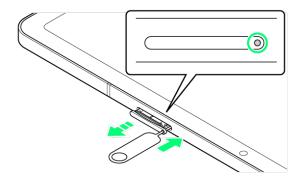


2

Pull USIM/SD Card Tray straight out

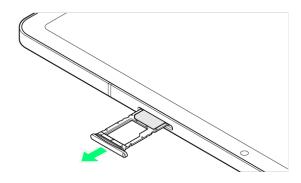


3

Remove USIM Card from USIM/SD Card Tray

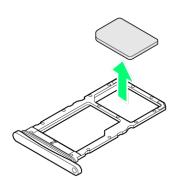

4

Insert USIM/SD Card Tray straight in USIM/SD Card Slot

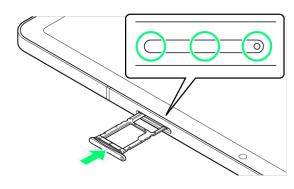

- USIM Card is removed.
- $\cdot$  Press firmly where circled  $\bigcirc$  , and make sure there is no gap between tablet and USIM/SD Card Tray.

#### SD Card

Tablet supports SD Cards up to 2 TB. Some SD Cards may not operate properly.

When using a new SD card for the first time, always format it on tablet.

#### SD Card Cautions

#### Data

Information stored on SD Card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. The company is not responsible for damages from data that is lost or changed.

#### Reading/Writing Data

Never power off while reading or writing data.

#### Battery Level

A low battery charge may prevent reading/writing to SD  $\mbox{\sc Card}$ 

#### Handling SD Card


Use/store SD Cards away from the reach of infants. May cause choking if swallowed.

#### Inserting SD Card

Always power off beforehand.




Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

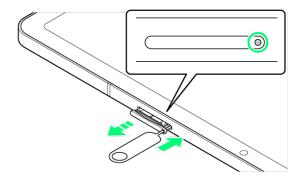




Pull USIM/SD Card Tray straight out

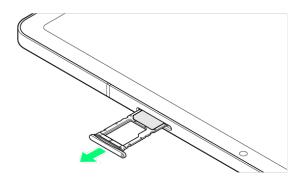




Set SD Card in USIM/SD Card Tray

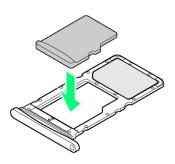


- $\cdot$  Place gently, noting orientation of SD Card (metal terminal side facing down).
- $\cdot$  Make sure SD Card is in USIM/SD Card Tray securely.



 Insert USIM/SD Card Tray straight in USIM/SD Card Slot

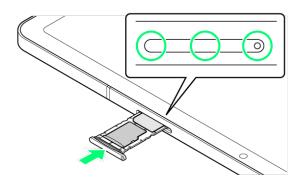



 $\cdot$  Press firmly where circled  $\bigcirc$  , and make sure there is no gap between tablet and USIM/SD Card Tray.

### Formatting SD Card


1

In Home Screen, (Settings)



2

#### General settings

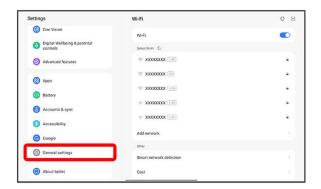


3

#### [Storage]




4

#### Erase SD card

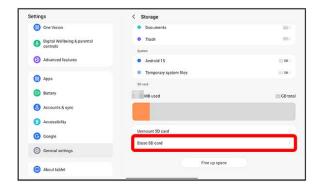


5

#### Format

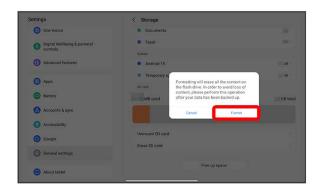

6

#### Done

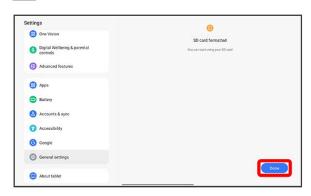

All data on SD Card is erased.

## Formatting SD Card Cautions

When using a new SD Card for the first time, always format it on tablet.

- Formatting erases all data on SD Card. Carefully check any SD Card that was used on another device before formatting.
- $\cdot$  Charge Battery while formatting, or format with adequate battery charge.

#### Unmounting SD Card

Always unmount SD Card before removing.


1

In Home Screen, (Settings)



2

#### General settings

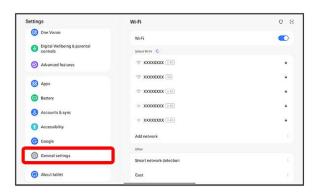


3

#### [Storage]



4

#### [Unmount SD card]

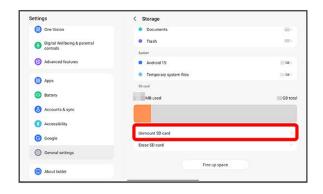


SD Card is unmounted.

## Removing SD Card

Always unmount SD Card and power off first.




Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

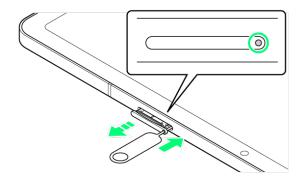


2

Pull USIM/SD Card Tray straight out

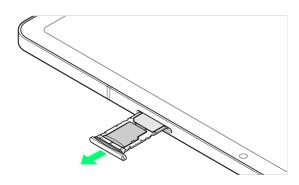


3

Remove SD Card from USIM/SD Card Tray

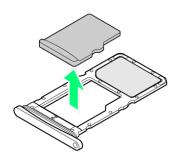

4

Insert USIM/SD Card Tray straight in USIM/SD Card Slot

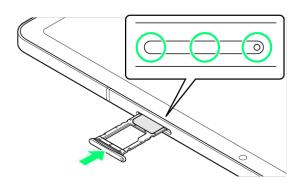

- SD Card is removed.
- $\cdot$  Press firmly where circled  $\bigcirc$  , and make sure there is no gap between tablet and USIM/SD Card Tray.

## **Charging Battery**

### 👸 Indications while Charging

Charging progress appears in lock screen.

- · "Charging": normal charging
- · "Charging rapidly": rapid charging
- $\cdot$  "Charging slowly": low-speed charging

#### Charging Cautions

Never connect USB Type-C plug while tablet or peripheral equipment is wet.


#### Charging with AC Charger

AC Charger is an optional accessory. Be sure to use an AC Charger specified by SoftBank. For information on AC Charger and other peripheral devices, see SoftBank website.

Charging with AC Charger (USB Type-C™ rapid charging AC Charger with USB PD-PPS capability [ZSDBAV] (SB-AC22-TCPD)) is described as an example.




Insert USB Type-C plug of AC Charger into USB Type-C™ Port

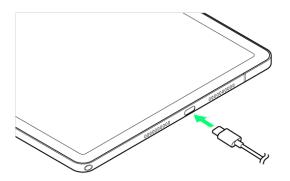


2

Raise plug on AC Charger and plug into household AC outlet

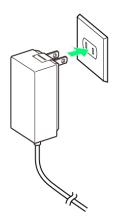



After charging, unplug AC Charger from outlet and disconnect from tablet  $% \label{eq:charger} % \begin{subarray}{ll} \end{subarray} \ben$ 

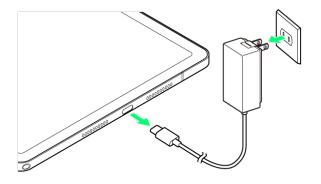


Charging ends.

### Power On/Off

#### Powering On



Power Key (Long Press)

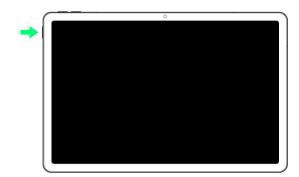

- Lock screen appears.
- $\cdot$  See "Unlocking Screen" to unlock the screen.
- $\cdot$  Startup screen appears the first time tablet is powered on. See "Making Initial Settings" to make initial settings.

#### Powering Off



Press Power Key and Volume Up Key at the same time



2

Power off



### Tablet powers off.

### Making Initial Settings

When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google™ account, and other settings. Follow onscreen instructions to set items.

To use USIM Card, insert USIM Card before powering on tablet.

#### Making Initial Settings




Select language then Start



2

Check terms of usage, Tap  $\square$  for "I have read and agreed to the terms detailed above." (  $\checkmark$  )  $\bigcirc$  Next

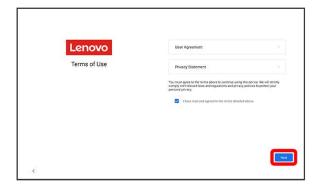

2


Follow onscreen prompts to set Wi-Fi



• To skip Wi-Fi settings, select Use mobile network for setup / Set up offline . Continue by following onscreen instructions.



#### Don't copy

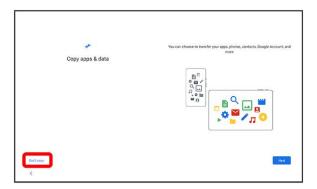

· Tap Next to copy data from another mobile with Google account settings. Follow onscreen prompts.



Follow onscreen prompts to set a Google account




- $\cdot$  For details on Google accounts, see "Using a Google
- · If not making Google account settings, Tap Skip 🔷 Skip






6

Select items to set 
Accept

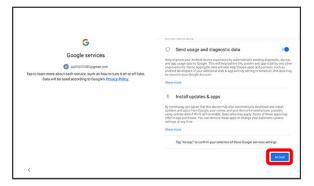



Follow onscreen prompts to set backup

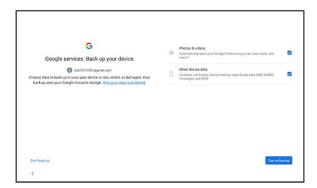

· Tap Don't back up to skip backup.



[Next]



9

Follow onscreen prompts to set unlocking using password/ facial recognition



· If not setting password/facial recognition, Tap Skip 🔿 Skip.

[Continue]



11

Follow onscreen prompts to set contents sharing



 $^{\cdot}$  If not using contents sharing, Tap  $\ensuremath{\overline{\text{No}}}$  thanks .

12

Follow onscreen prompts to set Google Assistant



· If not setting Google Assistant, Tap Skip 🔵 Skip .

13

[Skip]



- · After Tapping (Add a card) follow onscreen prompts to save card information.
- $\cdot$  Setting items may vary depending on usage conditions.

14

Next



15

Follow onscreen prompts to set items



· If not making other settings, Tap No thanks .

[Next]



. To select "3-button navigation", Tap  $\ \ \ \ \$  for "3-button navigation" (  $\ \ \ \ \ \ \ \ )$ .

**17** 

[Get started]



Settings are made.

## Using a Google Account

Use a Google account and get more convenience with Google services. A Google account is required to use some services or fully use some applications.

Google Account Cautions

Be careful not to forget your Google account mail address or password. \\

Creating a Google Account


1

In Home Screen, 💿 (Settings)




2

Accounts & sync

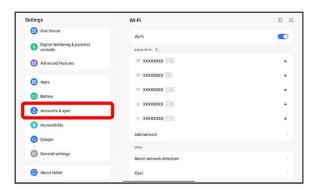


3

Add account

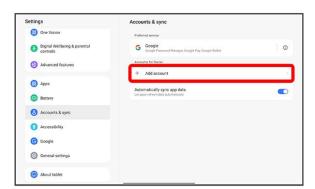


[Google]

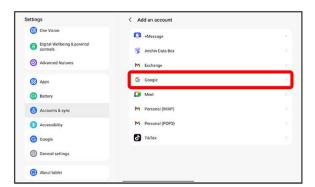

Window for logging in to a Google account opens.


5

[Create account]

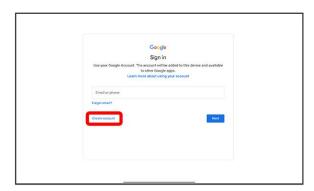

6

For my personal use

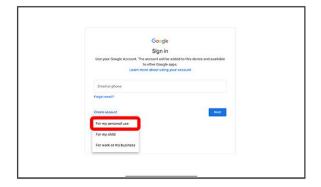

7

Enter first name 

→ Enter last name 
→ Next



8

Enter date of birth and gender 
Next



9

Select a mail address → Next



To create a Gmail™ address, Tap Create your own Gmail
 address → Enter username (mail address) → Next .



Enter password 🔵 Next




 $\cdot$  If confirmation appears, follow onscreen prompts.



[Next]



12

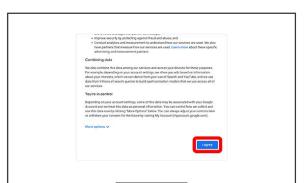

13

[Accept]



Account is created.

#### Logging In with a Google Account


1

In Home Screen, (Settings)




2

#### Accounts & sync

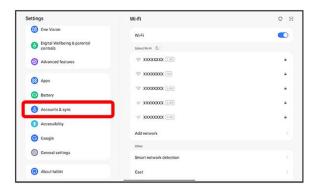


3

#### Add account

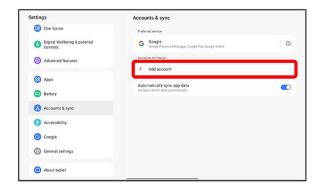

4

[Google]

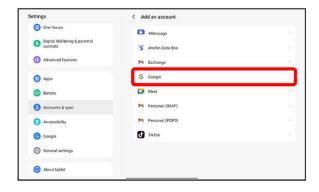

Window for logging in to a Google account opens.

5

Enter mail address 
Next




6

Enter password 
Next





Follow onscreen prompts

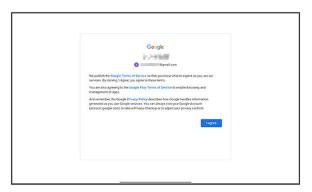



You are signed in to your Google Account.

## **Unlocking Screen**

Display is locked after a set period of inactivity. Alternatively, Press Power Key for manual screen lock. This saves battery power and prevents accidental Touchscreen operation.

#### Screen Lock

After a period of inactivity, Display turns off to save battery power (Screen lock active). Screen lock prevents accidental Touchscreen operation.



· Press Power Key while Display is on to lock screen manually.


### If Screen Lock Activates while Playing Music

Music continues to play. For operation, Press Power Key to open lock screen and use operation panel (operations may vary depending on application).

## Unlocking Screen



While screen is locked, Power Key

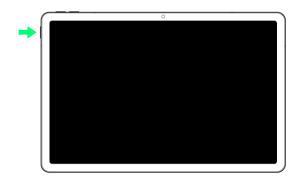

Lock screen appears.

2

Flick lock screen up



Screen is unlocked.

 $\cdot$  The method for unlocking the screen can be changed. See "Biometrics and Passwords Settings" for the unlock method.

## Basic Operations

Basic Operation	50
Using Touchscreen	31
Silent Mode	32
Airplane Mode	33
Text Entry	33
Undating Software	3/

## **Basic Operation**

## Selecting Options and Navigating Screens


Tap items, icons, onscreen keys, etc. to open assigned items.

· Flick left/right from the edge of the screen to go back to previous.



#### Navigation to Home Screen

Flick up from the bottom of the screen to move to Home Screen.

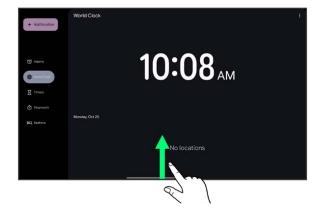

#### Menu Operations



Tap : for available settings and items.



2

Screens may also have settings and items that are available by Touching & Holding Display.




## Using Touchscreen

Tablet uses a touchscreen-type Display. Operate with your fingers on Display.


#### Tap

Contact Display lightly and briefly.

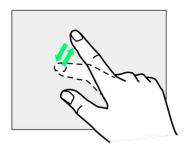


## Touch & Hold

Contact Display lightly; release finger when screen changes.

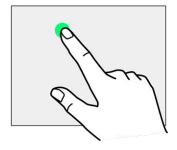


## Drag

Touch icon or other item lightly, move it where desired, and release finger.

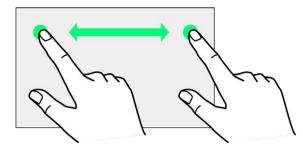


#### Swipe/Flick

Contact Display lightly, then brush screen up/down or left/right.

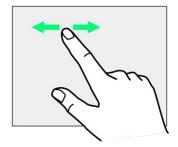

#### Pinch/Spread

Contact Display lightly, then close/widen fingers.

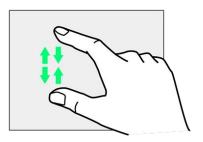

#### Silent Mode

Mute ringtones and other tablet sounds to avoid disturbing others around you.

Silent Mode Cautions

Camera shutter, video start/stop tones, Alarm and video/ music audio sound even in Silent mode.

#### Using Silent Mode (Mute)

1

Press Volume Up/Down Key



2

On volume adjust bar,



Icon on volume adjust bar changes to  $\square$ , and tablet enters Silent mode (mute).

## Setting Silent Mode from Quick Settings

Set Silent mode from Quick Settings. Flick Status Bar down  $\circlearrowleft$   $\bullet$  (Silent)  $\circlearrowleft$  (  $\bullet$  )

#### Using Silent Mode (Vibration)

Set tablet to vibrate while Silent mode is enabled.

1

Flick Status Bar down



2

(Vibration)



Icon on volume adjust bar changes to • and tablet enters Silent mode (vibration).

## Airplane Mode

Disable all functions that emit signals. Tablet remains powered on.

#### Using Airplane Mode

1

Flick Status Bar down



- Quick Settings open.
- 2
- (Airplane mode)




- Tablet is in Airplane mode.
- $\cdot$  Use same operation again while in Airplane mode to cancel.

## Text Entry


#### Keyboards

Use onscreen keyboards for text entry.

- · To hide keyboard, Tap ∨ .
- Setting Keyboard to Use

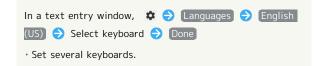

#### QWERTY Keyboard Layout

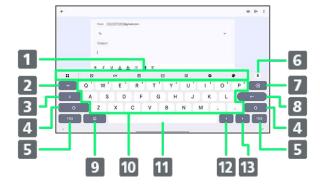

- 1 Toolbar
- 2 Add space and move characters to right or move to next entry field
- 3 Fix uppercase/lowercase
- 4 Toggle uppercase/lowercase
- 5 Switch to number/symbol keyboard
- 6 Use voice input
- 7 Delete characters
- 8 Insert line break
- 9 Switch to emoji/emoticon keyboard
- 10 Enter characters
- 11 Enter space
- 12 Move cursor left
- 13 Move cursor right

## Switching Character Types (Entry Modes)

1

In a text entry window, Tap ?123



Entry mode switches.

· Tap ?123 to cycle through "alphabet"→"numbers".

## **Updating Software**

Check whether updates are required via the Internet, and update as required.

#### 👸 Before Updating Software

Saved data may be lost depending on condition of tablet (malfunctioning, damaged, exposure to water, etc.). It is recommended that you back up important data before updating software. The company is not responsible for damages from loss of data.

#### Software Update Cautions

#### During Update

Tablet cannot be used until software is updated. It may take time to update software. When a device is running software update, don't remove a USIM card from the device or turn its power off. Doing so can cause failure of the update and result in the device that may be inoperable or malfunction. If the device is inoperable or malfunctions, contact Customer Service.

#### Signal during Update

Operate tablet where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during an update may cause an update failure. An update failure may disable tablet.


#### If Using Other Functions

Other functions cannot be operated during a software update.

#### Updating Software




In Home Screen, (Settings) (Settings) About tablet

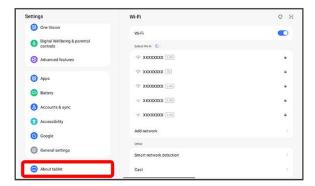

2

### System updates

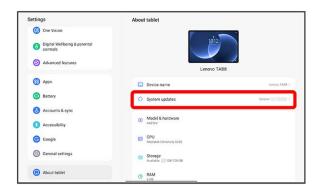

3

Follow onscreen instructions



Software update starts.

# Tablet Interface

Screens	68
Status Bar	39
Using Notifications Window	10
Using Quick Settings	11

# Screens

# Home Screen & App List

Most tablet operations start in "Home Screen" that appears after unlocking the screen, or in "app list". Flick Home Screen up or tap 🔡 for "app list".





## Home Screen Layout



Item	Description
1 Status Bar	Flick down for Notifications Window.
2 Entertainment Space	Open Entertainment Space, which allows you to search contents such as movies, TV shows, games, etc. without switching apps.
3 Taskbar (Favorites Tray)	Place application shortcuts, folders, etc. Appears even when Home Screen sheets toggled.
4 Customize Area	Place application shortcuts, folders, widgets freely.
5 App List	Open App List.
<b>6</b> Taskbar (Navigation Bar) <sup>1</sup>	Flick bar to operate.  Flick up Open Home screen.  Flick left/right Switch apps.  Flick up and hold your finger Open the list of recently used apps (app history). Start an app or check app information from icon or thumbnail.  Flick up briefly and hold your finger while an app is activated Open Taskbar (Favorites Tray) over apps.

1 Appears when System navigation is set to "Gesture navigation."

For details on System navigation, see "General Settings."

# Toggling Home Screen Sheets


Flick Home Screen left/right to toggle sheets.



# Portrait Orientation & Landscape Orientation

The screen changes to portrait orientation when tablet is rotated sideways.

• Depending on the current screen, the orientation may not change even by changing tablet orientation.

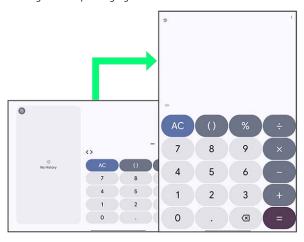

# Status Bar

Status Bar appears at the top of Display. Notification Indicators for new mail, etc. and Status Indicators for tablet appear here.

# Status Bar Layout



- 1 Notification Indicators
- 2 Status Indicators

## Main Notification Indicators

Notification Indicators appearing in Status Bar include the following.

Indicator	Description
M	New Gmail
<b>₽</b>	New Text Message (SMS)/+Message
<u></u>	Wi-Fi Open Network Available
31	Calendar Event Notification
ପ	Alarm Sounding/Snoozing/Unchecked Alarm/Next Alarm
X	Timer Running
Ō	Stopwatch Running
1	Data Uploading
T.	Data Downloading
⊳	Application Update Notification
٧	Application Installation(s) Complete
8-	Sharing File via Bluetooth®
1	Battery level less than about 15%
("	SD Card Detected/Mounting

### Main Status Indicators

Status Indicators appearing in Status Bar include the following.

Indicator	Description
*	Bluetooth® Connected
C	Do Not Disturb
Ø.	Do Not Disturb (Vibrate)
Ø	Do Not Disturb (All Notifications Muted)
<b>.</b>	Vibration
5G	5G Data in Use <sup>1</sup>
4G	4G LTE/4G Data in Use <sup>2</sup>
<u>্</u>	Wi-Fi Connected
atl	Signal Strength
.11 0	Roaming
atl	No Signal
<b></b>	Airplane Mode On
	Charge Battery
	Battery Low
	Battery Charged
<b>+</b>	Battery Charging
	Battery Saver On
4	Obtaining Location
<b>1</b>	Music Playing with Dolby Atmos

- 1 Although "5G" may appear in standby (top of Display), this may change to "4G" with data communication then being by the 4G network.
- 2 Tablet supports FDD-LTE (SoftBank 4G LTE) and AXGP (SoftBank 4G); indicator appears when tablet is connected to either. Tablet connects to SoftBank 4G first.

# Using Notifications Window

Flick Status Bar down to open Notifications Window. Open Notification Indicators to check details.

# Opening Notifications Window

1

Flick Status Bar down



- Notifications Window opens.
- Notifications Window appears at left, and Quick Settings at right.
- Closing Notifications Window

Flick Notifications Window up

# Notifications Window Layout



- **1** Show notifications (incoming messages, etc.) and active functions
- 2 Show silent notifications
- 3 Manage notifications
- 4 Delete all notifications and close Notifications Window<sup>1</sup>
- 5 Use notification details<sup>2</sup>
- 1 Some notifications may not be deleted.
- 2 Usable functions depend on the notification.

# Using Quick Settings

Flick Status Bar down to access Quick Setting. Tap icons to toggle functions on/off, etc.

# Opening Quick Settings



Flick Status Bar down



- Quick Settings open.
- $\cdot$  Notifications Window appears at left, and Quick Settings at right.

# Quick Settings Operations

Opening Hidden Function Icons

Flick Quick Settings down

Closing Quick Settings

Flick Quick Settings up

#### Arranging Quick Settings


Add, delete, and change order of functions in Quick Settings.

### Quick Settings Layout

Items to be shown may vary depending on usage or tablet settings.



- 1 Show Wi-Fi settings
- 2 Show mobile data settings
- 3 Silent on/off
- 4 Bluetooth® on/off
- 5 Auto-rotate on/off
- 6 PC mode on/off
- 7 Capture screenshot
- 8 Screen record start/stop
- 9 Edit Quick Settings
- 10 Show tablet settings
- 11 Adjust volume
- 12 Adjust brightness
- 13 Airplane mode on/off
- 14 Vibration on/off
- 15 Quick Share on/off
- 16 Smart Connect on/off

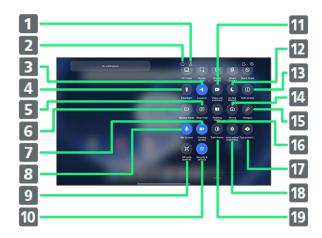

- 1 Switch users
- 2 Show power menu
- 3 Location on/off
- 4 Flashlight on/off
- 5 Show Share Hub
- 6 Battery Saver on/off
- **7** Set permission to access Camera
- 8 Set permission to access Mic
- 9 Open to scan QR code
- 10 Set Security & privacy
- 11 Video call assistant on/off
- 12 Do Not Disturb on/off
- 13 Split screen on/off
- 14 Open Device controls settings
- 15 Hotspot on/off
- 16 Reading mode on/off
- 17 Eye protection mode on/off
- 18 Auto adjust brightness on/off
- 19 Dark theme on/off

# Messaging

Sendir	ng Messages	(+Message)	44
Usina	Gmail		45

# Sending Messages (+Message)

# Sending New Messages


1

In Home Screen, (+Message)




2

[Message]

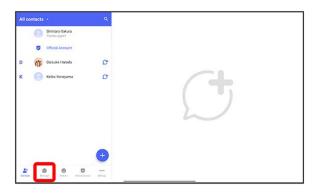

3

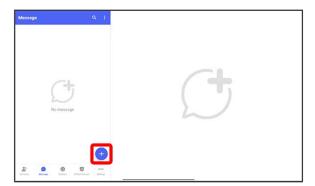


4

New message



5

Tap destination

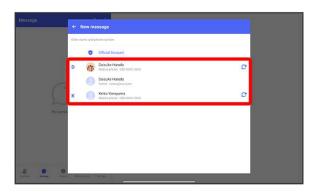


Message window opens.

 To send to a phone number/email address not saved in contacts, enter phone number/email address in Enter name and phone number field Add and create message.

6

Tap message entry field

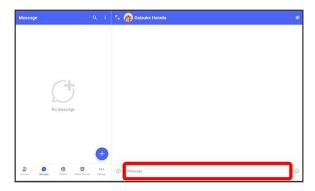

7

Enter message 🗦 🖻



Message is sent.

# Using Gmail

Gmail is Google's webmail service. Use this service to exchange email.

# Creating/Sending Mail

1

In Home Screen, 🏢 (Google)



2


M (Gmail)



Mail list opens.

3

(Compose)

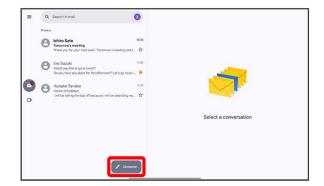

Mail composition window opens.




Enter recipient/subject/mail text








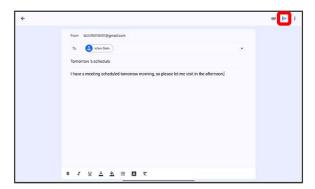

Mail is sent.

# Operations when Composing Mail

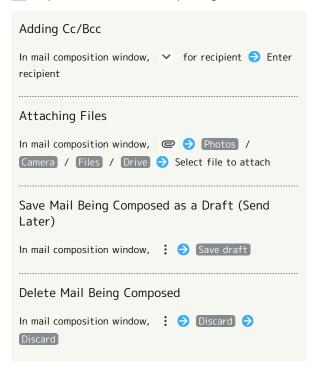

# Internet

Usina	Chrome	48	3

# **Using Chrome**

Use Chrome simply by entering words to search and URLs.

#### ÿ TLS

TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).

#### TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification DigiCert Japan G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

# Using Chrome

1


In Home Screen, (Chrome)



- Chrome opens.
- · If confirmation appears, follow onscreen instructions.

2

Tap entry box

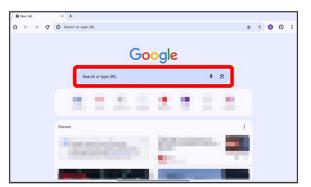

3

Enter search words or URL




4





- Search results appear or a Web page opens.
- Opening New Tabs

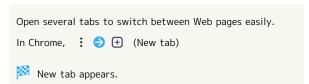

# Adding Bookmarks

1

In Home Screen, (Chrome)



Chrome opens.

2

Show Web page to add



3





Current Web page is added to Bookmarks.

### Bookmark Operations





# Camera

Capturing St	:ill Images/	'Videos	52
Viewing Cap	tured Still	Images/Videos	(Photos)54

# Capturing Still Images/Videos

# Capturing Still Images/Videos

#### File Format for Still Images

File format for still images is JPEG.

#### File Format for Videos

File format for videos is MPEG-4.

#### Camera Cautions

#### If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

#### Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

# Mobile Light Warning

Do not shine Mobile Light close to eyes. Do not look directly at Mobile Light when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

# Capturing Still Images

1

In Home Screen, (Camera)



· If confirmation appears, follow onscreen instructions.

2

#### Photo



- Photo Viewfinder appears.
- · Alternatively, Drag the shooting mode to switch.



Aim Camera at subject 🔵







Shutter clicks and still image is saved.

### **Still Image Capture Operations**

#### Using Digital Zoom

In Photo Viewfinder, Pinch screen

#### Capturing with Volume Up/Down Key

In Photo Viewfinder, Press Volume Up/Down Key

#### Focusing and Adjusting Brightness

In Photo Viewfinder, Tap location to focus at 🥎 Drag

其 up or down

Brightness is adjusted.

 In Photo Viewfinder, Touch & Hold location to focus at, appears in a square frame, allowing focus and brightness to be locked.

### Continuous Capture

In Photo Viewfinder, Touch & Hold

· Continuously capture up to 50 still images.

# Capturing Videos

In Home Screen, (Camera)



 $\cdot$  If confirmation appears, follow onscreen instructions.

2

Video



- Video Viewfinder appears.
- $\cdot$  Alternatively, Drag the shooting mode to switch.

3

Aim Camera at subject 🗦 🧶





Video recording starts.

4

To stop recording,



Video recording stops and video is saved.

#### ■ Video Capture Operations

#### Using Digital Zoom

In Video Viewfinder/while capturing video, Pinch screen

#### Capturing with Volume Up/Down Key

In Video Viewfinder, Press Volume Up/Down Key

· To end capture, while capturing video, Press Volume Up/ Down Key.

#### Focusing and Adjusting Brightness

In Video Viewfinder, Tap location to focus at 🤌 Drag up or down

- Brightness is adjusted.
- In Video Viewfinder, Touch & Hold location to focus at, appears in a square frame, allowing focus and brightness to be locked.

#### Capturing Still Images while Capturing Video

While capturing video,

# Viewing Captured Still Images/ Videos (Photos)

View still images/videos saved in internal storage, on SD Card, and in Google online storage. Viewing after logging in to a Google account is described.

# Showing Still Images/Videos

Show captured or downloaded still images and videos.

Туре	File Format	
Still image	BMP, GIF, JPG, PNG, WebP, HEIF, ICO, WBMP	
Video	3G2, 3GP, AVI, TS, MKV, WEBM, MOV, MPEG-4	

1


In Home Screen, (Photos)



- Photos opens.
- $\cdot$  If confirmation appears, follow onscreen instructions.

2

Tap still image/video

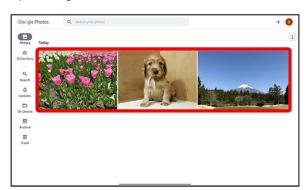

- Still image/video opens.
- $\cdot$  Video plays after tapping the video.
- · If confirmation appears, follow onscreen prompts.
- To show another still image or video, return to Photos and either Tap still image/video or Flick screen left/right while viewing still image/video.

# ■ Zooming In/Out on Still Images

While viewing still image window, Tap screen twice or Pinch.

# Application Basics

Applications		58
Adding/Deleting	Application	.59

# **Applications**

# Setting Required Permissions for Applications

Set the operation of applications when activating for the first time. The type and content of a confirmation differ with the application.

Activating (Photos) for the first time is described as an example.

· An application may not function correctly if permission to use it was not set.



In Home Screen, (Photos)



2

Allow



- Settings are complete.
- $\cdot$  Shown setting items depend on the function having permission set.
- $\cdot$  For several functions, continue in the same way.
- Other Ways to Set Required Permissions for Applications

Setting Functions to Use for Each Application

In Home Screen, (Settings) (Apps (All apps)

Tap application (Permissions)

Select Allow/Don't allow for each permission.

Displayed items depend on the function.

# Setting Applications with Permitted Usage for Each Function

- · Select Allow/Don't allow for each application.
- $\cdot$  Displayed items depend on the function.

# Adding/Deleting Application

Download a variety of applications (free/paid) from Google Play. Change the setting of downloaded applications to enable manual or automatic updates. Log in to your Google account beforehand.

# Installing Applications

Many different kinds of applications can be installed on tablet from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

## **Installing Free Applications**

1

In Home Screen, (Play Store)



- Google Play appears.
- $\cdot$  If confirmation appears, follow onscreen instructions.

2

Tap free application



3

[Install]



- Application is downloaded and installed.
- · If confirmation appears, follow onscreen instructions.

# Purchasing Paid Applications

1

In Home Screen, (Play Store)



- Google Play appears.
- $\cdot$  If confirmation appears, follow onscreen instructions.

2

Tap paid application



3

Tap amount



4

Follow onscreen instructions

Application is downloaded and installed.

# Purchased Applications

#### Payment


Pay only once. Redownloads of uninstalled applications are free of charge.

#### On Other Android Devices

Install an application on any Android device under the same Google account for free.

### Requesting Refunds

Refund is possible within a limited time. By requesting a refund, the application is deleted and the charge is cancelled. A refund request is valid only once per one application.

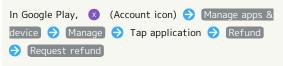

# Purchasing Applications

Purchase applications at your own risk. The company is not responsible for any disadvantage resulting for user or third parties.

### **Updating Applications**


1

In Home Screen, (Play Store)



- Google Play appears.
- $\cdot$  If confirmation appears, follow onscreen instructions.

2

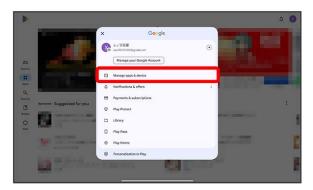


3





The application is downloaded and installed.

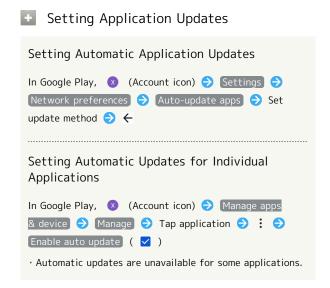

# Bluetooth

Connecting	by Wi	i-Fi	54
Usina Bluet	ooth®i	Function	65

# Connecting by Wi-Fi

Tablet supports Wi-Fi (wireless LAN). Access the Internet via a household Wi-Fi connection environment.

# Connecting Selected Access Points


1

In Home Screen, (Settings)



2


Wi-Fi

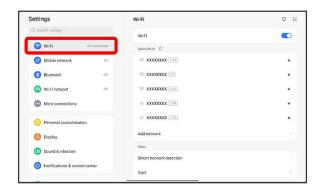

Wi-Fi menu opens.

3

Make sure Wi-Fi is ON ( )

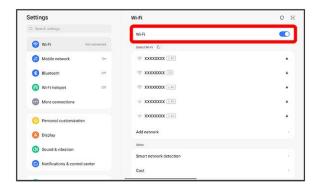

· If Wi-Fi is OFF ( ), Tap Wi-Fi ( ).

4

Tap access point



5


Enter password 

Connect



- Tablet is connected.
- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information.
   For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

#### Wi-Fi Operations

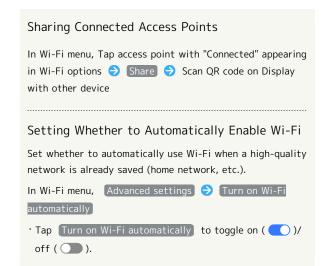

#### Setting Whether to Show Notifications for Available Public Networks

In Wi-Fi menu, Advanced settings → Notify for public networks

Tap Notify for public networks to toggle on ( )/ off ( ).

#### **Installing Certificates**

In Wi-Fi menu, Advanced settings → Install certificates → Follow onscreen prompts

#### Checking MAC Address

In Wi-Fi menu, Tap access point with "Connected" appearing in Wi-Fi options

MAC address is shown in "Randomized MAC address" field.

#### Checking IP Address

In Wi-Fi menu, Tap access point with "Connected" appearing in Wi-Fi options

IP address is shown in "IP address" field.

#### Checking Access Point Activity while Connected

In Wi-Fi menu, Tap access point with "Connected" appearing in Wi-Fi options

Connection activity, signal strength, frequency, security, etc. appear.

# Using Bluetooth® Function

Connect to a Bluetooth®-capable wireless phone, etc. for calls or to a hands-free device such as a headset.

#### ? Hints

- Q. Cannot use Bluetooth®
- A. Is tablet in Airplane mode? If in Airplane mode,
  Bluetooth® function is disabled. Bluetooth® function
  can be enabled again after placing tablet in Airplane
  mode.

#### Bluetooth® Function Cautions

#### Connection

Bluetooth® connection may not be possible with some Bluetooth® devices.

#### File Transfer

Information may not appear correctly on both devices depending on the transferred data.

# Enabling Bluetooth® Function

1

 
In Home Screen, (Settings)




2

#### Bluetooth







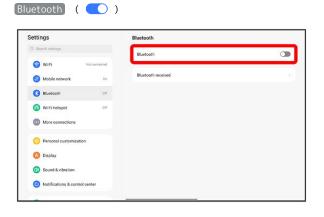

- Bluetooth® function is enabled.
- · Tap Bluetooth to toggles on ( )/off ( ).
- Renaming Tablet Name that Appears on Other Devices



# Tablet Settings

Tablet Settings	68
Data Usage Settings	69
Display Settings	74
Sound & Vibration Settings	78
Biometrics and Passwords Settings	82
Security & privacy Settings	90
Battery Settings	93
General Settings	94
Other Settings	97

# **Tablet Settings**

The User Guide describes main setting options.

# **Tablet Settings**

In Home Screen, (a) (Settings) to customize operation of tablet functions. Tablet settings include the following items.

 $\cdot$  Items to be shown may vary depending on usage or tablet settings.

settings.	
Item	Description
Wi-Fi	Make Wi-Fi settings. For details on Wi-Fi connection, see "Connecting by Wi-Fi."
Mobile network	Make network settings for mobile networks, data usage, etc.
Bluetooth	Make Bluetooth® connection settings. For details on Bluetooth® connection, see "Using Bluetooth® Function."
Wi-Fi hotspot	Make tethering settings.
More connections	Make settings for Airplane mode, VPN, Quick Share, etc.
Personal customization	Make settings for Home Screen/Lock Screen wallpaper, theme, etc.
Sound & vibration	Set Display brightness, display mode, etc.  Make sound and vibration settings.
Notifications & control center	Make settings for app notification, Notifications Window/Quick Settings, etc.
Biometrics and passwords	Make settings for how to unlock the screen and facial recognition.
Security & privacy	Make security and privacy settings such as application permissions and showing notifications in Lock screen.
Safety & emergency	Make settings for Emergency SOS, Wireless emergency alerts, etc.
Location	Set options for location information.
One Vision	Make settings for Floating Window, Split Screen, etc. and check tutorials.
Digital Wellbeing & parental controls	Manage time that tablet is used and set parental limitations on use, etc.
Advanced	Make settings for PC mode, Key Mapping,
features	etc.
Apps	Make application settings.
Battery	Check Battery usage and make settings to save battery power.
Accounts & sync	Make settings for managing saved services and creating, adding, etc. accounts.
Accessibility	Set captions, magnification gestures, and other useful accessibility functions.
Google	Make settings for Google services.

General settings	Make settings for language, date and time, storage, switching users, backup, reset, etc.
About tablet	Check device name, legal information, etc.

1


In Home Screen, 🧿 (Settings)



Tablet settings open.

2

Set items

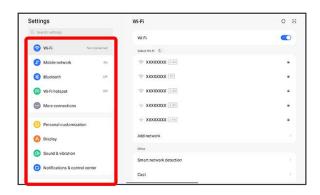


Settings open.

# Data Usage Settings


Check amount of cellular data transfers and set limit on usage.


Data Usage Operations

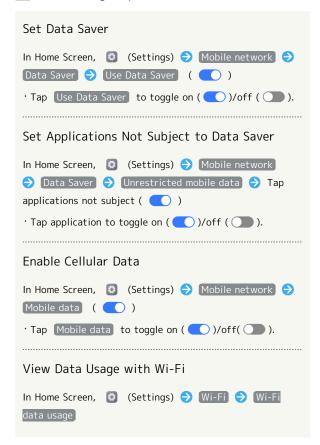

Checking Mobile Data Usage

 
1



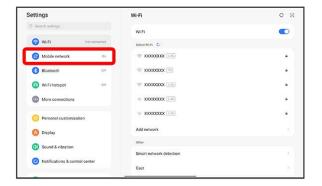

2

[Mobile data usage]

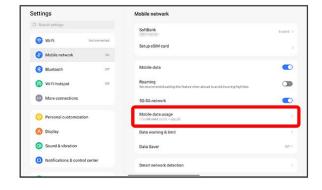


Check application data usage in Mobile data usage window.

# Setting Reset Date for Data Usage


1

In Home Screen, (Settings) (Mobile network)

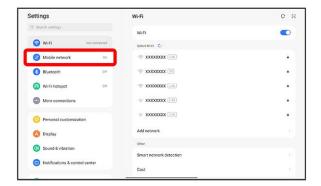


2

# Data warning & limit

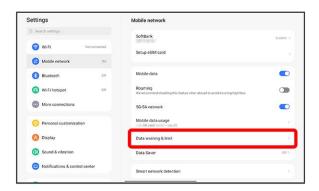


3

#### Mobile data usage cycle

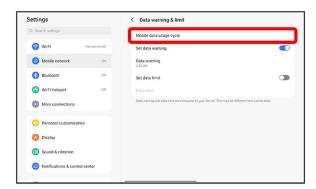

4

Set reset date for each month  $\bigcirc$  Set

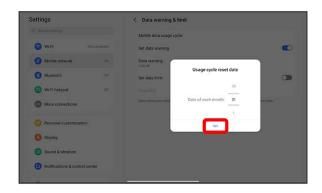


Reset date is set.

# Setting an Alert Amount for Increased Data Usage


1

In Home Screen, **②** (Settings) **→** Mobile network

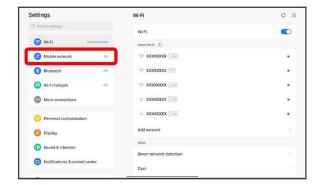


2

#### Data warning & limit

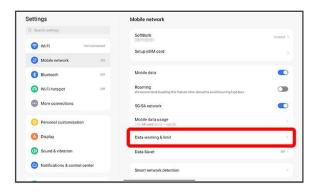

3


#### Data warning

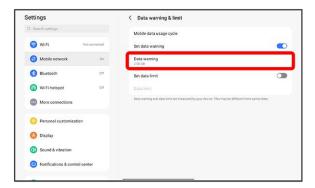

4

Enter amount for alert 

Set

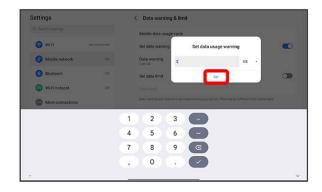

- Amount for data alert is set.
- $\cdot$  Data usages are approximate, and may differ from the actual data usage.

### Changing Automatic Data Communication & Sync Settings

Customize settings to automatically lower amount of data communication.


Change settings in the following ways.

Item	Description
Location	Disable location information. See "Location" for details.
Automatic syncing	Disable automatic syncing of applications and data set in your account. See "Accounts & sync" for details.
Background data communication	Restrict background data. See "Restrict Background Mobile Data" for details.
Communication while abroad	Set tablet to not permit data while using tablet abroad. See "Changing Roaming Setting" for details.

## Setting a Limit on Mobile Data Usage


1

In Home Screen, (Settings) (Mobile network)

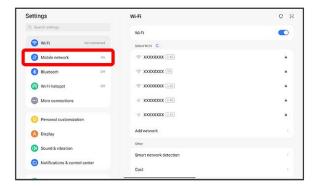


2

#### Data warning & limit

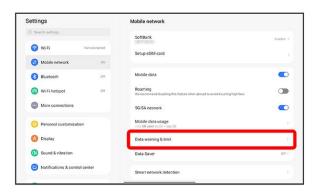


3

Set data limit 🔷 OK

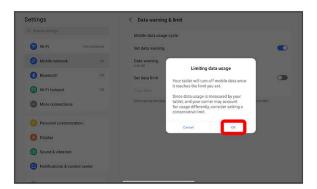

4


#### Data limit

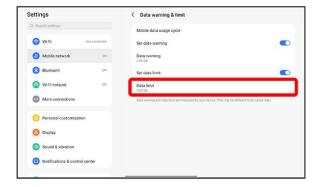

5

Enter amount for limit 

Set

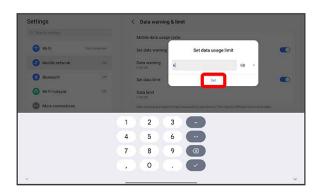


Limit on data is set.

## Restrict Background Mobile Data


1

In Home Screen, ② (Settings) → Mobile network

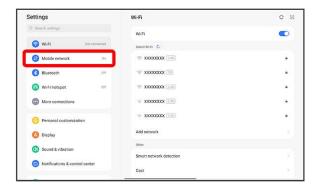


2

## [Mobile data usage]

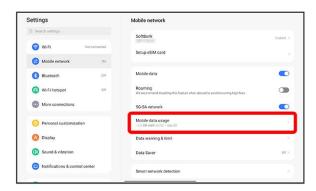


3

Tap application name

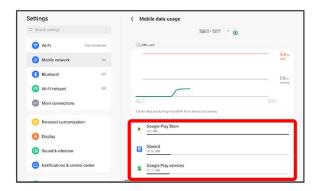

4

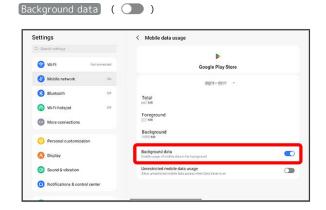

Restriction on background data is set.

## Display Settings

Make settings for Display brightness, Display mode, etc.

## Display Settings


Settable items are the following.

Item	Description
Light mode/ Dark mode	Switch between Light mode and Dark mode.
Automatic switching	Set whether to switch between Light mode and Dark mode automatically.
Home Screen	Switch Home Screen between Standard mode and Simple mode.
Brightness	Set brightness of Display.
Adaptive brightness	Enable adjustment of brightness for surroundings.
Screen color mode	Set colors on Display and make color temperature settings, etc.
Eye protection mode	Set whether Display blue light is reduced.
Reading mode	Set whether to enable Reading mode and make effects settings.
Screen timeout	Set a period of inactivity after which Display turns off automatically.
Lock screen	Control how notifications show on lock screen, etc.
Standby Mode	Set whether to use Standby mode which shows album or clock while charging tablet.
Display size and text	Set the size of text, images, icons, etc. in Display.
Auto-rotate screen	Set whether to rotate Display with tablet orientation automatically.
More display settings	Set whether lifting tablet wakes tablet from sleep while screen is turned off.

## Setting Display Timeout


1

In Home Screen, ◎ (Settings) → Display

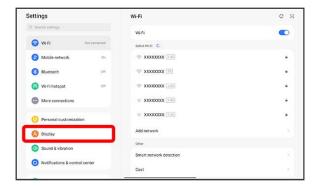


2

### Screen timeout

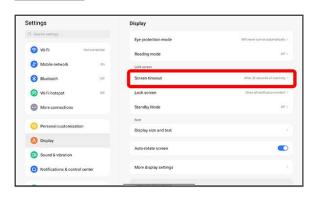

3

## Select time

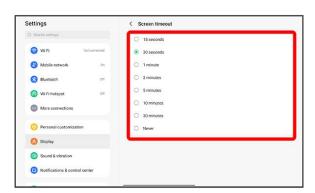

Set time until Display goes out.

## Setting Font Size


1

In Home Screen, (Settings)




2

#### [Display]

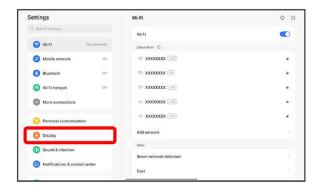


3

#### Display size and text

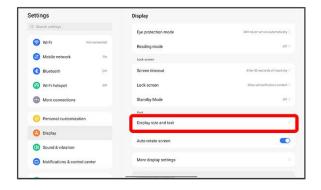

4

Drag "Font size" O left/right

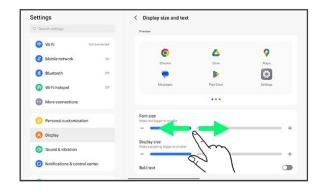

Font size setting is complete.

## Setting Size of Images and Icons


1

In Home Screen, (Settings)




2

### (Display)

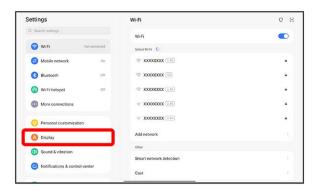

3

#### Display size and text

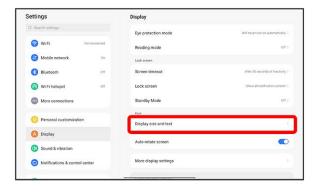

4

 ${\tt Drag~"Display~size"}~\bigcirc~{\tt left/right}$ 

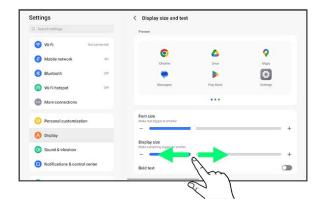


Image and icon size setting is complete.

## Setting Reading Mode


1

In Home Screen, (Settings)




2

#### [Display]

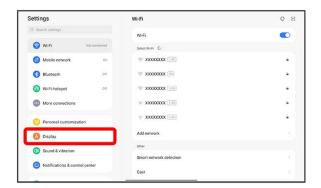


3

#### Reading mode

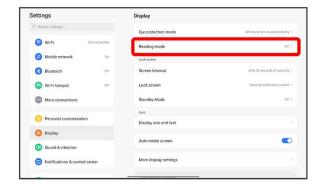


4

Reading mode ( )

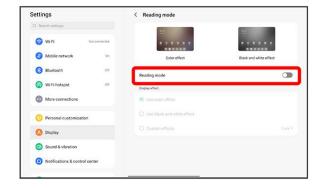

5



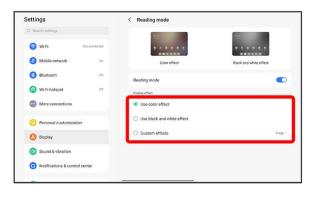

- Reading mode settings are complete.
- · If Custom effects is selected, set effect for each application.

## Sound & Vibration Settings

Make notification ringtone, operation tone, and other sound and notification settings.

## Sound & Vibration Settings

Settable items are the following.

Item	Description
Media volume	Set volume for music, videos, etc.
Ring & notification volume	Set volume for notification.
Alarm volume	Set volume for alarm.
Mute	Disable notification sound.
Turn off media sound when muted	Set whether to disable sound for music or video while Mute is enabled.
Dolby Atmos	Dynamic  Dolby Sound recognizes the content and performs automatic adjustments to achieve the best sound.     Movie  Realistic surround sound and clearer dialogue, allowing you to experience the full effect of movies and TV shows.     Music  Full and delicate sound effects give moving power to every note and beat delivered.
Do Not Disturb	Set Do Not Disturb.
Media	Set whether to show Media player on Quick Settings or Lock screen, etc.
Shortcut to prevent ringing	Set whether to mute notification ringtone by Pressing Power Key and Volume Up Key, etc.
Notification sound	Set notification sound.
Alarm	Set alarm sound.
Vibration &	Set whether tablet vibrates for
haptics	notifications, when keys Tapped, etc.
Other sounds	Enable/Disable tone when Locking/ Unlocking Screen, when charging starts, Tapping menu, etc.

## Setting Notifications


1

In Home Screen, (Settings)




2

#### Sound & vibration

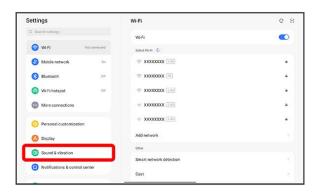


3

#### Notification sound

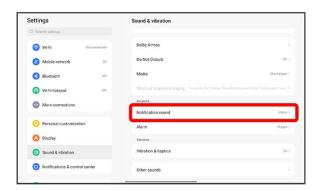

4

Tap notification ringtone to set

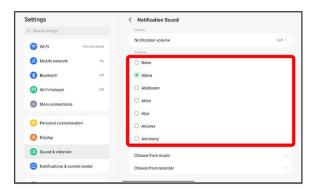

Notification plays and setting is complete.

## Setting Volume for Notifications


1

In Home Screen, (Settings)



2

#### Sound & vibration

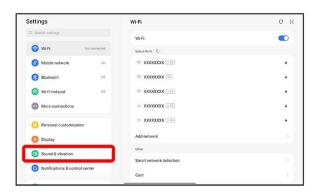

3



Notification plays to check volume.

 $\dot{}$  Drag  $\bigcirc$  right to increase volume, and left to decrease volume.

### Setting Volume of Music and Videos


1

In Home Screen, (Settings)



2

#### Sound & vibration

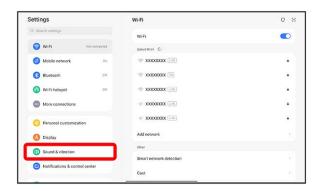

3



Sample sound plays.

### Setting Alarm Volume


1

In Home Screen, (Settings)



2

#### Sound & vibration

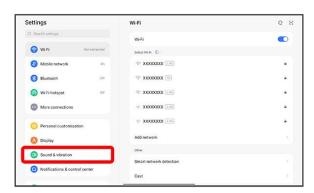

3

Drag "Alarm volume" left/right



Alarm sound plays.

### Setting Vibration for Notifications

Set whether tablet vibrates for notification ringtone.


1

In Home Screen, (Settings)




2

#### Sound & vibration

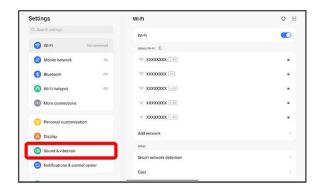


3

#### Vibration & haptics

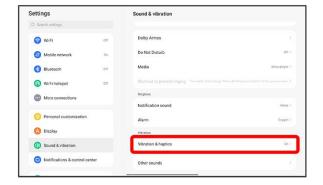


4

Use vibration & haptics ( )

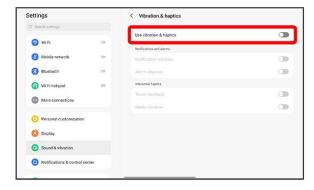

5



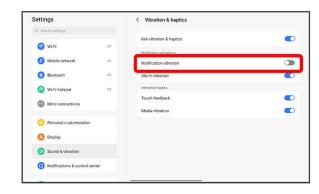

Vibration for notifications is set.

## Biometrics and Passwords Settings

Make settings for screen lock, facial recognition, etc.

#### Setting Screen Not to Lock



## Biometrics and Passwords Settings

Settable items are the following.

· Available items vary depend on settings.

Item	Description
Passwords	Set screen unlock option.
Facial	Set facial recognition.
recognition	See "Using Facial recognition" for details.
Make pattern visible¹	Set whether to show pattern (traced with finger).
Smart Lock <sup>2</sup>	Enable tablet to check if it is being carried or for trusted device or place and
	unlock screen.

- 1 Appears when password setting is set to Pattern .
- 2 Available when password setting is set to Pattern / PIN / Password .

# Setting Screen to Unlock by Flicking Screen


1

In Home Screen, (Settings)




2

#### Biometrics and passwords

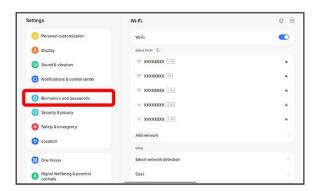


3

#### Passwords

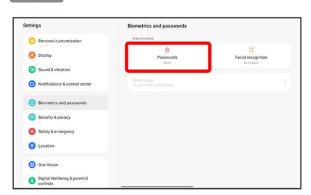

 $\cdot$  If method for unlocking screen before change is setting other than  $\mbox{\sc None}$  or  $\mbox{\sc Swipe}$  , first unlock screen.

[Swipe]

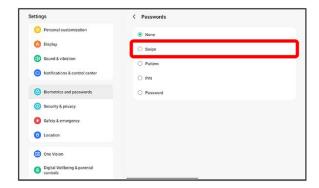

Setting is complete.

· If confirmation appears, follow onscreen prompts.

# Setting Screen to Unlock by Tracing Pattern


1

In Home Screen, (Settings)




2

#### Biometrics and passwords

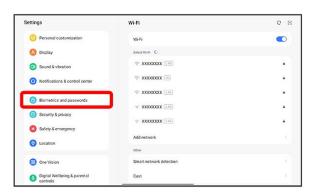

3


#### Passwords

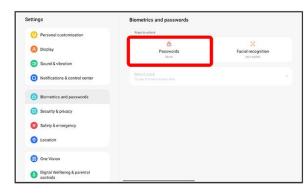

 $\cdot$  If method for unlocking screen before change is setting other than  $\mbox{\sc None}$  or  $\mbox{\sc Swipe}$  , first unlock screen.


4

[Pattern]

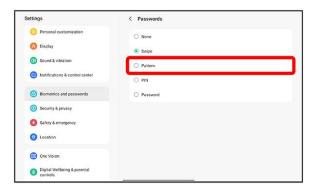

5

Enter new pattern

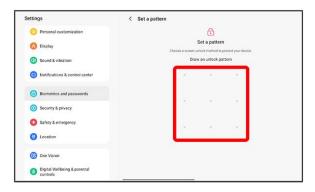


6

Enter new pattern again




7

[Done]

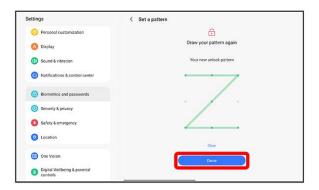

8

Select method of notification display

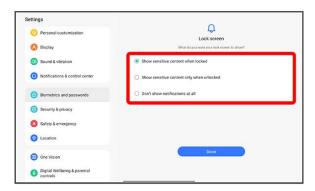

9

Done



Setting is complete.

# Requiring PIN Entry for Unlocking Screen


1

In Home Screen, (Settings)




2

#### Biometrics and passwords

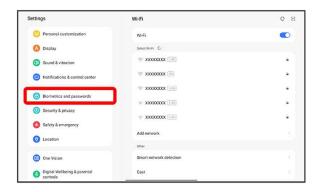

3


#### [Passwords]

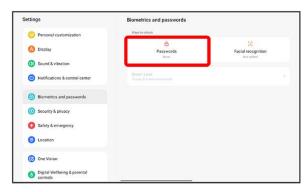


 $\cdot$  If method for unlocking screen before change is setting other than  $\mbox{\sc None}$  or  $\mbox{\sc Swipe}$  , first unlock screen.

4

PIN)

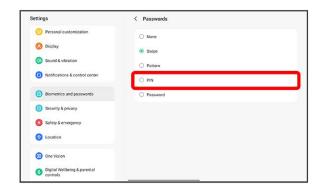

5

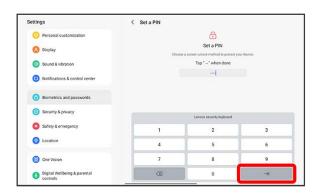


6

Enter new PIN again ⊖ ∋




7

 ${\bf Select\ method\ of\ notification\ display}$ 

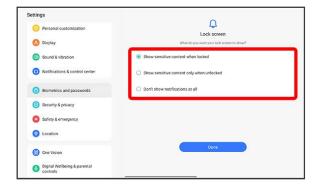

8

[Done]

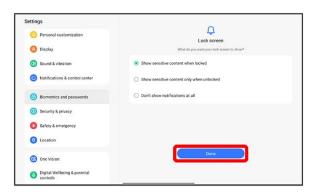

Setting is complete.

## Setting Screen to Unlock with Password


1

In Home Screen, (Settings)




2

#### Biometrics and passwords

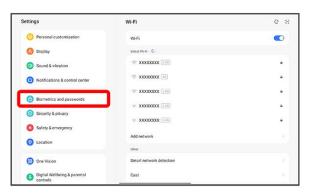

3


#### Passwords

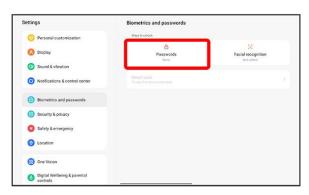


 $\cdot$  If method for unlocking screen before change is setting other than  $\mbox{\sc None}$  or  $\mbox{\sc Swipe}$  , first unlock screen.




[Password]

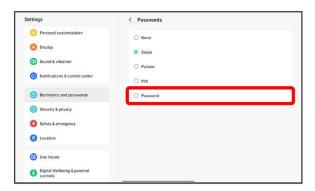

5

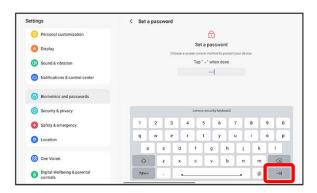


6

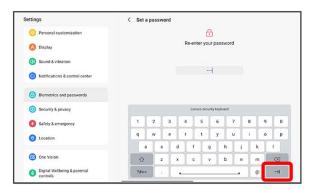

7

Select method of notification display

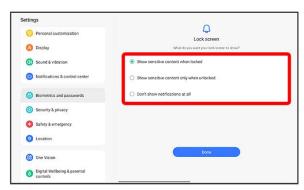

8

[Done]



Setting is complete.

## Using Facial recognition


1

In Home Screen, (Settings)




2

#### Biometrics and passwords

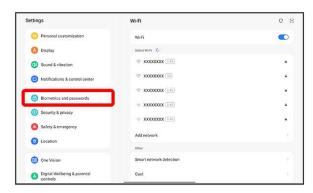

3


#### Facial recognition

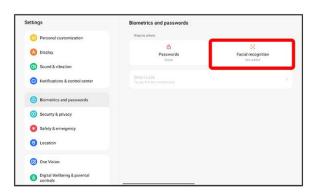

· If method for unlocking screen before change is setting other than None or Swipe , first unlock screen and go to step 7 .


4

Follow onscreen prompts and set pattern/PIN/password for unlocking screen

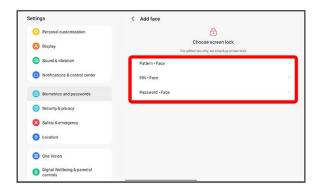


5

Select method of notification display

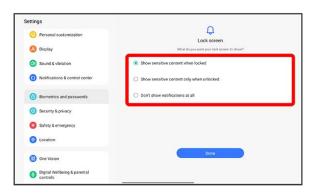


6

Done

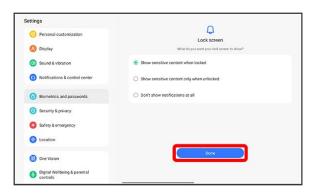


7

Check the "Important Information", Add

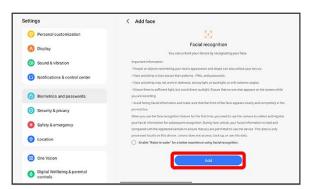

Align face from the front with onscreen circle

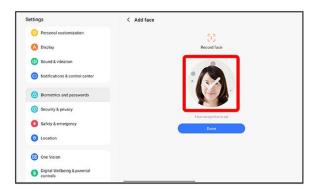

9


Done



· If confirmation appears, follow onscreen prompts.


10

Make settings for using "Unlocking with mask on"

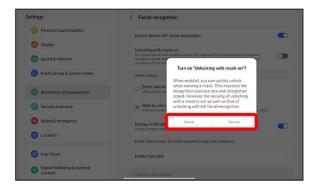

Setting is complete.

Facial recognition Operations

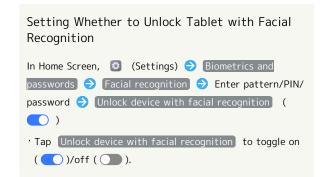



## Security & privacy Settings


Make settings for security and privacy.

## Security & privacy Settings

Settable items are the following.

Item	Description
App security	Scan and check tablet for security issues.
Device unlock	Set method for unlocking screen.
Account security	Diagnose the security of your Google account.
Device finders	Set whether to show location if tablet or connected device is misplaced.
System & updates	Make settings for security updates, Google Play system, etc.
Privacy controls	Make settings for application permissions, set whether to show entered password, set whether to allow Camera or Mic access, etc.
Privacy dashboard	Check applications that have recently used permissions.
Private space	Set whether to hide or lock specific applications to keep other users from opening them.
More security & privacy	Make settings for showing notifications in Lock screen, SIM lock, app pinning, etc.

# Setting to Show Specific Application Screen Only

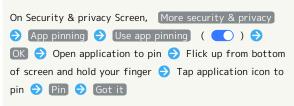

• To unpin, Flick up from bottom of screen and hold your finger for a while. When unpinned, Lock screen appears.

#### Main Security Codes

The following are main security codes required for tablet use.

Code	Description
Center Access Code	A four-digit code set in subscription contract.  See "Center Access Code" for details.
SIM PIN	A code for USIM Card/eSIM. See "Enabling USIM PIN" for details.
PIN	A code for unlocking screen. See "Requiring PIN Entry for Unlocking Screen" for details.

### Center Access Code

Center Access Code is a four-digit code set in subscription contract; necessary to use optional services from landlines, etc.

- Do not forget Center Access Code. If you forget the code, contact us for recovery. For details, contact Customer

  Service
- Be careful not to reveal security codes to others. If misused by others, SoftBank Corp. is not liable for any resulting damages.

## **Enabling USIM PIN**


When SIM PIN is enabled, a window for entering PIN appears to allow tablet use each time tablet is powered on with USIM Card installed/eSIM enabled.

1



2

#### More security & privacy

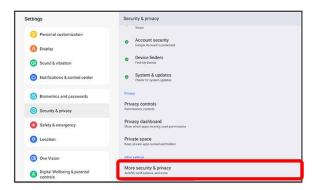

3

#### SIM lock



4

Lock SIM 🗦 Enter SIM PIN 🗦 OK



PIN is enabled.

### SIM PIN Cautions


Entering incorrect SIM PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; contact Customer Service. Entering incorrect PUK ten consecutive times locks USIM Card/eSIM, disabling tablet. For recovery, USIM Card/eSIM must be reissued at a SoftBank (fees apply).

## Changing USIM PIN

First enable USIM PIN to change PIN.


1

In Home Screen, (Settings) (Security & privacy)

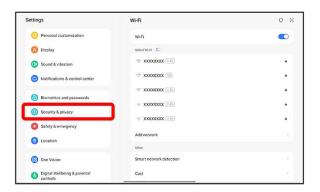

2

#### More security & privacy

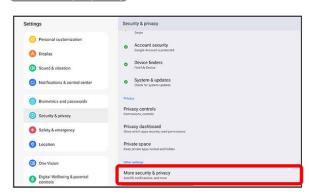

3

#### SIM lock



4

Change SIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK



PIN is changed.

## **Battery Settings**


Check Battery consumption settings and Battery usage.

## Battery Settings

Items that can be checked/set are the following.

Item	Description
Battery charge level and remaining time	Check battery charge level and remaining time.
Battery Temperature	Check battery temperature.
Battery Saver	Set whether to enable Battery Saver.
Charge optimization	Set Battery not to completely charge to reduce Battery deterioration.
Battery percentage	Set showing battery percentage in Status Bar.
Detect battery drain	Optimize tablet/application settings to reduce battery draining.
Overdischarge protection	Set whether to protect battery by powering tablet off automatically when remaining battery level becomes low.
Battery usage	Check usage time, battery usage, etc. since last full charge.

## Battery Operations

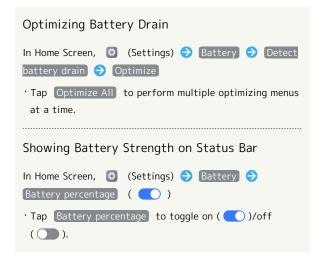


### Using Battery Saver

1




2

#### Battery Saver

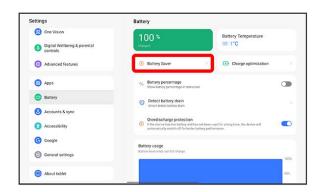

3



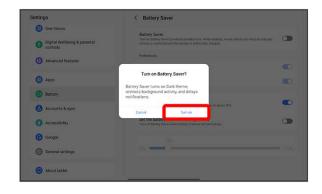

- Battery Saver settings are complete.
- $\cdot$  When Battery Saver is on, battery icon color changes to  $\hfill \blacksquare$  .
- When Battery Saver is on, Dark theme is automatically enabled.
- Tap Set the battery to automatically enable to enable Battery Saver to turn on according to battery level.

## General Settings


Check and make settings for language, date and time, storage, reset, etc.

## General Settings

Settable items are the following.

Item	Description
System navigation	Make settings for system navigation type (Gesture/3-button) and taskbar display.
Taskbar	Make settings for taskbar display or opening method.
Quick gestures	Make settings for gesture operation or actions when pressing Power Key.
Languages	Make settings for language display or text-to speech output.
Keyboard	Make settings for keyboard, text entry method, etc.
Date & time	Make settings for date and time.
Schedule	Set time to automatically power tablet
power on/off	on/off.
Screenshot & screen record	Make settings for screenshot/screen record operations.
Storage	Check internal storage, SD card, and USB drive amount, mount/unmount SD card, and delete data on SD card.
RAM	Set whether to add free space of internal
Expansion	storage as RAM.
Users	Add and switch users.
Backup	Backup application data on Google server.
Reset options	Reset network settings, application settings, and internal storage.

#### General Settings Operation

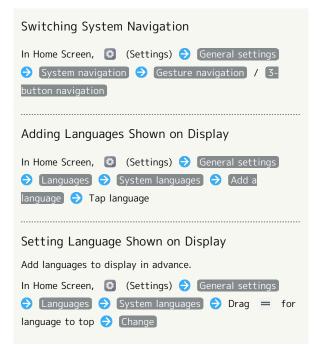



## Setting 24-Hour Time Indication


1

In Home Screen, (Settings)




2

#### General settings

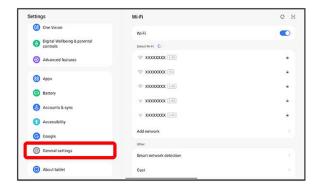


3


#### Date & time

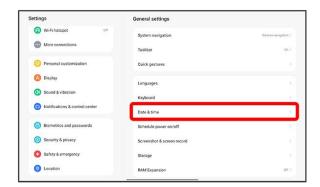

4

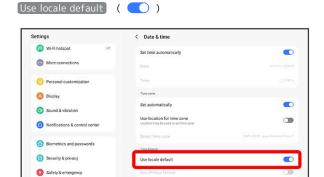

24-hour or 12-hour format is automatically set depending on your language and region.

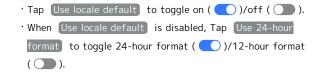

## Resetting Tablet


1

In Home Screen, (Settings)




2

#### General settings

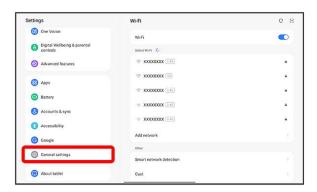


3

#### Reset options

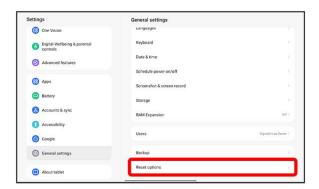


4

#### Erase all data (factory reset)

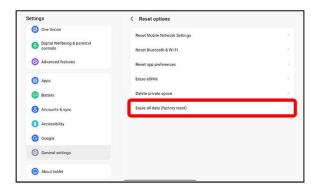

5


#### Erase all data

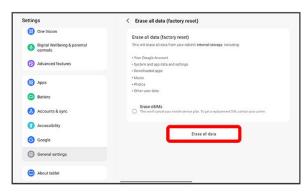

- · If method for unlocking screen is set to other than None or Swipe , first unlock screen.
- $\cdot$  If proceeding to next step with "Erase eSIMs" checked, note that eSIMs currently used will be erased.

6

#### Erase all data

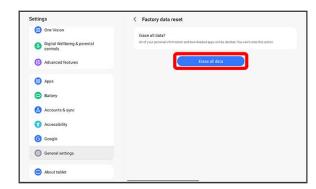

- Tablet is reset.
- Restart Your Service Plan with eSIM after Erasing It

Your service plan with eSIM is not terminated by erasing it. To restart it, you need a new QR code to download the plan again.

## Other Settings

## Mobile network

Make settings for network or internet such as mobile network, data usage, etc. Settable items are the following.

Item	Description
Data usage	Show mobile data usage.
XXXX	
(Network	Check USIM card information and On/Off
operator	setting.
name)	
Setup eSIM	Make of IM cottings
card <sup>1</sup>	Make eSIM settings.
Mobile data	Set whether to use mobile data.
Roaming	Set whether to use roaming.
5G-SA	6.1.1.1.56.1.1
network	Set whether to use 5G network.
	Check mobile data usage. For details on
Mobile data	mobile data usage, see "Checking Mobile
usage	Data Usage."
Data warning	Mala anthina for data was and limit
& limit	Make settings for data warning and limit.
D	Turn off background data generated by
Data Saver	some apps.
Smart	
network	Detect network connection status.
detection	

1 Network operator name is shown when eSIM is enabled.

## More connections

Make settings for Airplane mode, VPN connection, etc. Settable items are the following.

Item	Description
Cross-device	Share video calls with devices logging in
services	to the same Google account.
Airplane mode	Turn off device's all radio features
All plane mode	without turning off the device.
VPN	Add VPN destinations.
Private DNS	Make private DNS settings.
Cast	Show tablet screen on a Google Cast™
Cast	compatible device.
Printing	Set printing from tablet to be possible
	with a printer.
Quick Share	Share files with nearby devices.
Android Auto	Make Android Auto settings.
Smart Connect	Make settings for Smart Connect, which
	connects tablet with other devices to
	share files or to use screen expansion.

### Personal customization

Make settings for wallpaper, theme, etc. Settable items are the following.

Item	Description
Lock screen/ Home Screen	Check current wall paper for Lock screen/ Home Screen.
Theme	Set the color of icons and wallpaper.
System theme color	Set the color of icons and widgets to match wallpaper.
Local albums	Set images in internal storage or SD card as wallpaper.
Exquisite wallpaper	Show wallpaper set at the time of purchase.
Charge animation	Set animation to show while charging.

### Notifications & control center

Make settings for notification, status bar display, etc. Settable items are the following.

Item	Description
App notifications	Manage notifications per application.
Notification history	Set whether to show recent notifications and notifications set to snoozing.
Notification dot on app icon	Set whether to show notification dot on application icon.
Notification sound	Set notification sound.
Allow notification snoozing	Set whether to allow notification snoozing.
Hide silent notifications in status bar	Set whether to hide silent notification on status bar.
Enhanced notifications	Set whether notifications are reduced or silenced depending on type and usage of application that sent notifications.
Conversations	Check conversations set as high priority or with their settings changed.
Bubbles	Set whether to allow applications to show bubbles.
Control center style	Set the style of Notifications Window and Quick Settings.
Allow Control center access when locked	Set whether to show Notifications Window and Quick Settings by flicking down Status Bar on Lock screen.
Status bar customisation	Set icons shown on Status Bar.
Battery percentage	Set whether to show battery percentage beside Battery Indicator on Status Bar.
Network Speed	Set whether to show current network speed.
Sensitive notifications	Set whether to show sensitive notifications in lock screen when screen is locked.
Notifications on lock screen	Set type of notification shown on Lock screen.
Notification read, reply & control	Manage applications and devices which read notifications.

# Setting Applications that Have Notifications Blocked

Block all notifications from certain applications.

In Home Screen, (Settings) Notifications

& control center App notifications Most

recent All apps for application to have

notifications blocked ( )

## Safety & emergency

Make settings for Emergency SOS, Wireless emergency alerts, etc. Settable items are the following.

Item	Description			
Google Play system update	Update security offered by Google.  Check and edit your medical information.			
Medical information				
Emergency contacts	Check and add emergency contacts.			
Emergency SOS	Enable loud alarm to be sent by pressing Power Key five times quickly in an emergency.			
Emergency Location Service	Enable location to be sent when making an emergency call.			
Wireless emergency alerts	Make settings for emergency alerts.			
Crisis alerts	Enable notifications to be received for disaster information in the vicinity.			

#### Location

Make Location settings. Settable items are the following.

Item	Description					
Use location	Set whether to use location information.					
	Make settings for location services such					
Location	as Timeline, Google Location Accuracy,					
services	Google Location Sharing, Earthquake					
	alerts, and Emergency Location Service.					
Recent access	Show applications that recently used					
	location.					
App location	Set whether to permit use of location					
permissions information per each application.						

### One Vision

Make settings for functions supporting tablet display such as Floating Window, Split Screen, etc. Settable items are the following.

Item	Description				
Smart Rotate	Set whether to rotate screen of apps with portrait orientation screen when tablet is used in landscape mode.				
Floating Window	Make settings for Floating Window and check tutorials.				
Split Screen	Make settings for Split Screen and check tutorials.				
Window buttons and windows menus	Check guides for Floating Window and Split Screen, and make settings whether apps use switching button to Full screen.				

## Digital Wellbeing & parental controls

Check habit of tablet use, and make settings to limit usage frequency. Settable items are the following.

Item	Description					
TODAY XX minute(s)/XX hr, XX min	Check tablet usage time.					
Unlock(s)	Check the number of times tablet is unlocked.					
Notification (s)	Check the number of received notifications.					
View app activity details	Check details on daily usage time, the number of received notifications/times opening app, etc.					
App timers	Set upper limit of usage time for each application.					
Bedtime mode	Change Display to monochrome or enable Do Not Disturb at preset time.					
Focus	Pause applications that might be a distraction.					
Screen time reminders	Set whether to show reminder if application usage time is long.					
Manage	Set notifications on/off for applications					
notifications	that have recently sent notifications.					
notifications Do Not Disturb	• • • • • • • • • • • • • • • • • • • •					
Do Not	that have recently sent notifications.  Enable/disable Do Not Disturb. Also make					
Do Not Disturb	that have recently sent notifications.  Enable/disable Do Not Disturb. Also make Do Not Disturb settings.  Set whether to alert to be aware of surroundings when using tablet while					

### Advanced features

Make settings for PC mode, Key Mapping, etc. Settable items are the following.

Item	Description				
PC mode	Make settings for PC mode, which is suitable for operations using mouse, keyboard, etc.				
Key Mapping	Make settings for Key Mapping, which allows you to operate applications using external keyboard, gamepad, etc.				
Lab features	Make settings for Video Call Assistant and blocking in-app notifications.				

## Apps

Make application settings. Settable items are the following.

 
Item	Description					
	Make settings for permissions for					
Permission	applications.					
manager	For details, see "Setting Required					
	Permissions for Applications."					
Special app access	Make settings for special access.					
Default apps	Set applications used as default.					
Recently opened apps	Recently opened applications appear.					
All apps	Check and make settings for installed applications.					
Assistant	Make settings for Google Assistant.					
Screen time	View time spent in apps.					
Cloud media	Set whether to access cloud media when asked for selecting photos or videos from application or website.					
Unused apps	Open unused applications.					

## Accounts & sync

Make settings to create/add accounts, sync accounts. Settable items are the following.

Item	Description					
Preferred service	Set preferred services using Autofill.					
Accounts for Owner	Added account appears on tablet.					
Add account	Create and add accounts.					
Automatically	Enable automatic updating of data for					
sync app data	applications.					

## Setting Automatic Syncing



## Accessibility

Set captions, magnification gestures, and other useful accessibility functions. Settable items are the following.

ltem	Description					
Select to	·					
Speak	Set whether to read out Tapped item on screen.					
Switch Access	Set whether tablet functions are assigned to keys.					
TalkBack	Set accessibility service (TalkBack) to read out screen information.					
セキュリティ One	Set whether to use セキュリティOne (Security One) application.					
Display size	Make settings for font size, display size,					
and text	high-contrast text, etc.					
Color and motion	Make settings for color (color correction, color inversion, dark theme) and motion (animation, mouse pointer).					
Extra dim	Set whether to dim screen darker than minimum screen brightness.					
Magnification	Set whether to enable enlarged view by using a shortcut.					
Accessibility Menu	Enable use of large menu for Accessibility.					
Timing controls	Set time to hold down screen for Touch & Hold, to display messages for a short time, etc.					
System	Make settings for navigation mode and					
controls	auto-rotate screen.					
Vibration &	Set whether tablet vibrates for					
haptics	notifications, when keys Tapped, etc.					
Live Caption	Set whether to show captions for dialog in video, etc.					
Caption preferences	Enable captions, as well as caption language, size, etc.					
Audio description	Enable readout of onscreen content for compatible movies and programs.					
Flash notifications	Set whether to blink camera light or screen when a notification is received or when an alarm rings.					
Hearing devices	Pair hearing aids to tablet.					
Audio adjustment	Set whether audio playback is monaural, and left/right balance of audio.					
Accessibility shortcuts	Set size of shortcut button which opens Accessibility Menu and whether to enable shortcut from lock screen, etc.					
Text-to- speech output	Set engine for text readout, as well as set readout pitch and play sample.					

## Google

Make settings for Google services together at the same time. If Google account is set, the following items are settable by tapping  ${\color{black} \mathsf{All}}$  services .

Item	Description					
Your Google account	Make settings for your Google account					
Cast options	Set to prevent other devices from controlling media playback by a Cast compatible device.					
Cross-device services	Set whether to allow other devices to detect tablet to share between devices.					
Devices	Make settings for nearby devices.					
Matter devices	Make settings for Matter compatible devices.					
Quick Share	Set whether to share information with nearby persons or places using Quick Share.					
Thread networks	Make settings for Thread networks.					
Ads Personalize	Make settings for your advertising ID.					
using shared data	Set whether to allow use of shared data.					
Phone number verification <sup>1</sup>	Make settings for your phone number used when setting your Google account again.					
Usage & diagnostics	Set whether to send device/app usage data and diagnostic data to Google automatically.					
Autofill with Google	Check information such as passwords saved in Google account and set whether to enable Autofill.					
Passkeys and devices	· ·					
SMS verification codes	Set whether to input SMS verification codes automatically.					
Connected apps	Make settings for apps connected to your Google account.					
Game Dashboard	Set whether to use Game Dashboard.					
Google Fit	Make settings for Google Fit, which records walking and running, and helps you manage body weight, etc.					
Google Play Instant	Make settings for Google Play Instant.					
Google Wallet	Install Google Wallet.					
Play Games	Set account profile for using games.					
Search, Assistant & Voice	Make search settings.					
Backup	Make backup settings.					
Google Contacts sync	Make settings for contact data sync.					

Restore contacts	Restore backup contacts.				
Set up nearby device	Make settings for nearby devices.				
Family group	Create a family group to share various Google services.				
Parental controls	Set controls on usage as a parent/ guardian.				
Find Hub	Set whether location is shown if tablet or connected devices are lost.				
Set up your work profile	Make settings for your work profile.				
Location Accuracy	Make settings for Location Accuracy.				

1 Appears when USIM card is installed in tablet or eSIM is enabled.

## About tablet

Check a variety of tablet information. Settable items are the following.

Item	Description				
Device name	Check tablet name.				
System updates	Update tablet system.				
Model & hardware	Check tablet model name.				
CPU	Check the processor name.				
Storage	Check total space in internal storage.				
RAM	Check the total amount of RAM memory.				
Software version	Check the software version.				
Android version	Check the versions of Android OS, build number, etc.				
Status	Check tablet USIM card/eSIM information, IP address, MAC address, serial number, etc.				
Legal information	Check the third party licenses, Google Terms of Service, etc.				
Regulatory information	Check a variety of regulatory information.				

## Global Services

Before	Usina	Tablet	Abroad	10	4
	USITING	Tablet			

## Before Using Tablet Abroad

Tablet is Global roaming Service eligible.


Tablet connects to an appropriate cellular provide automatically be default.

A specific carrier can also be selected manually.

Change communications method and roaming settings as needed.


## Setting a Cellular Provider

1

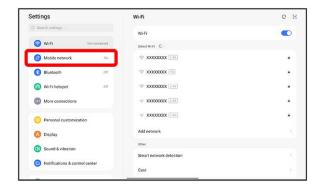

2


SoftBank 🔵 Network operators

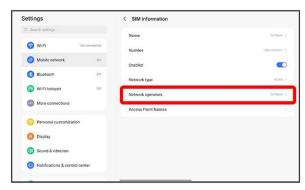

· If confirmation appears, follow onscreen instructions.

3


Automatic ( ) ) OK

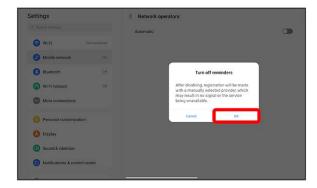

OFF ( ) to search for available networks.

4


Tap provider

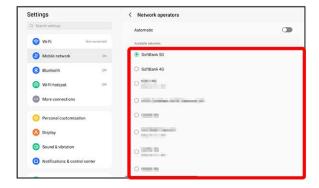

🔯 Cellular provider is set.


## Changing Roaming Setting

1

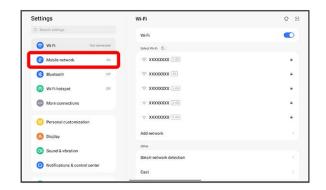

2

Roaming ( )

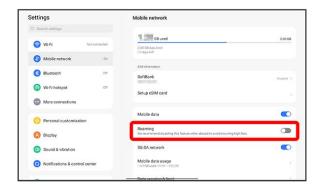

- Data roaming is ON.
- · Tap Roaming to toggle on ( )/off ( ).
- · If confirmation appears, follow onscreen instructions.

## Warranty/Specifications/ Customer Services

Warranty & After-Sales Service	106
Specifications	106
Customer Service	107

## Warranty & After-Sales Service

#### Warranty

- The warranty period is 1 year from the date of newly purchase.
- Repairs will be done based on terms of repair service. Terms
  of repair service is referred to SoftBank website.
  https://www.softbank.jp/mobile/support/product/
  warranty/ (Japanese)
- Warranty covers only tablet. Accessories such as cables are not covered by terms of repair service.

#### Cautions

#### **Damages**

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to engage in transmission, etc. due to breakage, malfunction, or trouble of product.

#### Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files or settings due to accident or repair.

### Disassembly/Modification

Disassembly/modification of tablet is prohibited under the Radio Law. Note that tablet cannot be accepted for repairs if modified.

#### After-Sales Service

To request repair, contact your nearest SoftBank store or call your carrier's Customer Service.

- During the warranty period, repairs are made under the terms of repair service.
- · After the warranty period, if tablet can be repaired, repairs will be made at cost. The functional parts necessary to repair the tablet will be available for 4 years generally after the manufacture is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.

### Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or Customer Service.

## Specifications

#### Specifications (Tablet)

Item	Description
Weight	Approx. 485 g
Continuous Standby Time	5G: Approx. 716 hours 4G (AXGP): Approx. 832 hours 4G (FDD-LTE): Approx. 858 hours * 5G standby time is the estimated time in a standalone environment.
Charging Time	AC Charger (USB Type-C <sup>™</sup> quick charge AC Charger for USB PD-PPS [ZSDBAV] (SB- AC22-TCPD)): Approx. 130 minutes
Dimensions	Approx. 255 x 166 x 7.0 mm

# Specifications (USIM/SD Card Removal Tool)

Item	Description
Weight	Approx. 0.9 g
Dimensions	Approx. 36 x 8 mm

#### Materials (Tablet)

Part	Material/Surface Treatment			
Volume Up/ Down Key	Plastic/metallic painting, UV, matte			
Power Key	Plastic/metallic painting, UV, matte			
Display	Optical clear glass/optical clear surface, AF coating			
Back Cover	Aluminum/sandblast/laser etching processing (Dolby Atmos logo)			
Back Cover (Accent Color Bar)	PMMA + PC/matte			
Antenna Slit	Plastic/-			
Lenovo logo	Stainless steel/sandblast, matte			
Camera Panel decorative part	PMMA + PC/high glossy coating			
•				
Camera Ring	Aluminum/high polished			
	Aluminum/high polished Glass/optical coating, AR & AF coating			
Camera Ring				
Camera Ring Camera Lens Headphone Port peripheral	Glass/optical coating, AR & AF coating			
Camera Ring Camera Lens Headphone Port peripheral part USIM/SD Card Tray (Outer	Glass/optical coating, AR & AF coating  Plastic/matte			

#### Materials (USIM/SD Card Removal Tool)

Part				
	USIM/SD Card			
	Pomoval Tool			

Material/Surface Treatment

Removal Tool

Stainless steel/-

# **Customer Service**

If you encounter any difficulties or are unsure of anything, contact customer service.

#### SoftBank Customer Support

- · From a SoftBank handset, dial toll free at 157
- · From a landline, dial toll free at 0800-919-0157
- $\cdot$  Business hours : Call 10:00am 7:00pm / Chat 9:00am -8:00pm

# Smartphone Technical Support Center

- · From a SoftBank handset, dial toll free at 151
- · From a landline, dial toll free at 0800-1700-151
- · Business hours : Mon. Fri. 9:00am 7:00pm / Sat., Sun., and Holiday 9:00am - 5:00pm/9:00am - 8:00pm (for general information)

# Safety Precautions

Safety Precautions110
General Notes118
Bluetooth®/Wi-Fi (Wireless LAN) Functions12
Waterproofing/Dustproofing122
Intellectual Property Rights12
Radio Wave Exposure and Specific Absorption Rate (SAR
Information

# Safety Precautions

Read Safety Precautions before using tablet. Observe precautions to avoid injury to self or others, or damage to property.

#### Safety Precautions

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions		
<b>⚠</b> DANGER	Great risk of death or serious injury <sup>1</sup> from improper use		
<b><u>∧</u> WARNING</b>	Risk of death or serious injury <sup>1</sup> from improper use		
<b>⚠</b> CAUTION	Risk of minor injury <sup>2</sup> or damage to property <sup>3</sup> from improper use		

- 1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, poisoning, etc. with remaining aftereffects, and injuries requiring hospital admission or long-term hospital visitation.
- 2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission or long-term hospital visitation.
- 3 Damage to property: This refers to extended damage to buildings, furniture, livestock, pets, etc.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions				
Prohibited	Prohibited actions				
Do Not Disassemble	Disassembly prohibited				
Avoid Liquids Or Moisture	Exposure to liquids prohibited				
Do Not Use Wet Hands	Use with wet hands prohibited				
Compulsory	Compulsory actions				
Disconnect Power Source	Unplug AC Charger from outlet				

Handling Tablet, AC Charger (Optional Accessory), USIM/SD Card Removal Tool (Complimentary Sample) (Common)

#### **⚠** DANGER



Do not use, store or leave in locations subject to high temperatures or where heat collects (near a fire or a device such as a heating unit, in a kotatsu or futon, under direct sunlight, inside a vehicle on a hot day, etc.).

May cause fire, burns, injury, electric shock, etc.



Do not place inside or near cooking appliances such as microwave ovens, IH cooktops, or pressure cookers.

May cause fire, burns, injury, electric shock, etc.



Avoid Charging Terminal or USB Type-C™
Port being exposed to liquids such as water
(drinking water, sweat, sea water, urine of
pets, etc.). Do not charge when tablet is wet or
where tablet can come in contact with water,
such as a bath room or near a humidifier.

May cause fire, burns, injury, electric shock, etc. For waterproofing, see "Waterproofing/Dustproofing."



Do not subject tablet to excessive force or break it. Particularly when carrying tablet, do not bump it or place it between objects.

Internal Battery breakage may cause fire, burns, injury, etc.

- \* Examples of where to be careful
- · Tablet becoming caught in a sliding door or vehicle door when in a totebag or ecobag
- $\cdot$  Stepping on tablet when it is on something soft such as a sofa, bed, or futon or on the floor
- $\cdot$  Tablet becoming caught in a seat on a train or bus



Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



Do not try to remove Internal Battery from tablet.

May cause fire, burns, injury, etc.



Back Cover on tablet is not removable. Do not try to remove. Also do not try to remove Back Cover or try to press it in if tablet is bulging, such as if Internal Battery is swollen.

May cause fire, burns, injury, etc.



Use optional accessories specified by SoftBank.

Using unspecified accessories or those of unknown manufacture, origin, or specification may cause fire, burns, injury, electric shock, etc.

### **⚠ WARNING**



Do not drop, step on, throw, or otherwise subject to strong force, impact, or vibration.

May cause fire, burns, injury, electric shock, etc.



Do not allow Charging Terminal, USB Type-C™ Port, or Headphone Port to contact conductive materials (anything metal, pencil lead, etc.), and do not allow dust to enter inside.

May cause fire, burns, injury, electric shock, etc.



When caring for equipment, ensure that no disinfectant or water enters gaps, Charging Terminal, USB Type-C™ Port, Headphone Port, Speaker, or Mic.

Tablet breakage may cause injury, electric shock, etc.



Stop charging if charging does not complete within a prescribed charging time.

Overcharging may cause fire, burns, injury, etc.



Always power off tablet or stop charging before entering anywhere flammable gas or dust may be generated.

May ignite flammable gases, etc. and cause explosion, fire, etc.  $\ensuremath{\mathsf{e}}$ 



For use at a gas station or similar location, follow the instructions of the facility.

Do not charge at a gas station or similar location.

If using at a gas station or similar location, be careful not to drop, and in particular, do not use while filling.

May ignite flammable gases, etc. and cause explosion, fire, etc.



If there is abnormal odor/sound, smoke, overheating, discoloration, distortion, or other abnormalities during use, charging, or storage, do the following while exercising caution.

- -Unplug from the outlet.
- -Power off tablet.

Not doing so may cause fire, burns, injury, electric shock,

## **⚠** CAUTION



Do not use damaged equipment.

May cause fire, burns, injury, etc.



Do not place on unstable surface (wobbling table, uneven surface, etc.). In particular, be careful if tablet is set to vibrate.

Tablet may fall and cause injury, etc.



Do not use or store in a humid, dusty, or high-temperature place.

May cause fire, burns, electric shock, etc.
For waterproofing and dustproofing, see "Waterproofing/
Dustproofing."



If being used by a child, a guardian should show them the proper way to handle equipment, and do not allow improper use.

They may swallow parts, or may cause injury, electric shock, etc.



Do not leave within an infant's reach or where pets have access.

In particular, be careful where small parts are stored, such as USIM/SD Card Tray and USIM/ SD Card Removal Tool (complimentary sample).

They may swallow parts, or may cause injury, electric shock, etc.



Use tablet with caution, as it may become hot with continued use or while charging. Be careful not to have unintended, continued contact with equipment such as by falling asleep, etc.

Tablet or AC Charger (optional accessory) may become hot after continued use of applications, data communication, video viewing functions, etc. or while charging. Continued and direct contact with hot portions of tablet may cause skin redness, itchiness, skin irritation, low-temperature burns, etc. depending on your physical condition.

#### Tablet

### **⚠** DANGER



Do not throw into a fire or apply heat.

May cause fire, burns, injury, etc.



Do not pierce with a sharp object (nail, etc.), hit with a hard object (hammer, etc.), step on, or otherwise subject to excessive force.

May cause fire, burns, injury, etc.



If substance in tablet gets in eyes, mouth, etc., immediately rinse with clean water and promptly seek medical attention.

Substances in tablet may cause loss of sight or other physical harm.

### **<u>∧</u> WARNING**



Do not shine or flash Light close to other people's eyes. In particular, keep adequate distance from infants.

May harm eyesight. May temporarily blind or startle others, causing injury or other accident.



Do not look at a repeatedly blinking screen for a long time.

May cause convulsions, loss of consciousness, etc.



Do not let water or other liquids (beverage, sweat, seawater, pet urine, etc.) or foreign objects such as anything metal (cutter blades, staples, etc.), flammable material, etc. to enter the slot of USIM Card/SD Card Tray.

In addition, insert USIM Card and SD Card into correct opening in correct orientation.

May cause fire, burns, injury, electric shock, etc.



Do not expose Camera lens to direct sunlight, etc. for a long time.

Concentrated light may cause fire, burns, injury, etc.



Do not look into Brightness Sensor.

May affect eyesight or lead to an accident.



Power off tablet or place in Airplane mode before boarding an aircraft.

Use of tablet on board an aircraft is restricted. Follow instructions of the airline.

If any functions that power on tablet automatically are activated, deactivate them.

Radio waves may adversely affect an aircraft's electronic devices.

Prohibited use aboard an aircraft may be subject to penalty by law.



For use at a hospital, follow the instructions of the institution.

Power off tablet where its use is prohibited. If any functions that power on tablet automatically are activated, deactivate them.

Radio waves may affect electronic equipment or electronic medical devices.



Adjust to an adequate volume when using earphones or similar accessory to play games or play back videos/music.

Even in standby, alarm may sound suddenly. Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty.

In addition, not being able to hear surroundings may cause an accident.



Users with a heart condition should adjust vibration/ringtone volume as needed.

Tablet suddenly vibrating and ringing may startle and affect persons with heart conditions.



If wearing an electronic medical device or similar apparatus, check with the manufacturer or vendor regarding any effect that radio waves may have on it.

Radio waves may adversely affect electronic medical devices, etc.



Power off tablet near electronic equipment that uses precision control or faint signals.

Radio waves may cause electronic equipment to malfunction or may adversely affect operation.

\* Examples of devices to be careful near
Hearing aids, implanted cardiac pacemakers, implanted
cardioverter-defibrillators, other electronic medical
devices, and other automatically controlled devices or
equipment. If using an implanted cardiac pacemaker,
implanted cardioverter-defibrillator, or other electronic
medical device, check with the manufacturer or vendor
regarding any effect that radio waves may have on it.



If Display or Camera lens breaks, be careful with broken parts and exposed tablet parts.

Touching broken or exposed parts may cause burns, injury, electric shock, etc.



If Internal Battery leaks or has an unusual smell, immediately stop using tablet, and keep away from fire.

Leaking fluid may ignite, causing fire, rupture, etc.



Do not allow pets, etc. to bite tablet.

Internal Battery igniting, rupturing, overheating, or leaking may cause fire, burns, injury, etc.

# **⚠** CAUTION



Before using the motion sensor, ensure safety around you, hold tablet firmly, and do not move it more than necessary.

May cause injury or other accident.



If Display is broken, do not allow leaking substance to come in contact with your skin (face, hands, etc.), clothes, etc.

May harm sight or skin.

If leaking substance gets in your eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water. If it gets in your eyes, mouth, etc., rinse and promptly seek medical attention.



Do not dispose of tablet together with ordinary trash.

May cause fire, burns, injury, etc. May also adversely affect the environment. Bring old tablet where accepted such as a SoftBank Shop, or follow municipal instructions for recycling.



If substance in Internal Battery leaks, do not let it get on your skin (face, hands, etc.) or clothes.

May harm sight or skin.

If leaking substance gets in your eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water. If it gets in your eyes, mouth, etc., rinse and promptly seek medical attention.



Be careful not to scratch yourself (finger, etc.) with the tip of USIM/SD Card Removal Tool (complimentary sample) when removing USIM Card.

Contact with the tip of USIM/SD Card Removal Tool (complimentary sample) may cause injury, etc.



Before using tablet in a car, check with the car manufacturer or dealer regarding any effect that radio waves may have on it.

Tablet radio waves may affect the vehicle's electronic equipment in some car models. In such case, cease using tablet.



If skin abnormalities develop during use, immediately stop using tablet and seek medical attention.

Tablet use may cause itching, a rash, eczema, etc. depending on your physical condition.

For materials of each part, see "Materials (Tablet)" and "Materials (USIM/SD Card Removal Tool)."



Tablet speaker and vibrator use magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Anything adhering may cause injury, etc.



View display in a well-lit place at an adequate distance.

Viewing in a dark place or too closely may affect eyesight, etc.

#### AC Charger (Optional Accessory)

### **⚠ WARNING**



Do not use if the cord of AC Charger (optional accessory) is damaged.

May cause fire, burns, electric shock, etc.



Do not touch AC Charger (optional accessory) if you hear thunder.

May cause electric shock, etc.



Do not short-circuit Charging Terminal when it is connected to an outlet. Do not allow any part of yourself (hands, fingers, etc.) to come in contact with Charging Terminal.

May cause fire, burns, electric shock, etc.



Do not place heavy objects on the cord of AC Charger (optional accessory) or apply excessive force such as by pulling.

May cause fire, burns, electric shock, etc.



When plugging in/unplugging AC Charger (optional accessory), keep metal objects away.

May cause fire, burns, electric shock, etc.



Do not use a voltage converter (travel converter for overseas use, etc.) when charging with AC Charger (optional accessory).

May ignite, overheat, cause electric shock, etc.



Do not apply excessive force to where tablet and AC Charger (optional accessory) are connected.

May cause fire, burns, injury, electric shock, etc.



Do not touch the cord of AC Charger (optional accessory), Charging Terminal, or power plug with wet hands.

May cause fire, burns, electric shock, etc.



Always use the specified power supply and voltage.

Also, use an AC Charger for overseas use when charging abroad.

Incorrect power supply and voltage may cause fire, burns, electric shock, etc.

AC Charger (optional accessory): 100 V AC (household AC power outlet only)

AC Charger for overseas use: 100 V to 240 V AC (household AC power outlet only)



Wipe off any dust on power plug.

Using while dusty may cause fire, burns, electric shock,



Insert the power plug of AC Charger (optional accessory) in outlet firmly.

Not doing so may cause fire, burns, electric shock, etc.



When unplugging from an outlet, grasp AC Charger (optional accessory) body and do not pull cord or otherwise subject to excessive force.

Pulling cord of AC Charger (optional accessory) may damage it and cause fire, burns, electric shock, etc.



Insert or remove the connector of AC Charger (optional accessory) without bending or applying force such as pulling cord.

Not doing so correctly may cause fire, burns, injury, electric shock, etc.



Stop use immediately if Charging Terminal is bent or otherwise deformed. Also, do not repair Charging Terminal to use it.

Short-circuiting of Charging Terminal may cause fire, burns, injury, electric shock, etc.



When not in use, unplug from outlet.

Leaving plugged in may cause fire, burns, electric shock,



If splashed with water or other liquid (beverage, sweat, seawater, pet urine, etc.), immediately unplug from outlet.

Splashing can cause short-circuiting, causing fire, burns, electric shock, etc.



Before caring for equipment, unplug from outlet.

Cleaning while still plugged in may cause fire, burns, electric shock, etc.

# **⚠** CAUTION



Do not touch AC Charger (optional accessory) continuously while plugged into outlet.

May cause burns, etc.

### Handling USIM Card

# **⚠** CAUTION



Be careful not to scratch yourself (finger, etc.) with the edges when handling USIM Card.

Edges may be sharp and cause injury.

# Handling USIM/SD Card Removal Tool (Complimentary Sample)

### **M** WARNING



Tip of USIM/SD Card Removal Tool (complimentary sample) is pointed. Do not use it pointed at yourself or others.

May allow it to strike yourself or others, causing injuries or loss of eyesight.

## **⚠** CAUTION



Do not leave within an infant's reach.

They may swallow it or choke, or may cause injury, etc.

#### Handling near Electronic Medical Devices

#### **⚠** WARNING



If you have an electric medical device such as an implanted pacemaker or implanted cardioverter defibrillator, or if there may be someone with such a device around you, keep tablet at least 15 cm away from the device.

Radio waves may affect operation of electronic medical devices.

Switch tablet not to emit radio waves (Airplane mode, power tablet off, etc.) beforehand when people around you may come closer than 15 cm to you where you cannot move freely.



When using an electronic medical device (other than an implanted cardiac pacemaker/ defibrillator) outside medical facilities, check with the device manufacturer, etc. regarding any effect that radio waves may have on it.

Radio waves may affect operation of electronic medical devices.



Observe a medical facility's instructions when using the terminal.

Radio waves may affect operation of electronic medical devices.

#### General Notes

#### General Use

- $\cdot$  Do not expose to water.
- Tablet and AC Charger (optional accessory) are not waterproof. Do not use in high humidity (e.g., bath room) or where exposed to rain, etc. If carrying tablet on you, humidity from perspiration can corrode the tablet interior and cause malfunction. Tablet will not be covered by warranty and may not be repairable in some instances if malfunction is determined to be due to such water exposure. Since tablet is not covered by warranty in this instance, repairs will be made at cost if tablet is repairable.
- Avoid using tablet in extremely high or low temperatures, in high humidity, or where extremely dusty.
   Use within temperatures of O°C to 35°C and humidity 35% to 85%.
- · Do not use in these locations.
- Where there is much humidity, dust, or vibration
- Near a landline, TV, radio, etc.
- Note that tablet may become warm when used a long time, and particularly in warm surroundings.
- $\cdot$  Stop using tablet a while if warm. Prolonged contact with tablet while warm may cause low-temperature burns.
- Avoid touching tablet USB Type-C™ Port and Headphone Port. Static electricity may affect internal components.
- · Use a soft, dry cloth to clean any oil, splashing, or other hard-to-remove soiling. Do not operate with fingernails to prevent scratching Display. Wiping with alcohol, thinner, benzine, detergent, etc. may remove print or fade colors.
- Clean terminal occasionally with a dry cotton swab, etc.
   Soiling on terminal can cause a poor connection or tablet to power off and inadequate charging. Avoid damaging terminal when cleaning.
- Do not remove USIM Card when sending or saving data with tablet. May erase data or affect tablet.
- Be sure to read information on health and safety before using tablet. A flashing image when playing a game or viewing videos may cause dizziness or convulsions. If these symptoms are experienced, consult a doctor.
- Do not place tablet near magnetic stripe cards or other magnetic objects. Tablet magnetic field may corrupt information on a memory card or credit card.
- · Metal is used in tablet. Tablet use may cause itching, a rash, skin irritation, etc. depending on your physical condition.
- $\cdot$  Do not paint tablet. Paint may clog interior and affect operation.

#### Internal Battery

- · Battery is built in and is not removable.
- Internal Battery can recharge and discharge at least several hundred times, but will eventually wear out.
   Internal Battery should be replaced if usable time shortens noticeably even after ample charging. Replace Internal Battery.
- Tablet can be submitted for Internal Battery replacement at a fee at a "SoftBank Shop". Ask at a SoftBank Shop or Customer Service. You should not try to replace Internal Battery yourself; risk of fire, explosion, etc.
- Functions that use communication such as Bluetooth® or Wi-Fi® and are enabled use more battery power. It is recommended to disable such functions when not in use.
- · Brightening screen uses more battery power. Lower screen brightness with "Brightness" setting to reduce battery power used.

#### Lithium-Ion Polymer Battery

 Tablet uses a lithium-ion polymer battery. Lithium-ion polymer batteries are recyclable precious resources. Bring them to the nearest shop with the Mobile Recycle Network mark.



# Charging

- AC Charger is an optional accessory. Be sure to use an AC Charger specified by SoftBank. For information on AC Charger and other peripheral devices, see SoftBank website. Using any other charger may cause Internal Battery to leak, overheat, or cause a fire. The company is not responsible whatsoever for damages from any accident or trouble as a result of using any other charger.
- Do not force tablet and AC Charger (optional accessory) to connect if they cannot be connected easily.
- When using AC Charger (optional accessory), be careful
  of anything conductive (anything metal, pencil lead, etc.)
  touching the plug when plugging it in. May cause electric
  shock, short circuit, fire, etc.
- Plug AC Charger (optional accessory) directly in outlet. A power extension bar may overheat and cause a fire.
- · When plugging AC Charger (optional accessory) in outlet, do not subject it to impact such as by getting caught on something. May cause injury or malfunction.
- Do not use AC Charger (optional accessory) if plug is damaged or sits loosely in outlet.
- $\cdot$  Avoid charging in these locations.
- Under direct sunlight
- Where there is much humidity, dust, or vibration
- Near a TV, radio, or other electric device

#### For Safe Driving

- Use while driving is dangerous. Follow the laws and regulations of the country or region where using tablet.
   Before using tablet, first stop the vehicle in a location where it is safe to use tablet.
- Do not store tablet or accessories in the same location as liquids or flammable gas. Do not place tablet on top of where an airbag is stowed. May hinder airbag if airbag is activated.
- Electromagnetic fields, surroundings, or otherwise magnetic objects may affect compass accuracy. It should only be used as a reference.
- · If you do not wish to disclose location information, do not use applications that record location information.
- When searching for locations, buildings, routes, or distances, do not rely only on map shown on tablet, and use it only as a reference. Maps, routes, and locations are provided by service providers, and information is constantly being updated. This functionality is not supported in some locations, and therefore map routes and compass are sometimes inaccurate, incomplete, and unsupported.

#### Environment of Use

- When in a location where tablet use is prohibited, or where there is a risk of interference or danger, power off tablet.
- Radio wave interference may affect operation of other electronic equipment or cause other issues.
- Use of tablet in some vehicles can occasionally affect invehicle electronic equipment. Exercise safety and do not use tablet in such instances.
- Before connecting tablet or accessories to other devices, read the instructions for the device and be sure to understand safety information.
- $\cdot$  Do not connect tablet to noncompatible products.

#### **Emergency Alerts**

- When an emergency alert is received, tablet notifies user via message, alert, and by vibrating.
  - Emergency alerts are enabled by default (can also be disabled).
  - By default, alert sounds at maximum volume even when Silent mode is set, and vibration is enabled regardless of Silent mode setting (can be changed).
- See "緊急速報メールを利用する" in the 取扱説明書 (Japanese) for details on emergency alert settings.
- Depending on usage/situation, tablet may receive emergency alerts for other areas or no emergency alerts.

#### Display (Touchscreen)

- Touchscreen-type display, operate with your fingers on Display.
- The touchscreen is designed to be touched lightly. Do not press strongly with your fingers or with anything pointed (fingernails, ball-point pen, pin, etc.).
- The touchscreen may not respond to touch operation in these situations. Note that malfunction may occur.
- Use with gloves
- Use with fingernails
- Use with an object on the touchscreen
- Use with water droplets or condensation on Display
- Use when your fingers are wet or sweaty
- Use underwater
- Stop use immediately if Display is broken. Avoid touching or removing broken parts, and immediately contact a SoftBank Shop or Customer Service.
- · If Display has been exposed to liquid, metal dust, or other matter, immediately clean it.

#### Volume

 Avoid listening to audio at a loud volume for a prolonged time.



# USIM/SD Card Removal Tool (Complimentary Sample)

- Do not insert USIM/SD Card Removal Tool (complimentary sample) in hole other than hole in USIM/SD Card Tray. May cause malfunction or damage.
- Do not apply excessive force. May cause malfunction or damage.
- $\boldsymbol{\cdot}$  Dispose of as separate waste according to local regulations.
- Do not use USIM/SD Card Removal Tool (complimentary sample) in other mobile terminals. May cause malfunction or damage to mobile terminal.

#### Personal Information and Data Security

- · Use of some functions and third-party applications on tablet may allow leakage of personal information, loss of data, or access by third parties. The company recommends that you take measures to protect personal information and sensitive information.
- · Leave tablet in a safe location where it cannot be used unauthorized.
- It is recommended that you set a screen lock on tablet that requires a password, facial recognition, etc.
- · Back up personal information to USIM Card, storage, or SD Card regularly. Before changing to another tablet, be sure to move or delete personal information from tablet.
- Any received messages or mail that do not appear familiar may be a risk of virus infection. Delete them immediately without opening them.
- · When using tablet to search the Internet, avoid accessing websites that may be a security risk, to prevent your personal information from being stolen.
- Set passwords to Wi-Fi tethering and Bluetooth® to prevent unauthorized access. Set these functions off when not using them.
- Tablet initiates software updates regularly to enhance security. Always use the most recent software so as to maintain tablet safety. It is recommended that you run a virus scan regularly.
- Always obtain applications created by third parties from official sites. Be sure to run a virus scan when downloading applications.
- Some applications request that location information be sent, and share location information with creators of the application. In this instance, tablet may send any retrieved information and diagnostic information to third-party application providers.

Third-party vendors use this information for product and service improvement.

### Radio Law Certification

- · Tablet is certified as conforming to technical standards as a wireless device of a radio station in a low-power data transmission system based on the Radio Law, and its "technical conformity mark 

  "technical standards 

  "technical stan
- Tablet is certified as conforming to technical standards, and therefore any disassembly/modification is subject to punishment by law.

# Bluetooth®/Wi-Fi (Wireless LAN) Functions

# Bluetooth®/Wi-Fi (Wireless LAN) Functions

- · Connection/operation may not be possible with some Bluetooth®/Wi-Fi (wireless LAN) devices.
- · Tablet is equipped with Bluetooth®/Wi-Fi (wireless LAN)-compliant security features for communication via Bluetooth®/Wi-Fi (wireless LAN). However, these may be inadequate depending on environment of usage and settings. Be aware when using Bluetooth®/Wi-Fi (wireless LAN).
- The company is not responsible for any data or information which may be leaked during communication via Bluetooth®/Wi-Fi (wireless LAN).

#### Frequency Bands (2.4 GHz Band)

Frequency bands used by tablet Bluetooth®/Wi-Fi (wireless LAN) functions are as below.





- 2.4: Wireless facility using 2400 MHz band. FH/DS/OF: FH-SS/DS-SS/OFDM modulation.
- 4: Expected maximum interference range of about 40 m.
- 8: Expected maximum interference range of about 80 m.

: Utilizes 2,400 MHz to 2,483.5 MHz band without mobile device bandwidth differentiation.

: Utilizes 2,400 MHz to 2,483.5 MHz band with mobile device bandwidth differentiation.

Usable channels depend on the country.

Before using aboard an aircraft, check with the airline beforehand.

#### Frequency Bands (5 GHz Band)

Within the 5 GHz frequency band, tablet can use the 5.2 GHz (W52), 5.3 GHz (W53), and 5.6 GHz (W56) bands.

- · 5.2 GHz band (W52/36, 40, 44, 48 ch)
- · 5.3 GHz band (W53/52, 56, 60, 64 ch)
- · 5.6 GHz band (W56/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144 ch)

Using a 5.2/5.3-GHz-band wireless LAN outdoors is prohibited by law (this does not apply to communication with access points/relay stations of high-output data communications systems operating in the 5.2 GHz band).

#### **Usage Cautions**

Tablet Bluetooth®/Wi-Fi (wireless LAN) functions use the same frequency band used by household appliances (microwave ovens) and industrial/scientific/medical equipment as well as by in-place radio stations (requiring a license) and specific low-power radio stations (not requiring a license) for mobile identification as used in production lines, and by amateur radio stations (requiring a license).

- 1. Before using tablet Bluetooth®/Wi-Fi (wireless LAN) functions, check that no in-place radio stations for mobile identification, specific low-power radio stations, or amateur radio stations are in operation nearby.
- 2. If use of Bluetooth®/Wi-Fi (wireless LAN) functions causes interference with regard to an in-place radio stations for mobile identification, immediately change the usage frequency, or discontinue use and take measures to avoid interference (putting a partition in place, etc.).
- 3. If tablet is otherwise a cause of interference with regard to specific low-power radio stations for mobile identification or amateur radio stations and assistance is required, contact Customer Service.

# Bluetooth® and Wi-Fi (Wireless LAN) Devices and Interference

Bluetooth® and Wi-Fi (IEEE 802.11 a/b/g/n/ac) use the same frequency band (2.4 GHz). Using Bluetooth® near a Wi-Fi (wireless LAN) access point or wireless LAN device may cause interference, resulting in lower communication speed and poor connection. In this instance, prevent interference difficulty such as by using tablet and the Bluetooth® device being connected at a distanced location, or powering off the Wi-Fi (wireless LAN) device.

#### Wi-Fi (Wireless LAN)

Do not use Wi-Fi (wireless LAN) where there is an electromagnetic field such as near electrical appliances or AV/ OA devices.

- Magnetic fields may increase electrical noise or may affect communication. Tablet may in particular be affected by a microwave oven.
- · It may interfere with reception if near a TV, radio, etc., or the TV screen may become unviewable.
- If multiple Wi-Fi (wireless LAN) access points using the same channel are in proximity, tablet may not detect access points correctly.

# Waterproofing/Dustproofing

Tablet is rated by the IP Code (JIS C 0920) to IPX3 $^1$  water resistance in daily use and IP5X $^2$  dust resistance when USIM/SD Card Tray is installed properly.

- 1 IPX3: maintains functionality as a tablet after exposure to water spray from both directions in a range up to 60 degrees from vertical.
- 2 IP5X: maintains functionality as a tablet and maintains its safety after being agitated in a test device with 75  $\mu m$  or smaller particles for 8 hours.
- Never install/remove USIM/SD Card Tray with wet hands or while tablet is wet.
- Immersion or washing with water are not covered by warranty.

#### When Using Tablet

- Before using tablet, install USIM/SD Card Tray securely and completely. For details on installation, see "USIM Card."
   Anything tiny (a minute fiber, a single hair, a grain of sand, etc.) caught in it may allow ingress of water.
- Do not use where water is used, in a bathing room, or in strong rain.
- Do not get wet with liquids other than normal-temperature water such as the following.
- Soap/detergent/bath powder
- Seawater
- Pool water
- Hot spring water
- · If tablet gets dirty, wipe the surface gently with a soft cloth having isopropyl alcohol or with a general cleansing sheet (containing 70% isopropyl alcohol). Be careful not to let humidity or liquid in gaps or openings. Note that discoloration, fading, peeling, and deformation are possible, as well as accelerated deterioration if tablet coating is scratched.
- Do not subject tablet to strong impact and deform it. May affect water resistance in daily use/dust resistance.

#### **Important**

- If tablet is exposed to liquids with USIM/SD Card Tray unsecured, they may enter tablet and cause electric shock or malfunction. Power off tablet and do not continue to use it, and contact a SoftBank Shop or Customer Service.
- Do not leave wet. In a cold region, it may freeze and result in malfunction.
- To prevent condensation, let tablet adjust to room temperature before bringing it from a cold location to a bath room or other warm location.
- $\cdot$  USIM Card and AC Charger (optional accessory) are not waterproof.
- Do not use in a sauna, or subject to hot airflow (from a hair drver etc.).
- · Do not place directly on sand, etc.
- Sand may enter the Mic or Speaker holes and affect sound.
- Allowing moisture, sand, etc. to remain may cause sound to crackle.
- Anything tiny such as a grain of sand being caught between USIM/SD Card Tray and tablet body may allow ingress of water.
- Do not poke Mic or Speaker with a cotton swab or anything pointed. May affect water resistance in daily use/dust resistance
- $\cdot$  Do not leave wet. May short-circuit charging terminal or USB Type-C  $^{\text{TM}}$  Port.
- Do not drop. Scratches, etc. can deteriorate water resistance in daily use/dust resistance.
- Do not allow moisture to remain in Mic, Speaker, etc. May cause misoperation or wet clothes/bag. In this instance, wipe away moisture with a dry, clean cloth.
- Do not connect headphones when tablet is wet. May cause malfunction.
- Do not use USB Type-C™ Port if wet or dirty/dusty. May affect water resistance in daily use/dust resistance, or may cause electric shock and short-circuiting, resulting in malfunction, burns, or fire.
- · Do not leave in a humid location for a long time.
- · Avoid bringing tablet from cold outdoors to a warm room suddenly; place in a room first to let it warm up before bringing it in.
- Touchscreen may not operate properly if the display has any water droplets on it.
- Operation is not guaranteed for all conditions of actual use.
   Tablet will not be covered by warranty if malfunction is determined to be due to incorrect customer handling.

#### If Tablet Is Wet

If tablet has gotten wet, continued use may wet clothes, bag, etc.

Dry tablet as follows.

- 1. Wipe off any water on tablet well with a dry towel or cloth
- 2. Hold tablet firmly and shake until no more water splatters
- 3. Reverse tablet's up-down orientation, hold firmly and shake again until no more water splatters
- 4. Wipe off any water draining out of tablet well with a dry towel or cloth
- 5. Place a dry towel or cloth on a flat surface, and leave tablet on it for 2 to 3 hours to dry at normal temperature

### When Charging

AC Charger (optional accessory) is not waterproof. Always check the following when and after charging.

- · Check that tablet is not wet. If it has gotten wet, wipe away moisture with a dry, clean cloth.
- · Never charge tablet while it is wet.
- · Never connect while tablet or AC Charger (optional accessory) is wet. Tablet is water-resistant in daily use/dust-resistant; however, if connected to while wet, and liquid (beverage, sweat, seawater, pet urine, etc.) or foreign matter on it or USB Type-C™ Port may cause electric shock or short-circuiting, resulting in malfunction, burns, or fire.
- Do not touch AC Charger (optional accessory) with wet hands. May cause electric shock.
- · Use AC Charger (optional accessory) where not exposed to water. Do not use where water is used (bath room, shower, kitchen, sink, etc.). May cause fire or electric shock.

#### To Maintain Water/Dust Resistance

Always check the following to maintain water/dust resistance.

- · Insert USIM/SD Card Tray securely. Any debris (single hair, grain of sand, minute fiber, etc.) trapped between contacting surfaces may allow ingress of dust.
- · Avoid poking Speaker, Mic, USB Type-C™ Port, Headphone Port, and USIM/SD Card Tray with anything pointed.
- · Do not drop. Scratches, etc. can deteriorate water/dust resistance.
- USIM/SD Card Tray gasket is crucial for continued tablet water and dust resistance. Do not peel away or damage gasket. Do not allow any debris on gasket.
- To maintain water and dust resistance, it is recommended to replace parts every 2 years regardless of their condition.
   Tablet can be submitted for parts replacement at a fee.
   Contact Customer Service or a nearby SoftBank Shop.

# Intellectual Property Rights

#### Copyrights/Portrait Rights

Copyrighted contents you recorded or obtained from websites using tablet by downloading or other means, such as documents, images, music data, software, are prohibited from reproduction, transformation and transmission over public lines without consent of the copyright holders, unless intended for personal use or any other purpose permitted by law

Note that taking pictures or videos at demonstrations, performances, or exhibitions may be restricted even if only for personal use.

You should also refrain from taking a picture of other people and disclosing it by such means as posting it on a website without their consent because of possible infringement of their right of portrait.

#### **Trademarks**

- · SoftBank, SoftBank's equivalent in Japanese and the SoftBank logo are registered trademarks or trademarks of SoftBank Group Corp. in Japan and other countries.
- ・Yahoo!, ヤフー, the Yahoo! JAPAN logo, and the Y! logo are registered trademarks or trademarks of LY Corporation in Japan.
- Facebook and the Facebook logo are trademarks or registered trademarks of Meta Platforms, Inc.
- · QR code is a registered trademark of Denso Wave Inc.
- · Lenovo and the Lenovo logo are trademarks of Lenovo Corporation in the United States and other countries.
- · Oracle and Java are registered trademarks of Oracle Corporation and its subsidiaries and affiliates in the United States and other countries. The names of companies and products in the guide may be trademarks or registered trademarks of the respective companies.
- · Wi-Fi®, Wi-Fi Alliance®, Wi-Fi Direct®, and Wi-Fi Protected Access® (WPA) are registered trademarks of Wi-Fi Alliance®. WPA2™, WPA3™, and Wi-Fi Enhanced Open™ are trademarks of Wi-Fi Alliance®.



 Bluetooth® is a registered trademark of US Bluetooth SIG, Inc.



- $\cdot$  USB Type-C  $^{\scriptscriptstyle\mathsf{TM}}$  is a trademark of USB Implementers Forum.
- · Google, the Google logo, Android, the Android logo, Google Play, the Google Play logo, Gmail, the Gmail logo, Google Maps, the Google Maps logo, Google Calendar, the Google Calendar logo, YouTube, the YouTube logo, Google Drive, the Google Drive logo, Google Photos, the Google Photos logo, the YouTube Music logo, Google Assistant, the Google Assistant logo, Google Location History, Chrome, the Chrome logo, Google Search, the Google Search logo, Google News, the Google News logo, Google One, the Google One logo, the Files logo, Google Home, the Google Home logo, Google TV, the Google TV logo, Google Meet, the Google Meet logo, Fitbit, and the Fitbit logo are trademarks or registered trademarks of Google LLC.
- $\cdot$  The microSD logo, microSDHC logo, and microSDXC logo are trademarks of SD-3C, LLC.



- ・Manufactured based on a license from Dolby Laboratories.
  Dolby, ドルピー, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished work. Copyright 2012-2024 Dolby Laboratories. All rights reserved.
- $\cdot$  MediaTek, Dimensity, and MiraVision are trademarks or registered trademarks of MediaTek Inc.

- Windows is used throughout as an abbreviation for Microsoft Windows operating system.
- $\cdot$  Netflix is a registered trademark of Netflix, Inc.
- The Satofull name, logo, and service name are registered trademarks or trademarks of Satofull Co., Ltd. in Japan.
- · Amazon, Amazon.co.jp and its logo, Amazon Prime, and Alexa are trademarks of Amazon.com, Inc. or its affiliates.
- · HEVC Standard

This product supports digital video coding based on a specific version of the HEVC standard, and is covered by patents listed at patentlist.accessadvance.com (https://accessadvance.com/advance-patent-lists/).



- The TM and ® marks are sometimes abbreviated in this quide.
- The names of other companies, products, and services are trademarks or registered trademarks of the respective companies.

# Radio Wave Exposure and Specific Absorption Rate (SAR) Information

#### Specific Absorption Rate (SAR) Information of This Product (for Japan)

This device [A401LV] complies with the Japanese technical regulations and international guidelines regarding exposure to radio waves.

This device was designed in observance of the Japanese technical regulations regarding exposure to radio waves (\*1) and the limits of exposure recommended in the international guidelines, which are equivalent to each other. The international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The technical regulations and the international guidelines set out the limits of exposure to radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of human tissue over a 6-minute period. The SAR limit for mobile phones including this device is 2.0 W/kg. The highest SAR value for this device when worn on the body is 1.210 W/kg (\*2). There may be slight differences of the SAR values in individual product, but they all satisfy

The actual value of SAR of this device while operating can be well below the indicated above. This is due to automatic changes in the power level of the device to ensure it only uses the minimum power required to access the network.

By using accessories such as a belt clip holster that maintains a 0.0 cm separation with no metal (parts) between it and the body, this device is certified the compliance with the Japanese technical regulations.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website: https://www.tele.soumu.go.jp/e/sys/ele/index.htm

Association of Radio Industries and Businesses Website: https://www.arib-emf.org/01denpa/denpa02-02.html (in Japanese only)

List of Specific Absorption Rates (SAR) information for SoftBank products

https://www.softbank.jp/mobile/support/sar/ (Japanese)

- \*1 The technical regulations are provided in Article 14-2 of the Radio Equipment Regulations, a Ministerial Ordinance of the Radio Act.
- \*2 Not including other radio systems that can be simultaneously used with 5G/LTE.

#### European RF Exposure Information

This mobile device [A401LV] is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by the international guidelines. The guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety margins designed to assure the protection of all persons, regardless of age and health conditions. The quidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR value for this device when worn on the body at the separation distance of 0.0 cm from the body is 1.556 W/kg (\*1). For electronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with the quidelines.

\*1 The tests are carried out in accordance with the international guidelines for testing.

Simplified Declaration of Conformity for [A401LV] Hereby, Lenovo PC HK Limited declares that the radio equipment type [A401LV] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.lenovo.com/us/en/compliance/eu-doc/ #ideapadtablets.

#### FCC RF Exposure Information

This device [A401LV] is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy required by the Federal Communications Commission (FCC). The limit is based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The exposure standard for mobile phones including this device employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6~W/kg.

The tests are performed in positions and locations as required by the FCC. The highest SAR value for this device when tested for use worn on the body as shown below is 1.16 W/kg.

Body-worn Operation: This device was tested for typical body-worn operations with the separation distance of 0.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain the above separation distance between the user's body and the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with the FCC RF exposure requirements and should be avoided.

The FCC has granted an equipment authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure requirements. Filed SAR information of this device can be found by searching FCC ID O57TB332ZJ in the FCC ID Search webpage: https://www.fcc.gov/oet/ea/fccid.

Additional information on SAR can be found on the FCC website at https://www.fcc.gov/general/radio-frequency-safety-0.



About the User Guide3 Adding/Deleting Application59
Airplane Mode
Applications58
В
Basic Operation30
Battery Settings93
Before Using Tablet Abroad104
Biometrics and Passwords Settings82
Bluetooth®/Wi-Fi (Wireless LAN) Functions121
C
Capturing Still Images/Videos52
Charging Battery18
Connecting by Wi-Fi64
Customer Service107
D
Data Usage Settings69
Display Settings74
A
eSIM7
esiivi
G
General Notes118
General Settings94
0
Intellectual Property Rights123
Technical Control of the Control of
[♥]
Making Initial Settings19
0
Other Settings97
-
P
Pool of S. Franchisco
Parts & Functions
1 OWG - OH/ OTT

# Lenovo TAB8 User Guide Index



Radio Wave Exposure and Specific Absorption Rate (SAR)
Information
S
Safety Precautions110
Screens
SD Card14
Security & privacy Settings90
Sending Messages (+Message)44
Silent Mode32
Sound & Vibration Settings78
Specifications106
Status Bar39
Tablet Settings68
Text Entry33
Text Lift y
0
Unlocking Screen

# Lenovo TAB8 User Guide

October 2025, First Edition SoftBank Corp.

Visit SoftBank Shop for assistance

Model : Lenovo TAB8 Manufacturer : Lenovo PC HK Limited