

LEITZ PHONE 3

User Guide

LEITZ PHONE 3 User Guide Contents

Introduction	
About the User Guide.....	3
Getting Started	
Package Contents.....	6
Parts & Functions.....	6
eSIM.....	8
SIM Card.....	11
Internal Storage and SD Card.....	14
Charging Handset.....	19
Power On/Off.....	21
Making Initial Settings.....	22
Google Account.....	25
Unlocking Screen.....	27
Case.....	28
Lens Cap.....	29
Basic Operations	
Basic Operations.....	32
Using Touchscreen.....	33
Using Manner Mode.....	34
Using Airplane Mode.....	36
Text Entry.....	37
Using Fingerprint Authentication Function.....	38
Updating the System.....	41
Handset Interface	
Handset Screens.....	44
Icons at Display Top (Status Bar).....	52
Checking Notifications (Notifications Window).....	54
Checking Notifications (Quick Settings Window).....	56
Phone	
Placing/Answering Calls.....	60
Optional Services.....	65
Handset Phone Number.....	72
Address Book.....	73
Messaging	
Sending Messages (+メッセージ (+Message)).....	78
Using Gmail.....	79
Internet	
Using the Internet (Chrome).....	84
Camera	
Capturing Photos/Videos.....	90
Viewing & Managing Photos/Videos (Photos).....	95
Application Basics	
Confirmation when First Activating Applications.....	98
Applications.....	102
Adding/Deleting Applications.....	104

Wi-Fi/Bluetooth®

Connecting by Wi-Fi.....	110
Using Bluetooth® Function.....	116

Handset Settings

About Settings.....	122
Data Usage Settings.....	123
Sound & Vibration Settings.....	128
Display Settings.....	135
Useful Settings.....	140
Security & Privacy Settings.....	147
Location Settings.....	161
Battery Settings.....	162
System Settings.....	166
Other Handset Settings.....	172

Global Services

Global Roaming.....	194
Calling from Outside Japan.....	195

Warranty/Specifications/Customer Service

Warranty & After-Sales Service.....	200
Specifications.....	200
Customer Service.....	202

Safety Precautions

Safety Precautions.....	204
Important Product Information.....	214
Handset & Hardware Care.....	215
General Notes.....	218
RF Exposure Information of This Product.....	220
Water & Dust Resistance.....	222

About the User Guide

In the User Guide, most operation descriptions are based on the handset at time of purchase.

Unless noted otherwise, descriptions are for Home Screen (Home). Some operation descriptions may be omitted.

The information in the User Guide is subject to change without prior notice.

Before Using This Product

Read "[Safety Precautions](#)" thoroughly beforehand for proper usage.

Accessible services may be limited by subscription contract conditions.

Data Communication

- Handset is designed to be always connected to the Internet. Communication is initiated automatically for some functions such as data syncing.
- Large-volume data communication, such as downloading applications and viewing videos, incurs expensive transmission fees. Subscription to a flat-rate plan is strongly recommended.
- Even if connected by Wi-Fi, some applications and services incur transmission fees.
- In order to accurately measure the current location, handset is equipped with a function that automatically acquires assist data such as satellite navigation information (data is sent to the service provider of such function), and data transmission fees may be incurred for acquiring assist data.

Screenshots & Key Labels

Screenshots in the User Guide may differ in appearance with actual Display. Key labels in the User Guide are simplified for description purposes and differ with actual Display.

Other Notations

In the User Guide, the product is referred to as "handset." microSD™/microSDHC™/microSDXC™ Card is referred to as "SD Card."

"LP-03" here refers to this mobile phone "Leitz Phone 3."

Getting Started

Package Contents.....	6
Parts & Functions.....	6
eSIM.....	8
SIM Card.....	11
Internal Storage and SD Card.....	14
Charging Handset.....	19
Power On/Off.....	21
Making Initial Settings.....	22
Google Account.....	25
Unlocking Screen.....	27
Case.....	28
Lens Cap.....	29


Package Contents

Package Contents

- Handset (Leitz Phone 3)
 - Battery is built into handset.
 - Handset back cover is not removable.
- Quick Switch Adapter (Complimentary sample)
- SIM Removal Tool (Complimentary sample)
- Case (Complimentary sample)
- Lens Cap (Complimentary sample)
- クイックスタート (Japanese)

Parts & Functions


Handset (Front)

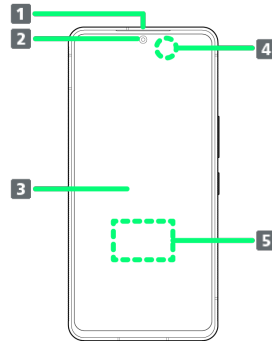

Name	Description
1 Earpiece/ Speaker	Hear the other party's voice here.
2 Front Camera	Use to shoot photos or videos of yourself.
3 Display	Touchscreen-type display; operate with your fingers on Display.
4 Proximity/ Light Sensor ¹	Proximity Sensor prevents Touchscreen misoperation during calls. Light Sensor adjusts Display brightness according to ambient light.
5 Fingerprint Sensor ¹	Use fingerprint authentication to unlock screen.


- 1 Do not apply stickers or other coverings over the sensors.

Handset (Back and Sides)

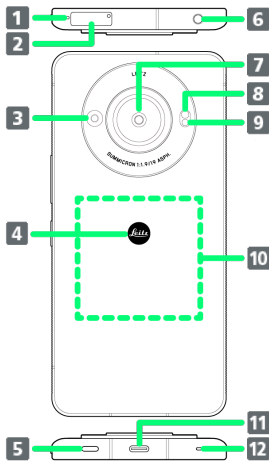

Name	Description
1 Mic	Use while recording videos or when talking through Speakerphone. Make sure not to cover Mic.
2 Card Tray	Insert/remove SD Card and SIM Card.
3 Distance measurement sensor	Depth sensor to realize impressive bokeh softfocusing in portrait mode.
4 NFC/FeliCa area	Hold up to reader/writer to use NFC/Osaifu-Keitai®.
5 Speaker	Listen to music, video sound, etc.
6 Earphones-Microphone Jack	Connect stereo earphones with mic (commercially available) here.
7 Standard Camera	Capture photos and videos.
8 Spectrum Sensor	Adjust white balance of subject, which is easily affected by differences in light sources, and enable capturing with faithful colors.
9 Mobile Light	Use as a camera flash, flashlight, etc.
10 Wireless charging point	Align with this point when charging with the wireless charger.
11 External Connection Jack	Connect USB Type-C™ plug such as AC adapter.
12 Mic/Recorder Mic	Use during calls while handset is held up to ear. Use as Mic while recording videos, on speech recognition, or when talking to EMOPA. Make sure not to cover Mic/Recorder Mic.

Handset Keys

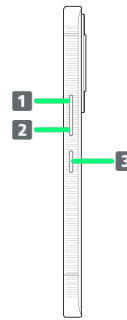

Name	Description
1 Volume Up Key	Increase volume.
2 Volume Down Key	Decrease volume.
3 Power Key	Turn Display off/on. Long Press to power on or activate Google Assistant™. ¹

- 1 Other applications can also be set up to activate. Also set whether to activate Camera by pressing Power Key twice. See "[Quick Operation Settings](#)" for details.

eSIM

eSIM is a type of SIM that is embedded in a device. If your device supports an eSIM, you only need to set up a service plan that you purchased with eSIM and start using it. You don't need a USIM card.



Handling eSIM


To learn about setting up your service plan with eSIM, see the following website.

<https://www.softbank.jp/mobile/support/product/sim/esim/> (Japanese)

Download your service plan with eSIM


1

In Home Screen,  (Settings)  Network & internet

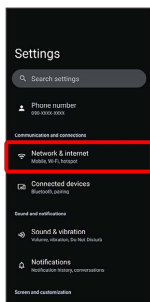


2

SIMs

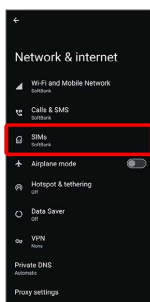


3

Add SIM

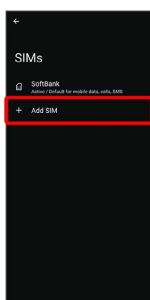

4

Download a new eSIM

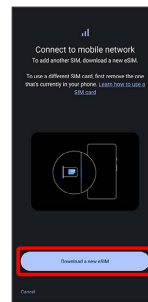

5

Scan a QR code




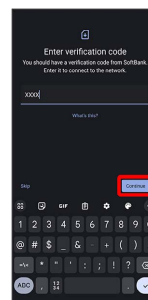
Depending on the situation, the above step may not be displayed and skip to the next step.

6

Download




7

Enter verification code  Continue

8

Close

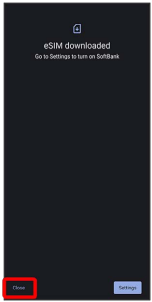




Your service plan with eSIM is downloaded.

To set up eSIM, Tap **Settings**. Continue by following onscreen prompts.

Enable or disable eSIM


1

In Home Screen,  (Settings)  **Network & internet**

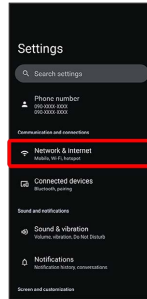


2

SIMs

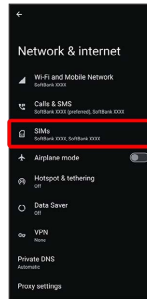

3

SoftBank XXXX for 

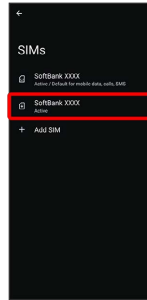

4

Use SIM



5

Turn off




You can set enabling or disabling eSIM.

· Tap **Use SIM** to enable eSIM.

Erase your service plan with eSIM


1

In Home Screen, (Settings) Network & internet

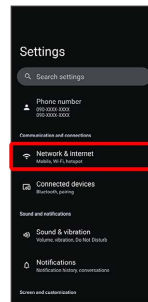


2

SIMs

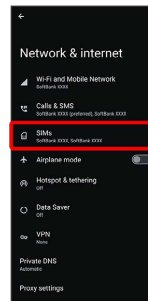


3

SoftBank XXXX for

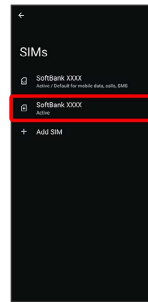


4


Erase SIM

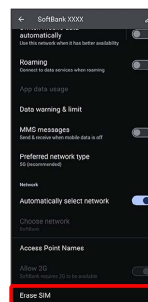


5

Erase

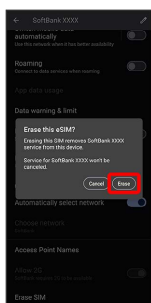

 Your service plan with eSIM is erased.

 **Restart your service plan with eSIM after erasing it**


Your service plan with eSIM is not terminated by erasing it. To restart it, you need a new QR code to download the plan again.

SIM Card

SIM Card is an IC card containing phone number and other customer information.

Handling SIM Card

Check the following regarding SIM Card handling.



1 IC (gold) chip

- For SIM Card handling, see the following Website.
<https://www.softbank.jp/mobile/support/protect/usim/> (Japanese)
- Avoid applying labels. May damage SIM Card.
- SIM is replaceable (at cost) in case of loss/damage.
- Wipe clean with a dry, soft cloth.
- Always keep the IC (gold) chip clean.

SIM Card Cautions

Observe the following when using SIM Card.

- Within Japan, SIM Card must be installed to make emergency calls (110, 119, 118).
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact [Customer Service](#).
- Customer is responsible for any damage caused by inserting SIM Card in an other-brand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- It is recommended that you back up information that is saved on SIM Card. SoftBank Corp. is not responsible for damages from saved information that is lost.
- Always power off handset before inserting/removing SIM Card.
- Note that SIM Card specifications and performance may change without notice.
- Return SIM Card to SoftBank Corp. when canceling subscription.
- SIM Card is the property of SoftBank Corp.
- Returned SIM Cards are recycled for environmental purposes.
- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. SoftBank Corp. does not guarantee operation whatsoever.


Inserting SIM Card

Always power off beforehand.

- Set SIM Card in Card Tray beforehand. Do not insert SIM Card without setting it in Card Tray.

1


With Display upward, insert SIM Removal Tool in removal hole in Card Tray

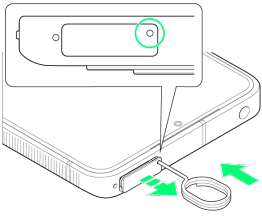

- Press firmly and straight until Card Tray ejects.

2


Pull out Card Tray

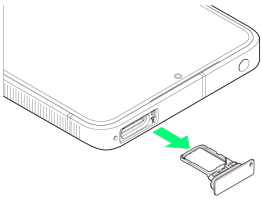

- With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
- Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.

3


Set SIM Card in Card Tray

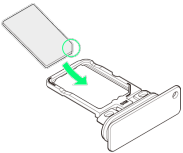

- Place gently, noting orientation of SIM Card (notch/IC (gold) chip facing down).
- Make sure SIM Card is in Card Tray. Inserting Card Tray with SIM Card on its edge may cause damage.

4


Check SIM Card Tray Slot



- SIM Card Tray Slot is on the display side.
- On the back side is SD Card Slot. Do not insert wrongly.

5

Insert Card Tray in SIM Card Tray Slot

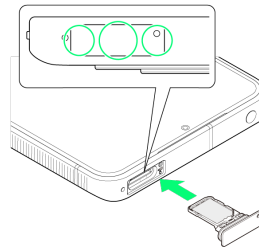

🚩 SIM Card is inserted.


- Do not insert Card Tray upside down.
- Insert gently all the way horizontally in direction shown.
- Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- To maintain water and dust resistance, use handset with Card Tray completely closed.

Removing SIM Card

Always power off beforehand.

1


With Display upward, insert SIM Removal Tool in removal hole in Card Tray

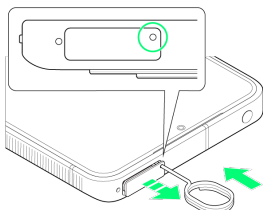

- Press firmly and straight until Card Tray ejects.

2


Pull out Card Tray

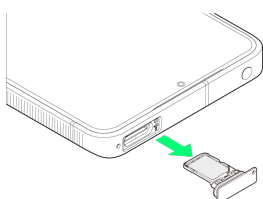

- With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
- Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.


3

Remove SIM Card

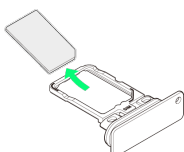

4


Check SIM Card Tray Slot

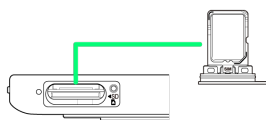

- SIM Card Tray Slot is on the display side.
- On the back side is SD Card Slot. Do not insert wrongly.

5

Insert Card Tray in SIM Card Tray Slot

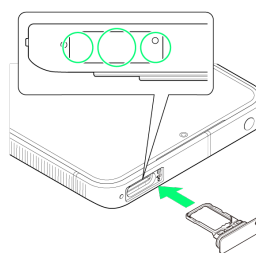

■ SIM Card is removed.

- Do not insert Card Tray upside down.
- Insert gently all the way horizontally in direction shown.
- Push Card Tray firmly where circled (○) so that there is no gap between handset and Card Tray.
- To maintain water and dust resistance, use handset with Card Tray completely closed.

Internal Storage and SD Card

Handset supports SD Card up to 1 TB. Some SD Cards may not operate properly.

Internal storage can be used for saving data including system data, applications, and video and photos taken with Camera.

! Internal Storage/SD Card Cautions

Data on Internal Storage/SD Card

Data on internal storage/SD Card may be lost/alterd due to accidents, malfunctions, repairs, handset upgrade/replacement, mishandling, etc. Back up important data regularly. SoftBank Corp. is not liable for any damages resulting from loss/alteration of data.

- Do not insert or remove SD Card forcefully.
- Do not touch terminals or expose them to metal objects.
- Never power off while reading or writing data.
- Make sure not to erase or overwrite data accidentally.

microSDXC Card

Handset supports microSDXC Cards (SDXC-compatible SD Cards). microSDXC Cards are supported by SDXC-compatible devices only.

Exchanging Data with Non-SDXC-Compatible Devices

To exchange data between handset and non-SDXC-compatible devices, use SD Cards (microSD/microSDHC Cards) supported by handset and those devices. Inserting a microSDXC Card used on handset in a non-SDXC-compatible device may corrupt card data. In such cases, do not format the microSDXC Card on that device even if prompted to do so.

Formatting deletes all microSDXC Card data and changes the file system. The original storage capacity may be unavailable after formatting. To use a corrupted microSDXC Card, format it on an SDXC-compatible device.

Save Location

By default, data, including photos and videos taken with handset, is saved in internal storage. Even with downloaded commercially-available applications described as saving data on SD Card, data is saved in internal storage.

- To save photos and videos taken with handset on SD Card, insert SD Card before using Camera, then change save location as follows.

In Home Screen, (Camera) → ⚙️ → Common →

Save To → SD card

🚫 SD Card Caution


Keep SD Card away from infants; may cause choking if swallowed.

Inserting SD Card

Always power off beforehand.

1


With Display upward, insert SIM Removal Tool in removal hole in Card Tray

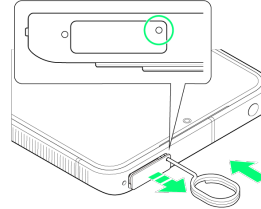

- Press firmly and straight until Card Tray ejects.

2


Pull out Card Tray

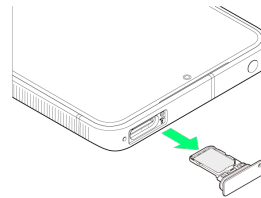

- With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
- Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.

3


Check SD Card Slot



- SD Card Slot is on the back side.
- On the display side is SIM Card Tray Slot. Do not insert wrongly.

4


Insert SD Card into SD Card Slot

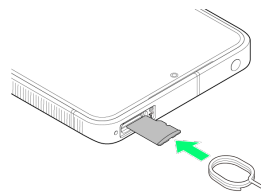

- Set SD Card with the metal chip facing down.
- Use SIM Removal Tool to insert in the direction shown in the figure until it clicks.

5

Insert Card Tray in SIM Card Tray Slot

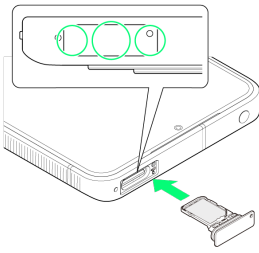

SD Card is inserted.

- Do not insert Card Tray upside down.
- Insert gently all the way horizontally in direction shown.
- Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- To maintain water and dust resistance, use handset with Card Tray completely closed.


Formatting SD Card

When using a new SD Card for the first time, always format it on handset.

- Formatting erases all data on SD Card. Format SD Card with caution.
- When formatting, keep handset charged or charge it adequately beforehand.
- Insert SD Card beforehand. See "Inserting SD Card" for details.


1

In Home Screen, (Settings)

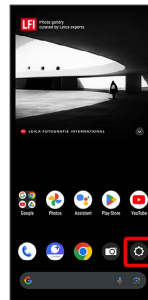


2

Storage

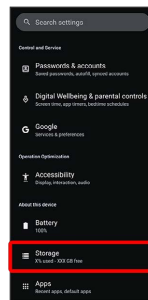


3

This device

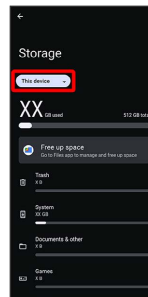

4

SD card

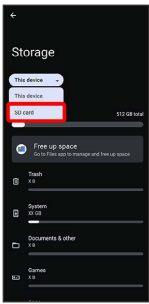

5




6

Format




7

Format

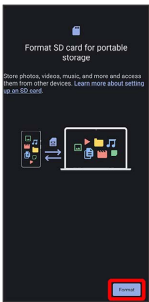

8


Format

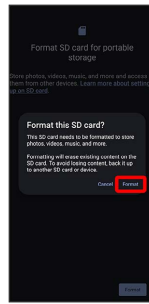

9

Done



 All data on SD Card is erased.

Unmounting SD Card

1

In Home Screen, (Settings)



2

Storage



Storage menu opens.


3

This device




4

SD card

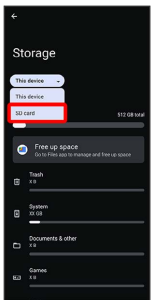


5

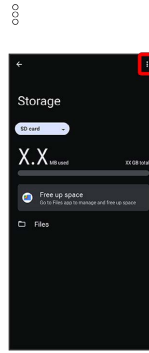

6

Eject

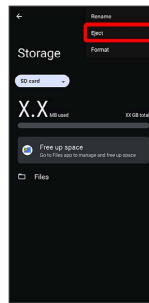

SD Card is unmounted.

+ Mounting SD Card


In Storage menu, This device → SD card → ⋮ → Mount

Removing SD Card

Always power off beforehand.

1


With Display upward, insert SIM Removal Tool in removal hole in Card Tray

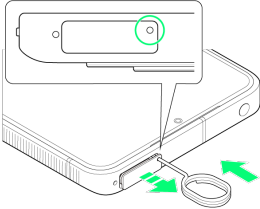

- Press firmly and straight until Card Tray ejects.

2


Pull out Card Tray

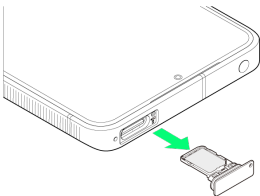

- With Display upward, pull out Card Tray. Pulling out Card Tray with Display downward or handset held upright can allow SIM Card to fall from Card Tray and become misplaced.
- Do not pull Card Tray forcefully or at an angle; damage may result. Gently pull Card Tray out horizontally.

3


Check SD Card Slot



- SD Card Slot is on the back side.
- On the display side is SIM Card Tray Slot.

4


Remove SD Card

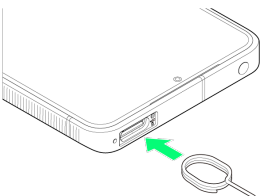


- Use SIM Removal Tool to push in the direction shown in the figure until it clicks.

5

Insert Card Tray in SIM Card Tray Slot

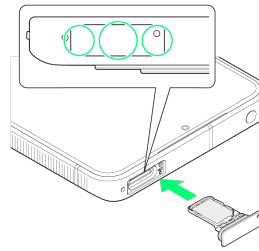

 SD Card is removed.

- Do not insert Card Tray upside down.
- Insert gently all the way horizontally in direction shown.
- Push Card Tray firmly where circled (O) so that there is no gap between handset and Card Tray.
- To maintain water and dust resistance, use handset with Card Tray completely closed.

Charging Handset

Battery is built into handset.

Internal Battery

A lithium-ion battery is built into handset; it is not removable.

Recycling

This product requires a lithium-ion battery. Lithium-ion batteries are recyclable. To recycle a used lithium-ion battery, take it to any shop displaying the recycling symbol.



Battery Cautions

Storage

To help maintain performance and life of Internal Battery, do not store in the following conditions (battery level should be at approximately 40% for optimal storage).

- Full (immediately after charging is complete)
- Exhausted (too low to power on handset)

Bulges of Internal Battery

Depending on use, bulges may appear near end of battery life; this does not affect safety.


Internal Battery Replacement

Internal Battery is a consumable item; may need to be replaced if operating time shortens noticeably. Internal Battery is not user replaceable; its replacement incurs fees and requires handset submission to a SoftBank Shop or other appropriate servicer. For details, contact a SoftBank Shop or [Customer Service](#).

Charging with AC Adaptor


Use an AC Adaptor (USB Type-C™ quick charge AC Adaptor for USB PD-PPS [ZSDBAV] (SBAC22-TCPD)) (optional accessory).

For information on other peripheral devices, see SoftBank Website.

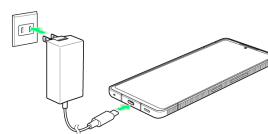

1

Insert USB Type-C plug of AC Adaptor into External Connection Jack

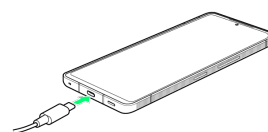

2

Raise plug on AC Adaptor and plug into outlet

Charging starts.

3

After charging, unplug AC Adaptor from outlet and disconnect from handset

Charging ends.

Lock Screen while Charging

Charging progress, time until charging completes (approximate), etc. appear in lock screen.

- "Charging": normal charging
- "Charging rapidly": rapid charging
- "Charging slowly": low-speed charging; handset begins low-speed charging depending on the conditions, such as when nearly charged.
- "In direct charging": direct charging. See "[Battery Settings](#)" for details.
- "Charging wirelessly": Displayed when charging with a wireless charger. See "[Charging with a Wireless Charger](#)" for details.

! Charging Cautions

Water Resistance

AC Adaptor is not waterproof. Never connect a USB Type-C plug while handset or charger is wet.

Handset is water resistant; however, if a USB Type-C plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or a USB Type-C plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.

Handling Cords


Do not pull, bend, or twist cord; may damage the cord.

About Charging Abroad

SoftBank Corp. is not liable for problems resulting from charging handset abroad.

Charging with a Wireless Charger

A third party wireless charger can be used to charge the Handset. See the User Guide for your wireless charger for information on charging the Handset.

Products with the  icon comply with the wireless charging standard issued by the Wireless Power Consortium (WPC).

- "Qi" is a registered trademark of Wireless Power Consortium.
- Align the wireless charging point on the Handset correctly with position of the wireless charger. See "[Handset \(Back and Sides\)](#)" for the location of the wireless charging point on the Handset.
- Remove the Handset case and/or cover, if fitted.

! Wireless Charging Cautions

Note the following when charging with a wireless charger:


- Disable the Handset's vibrate function during charging. Enabling the vibrate function may prevent complete charging or cause the handset to fall off the charger.
- If charging causes audible interference on a TV or radio, move the charger further away from the TV or radio.
- If other wireless chargers are nearby, maintain a distance of at least 30 cm between chargers. Failing to do so may prevent the handset from being correctly detected or otherwise prevent charging.
- Charging may adversely affect calls or data communication.
- Do not place any metallic material between the handset and the Wireless Charger. Metallic materials may prevent charging or cause heat generation.
- Do not place objects such as IC cards between the handset and the Wireless Charger. Doing so may damage the IC card.
- Do not place the handset on a Wireless Charger while the AC Adaptor or USB Type-C cable is connected to the handset.
- Using the camera during charging may result in noise in the images.
- Using the handset during charging may stop or slow down charging (to avoid temperature increases in the handset).

Power On/Off

Powering On

1

Long Press Power Key until "Powered by Android" appears

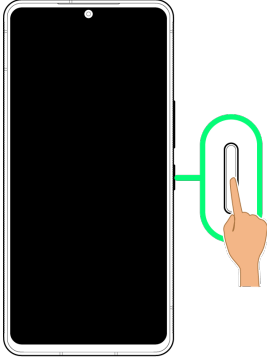


Handset powers on, and lock screen appears after a while.

- An initial settings wizard may appear the first time handset is powered on. For details on initial settings, see "Making Initial Settings."

2

Flick lock screen up

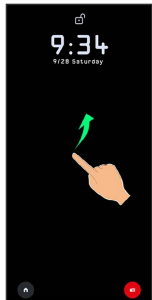


Home Screen appears.

- After Flicking screen up when lock icon is displayed, enter pattern / lock no. (PIN) / password to unlock.

Powering Off

1


Power Key + Volume Up Key

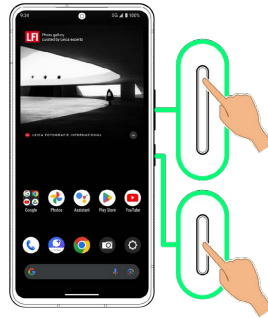

Power menu opens.

2

Power off

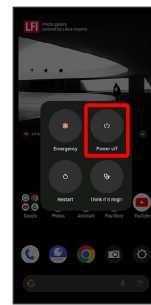

Handset powers off.

Power Menu

If Pattern/Lock No. (PIN)/Password for unlocking screen is set, or face/fingerprint authentication is used, Lockdown appears in Power menu.

Tap Lockdown to stop displaying notifications in lock screen, and disable screen unlocking by extended unlock, face authentication, or fingerprint authentication. To disable lockdown, unlock screen with set screen unlock method (Pattern/Lock No. (PIN)/Password).

Making Initial Settings

When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google™ account, and other settings. Follow onscreen instructions to set items. You can also easily transfer data from a previously used smartphone, by connecting the included Quick Switch Adapter to handset External Connection Jack and then connecting the smartphone using a cable.

Insert SIM Card before powering on handset.

Transferring Data

Before Transferring Data

The following are required for transferring data.

- Handset
- Quick Switch Adapter
- The previously used smartphone
- Cable used with the previous smartphone

How to Transfer Data

Data transfer is performed from the initial settings screen that appears the first time handset is powered on. From "Copy apps & data" in the initial settings screen, follow onscreen prompts to connect the smartphones and transfer data.

- For details on transferring data using the Quick Switch Adapter, see the following website.
https://k-tai.sharp.co.jp/support/datacopy/pdf/easy_data_copy.pdf (Japanese)
- Charge handset and previously used smartphone adequately beforehand.
- Connect to Wi-Fi or mobile network beforehand.
- If transferring data from an iPhone®, set iMessage® and FaceTime® off beforehand.
- If iPhone data is encrypted, iTunes® password is required.

To Transfer Data after Initial Settings Have Been Completed

For details on transferring data after initial settings have been completed, see the following website.

https://k-tai.sharp.co.jp/support/datacopy/pdf/easy_data_copy.pdf (Japanese)

eSIM Cautions


When using eSIM, confirm the following before powering on.

- Remove SIM Card from handset.
- Make sure that handset can connect to the Wi-Fi network.
- Have the QR code ready for eSIM registration.

Making Initial Settings

1


Select language then **Start**

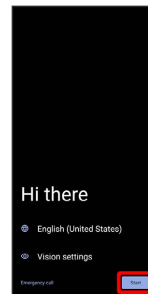

- To set visual assistance, Tap **Vision settings**. See "Accessibility" for details.
- To place an emergency call, Tap **Emergency call**.

2


Set Wi-Fi items

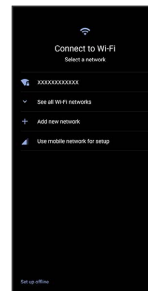

- Follow onscreen prompts.
- To complete initial settings via mobile network, select **Use mobile network for setup**. Continue by following onscreen prompts.
- When using eSIM, after connecting to Wi-Fi, Tap **Download a new eSIM** and follow onscreen prompts.

3


Next

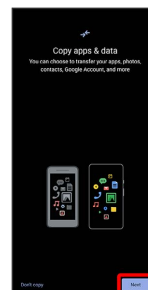

- To not copy data from another mobile, etc., Tap **Don't copy**.

4

Power on previous smartphone and unlock it → Next

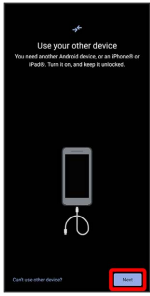

· If previous smartphone is unusable, Tap **Can't use other device?** and follow onscreen prompts.

5

Prepare cable from previous smartphone → Next



· If cable from previous smartphone is unavailable, Tap **No cable?** and follow onscreen prompts.

6


Connect the cable to previous smartphone → Next



· If the cable is unusable, Tap **Cable doesn't fit?** and follow onscreen prompts.

7


Insert USB plug on cable into Type-A jack on Quick Switch Adapter, and insert USB Type-C plug on Quick Switch Adapter into External Connection Jack

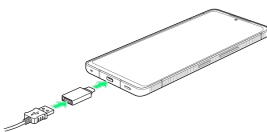

· If Quick Switch Adapter is unavailable, Tap **Cable doesn't fit?** → **No adapter?** .
 · If confirmation appears on previous smartphone, follow onscreen prompts.

8


Set up a Google Account

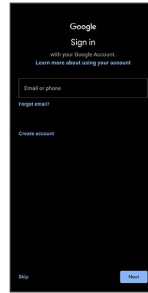

· See "Google Account" for details on a Google Account.
 · After setting a Google account, a list of transferable data appears.

9

I agree

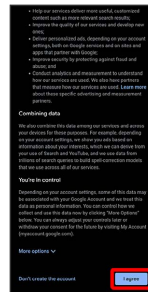

10

On previous smartphone, follow onscreen prompts



11


Tap items to import → Copy



Import starts.


12

Set/check each item

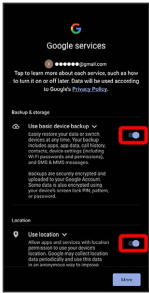


13

Accept

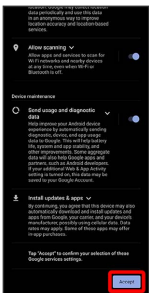

14

SKIP

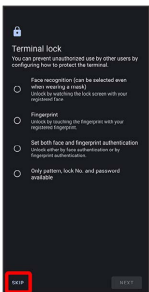

- Tap method → NEXT to set selected method. See "Using Fingerprint Authentication Function," "Setting Screen to Unlock by Tracing Pattern," "Requiring Lock No. (PIN) Entry for Unlocking Screen," "Setting Screen to Unlock with Password," and "Using Face Authentication" for details.

15

Continue



- To stop initial settings and be reminded later, Tap Leave & get reminder .
- Follow onscreen prompts to set up Google Assistant.

16


Skip



- After Tapping Add a card follow onscreen prompts to save card information.


17

Set each item → Next

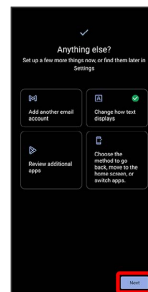

18

Done

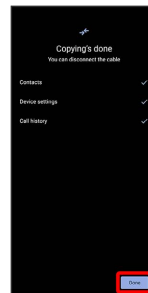

Import is complete, and initial settings are complete.

- After import is complete, remove cable.
- If confirmation appears, follow onscreen prompts.

Quick Switch Adapter Usage Cautions

Use only for transferring data, and to not use for any other purpose (such as charging).

Google Account

Use a Google Account and get more convenience with Google services. A Google Account is required to use some services or fully use some applications.

Google Account Cautions

Google Account Mail Address & Password


Be careful not to forget your Google account mail address and password.

Google Account Operations & User Interface

Operations and user interface are subject to change due to automatic application updates or other reasons.

Creating a Google Account


1

In Home Screen,  (Settings)




2

Passwords & accounts

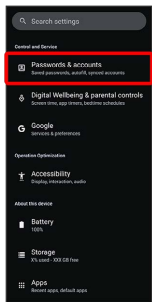


3


Add account

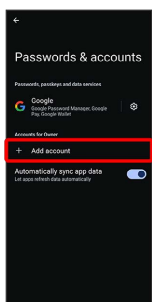

4


Google

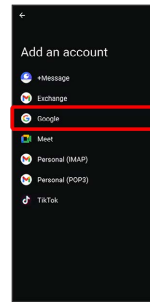

 Window for logging in to a Google account opens.


5

Create account

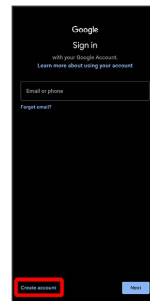



6

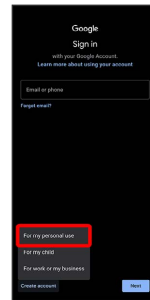
For my personal use



To create a child's account, Tap **For my child**, then follow onscreen prompts.

7

Enter first name  Enter last name  **Next**

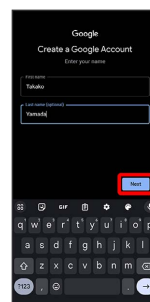


8

Set/enter date of birth and gender → Next



9


Select a mail address → Next

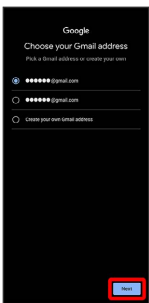

To create another mail address, Tap Create your own Gmail address → Enter user name (mail address) → Next .

10

Enter password → Next

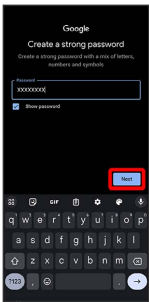

11

Yes, I'm in



To add a phone number for security only, Tap More options . Continue by following onscreen prompts.
To not add a phone number, Tap Skip .


12

Next




13

Check the privacy policy and terms of use | agree

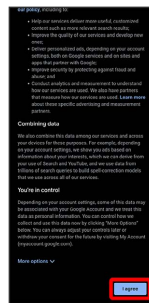

14

Select whether to enable data backup → Accept

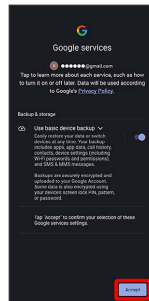


Account is created.

Signing in to a Google Account

1

In window for logging in to a Google account, enter mail address → **Next**

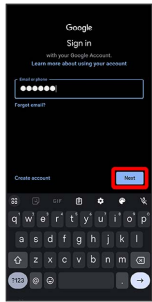


2


Enter password → **Next**



3

Continue by following onscreen prompts

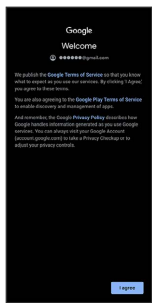


 You are signed in to your Google Account.

Unlocking Screen

Screen Lock

After a period of inactivity, Display turns off to save battery power (screen lock active).
Screen lock prevents accidental Touchscreen operation.

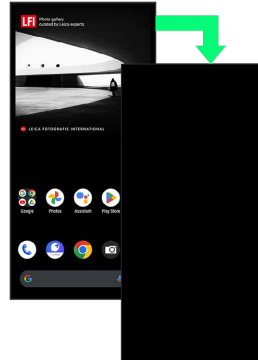

• To activate screen lock manually, Press Power Key when Display is turned on.


If Screen Lock Activates while Playing Music

Music continues to play. For operation, Press Power Key to open lock screen and use operation panel (operations may vary depending on application).

Unlocking Screen

1


When Display is turned off (screen lock active), Power Key

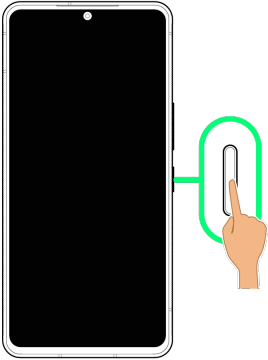


Lock screen appears.

2

Flick lock screen up

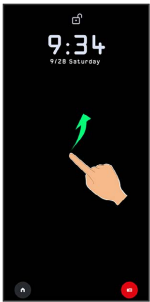

Screen is unlocked.

- To change the unlock method for enhanced security, set handset to require pattern drawing or lock no. (PIN)/ password entry for unlocking screen or set screen to be unlocked with your fingerprint/face as needed. See "[Using Fingerprint Authentication Function](#)," "[Setting Screen to Unlock by Tracing Pattern](#)," "[Requiring Lock No. \(PIN\) Entry for Unlocking Screen](#)," "[Setting Screen to Unlock with Password](#)," and "[Using Face Authentication](#)" for details.
- After Flicking screen up when  is displayed, enter pattern / lock no. (PIN) / password to unlock.

Another Way to Turn On Display

Set Display to turn on when handset is picked up and held still (Turn screen on by holding). See "[Bright Keep Settings](#)" for details.

Case


Attach Case to handset to protect back and sides of handset from damage caused by dropping or impact.

Attaching Case

Attach Case from top (Standard Camera side) of handset. Attaching from bottom may cause damage to Case.

1

Align handset with Case, put top of handset (Standard Camera side) in Case, and fit in direction shown




Case is attached.

Removing Case

Remove Case from bottom of handset. Removing from top (Standard Camera side) may cause damage to Case.

1

Pick up bottom of handset in direction shown and remove it from Case



Case is removed.

Lens Cap

Attach Lens Cap to Standard Camera to protect Lens from scratches and soiling.

Attaching Lens Cap

1

Attach Lens Cap to Standard Camera




🚩 Lens Cap is attached.

- Align "Leitz" logo on Lens Cap with "Leitz" logo shown in the figure when attaching.
- Note that Lens Cap drops off easily if it's not attached in the correct position.

Removing Lens Cap

1

Rotate Lens Cap to remove it

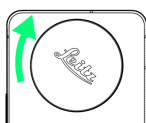

🚩 Lens Cap is removed.


Basic Operations

Basic Operations.....	32
Using Touchscreen.....	33
Using Manner Mode.....	34
Using Airplane Mode.....	36
Text Entry.....	37
Using Fingerprint Authentication Function.....	38
Updating the System.....	41

Basic Operations


Selecting Options and Navigating Screens


Tap items, icons, onscreen keys, etc. to open assigned items.

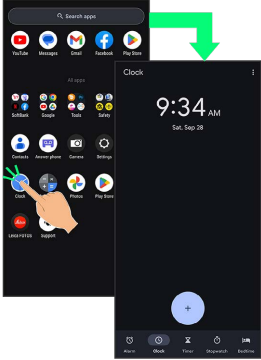

To return to the previous screen, Flick the edge of screen to the left/right.


Moving to Home Screen


The area at the bottom of the screen where  is displayed is called "Navigation Bar." Flick Navigation Bar up to move to Home Screen.

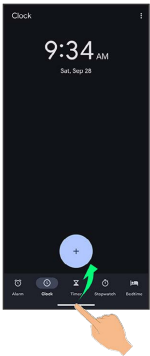

Menu Operations


1

Tap  at Display top for available settings and items.

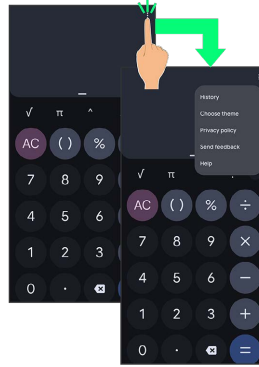

2

Screens may also have settings and items that are available by Touching & Holding Display.

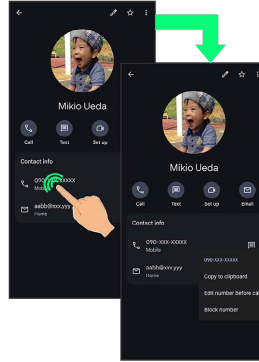

Using Touchscreen

Handset uses a touchscreen-type Display. Operate with your fingers on Display.

About Touchscreen

In Case of Unintended Operation

If handset initiates operation without Touchscreen (Display) being operated or does not respond after Touchscreen being operated, Press Power Key to turn off Display, Press Power Key again to turn on Display and then operate handset.

Touchscreen Usage Notes

Touchscreen may not respond in these situations:

- Use with gloves/long fingernails
When using handset with gloves on, enable [glove mode](#).
- Use of pens, pencils or sharp objects
- Use with objects on/against Display
- Use while wet


Touchscreen Usage Cautions

To prevent malfunctions, do not:

- Touch Display with wet fingers
- Use if Display is wet
If Display is wet, wipe it with a soft cloth.
- Subject Display to force/pressure
- Place a sticker or shield (commercially-available protective film, privacy protector shield, etc.) on Display


Tap

Contact Display lightly and briefly.

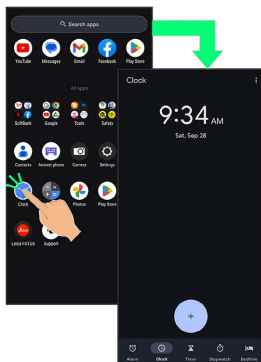


Touch & Hold

Contact Display lightly; release finger when screen changes.

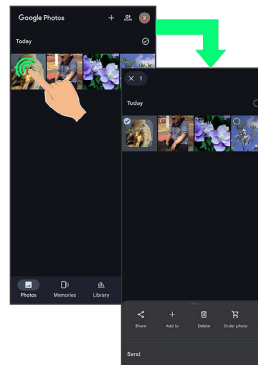


Drag

Touch icon or other item lightly, move it where desired, and release finger.

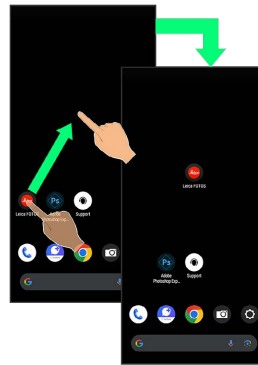


Flick (Swipe)

Contact Display lightly, then brush screen up/down or left/right.

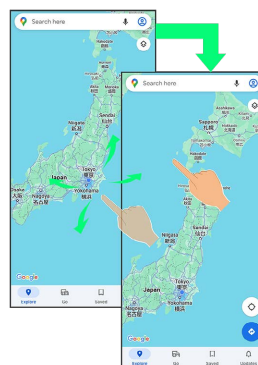

Pinch/Spread

Contact Display lightly, then move fingers toward each other (Pinch) or away from each other (Spread).

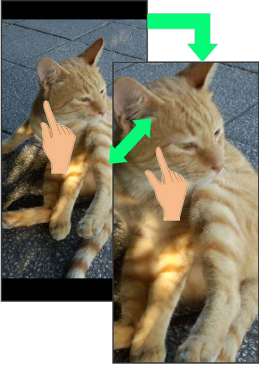

Using Manner Mode

Mute ringtones and other handset sounds to avoid disturbing others around you.

Manner mode setting is also accessible from Quick Settings Window.

Manner Mode Options

Settable items are the following.

- Vibe
Ringtones and other handset sounds are muted; handset vibrates for incoming calls/messages, etc.
- Mute
Ringtones and other handset sounds are muted; handset does not vibrate for incoming calls/messages, etc.

Manner Mode Cautions


Camera shutter sound, video recording tones, alarms, media sound, etc. still play even in Manner mode.


- Alternatively, to mute alarms and media sound, use "Do Not Disturb." See "[Sound & Vibration Settings](#)" for details.

Activating Manner Mode (Vibe)


1


Press Volume Up/Down Key

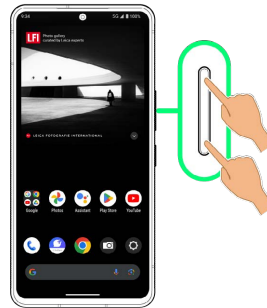

 Volume bar appears.

2

 (Manner OFF)

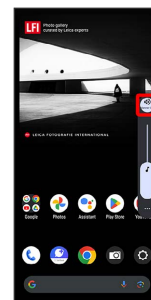

3

(Vibe)



Handset enters Manner mode (vibe).

+ Manner Mode (Vibe) Operations

Setting from Quick Settings

Manner mode (vibe) setting is also accessible from Quick Settings Window.

Flick Status Bar down → Flick Notifications Window down → Manner mode OFF

Icon changes to (Vibe), and handset enters Manner mode (vibe).

Canceling Manner Mode (Vibe)


Press Volume Up/Down Key for volume bar, (Vibe) → (Manner OFF)

Handset exits Manner mode.

Activating Manner Mode (Mute)

1


Press Volume Up/Down Key

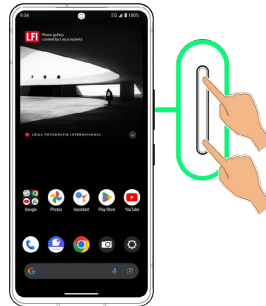

Volume bar appears.


2

(Manner OFF)

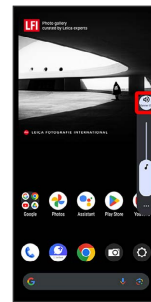

3

(Mute)

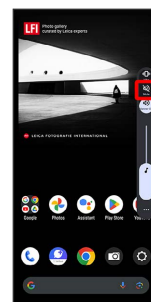

Handset enters Manner mode (mute).

+ Manner Mode (Mute) Operations




Setting from Quick Settings


Manner mode (mute) setting is also accessible from Quick Settings Window.

Flick Status Bar down → Flick Notifications Window down → Manner mode OFF → Manner mode (Vibe)

Icon changes to (Mute), and handset enters Manner mode (mute).

Canceling Manner Mode (Mute)

Press Volume Up/Down Key for volume bar,  (Mute)
  (Manner OFF)

 Handset exits Manner mode.


Using Airplane Mode


Leaving power on, suspend signal-transmitting functions.

Activating Airplane Mode

1

Flick Status Bar down

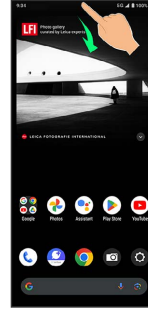


 Notifications Window opens.

2

Flick Notifications Window down





 Quick Settings Window opens.

· Alternatively, to open Quick Settings Window, Flick Status Bar down with two fingers with Notifications Window closed.

3

Airplane mode Off (On)

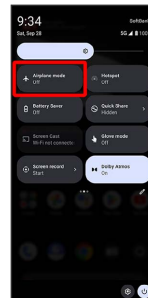

 Airplane mode activates.

+ Canceling Airplane Mode

In Quick Settings Window, **Airplane mode On** (**Off**)

! Airplane Mode Caution


Wi-Fi and Bluetooth® functions can be enabled after placing handset in Airplane mode.

While connected to another device with handset Bluetooth® function, placing handset in Airplane mode does not disable Bluetooth® function.

Text Entry





Keyboards




Use onscreen keyboards for text entry.

- Tap Text entry field for keyboard. To hide it, Tap .
- Text entry descriptions are for Google Keyboard (default input method).


+ Enabling One-Handed Mode

Shrink onscreen keyboard for easier one-handed operation; switch between Left-handed mode and Right-handed mode as needed.

When keyboard is open, Touch & Hold  /  and slide finger over  / .

- Tap  /  to switch between Right-handed mode and Left-handed mode.
- Tap  to disable One-handed mode.



Keyboard Layout

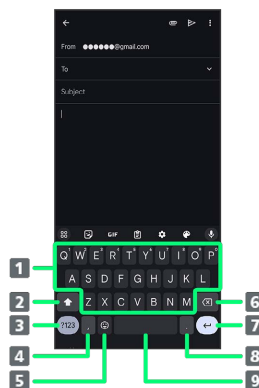



- 1 Enter characters.
- 2 Toggle case.
- 3 Switch to number/symbol keyboard.
- 4 Enter comma. Touch & Hold to specify settings or enable One-handed mode.
- 5 Switch to emoji/Bitmoji/Stickers/GIFs/emoticon keyboard.
- 6 Delete characters.
- 7 Insert line break. Touch & Hold for options; enable One-handed mode, or move to other entry fields.
- 8 Enter period. Touch & Hold for a set of other punctuation marks and symbols.
- 9 Enter space.




Switching Keyboards

1

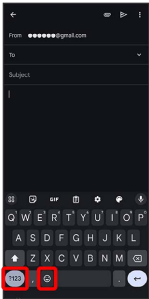In a text entry window,  / 



 Entry mode is switched.


- Tap  /  /  to toggle between alphabet entry mode and number/symbol/emoji/emoticon entry mode.


Entering Letters






To enter Phone:

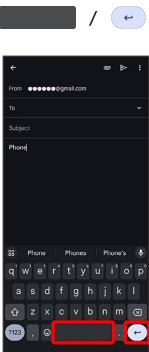1

In a text entry window,          



 Phone is entered.

- To toggle case, Tap  /  before typing a letter. Tap  /  twice to type in all capitals(). By default, the first word of each sentence is capitalized automatically.

Using Fingerprint Authentication Function

Fingerprint Authentication Function

Hold finger to sensor to authenticate and use handset.
Use this function to unlock screen.

Fingerprint Authentication Function Cautions

Observe the following when using the fingerprint authentication function.

- Authentication is based on fingerprint characteristics. This function may be unusable if your fingerprint characteristics are not prominent.
- Ability to authenticate (assuming finger is held to sensor correctly) depends on conditions of use. Saving your fingerprint may be difficult if finger is in any of the following conditions. Washing/wiping hands, using different finger, saving a wider area, etc. may improve capability.
 - Wrinkled with moisture (e.g., after a bath)
 - Wet with water, sweat, etc.
 - Dry
 - Covered with handcream, etc.
 - Stained with mud or oil
 - Rough or damaged (cut, sore, etc.)
 - Fingerprint is faint (finger surface is worn)
 - Fingerprint is deformed due to weight gain or loss
 - Finger surface condition at the time of authentication is extremely different than when fingerprint was saved
- Fingerprint authentication technology does not guarantee successful personal authentication/verification. SoftBank Corp. is not liable for any damages resulting from use of handset by third party or lost opportunities to use handset.

Saving Fingerprints


1

In Home Screen, (Settings)



2


Security & privacy

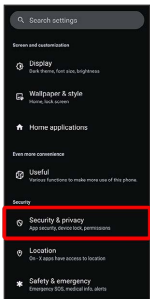

Security & privacy menu opens.


3

Device unlock

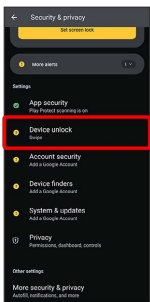

4


Fingerprint

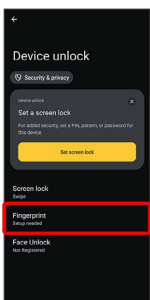

Fingerprint settings open.


5

Register fingerprint

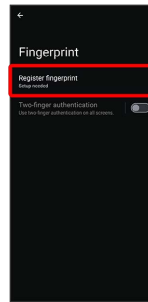

6


Follow onscreen prompts and set pattern / lock no. (PIN) / password for unlocking screen

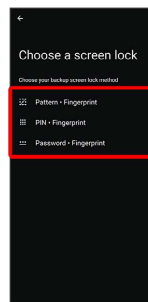

- This is a backup method for unlocking the screen if unable to authenticate with your fingerprint.
- If method for unlocking screen is setting other than **None** or **Swipe**, first unlock screen.
- See "[Setting Screen to Unlock by Tracing Pattern](#)," "[Requiring Lock No. \(PIN\) Entry for Unlocking Screen](#)," and "[Setting Screen to Unlock with Password](#)" for details on setting a method for unlocking screen.

7

I agree

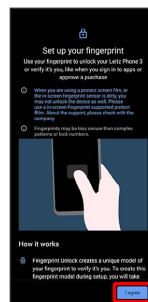

- If confirmation appears, follow onscreen prompts.

8

Hold finger to sensor until handset vibrates



- If finger is already saved, use another finger.

9

Done



 Fingerprint is saved.

- To save other fingerprints, Tap **Add another**.

Saving Fingerprints

Savable Number of Fingerprints

Save up to 5 fingerprints.

Backup Screen Unlock Methods


Make sure not to forget pattern / lock no. (PIN) / password set as backup for unlocking screen.

Fingerprint Saving Operations

Setting/Changing Names of Saved Fingerprints





In fingerprint settings, **Register fingerprint** → Enter pattern / lock no. (PIN) / password → Tap saved fingerprint → Enter name → **OK**

Deleting Fingerprints

In fingerprint settings, **Register fingerprint** → Enter pattern / lock no. (PIN) / password →  for saved fingerprint → **YES, REMOVE** / **DELETE**

Setting Whether to Use Two Fingers when Authenticating

In fingerprint settings,  /  for "Two-finger authentication"

- Tap  to toggle on () ,  to toggle off () .
- Save at least two fingerprints beforehand.
- If confirmation appears, follow onscreen prompts.

Setting Whether to Use Two Fingers on All Authentication Prompts when using Two Fingers for Fingerprint Authentication

In fingerprint settings, **Two-finger authentication** → **Use two-finger authentication on all screens.** / **Use one-finger authentication for unlock only.**

- Save at least two fingerprints beforehand.

Troubleshooting

- Q. Failure to save fingerprint
- A. Keep your finger pressed on the sensor slightly harder. Using a different finger may also improve authentication performance.

Fingerprint Sensor Cautions


Observe the following when using Fingerprint Sensor.


- Do not hit or subject handset to excessive shock. Do not hit or subject handset to excessive shock. Do not scratch sensor surface or poke with a pen, pin, or other pointed object.
- Do not place stickers on sensor surface or mark with ink.
- Dust, smudges, or other soiling on sensor may affect authentication. Clean the Fingerprint Sensor surface from time to time.
- Holding finger to sensor for too short/long a time may affect authentication. Hold finger straight on sensor so that spiral of fingerprint is in center of sensor.
- Fingerprint Sensor may not activate if you start saving your fingerprint or performing authentication with your finger on the sensor. Release it and retry.
- To save or authenticate your fingerprint, press the screen firmly.
- If you have a protective film on the screen, or if the fingerprint sensor area on the screen is dirty, the lock will not get unlocked.
- When attaching a screen protection film, use one that is fingerprint sensor compatible. Also, save fingerprint after attaching the screen protection film.
- The brightness and color of the screen may change slightly while your fingerprint is being authenticated.

Performing Fingerprint Authentication

1

In authentication window, hold finger to sensor

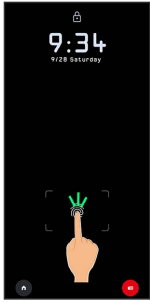

 Fingerprint is authenticated.

- When **Tap to check phone** is enabled, Fingerprint Sensor can be displayed by tapping the screen while the screen is off (screen locked). Also if **You can unlock screen just by touching the fingerprint sensor even when the screen is turned off** is enabled, hold finger to Fingerprint Sensor while Display is off (screen lock) to unlock screen. See "[Display Settings](#)" for details.

? Troubleshooting

- Q. Fingerprint is not authenticated
- A. Remove finger then try authenticating again.
Or, Flick lock screen up and unlock screen using backup unlock method set when saving fingerprint.

Updating the System

Check whether system updates are required via the network, and update manually as required.

Software Update Cautions

Applications

Applications may be updated or newly added, or names, icons, operations and user interfaces of applications may be changed.

System Update Cautions

Observe the following before a system update.

- It may take time to update the system.
- Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during a system update may cause an update failure (an update failure may disable handset).
- Never remove SIM Card or power off handset during a system update. Doing so may cause the update to fail. An update failure may disable handset. If handset becomes disabled, contact [Customer Service](#).



Data Backup


Saved data may be lost depending on condition of handset (malfunctioning, damaged, water seepage, etc.). It is recommended that you back up important data before updating the system. SoftBank Corp. is not responsible for damages from loss of data.

Updating the System

Notification appears when a system update is required. Tap the notification and follow onscreen prompts. If notification does not appear, check whether a system update is required as follows and update the system.


1


In Home Screen,  (Settings)  System

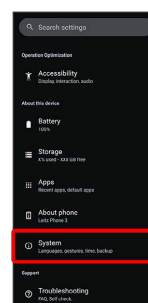

2


System update

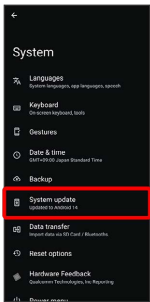

 System update window appears.

3


Check for update

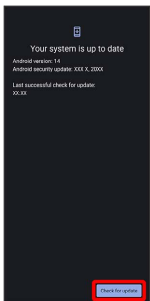

4

Continue by following onscreen prompts



 System update begins.

- Use other functions during a system update. However, for 10 days after a system update notification, update installation pauses while using other functions. Tap **Resume** to restart the installation and also use other functions.
- After the system update proceeds, **Restart now** appears at the end. Tap and complete the system update.

If Handset Does Not Restart after Tapping "Restart now"

An update failure may disable handset. If handset is disabled, contact your contracted SoftBank [Customer Service](#).

Handset Interface


Handset Screens.....	44
Icons at Display Top (Status Bar).....	52
Checking Notifications (Notifications Window).....	54
Checking Notifications (Quick Settings Window).....	56

Handset Screens

Lock Screen Layout

Lock screen appears at power on or when Power Key is Pressed while Display is turned off (screen lock active). From lock screen, unlock screen or activate applications by Long Pressing shortcuts at either end of Display bottom. By default, Wallpaper changes randomly each time lock screen appears (Lock Photo Shuffle). Change Wallpaper for lock screen as needed. See "[Changing Wallpaper](#)" for details.

- Touch & Hold open area of lock screen → Tap to change to set the clock and icons displayed on lock screen. See "[Wallpaper & style](#)" for details.

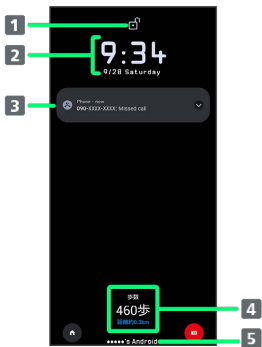


- 1 Display screen lock status.
- 2 Time and date appear here.
- 3 Notifications of incoming calls/messages or from applications, etc. appear here.¹
- 4 Messages and news from EMOPA appear here (EMOPA area).²
- 5 Show message set for lock screen.³

- 1 If [Organize notifications on the lock screen](#) is enabled, a notification viewed the first time does not appear the second and subsequent times. See "[Display Settings](#)" and "[Notifications](#)" for details.
- 2 Appear when EMOPA is configured. See "[エモパーを利用する \(https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34683/\)](#)" (Japanese) for details.
- 3 Appears when [Add text on lock screen](#) is set. See "[Display Settings](#)" for details.

Home Screen & App List

Most handset operations start in Home Screen or in app list. Flick Home Screen up to display app list and activate applications or change handset settings (To change Home Screen, switch to another home screen app.)

Home Screen Layout

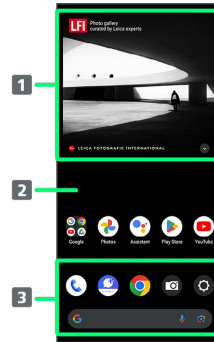


- 1 LFI Widget
 - Show photos published in LEICA FOTOGRFIE INTERNATIONAL (LFI).
 - Tap / to toggle display of photos.¹
 - Tap photo to view detailed information, etc. about photo on LFI GALLERY website.
- 2 Desktop sheet
 - Place application shortcuts, folders, widgets freely.
 - Flick left/right to toggle sheets.
- 3 Favorites Tray
 - Place application shortcuts and folders freely. Activate applications quickly from any Home Screen sheet or use Google™ Search Bar.

- 1 Photo types to display can be set. See "[Setting LFI Widget](#)" for details.


Toggling Home Screen Sheets

Home Screen consists of several sheets. Flick left/right to toggle Home Screen sheets.

- Adding widgets and function shortcuts in Home Screen adds more Home Screen sheets. See "[Adding Shortcuts](#)" and "[Adding Widgets](#)" for details.

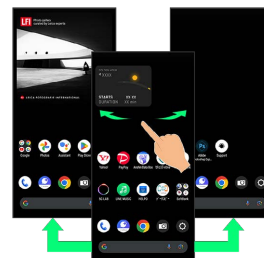

App List Layout

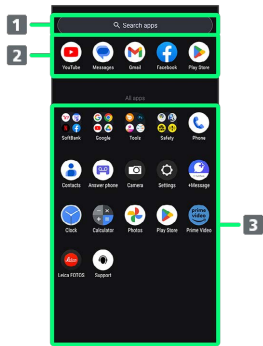

- 1 Search for application
- 2 View predicted applications
- 3 App list
Tap to activate applications. See "[Activating Applications](#)" for details.

Portrait Orientation & Landscape Orientation

⌵ appears in Navigation Bar when handset is rotated horizontally. Tap ⌵ to switch current screen to landscape orientation. To switch screen to portrait orientation, rotate handset vertically and Tap ⌵.

Enable **Auto-rotate screen** to allow current screen to switch to landscape orientation when handset is rotated sideways. See "[Quick Settings Window Layout](#)," "[Display Settings](#)," and "[Accessibility](#)" for details.




Multi-Window

Split screen to view and operate two applications.

- Viewing in Multi-Window is not available for some applications.

1

Drag bottom of Display up

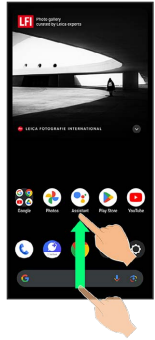

Recent apps window opens.


2

Drag recently used applications to the left or right and Select application to use in history



3


Split screen

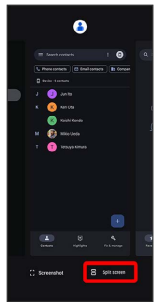

Selected application opens at top of Display.

4

Drag recently used applications to the left or right and Tap application to use in history

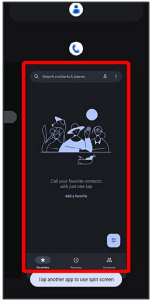

Selected applications open at top and bottom of Display (Multi-Window).


- Alternatively, in recent apps window, Tap icon of application in list → **Split screen** to split the screen.

+ Multi-Window Operations


Changing Top/Bottom Areas of Multi-Window

Drag pane bar () up or down

Switching Top/Bottom Display of Multi-Window


Tap pane bar () twice


Exiting Multi-Window

Flick pane bar () up/down

Capturing Screenshots

Press Power Key and Volume Down Key at the same time to capture a screenshot of the current screen.

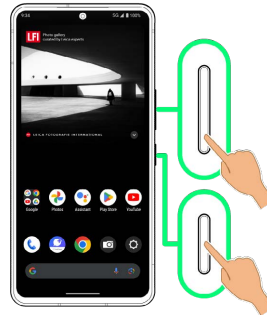


- May be unavailable for some applications.
- View captured screenshots in  (Photos), etc.
- After capturing a screenshot, tap **Capture more** to zoom in/out to an area not shown in the screenshot, and save. Follow onscreen prompts. Some screens may not be supported.
- Alternatively, use Clip Now and Touch & Hold corner of Display to capture a screenshot. See "[スクリーンショットを撮る \(Clip Now\)](https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34684/) (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34684/>)" (Japanese) for details.

Changing Wallpaper


1

Touch & Hold open area of Home Screen

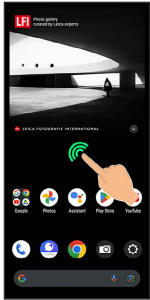


2

Wallpaper & style

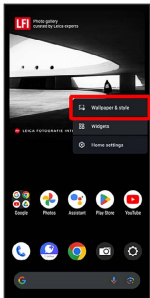


3

Change wallpaper

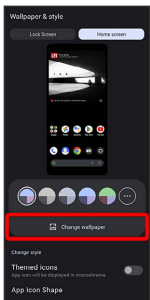

4


Select wallpaper from bottom of "Preset wallpapers"/Tap application from bottom of "Choose wallpaper from" and select wallpaper

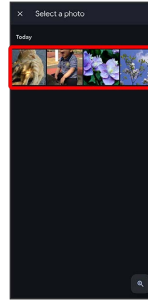

- After selecting wallpaper, Pinch/Spread/Drag to adjust the display area.
- Operations may vary depending on selected item. Follow onscreen prompts.

5

Home screen / Lock screen / Home screen and lock screen

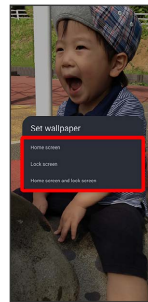

🏁 Setting is complete.

- Operations may vary depending on selected item. Follow onscreen prompts.
- Tap **Home screen** to set the image as Wallpaper for Home Screen only.
- Tap **Lock screen** to set the image as Wallpaper for lock screen only.
- Tap **Home screen and lock screen** to set the image as Wallpaper for both Home Screen and lock screen.

+ Using Lock Photo Shuffle/Home Photo Shuffle

Change Wallpaper randomly each time lock screen/Home screen appears.


Touch & Hold open area of Home Screen → Wallpaper & style → Lock Home Photo Shuffle → Lock Photo Shuffle / Home Photo Shuffle () → Select folder → Select images to show with Lock Photo Shuffle/Home Photo Shuffle ()

- Selected images appear randomly.
- Tap Shuffle interval setting to select the interval at which images are randomly switched.
- Tap Recommended photos are selected from recent photos to set whether to automatically display recommendations from recently taken photos, etc.
- Tap Check selected images to check selected images.
- Alternatively, in Home Screen, (Settings) → Useful → Lock Home Photo Shuffle to use Lock Photo Shuffle/Home Photo Shuffle.

Adding Shortcuts

1

In app list, Touch & Hold application and Drag to "Add to home screen"

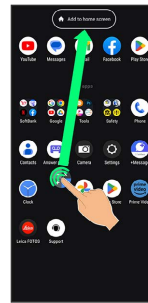

2

Drag to location to add shortcut




Shortcut is added.

Function Shortcuts

With some applications, Touch & Hold for shortcuts to functions. Touch & Hold function shortcut then release finger at location in Home Screen to add function shortcut.

- Drag to sheet visible at edge of Display to toggle sheets and add function shortcut. Drag to rightmost sheet to add one more sheet and add.

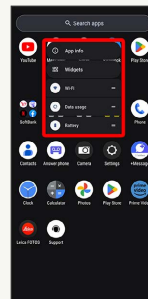

+ Deleting Shortcuts

In Home Screen, Touch & Hold icon → Drag to "Remove"

Adding Widgets

Add Chrome™ bookmarks, Analog clock, etc. as follows.


1

Touch & Hold open area of Home Screen



2

Widgets

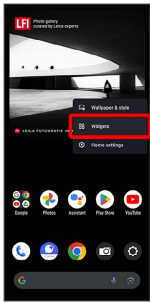


A list of widgets opens.

· If confirmation appears, follow onscreen prompts.

3

Tap application name of widget to add

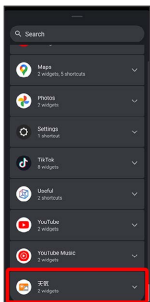

4

Touch & Hold widget



5

Drag to location to add widget



Widget is added.

· Drag to sheet visible at edge of Display to toggle sheets and add. Drag to rightmost sheet to add one more sheet and add.

+ Removing Widgets

In Home Screen, Touch & Hold widget → Drag to "Remove"

Setting LFI Widget

Set photo types to display in LFI Widget.


1

In Home Screen, Touch & Hold LFI Widget




2

Drag to **Widget settings**

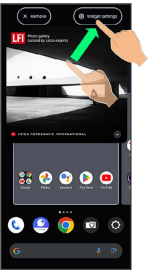

3

Set each item → **Save**

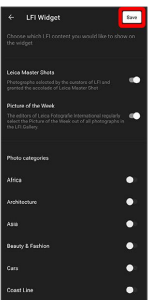

Setting is complete.


Adding Folders

Add folders to collect icons.

· Folders can also be created in Favorites Tray and app list.

1

In Home Screen, Touch & Hold icon to place in folder

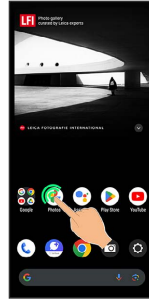

2

Drag to another icon to group with



Folder is added, and two icons are saved in the folder.

+ Folder Operations

Changing Folder Names

In Home Screen, Tap folder → Tap area to enter folder name at bottom of window → Enter folder name → ✓

· Change folder names the same way in Favorites Tray and app list.

Placing Icons in Folder

In Home Screen, Touch & Hold icon → Drag to folder

· Place icons the same way in Favorites Tray and app list.

Moving Icons Out of Folder

In Home Screen, Tap folder → Touch & Hold icon → Drag it out of folder

· Move icons the same way in Favorites Tray and app list.

Deleting Folders


- In Home Screen, Touch & Hold folder → Drag to "Remove"
- Delete folders the same way in Favorites Tray.
 - Applications in folder are also deleted.

Moving Icons/Widgets

Icons can also be rearranged in Favorites Tray and app list.

1

In Home Screen, Touch & Hold icon/widget

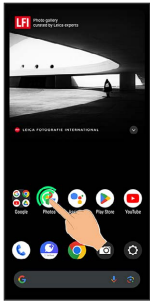

2

Drag to target location

Icon/widget is moved.

- To a folder: Drag icon to target folder.


Making Home Screen Settings

Settable items are the following.

Item	Description
Home screen grid	Set the number of applications to be placed vertically and horizontally in Home Screen and App List.
Notification dots	Set whether to show dots with application icons for notifications. See "Notifications" for details.
Add number on notification dots	Set whether to show number of notifications with notification dots.
Add app icons to home screen	Set whether icon is added to Home Screen after downloading new application.
Show Google App	Set whether to show news, weather, etc. at left of Home Screen.
App suggestions	Set whether to show application suggestions in app list, etc.
Display Google Search widget	Set whether to show Google Search Bar in Favorites Tray.
Allow home screen rotation	Set whether to rotate Home Screen with handset orientation automatically.


1

Touch & Hold open area of Home Screen

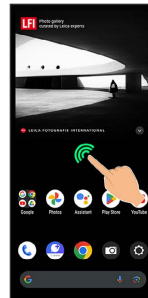

2

Home settings

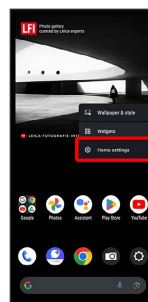

3


Set items

🚩 Settings are complete.

Icons at Display Top (Status Bar)

Indicators (new message notification, handset status, etc.) appear at the top of Display.

Status Bar Layout

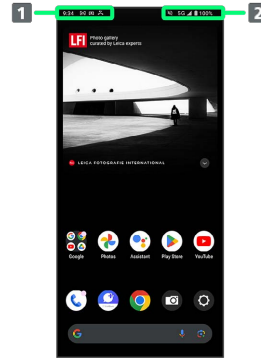

- 1** Notifications, warnings, etc. appear here. (Notification Indicators)
- 2** Handset status and other information appear here. (Status Indicators)

Main Notification Indicators

Notification Indicators appear on the left.

- Notification Indicators do not appear in lock screen.




Indicator	Description
	Time
	Glove Mode On
	Battery level less than about 20%
	Call (Dialing/Arriving/in Progress)
	Call on Hold
	Missed Call
	New Answer Phone Message
	New Voicemail
	New SMS/+Message
	New Gmail™
	New Urgent News
	Alarm Sounding/Snoozing/Upcoming Alarm
	Calendar Event Notification
	Application Update Notification
	Application Installation Complete
	High-Quality Public Network Available
	Data Communication Disabled
	Data Sent
	Data Downloaded/Received
	Bluetooth® Data Reception Request
	Error Indication ¹
	Mounting SD Card
	More Notifications
	Space Low in Internal Storage
	System Update Information
	Charge Share Enabled/Powering Other Device with Charge Share

1 Appears when an error occurred.

Main Status Indicators

Status Indicators appear on the right.

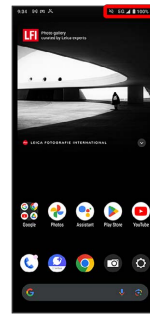

Indicator	Description
	Battery Strength(100%)
	Battery Strength (less than about 15%)
	Energizing
	Battery Saver On
	Signal Strength (Strong)
	Signal Strength (Fair)
	Signal Strength (Weak)
	No Signal (5G/4G LTE/4G)
	5G Data in Use ¹
	4G LTE/4G Data in Use ²
	Roaming
	Wi-Fi Connected (Strong)
	Wi-Fi Connected (Fair)
	Wi-Fi Connected (Weak)
	Communication in Use
	Airplane Mode
	Bluetooth® Connected
	Talking with Speakerphone
	Talking while Muted
	Manner Mode (Mute)
	Do Not Disturb Set
	Wi-Fi Hotspot Tethering in Use
	Getting Location Information
	VPN Connected
	Camera in Use ³
	Microphone in Use ³
	Hidden Statuses

- 1 Although "5G" may appear in standby (top of Display), this may change to "4G" with data communication then being by the 4G network.
- 2 Corresponding indicator appears when handset is connected to FDD-LTE (SoftBank 4G LTE) or AXGP (SoftBank 4G). Between these Networks, handset connects to SoftBank 4G whenever possible.

- 3 Appears when application starts using the camera/microphone. Displayed as a green dot while the camera/microphone is in use.


Checking Notifications (Notifications Window)

Open notifications and check handset status.

Opening Notifications Window

1

Flick Status Bar down

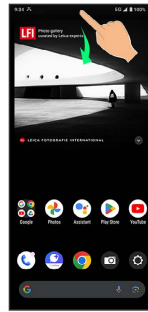


🚩 Notifications Window opens.

- Notifications Window is not displayed on lock screen. After unlocking screen, flick Status Bar down.

+ Closing Notifications Window

Flick Notifications Window up

Notifications Window Layout

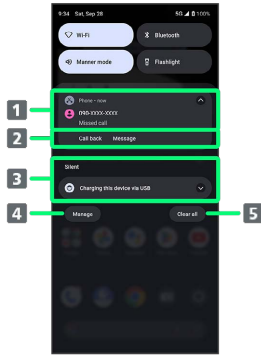

- 1 Notifications and active functions.
- 2 Use corresponding functions.¹
- 3 Silent notifications.
- 4 Manage notifications.
- 5 Delete all notifications and close Notifications Window.

1 Usable functions depend on the notification. As an example, dial or send an SMS to the phone number of a new call.

+ Notifications Window Operations

Switching between Detailed & Simple Views for Notifications in Notifications Window

In Notifications Window, Drag notification down/up with two fingers at the same time, or Pinch/Spread

- Unavailable for some notifications.

Making Notification Settings

In Notifications Window, Touch & Hold notification →

- ⚙️ → Follow onscreen instructions
- Settable items depend on the notification.

Checking Notifications

1

Flick Status Bar down



🚩 Notifications Window opens.

Deleting Notifications

1


Flick Status Bar down



🚩 Notifications Window opens.

2

Flick notification left/right

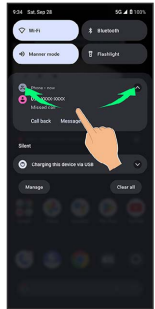

🚩 Notification is deleted.

· Some notifications may not be deleted.

Deleting All Notifications

1


Flick Status Bar down



Notifications Window opens.

2

Clear all

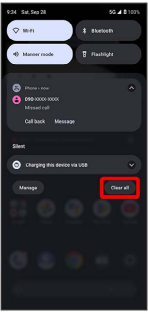

All notifications are deleted.

- Some notifications may not be deleted.


Checking Notifications (Quick Settings Window)

Tap icons to toggle functions on/off, etc.

Opening Quick Settings Window

1


Flick Status Bar down

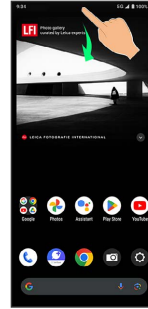

Notifications Window opens.

2

Flick Notifications Window down

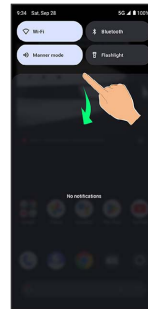


Quick Settings Window opens.

- Alternatively, to open Quick Settings Window, Flick Status Bar down with two fingers with Notifications Window closed.


+ Closing Quick Settings

Flick Navigation Bar up


Quick Settings Window Layout

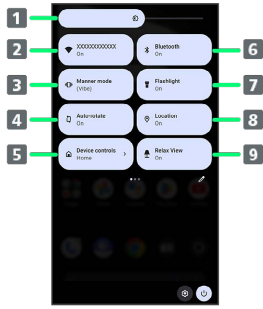

- 1 Adjust Display brightness.
- 2 Toggle Wi-Fi on/off.
- 3 Toggle Manner mode (OFF / Vibe / Mute).
- 4 Toggle Auto-rotate screen on/off.
- 5 Open Device controls.
- 6 Toggle Bluetooth® function on/off.
- 7 Toggle Mobile Light on/off.
- 8 Toggle Location on/off.
- 9 Toggle Relax View on/off.

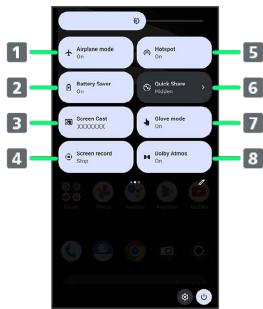

- 1 Toggle Airplane mode on/off.
- 2 Toggle Battery Saver on/off.
- 3 Show cast screen.
- 4 Toggle Screen Record start/stop.
- 5 Toggle Wi-Fi hotspot tethering on/off.
- 6 Show Quick Share.
- 7 Toggle glove mode on/off.
- 8 Toggle Dolby Atmos® on/off.

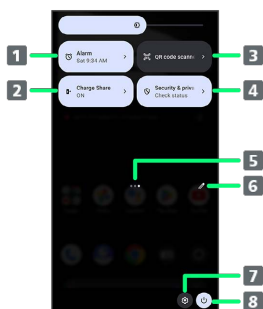

- 1 Open Alarm.
- 2 Toggle Charge share on/off.
- 3 Open QR code scan window.
- 4 Show security notifications, access permission status, etc.
- 5 Indicate position of Setting key sheet.¹
- 6 Open Edit screen for Quick Settings Window.
- 7 Open Settings.
- 8 Open Power menu (Power off , Restart , etc.) .

1 Flick Setting key area left/right to toggle sheets.

💡 Display during Music Playback

Operation panel opens in Quick Settings Window and enables operations such as play/pause.

+ Customizing Quick Settings Window

Rearranging Setting Keys

In Quick Settings Window, Touch & Hold Setting key Drag Setting key to rearrange it

Adding Setting Keys

In Quick Settings Window, Touch & Hold Setting key below "Hold and drag to add tiles" Drag Setting key to target location

Deleting Setting Keys

In Quick Settings Window, Touch & Hold Setting key Drag to "Drag here to remove"

Resetting Quick Settings Window

In Quick Settings Window,

Phone

Placing/Answering Calls.....	60
Optional Services.....	65
Handset Phone Number.....	72
Address Book.....	73

Placing/Answering Calls


How to dial directly to make a call and answer a call, as well as options when a call is arriving/during a call are described.


Support for VoLTE/VoLTE (HD+) and HD Voice


Handset supports VoLTE/VoLTE (HD+) and HD Voice for high-quality call sound. See "[Using VoLTE/VoLTE \(HD+\)](#)" and "[HD Voice](#)" for details.

Placing Calls


1


In Home Screen,  (Phone)

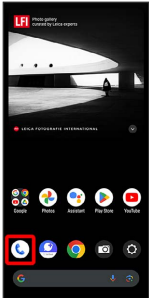

 Phone opens.


2

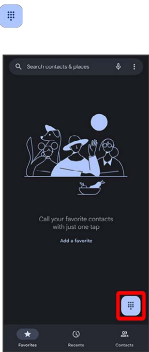


 Dialpad window opens.

3

Use onscreen dialpad to enter number

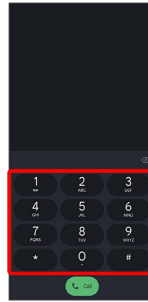


- Include area code for landline numbers.
- To correct number, Tap  to delete digit(s), then enter correct number.


4


Call




 Handset dials number. Call begins when other party answers.

5

To end call, 

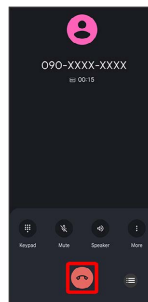

 Call ends.

🔦 Emergency Calls

Emergency Location Report

Making emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.). This system is referred to as Emergency Location Report, and notifies location based on positioning from base stations.

- Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy. Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report. However, corresponding agency may obtain location information in life threatening situations.
- Location Report is not sent for calls made while outside Japan.

After Making an Emergency Call with Reject Call Enabled

Reject call is disabled for about two hours to receive calls from corresponding agency. To manually enable Reject call again after making an emergency call:

In Home Screen, (Phone) → ⋮ → Settings →
Blocked numbers → Re-enable now

+ Calling Emergency Number When Handset Screen is Locked

In lock screen, Flick up → Emergency → Enter number for emergency service → Call

- Use if method for unlocking screen is setting other than **None** or **Swipe**. See "[Setting Screen to Unlock by Tracing Pattern](#)," "[Requiring Lock No. \(PIN\) Entry for Unlocking Screen](#)," and "[Setting Screen to Unlock with Password](#)" for details on screen lock methods.

? Troubleshooting

Q. Call does not connect

- A. Did you dial all digits for the number? Dial all digits for numbers starting with a "0" area code, etc.
- A. Is the signal weak? Change locations and call again.

! Emergency Call Cautions


Areas Where Usable

Emergency calls from handset can be made only in SoftBank service areas.

Airplane Mode

Note that emergency calls cannot be made in Airplane mode. Use Quick Settings to exit Airplane mode.

Phone Window Layout

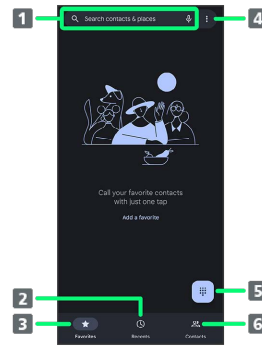

1 Search field.

Search contacts and locations. Tap to voice search.

2 Show call history.

3 Show favorites.


4 Open menu.


5 Show dialpad.


6 Show contacts.

Answering Calls (Display Off)


1


Flick  up when call is arriving

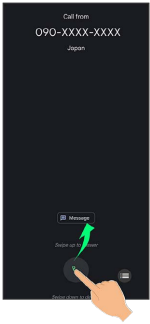


 Call connects.

2


To end call, 

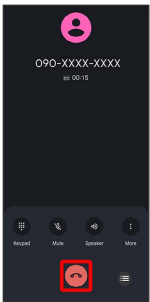


 Call ends.

Missed Calls

For unanswered calls, notification appears in lock screen.

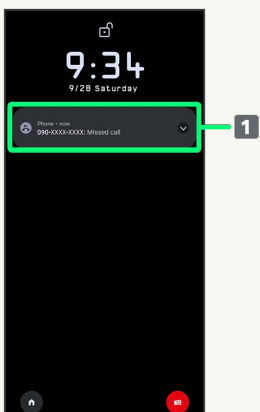




1 Notification

- Tap notification to check missed call records and call back as needed.
- When screen is unlocked,  appears on Status Bar. Flick Status Bar down for Notifications Window, then Tap notification. When **CALL BACK** / **MESSAGE** appear below notification, Tap to call back or send SMS.

+ Arriving Call/Answer Phone Operations



Answering with Answer Phone

During call,   **Absence Memo**








- When screen is unlocked, **Incoming call**   
Absence Memo .

Playing Back Answer Phone Messages












In lock screen, Tap notification  Tap message

- When screen is unlocked, Flick Status Bar down for Notifications Window, then Tap notification  Tap message.
- To stop playback, Tap  .


Editing Subjects of Answer Phone Messages

Flick Home Screen up   (Answer phone)  Touch & Hold message  **Edit Subject**  Tap Subject field 
Enter subject name  **OK**

Copying Answer Phone Messages to Internal Storage/SD Card


Flick Home Screen up   (Answer phone)  Touch & Hold message  **Export**    **Leitz Phone 3** / **SD card**  Select where message is saved  **USE THIS FOLDER**  **ALLOW**  **OK**



Rejecting Arriving Calls

As call is arriving, Flick  down

- When screen is unlocked, Tap **DECLINE** .




Not Answering Call and Sending SMS

As call is arriving, **Message**  Tap message to send

- When screen is unlocked, **Incoming call**  **Message**  Tap message to send.
- Tap **Write your own...** to create and send message.

Forwarding Arriving Calls

During call,   **Forwarding**

- When screen is unlocked, **Incoming call**   
Forwarding .
- Set a phone number to forward calls to beforehand. See "[Call Forwarding](#)" for details.


Stopping Ringtone and Vibration

As call is arriving, Volume Up/Volume Down Key

Answering Calls (Display On)

1


When call is arriving, **Answer**

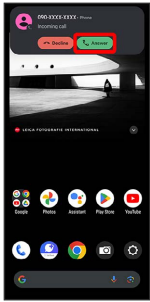

Call connects.


2

To end call,

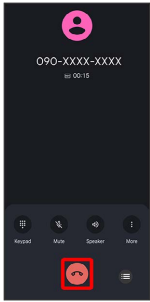

Call ends.

Call Window Layout/In-Call Operation

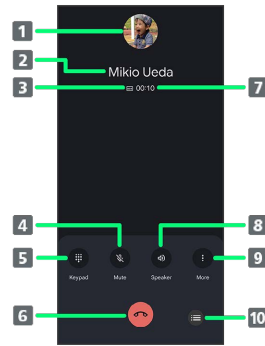

- 1 Other party photo.
- 2 Other party name/number.
- 3 HD Voice ()/HD+ Voice () call in progress.
- 4 Mute own voice.
- 5 Show dialpad.
- 6 End call.
- 7 Call time.
- 8 Use Speakerphone.
- 9 Add call/Place call on hold.
- 10 Open menu.

+ In-Call/Voice Memo Operations

Adjusting Call Volume

During call, Volume Up/Down Key

Recording Call (Voice Memo)

During call, **Voice Memo**

· To end recording, Tap **Stop** .

Dialing Tone Referencing Contacts

During call, **Address Book**

Playing Back Voice Memos

Flick Home Screen up (Answer phone) **Voice Memo** Tap Voice Memo

· To stop playback, Tap .

Editing Subjects of Voice Memos

Flick Home Screen up (Answer phone) **Voice Memo** Touch & Hold message **Edit Subject**

Tap Subject field Enter subject name **OK**

Copying Voice Memos to Internal Storage/SD Card

Flick Home Screen up → (Answer phone) → Voice Memo → Touch & Hold message → Export → ☰ → Leitz Phone 3 / SD card → Select where message is saved → USE THIS FOLDER → ALLOW → OK

? Troubleshooting

Q. Difficulty with call

- A. It may be difficult to make a call in a location with noise.
- A. Check the call volume when using Speakerphone. It may be difficult to make a call with a raised call volume.

Q. The other party cannot hear me

- A. Are you covering Mic/Recorder Mic on the bottom surface of handset with your finger, etc.? Make sure not to cover Mic/Recorder Mic.
- A. Have you muted handset? The other party cannot hear you if handset is muted.

Q. Sound experiences popping during a call

- A. Are you moving location during a call? Popping may occur when switching areas for a better signal. This is not a malfunction.

Using VoLTE/VoLTE (HD+)

VoLTE (Voice over LTE) is a system enabling voice calls over LTE networks. VoLTE (HD+) provides a clearer and more natural quality call than conventional VoLTE.

- VoLTE/VoLTE (HD+) are available when the counterpart model is respectively a VoLTE- or VoLTE (HD+)-compatible model from SoftBank/Y!mobile. In addition, it is necessary for both handset and the counterpart model to be within the SoftBank 4G LTE (FDD LTE) service area, with "Preferred network type" set to "5G (recommended)" or "4G".
- For information on countries and regions where VoLTE international roaming is supported, see the following website:
<https://www.softbank.jp/mobile/service/global/overseas/other-services/volte/> (Japanese)

! VoLTE/VoLTE (HD+) Cautions

VoLTE/VoLTE (HD+) use 4G network service, and are unavailable when 4G network service is disabled on handset. If VoLTE/VoLTE (HD+) are unavailable, follow the steps below to check whether 4G network service is enabled (○).

In Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Preferred network type

- If disabled (●), Tap 5G (recommended) / 4G to enable it (○).

HD Voice

HD Voice supports a wide range of audio tones for clearer, more natural-quality voice calls.

- Available when the counterpart model is an HD Voice-compatible model from SoftBank/Y!mobile.
- HD Voice is compatible with VoLTE. Use HD Voice with VoLTE for voice calls of even higher quality.

Optional Services

Use these optional services for voice calls:

Optional Services


The following optional services are available.


Service	Description
Call Forwarding	Divert all/unanswered calls to a preset number.
Voicemail	Divert all/unanswered calls to Voicemail Center; access messages via handset/touchtone phones.
Call Waiting ¹	Answer calls during a call.
Group Calling ¹	Merge multiple calls.
Notify Caller ID	Send or hide your number when placing calls.
Call Barring	Restrict incoming/outgoing calls by conditions.


1 Requires separate subscription.

Call Forwarding

1


In Home Screen,  (Phone)

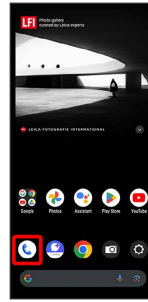

 Phone opens.

2


  Settings  Calling accounts

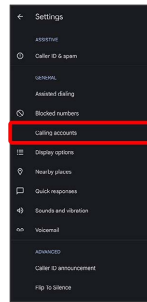

3


SoftBank  Call service settings



 Call service settings open.

4


Voice Mail / Call Forwarding

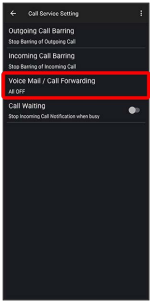

Voice Mail/Call Forwarding opens.


5

Voice Mail / Call Forwarding → Call Forwarding ON

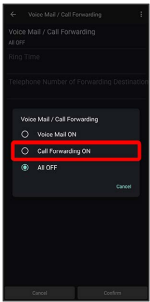


6

Ring Time → Tap the ring time

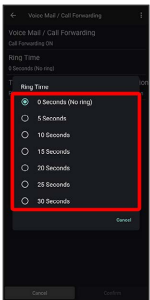

7

Telephone Number of Forwarding Destination → Tap the phone number input area → Enter the forwarding destination phone number → Register

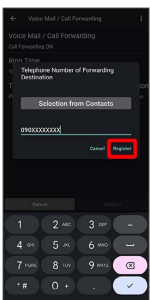

8

Confirm



Call Forwarding is set.

+ Canceling Call Forwarding

In Voice Mail/Call Forwarding screen, Tap Voice Mail / Call Forwarding → ALL OFF → CONFIRM

Voicemail

1


In Home Screen, (Phone)



Phone opens.


2

Settings → Calling accounts

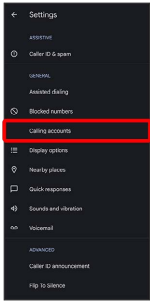

3


SoftBank → Call service settings

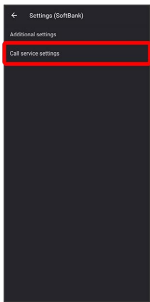

Call service settings open.

4


Voice Mail / Call Forwarding

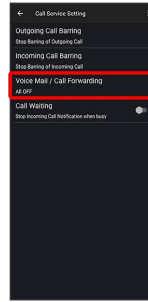

Voice Mail/Call Forwarding opens.


5

Voice Mail / Call Forwarding → Voice Mail ON

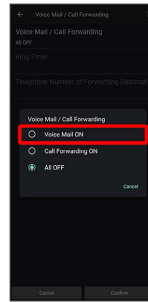

6

Ring Time → Tap the ring time

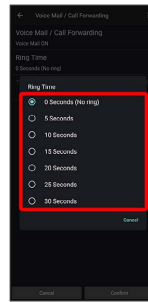

7

Confirm



Voicemail is set.


Voicemail

Voicemail and Answer Phone

Voicemail and Answer Phone differ mainly in the following ways.

- **Voicemail:** Messages are held at the Voicemail Center. Messages are held even when handset is not turned on or outside a service area. Message playback is subject to your subscription call charges.
- **Answer Phone:** Messages are held on handset. Use Answer Phone only when handset is turned on or within a service area.

When New Message is Recorded

 appears on Status Bar. To play message, Tap **Voicemail** in Notifications Window, then follow voice guidance.


Canceling Voicemail


In Voice Mail/Call Forwarding screen, Tap **Voice Mail / Call Forwarding** → **ALL OFF** → **CONFIRM**


Call Waiting

Requires separate subscription.

1


In Home Screen,  (Phone)

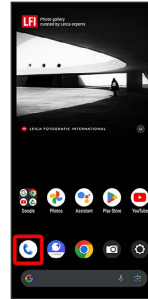

 Phone opens.

2


 **Settings** → **Calling accounts**

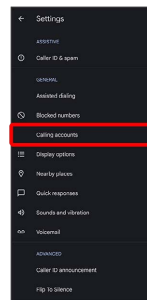

3


SoftBank → **Call service settings**



 Call service settings appear.

4

for "Call Waiting" ()

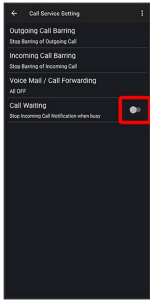

Call Waiting is set.

When Call Arrives during Another Call

A tone sounds; Flick up to begin call.

Canceling Call Waiting


for "Call Waiting" () in Call service settings screen

Group Calling

Requires separate subscription.

1

During a call, **More** → **Add call**

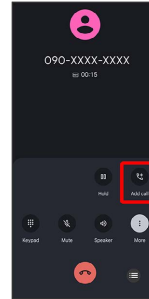

Dialpad window opens.

2

Enter number → **Call**




Call is added.

- Alternatively, Flick top of dialpad window down → **Contacts** → Tap contact → Tap number of call to add to add call.
- Flick top of dialpad window down → **Recents** → Tap for Call History entry to add.

3


When call connects, **More** → **Merge**

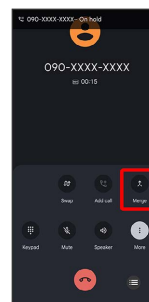


Group Calling starts.

Notify Caller ID

1


In Home Screen,  (Phone)



 Phone opens.


2


 Settings  Calling accounts

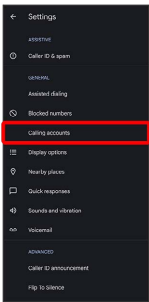




3

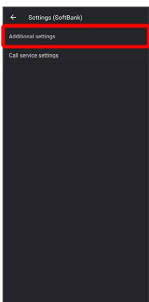
SoftBank  Additional settings




 Additional settings appear.

4

Caller ID  Network default /  Hide number /  Show number

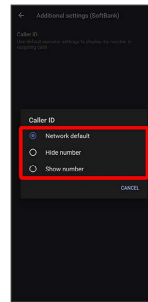

 Caller ID is set.

· Set to  Network default to notify number.

Call Barring

Restrict outgoing/incoming calls and SMS messages.

- SMS may not be restricted in some areas.

Restriction	Description
Outgoing Call Barring	- Barring of All Outgoing Calls Restrict all outgoing calls.
	- Barring of All Outgoing International Calls Restrict international calls; while outside Japan, calls within current country are allowed.
	- Barring of Outgoing International Calls except Japan Restrict international calls; while outside Japan, calls within current country and to Japan are allowed.
Incoming Call Barring	- Stop Barring of Outgoing Call Cancel all outgoing call restrictions.
	- Barring of All Incoming Calls Restrict all incoming calls.
	- Barring of All Incoming International Calls Reject calls while outside Japan. - Stop Barring of Incoming Call Cancel all incoming call restrictions.

1


In Home Screen, (Phone)



Phone opens.

2

Settings → Calling accounts

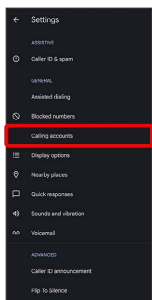

3


SoftBank → Call service settings



Call service settings opens.

4

Outgoing Call Barring / Incoming Call Barring

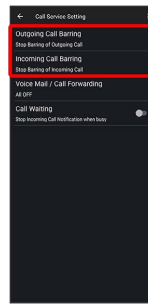

5

Follow onscreen prompts

Restriction is set.

+ Call Barring Operations

Setting Call Barring

In Call service settings, **Outgoing Call Barring** / **Incoming Call Barring** → Tap barring method

Canceling All Outgoing Call Restrictions

In Call service settings, **Outgoing Call Barring** → **Stop Barring of Outgoing Call**

Canceling All Incoming Call Restrictions

In Call service settings, **Incoming Call Barring** → **Stop Barring of Incoming Call**

? Troubleshooting


Q. Calling is not barred


A. Are you using Call Forwarding or Voicemail? Calling may not be barred even if Barring of All Outgoing Calls and Barring of All Incoming Calls are set.


Handset Phone Number

Checking Your Phone Number

1

In Home Screen,  (Settings)

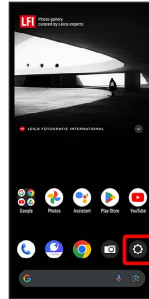

 Settings appear.

· Handset number is shown below "Phone number."

Address Book


Save phone numbers and mail addresses as well as birthdays, nicknames, etc.
Set ringtones for each contact as needed.

Address Book Caution

Contacts may be altered/lost if handset is left uncharged or due to accidents, malfunctions, repairs, handset upgrade/replacement, mishandling, etc. Back up important contacts and other data regularly. SoftBank Corp. is not liable for any damages resulting from loss/alteration of contacts.

Adding New Contacts


1


In Home Screen,  (Google)




2


 (Contacts)

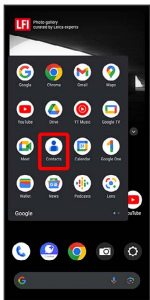


 Contacts opens.


3

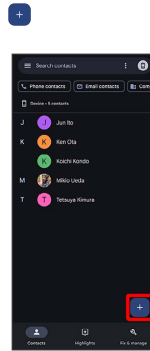

 Window for saving new contact opens.

4


Set/enter each item  Save

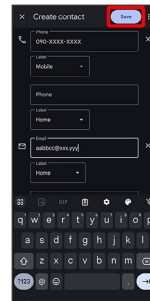










 Contact is saved.

Operations when Saving Contacts





Showing Other Savable Items

In window for creating new contact, 
 · Save residential address, websites, memos, etc.


Setting (Labels) Groups

In window for creating new contact, 
   Tap label ()  OK
 · Tap label to toggle selected ()/unselected ().
 · To add a new label, in window for creating new contact,    Create new...  Enter name of label  OK .

Saving Label for Phone Number, Etc.

In window for creating new contact,   Tap label to save
 · For  , enter label name  OK .

Deleting Entered Phone Number, Etc.

In window for creating new contact,  for item

Syncing with Contacts on Server


Sync handset Address Book with Google contacts on server. Also sign in to a Google Account before syncing with a non-Google Account.

In Home Screen, ⚙️ (Settings) → Passwords & accounts → Tap account to sync → Account sync → Contacts ()

Dialing from Contacts

1


In Home Screen, ☎️ (Phone)

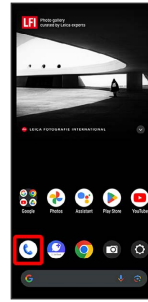

☑️ Phone opens.

2

Contacts

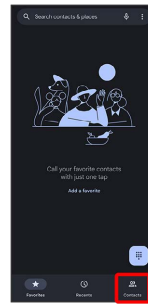


☑️ Contacts appear.

· In Home Screen, 🌐 (Google) → 👤 (Contacts) to show contacts.

3


Tap contact

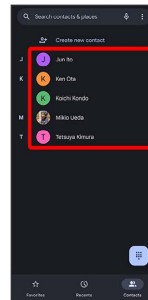


☑️ Contact opens.

4

Tap number

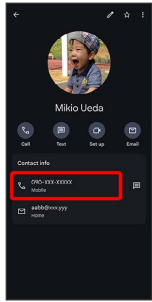

 Handset dials number. Call begins when other party answers.

· Alternatively, Tap **Call** to make a call.

Messaging


Sending Messages (+メッセージ (+Message)).....	78
Using Gmail.....	79

Sending Messages (+メッセージ (+Message))

Sending New Messages


1

In Home Screen,  (+メッセージ)

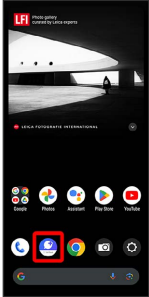

2

Message

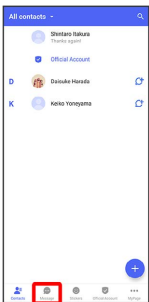

3




4


New message




5

Tap recipient

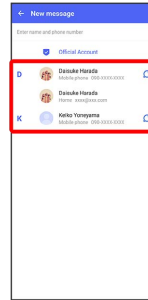

 Message window opens.

- To send to a phone number/email address not saved in contacts, enter phone number/email address in Enter name and phone number field → Tap  and create message.


6


Tap message entry field



7

Enter message → →

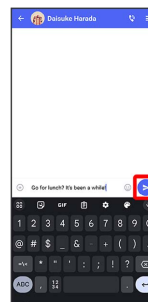


 Message is sent.

Using Gmail


Use Gmail (Google's webmail service) as well as your work/ personal email.

Setting an Account

Set up a Google Account or an email account to use Gmail. When activating  (Gmail) for the first time, account setup menu appears; complete setup.


- Account setup menu does not appear if you are already signed in to a Google Account.
- To use your existing account, information such as username (user ID), password, and server name is required.


1


In Home Screen,  (Google)



2

 (Gmail)

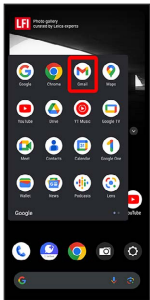


 Account setup menu opens.

- If confirmation appears, follow onscreen prompts.


3

Add an email address

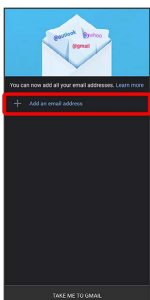


4

Tap account type

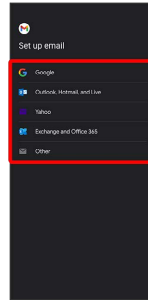


5

Follow onscreen prompts

 Account setup is complete.


Creating/Sending Gmail


1

In Home Screen,  (Google)



2


 (Gmail)

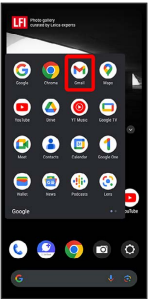


 Message list opens.

3


Compose

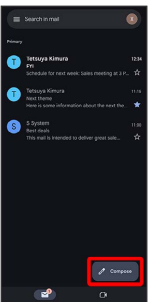


 Message composition window opens.


4

Enter recipient, subject and text

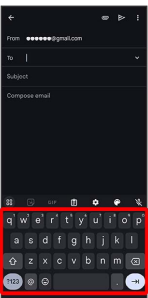


5

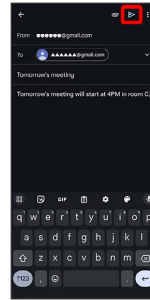


 Message is sent.



+ Operations when Creating Message



Adding Cc/Bcc Recipients


In message composition window,  in Recipient field

 Enter recipient



Attaching Files


In message composition window,   Attach file


 Select where file is saved  Select file

• To attach files saved in Google Drive™, select  Insert from Drive .



Setting Date/Time to Send



In message composition window,   Schedule send

 Select date/time to send



• To set date/time to send in detail, select  Pick date & time .




Selecting Recipients from Address Book

In message composition window,   Add from



  Select recipient

Setting Confidential Mode



In message composition window,   Confidential

  Set each item  SAVE

Saving Current Message as Draft

While creating message,   Save draft

Discarding Current Message


In message composition window,   Discard

Opening New Gmail


When message arrives, new message notification appears in lock screen.

1

In lock screen, Tap new message notification

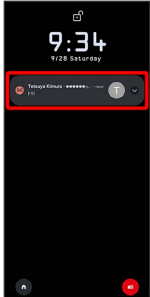


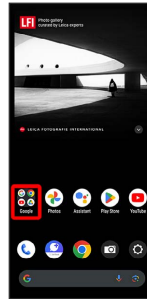
Message window opens.

- For two or more new messages, message list opens; Tap one.
- When screen is unlocked,  appears on Status Bar. Flick Status Bar down, then Tap notification.


Opening Gmail


1

In Home Screen,  (Google)



2


 (Gmail)

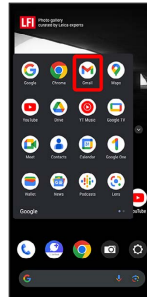

Message list opens.

3



Tap message

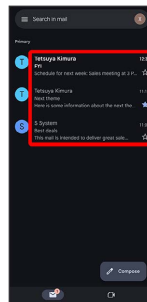





Message window opens.

+ Operations when Opening Messages

Replying to Messages



In message window,  for message to reply to 





Create message  

· To reply to all, in message window,  for message to reply to  **Reply all** .


· Alternatively, at bottom of message window, Tap **Reply** / **Reply all** .

Forwarding Messages


In message window,  for message to forward 




  Create message  

· Alternatively, at bottom of message window, Tap

.


Archiving Messages




In message window, 

· Alternatively, in message list, Touch & Hold message to archive or Tap icon for message ()  .


· Alternatively, in message list, Flick left or right on message to archive.


Deleting Messages

In message window, 

· Alternatively, in message list, Touch & Hold message to delete or Tap icon for message ()  .

Resetting Messages as Unread

In message window, 

· Alternatively, in message list, Touch & Hold message to reset as unread or Tap icon for message ()

   .

Syncing Accounts Manually

In message list, Flick down

· Sync sent and received messages manually at any time regardless of the automatic sync settings.

Internet

Using the Internet (Chrome).....84

Using the Internet (Chrome)

Use Chrome simply by entering words to search for or URLs.

TLS


TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).

TLS Caution


When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification Authorities Symantec Website Security G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

Using Chrome

1

In Home Screen,  (Chrome)




 Chrome activates.


· If confirmation appears, follow onscreen prompts.


2


Tap Text entry field

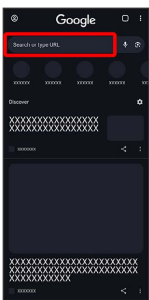

3

Enter search string or URL  

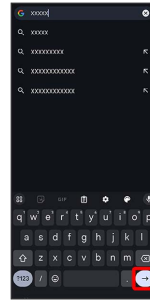



 Search results appear or a Website opens.

Chrome Operations




Opening New Tabs

Open multiple Websites in different tabs to switch between them easily.



In Chrome,   **New tab**

- To switch tabs, Tap  and then target tab.
- Number in  changes with number of tabs.

Viewing Websites without Leaving Browsing History, Cookies, Etc.

In Chrome,   **New incognito tab**  Follow onscreen prompts


Opening Recent Tabs

In Chrome,   **Recent tabs**  **Show full history**




 Tap tab


Closing Tabs

In Chrome,   for tab


- Alternatively, Flick tab left/right to close.
- Number in  changes with number of tabs.



Searching within Website

In Chrome,   **Find in page**  Enter search text

 Search results are highlighted.

Saving (Downloading) Images

In Chrome, Touch & Hold image  **Download image**

- If confirmation appears, follow onscreen prompts.
- Notification appears at top of Display when image is saved (downloaded). Tap **Open** to view the image.
- Open saved (downloaded) image from  (Files),  (Photos), etc.

Opening Saved (Downloaded) Image, Etc.


In Home Screen, (Google) → (Files) → → → Tap image, etc.

- If confirmation appears, follow onscreen prompts.

Adding Bookmarks

1


In Home Screen, (Chrome)

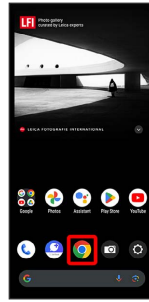

Chrome activates.

2


Show Website to add

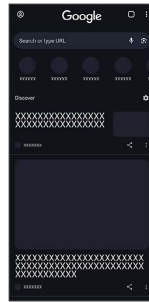

3



4

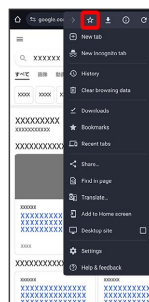

Current Website is added to Bookmarks.

+ Bookmark Operations

Editing Bookmarks

In Chrome, **☰** → **Bookmarks** → **Mobile bookmarks**
 → **☰** for bookmark to edit → **Edit** → Edit each
 item → ←

Moving Bookmarks

In Chrome, **☰** → **Bookmarks** → **Mobile bookmarks**
 → **☰** for bookmark to move → **Move to...** → Select
 location

· SoftBank folder and bookmarks in SoftBank folder cannot
 be moved.


Deleting Bookmarks

In Chrome, **☰** → **Bookmarks** → **Mobile bookmarks**
 → **☰** for bookmark to delete → **Delete**

Checking Browsing History

1


In Home Screen, **🌐** (Chrome)

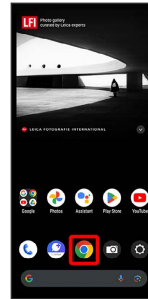

🚩 Chrome activates.

2


☰ → **History**

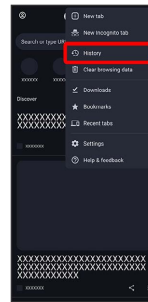

🚩 History window opens.

3

Tap record

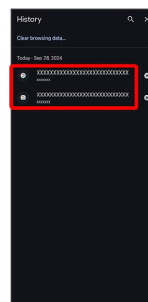


🚩 Website opens.

Setting Chrome


Make Chrome settings. Settable items are the following.

Item	Description
Turn on sync	Sign in to your Google Account and make settings for bookmarks, history, etc. View account information.
Google services	Set whether to use Google services.
Search engine	Select a search engine.
Password Manager	Set whether to save user names and passwords by websites, confirm/delete saved passwords, etc.
Payment methods	Set whether to automatically enter payment information in forms, and edit credit card information.
Addresses and more	Set whether to automatically enter information such as residence addresses, phone numbers and mail addresses in forms, and edit residence addresses and other information.
Privacy and security	Set whether to allow sites to access your payment methods, clear browsing history, etc.
Safety check	Check whether handset is protected from unauthorized access to data and unsafe websites.
Notifications	Make notification settings.
Theme	Set a screen theme when using Chrome.
Homepage	Set a homepage.
Accessibility	Set text size, etc.
Site settings	Set whether to allow cookies, enable JavaScript, etc.
Languages	Make language settings.
Downloads	Set save destination, etc. for downloaded data.
About Chrome	View version information, etc. about Chrome.

1


In Home Screen,  (Chrome)




 Chrome activates.

2

 Settings  Set items

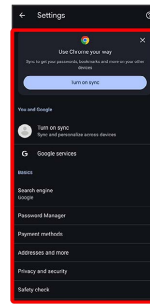

 Settings are complete.

- For some items, additional settings may appear when Tapping the item.

Camera

Capturing Photos/Videos.....	90
Viewing & Managing Photos/Videos (Photos).....	95

Capturing Photos/Videos

Photos and videos taken with handset are saved to handset (internal storage).

To save them on SD Card, insert SD Card before using Camera, then change save location as follows.

In Home Screen, (Camera) → [Camera Icon] → SETTINGS → General → Save To → SD card

! Camera Cautions

General Use

Mind etiquette when using Camera.
 Test Camera before shooting special moments.
 Do not use Camera in places where shooting is prohibited.
 Shot images may not be used/transferred without copyright holder (photographer) permission, except for personal use.

If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear images. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

Temperature of Handset During Shooting

Please note that the temperature of handset may increase due to processing when shooting for a long period of time.

🚫 Mobile Light Warning

Do not turn on Mobile Light close to eyes, look directly at Mobile Light when on, or shine Mobile Light in eyes; may affect eyesight or cause other problems.

Capturing Photos

1

In Home Screen, (Camera)



· If confirmation appears, follow onscreen prompts.

2

Drag shooting mode at bottom to left/right and select

PHOTO


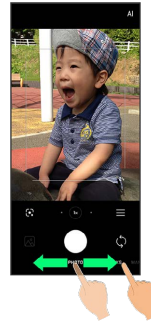


Photo Viewfinder appears.

- Drag shooting modes at bottom to left/right to select LEITZ LOOKS, MANUAL, or PORTRAIT, NIGHT MODE, HIGH-RES PHOTO from OTHERS. See "写真撮影画面 (マニュアル写真) の見かた (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110798/>)" (Japanese) for manual photography, and "撮影モードを切り替える (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110797/>)" (Japanese) for other shooting modes.
- Alternatively, Drag Viewfinder left/right to switch shooting modes.

3

Aim Back Camera at subject

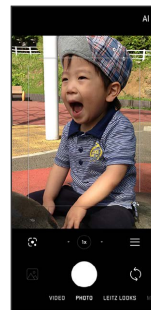

- Tap Display → Drag brightness adjustment bar up/down to adjust brightness.
- Tap subject to focus at location Tapped. Touch & Hold subject for focus lock. To cancel, Tap area outside the focus mark.
- See "Photo Viewfinder (Back Camera/Front Camera) Layout" for details on operation in Photo Viewfinder.

4

○ / Volume Up/Down Key




Shutter clicks and photo is saved.

- To capture continuously, Touch & Hold ○ or Press Volume Up/Down Key for 1+ seconds. Continuously captured photos are saved to internal storage.
- When **Movie shooting** is selected for **Press and hold the shutter button**, Touch & Hold ○ or Press Volume Up/Down Key for 1+ seconds to change ○ to ●, then capture video. Video capturing stops when releasing finger. Drag ● to 🔒 to continue video capturing. Tap ● to end video capturing.

? Troubleshooting


- Q. Camera exits suddenly
- A. Continuing to use Camera while handset is warm causes warning to appear, and Camera exits.
- A. Camera exits automatically after a period of inactivity.
-
- Q. Images are dark/grainy
- A. Is there a strong light near the subject, or a strong light source in the screen? Avoid letting a strong light source (the sun, light, etc.) in the screen. Leaving handset in a warm place for a long time or where Camera is in direct sunlight for a long time may affect image quality.
-
- Q. Images captured with Mobile Light appear whitish
- A. A finger or cover near the lens can reflect light from Mobile Light and cause captured images to appear whitish.

Photo Viewfinder (Back Camera/Front Camera) Layout

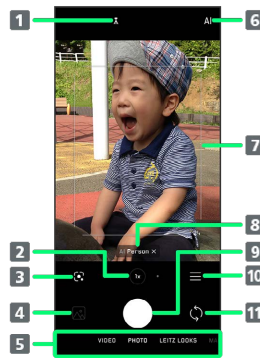


- 1** Handset stable indicator¹
Appears when handset is stabilized.
- 2** Zoom magnification²
Tap for zoom magnification adjustment bar. Drag left/right to adjust³ zoom magnification. Angle of view changes automatically according to zoom magnification.
- 3** Google Lens™¹
Use Google Lens to copy text captured with Camera and to search for products.
- 4** Photos™/thumbnail
Open 📷 (Photos), or view immediately captured photo/video.
- 5** Shooting mode
Drag left/right to change shooting modes (VIDEO / PHOTO / LEITZ LOOKS / MANUAL / OTHERS).
- 6** AI mode display
Appears when AI mode is enabled.
- 7** Bright Frame⁴
Check actual capturing range.
- 8** AI recognition type^{1,5}
When AI recognition is enabled, scene and subject type (Person , Animals , Food , Whiteboard , Evening Views) recognized by AI will be displayed. When shooting mode is PORTRAIT , Tap to switch between 🧑 (Portrait mode)/🐾 (Pet mode). When shooting mode is NIGHT MODE , Tap to switch between 🌙 (Auto mode)/🎆 (Fireworks mode)/★ (Starry sky mode).⁶
- 9** Capture photo
- 10** Quick setting
Make self-timer, Light⁷ settings, toggle guide line, AI mode¹, and histogram¹ on/off, and access various Camera settings.
- 11** Front/Back Camera switch⁸
Switch between Front Camera and Back Camera.


1 Not displayed for Front Camera.
 2 Zoom magnification is not available in some shooting modes.
 3 Alternatively, in Photo Viewfinder, Pinch/Spread.
 4 Displayed when **Bright Frame** is enabled.

- 5 Shot is captured with recognized scene or optimal quality or shutter speed for subject. After capturing subject recognized as a whiteboard/blackboard, confirmation appears. Tap **Yes** to correct shot to appear viewed from in front.
 - 6 Capture pleasing night scenes. Avoid moving handset while capturing scene. Stabilizing handset () also allows a more pleasing scene to be captured.
 - 7 For Front Camera, the entire screen lights up as a flash when enabled, allowing for bright pictures of people even when taking selfies at night (selfie flash).
 - 8 Switch between Front Camera and Back Camera also by Flicking up and down on Photo Viewfinder.
- Indicators shown in Viewfinder and available zoom magnification/functions/settings vary depending on Camera type and shooting mode.

Recording Videos

1


In Home Screen,  (Camera)

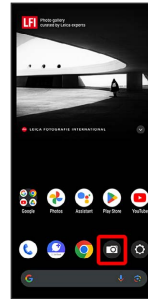

- If confirmation appears, follow onscreen prompts.

2

Drag shooting mode at bottom to right and select **VIDEO**

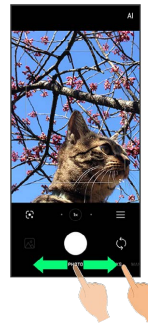


 Video Viewfinder appears.

- Drag shooting modes at bottom to left/right to **OTHERS** to select from **8K VIDEO** , **TIMELAPSE** , **SLOW MOTION** , **M.VIDEO** , or **HDR VIDEO** . See "[スロービデオモードで撮る](https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110804/)" (Japanese) for slow video, "[動画撮影画面 \(マニュアルビデオ\) の見かた](https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110799/)" (Japanese) for manual video, and "[撮影モードを切り替える](https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110797/)" (Japanese) for other shooting modes.
- Alternatively, Drag Viewfinder left/right to switch shooting modes.


3

Aim Back Camera at subject

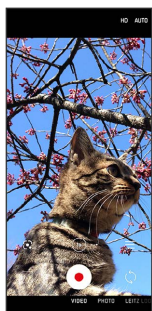

- Tap Display Drag brightness adjustment bar up/down to adjust brightness.
- Tap subject to focus at location Tapped. Touch & Hold subject for focus lock. To cancel, Tap area outside the focus mark.
- See "[Video Viewfinder Layout](#)" for details on operation in Video Viewfinder.


4

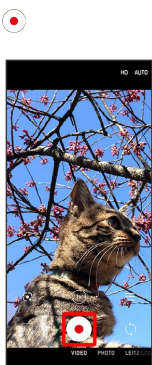

Video recording starts (window while capturing).

- During video capture, Tap to capture a photo. If **AI Live Shutter** is enabled during video shooting, the AI identifies smiling faces or the faces of dogs/cats, decides on the best image composition and automatically takes the shot.
- Enable **AI Live Story**, and AI may create a short movie separately from the captured video. See "[AIライブストーリーが作成したショートムービーを再生する \(https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34676/\)](https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34676/)" (Japanese) for details.

5

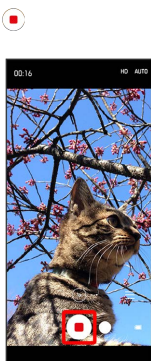

Tone sounds and video is saved.

- Alternatively, Press Volume Up/Down Key to stop recording.


Troubleshooting

- Q. Camera exits suddenly
- A. Continuing to use Camera while handset is warm causes warning to appear, and Camera exits.
- A. Camera exits automatically after a period of inactivity.
- A. Stop recording when battery level is low. Charge handset adequately before using Camera.
-
- Q. Images are dark/grainy
- A. Is there a strong light near the subject, or a strong light source in the screen? Avoid letting a strong light source (the sun, light, etc.) in the screen. Leaving handset in a warm place for a long time or where Camera is in direct sunlight for a long time may affect image quality.
-
- Q. Images captured with Mobile Light appear whitish
- A. A finger or cover near the lens can reflect light from Mobile Light and cause captured images to appear whitish.

Caution for Temperature of Handset When Shooting

Please note that the temperature of handset may increase due to processing when shooting for a long period of time.

Video Viewfinder Layout

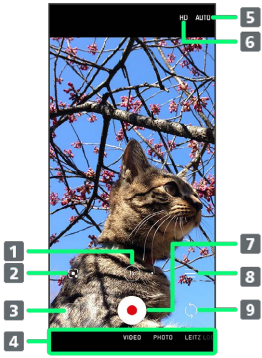

1 Zoom magnification¹

Tap for zoom magnification adjustment bar. Drag left/right to adjust² zoom magnification. Angle of view changes automatically according to zoom magnification.

2 Google Lens

Use Google Lens to copy text captured with Camera and to search for products.

3 Photos/thumbnaill³

Open (Photos), or view immediately captured photo/video.

4 Shooting mode

Drag left/right to change shooting modes (**VIDEO** / **PHOTO** / **LEITZ LOOKS** / **MANUAL** / **OTHERS**).

5 Frame rate display

Display the frame rate that is set.

6 Resolution display

Display the type of resolution that is set.

7 Capture video

8 Quick setting

Make self-timer and Mobile Light settings, toggle video stabilization on/off, and access various Camera settings.


9 Front/Back Camera switch⁴

Switch between Front Camera and Back Camera.

- 1 Zoom magnification is not available in some shooting modes.
- 2 Alternatively, in Video Viewfinder, Pinch/Spread.
- 3 If AI creates a short movie with **AI Live Story** enabled appears on thumbnail. Tap icon to open Short Movie Playback screen.
- 4 Switch between Front Camera and Back Camera also by Flicking up and down on Video Viewfinder.

· Indicators shown in Viewfinder and available zoom magnification/functions/settings vary depending on Camera type and shooting mode.

Video Viewfinder Layout While Capturing

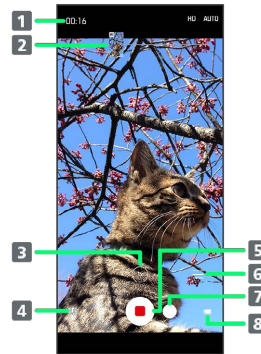

1 Shooting time

2 Captured photo

Displayed when a still image is captured during video shooting. When AI Live Shutter automatically shoots a photo¹, **AI** appears at the top of the thumbnail.

3 Zoom magnification

Tap for adjustment bar. Drag left/right to adjust² zoom magnification.

4 Confirm short movie creation³

Flashes when a short movie is finalized.

5 Stop capturing

6 Quick setting

Change Mobile Light setting.

7 Photo capture

8 Battery level

- 1 Operates when **AI Live Shutter** is enabled.
- 2 Alternatively, in window while capturing, Pinch/Spread.
- 3 Operates when **AI Live Story** is enabled.

· Indicators shown in Viewfinder and available zoom magnification/functions/settings vary depending on Camera type and shooting mode.

Viewing & Managing Photos/Videos (Photos)


View photos/videos saved in internal storage, on SD Card and in Google online storage. Viewing after logging in to a Google account is described.


Viewing Photos/Videos


View captured/downloaded photos and videos.

Image	File format
Photo	JPEG, PNG, GIF, BMP, WebP, HEIF
Video	3GPP, MPEG-4, MPEG-TS, WebM, Matroska

1

In Home Screen,  (Photos)

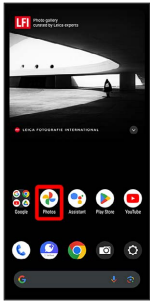



 Photos opens.

- If confirmation appears, follow onscreen prompts.

2

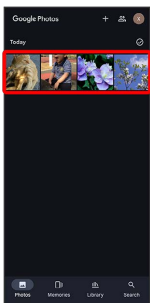

Tap photo/video



 Photo/video is played back (file view window).



Icons in Photos



Icons below appear according to shooting mode, settings, etc. used.

-  appears for photos captured with Intelligent Framing. Tap photo for original image (captured photo) and a recommended image (intelligently framed photo) to appear at bottom of Display. Flick left/right in thumbnails to toggle original and recommended images.
-  may not appear immediately after activating handset. Wait a while and then re-open photo.

Photo/Video Viewing Operations

Selecting Multiple Files

In Photos, Touch & Hold photo/video ()  Tap another photo/video

- Tap photo/video to toggle selected ()/unselected ().


Changing Photos Window Layout







In Photos, Pinch/Spread

- View changes between large view, day view, and month view.

Creating Album or Shared Album

In Photos,    / 






 Follow onscreen prompts

- Alternatively, in Photos,    to create album.
- Alternatively, in Photos,    to create shared album.


Creating Animation, Collage, or Movie


In Photos,      /

 /   Follow onscreen prompts

- Alternatively, in Photos,    /  /  to create animation, collage, or movie. Follow onscreen prompts.


Checking Photo or Video Details

In file view window, 


- If  is hidden, Tap Display first.
- Also displayed when Flicking Display up.


Adding Photos/Videos to Album



In file view window,     Follow onscreen prompts

- If  is hidden, Tap Display first.



Archiving Photos/Videos


In file view window,   **Move to Archive**

 Shown image is moved to Archive.

- In Photos, **Library**  **Archive** to view archived photo/videos.
- If confirmation appears, follow onscreen prompts.
- If  is hidden, Tap Display first.


Saving Photos/Videos on Handset

In file view window,   **Download**



- If  is hidden, Tap Display first.


Deleting Photos/Videos from Handset

In file view window,   **Delete from device** 
Delete from device



- Backup data in Google online storage is not deleted.
- If  is hidden, Tap Display first.


Using Slideshow

In file view window,   **Slideshow**





- To stop slideshow, Tap image.
- If  is hidden, Tap Display first.


Checking How to Use (Photos)

In file view window,   **Help & feedback**





- If  is hidden, Tap Display first.



Editing Photos

In file view window for photo,   **Create** 
Movie / **Collage**  Follow onscreen prompts




- If  is hidden, Tap Display first.


Ordering Photo Print

In file view window for photo,   **Order photo** 
Photo print  Follow onscreen prompts




- Alternatively, in Photos, **+**  **Photo prints** to print photos. Follow onscreen prompts.
- If  is hidden, Tap Display first.


Saving Images as Wallpapers or in Address Book Contact Photos

In file view window for photo,   **Use as**  Follow onscreen prompts



- If  is hidden, Tap Display first.


Printing Photos

In file view window for photo,   **Print**  Follow onscreen prompts







- Also use to save images to internal storage or SD Card in PDF format.
- If  is hidden, Tap Display first.


Setting Whether to Play Back Videos in Loop





In file view window for video,   **Loop video off** / **Loop video on**

- If  is hidden, Tap Display first.




Saving Frame from Video as Photo (Atokara Capture)


In file view window for video,   **Edit in Atokara Capture**  Drag  left/right to view frame to capture  

 Shown frame is saved to internal storage/SD Card.

- If  is hidden, Tap Display first.
- To move backward/forward frame by frame, Tap  /  or Drag frame left/right. Frame may not be shown depending on the video size.
- To save the current image as a photo and share it, Tap . Follow onscreen prompts.
- Install additional application capable of image editing to change shown content.

Selecting Video Playback Application

In file view window for video,   **View in**  Tap application

- Select application for video playback from multiple applications.
- If  is hidden, Tap Display first.

Zooming In/Out on Photos

In file view window for photo, Tap Display twice or Pinch/Spread

Application Basics

Confirmation when First Activating Applications.....	98
Applications.....	102
Adding/Deleting Applications.....	104

Confirmation when First Activating Applications

Set the operation of applications when activating for the first time.

The type and content of a confirmation differ with the application. The following explains confirmation: First things first.


Setting Required Permissions for Applications

Permit applications to use data on handset, Camera, etc. Initial setting of EMOPA is described as an example.

- Permission may also be required for applications running in the background.
- An application may not function correctly if permission to use it is not set.
- If the permission is not set twice in a row for the same privilege, confirmation will not appear.


1

Flick Home Screen up

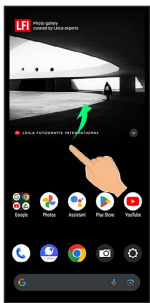


2

(Tools)

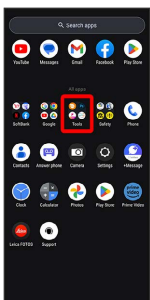

3

(EMOPA)

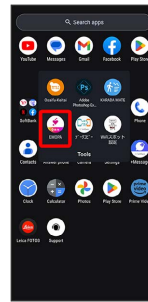

An initial setting screen appears.

- Continue by following onscreen prompts.


4

When access permission screen for location information appears, **分かりました**



5

While using the app

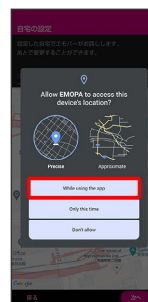

- Select **Precise** to allow the use of precise location information or **Approximate** to allow the use of approximate location information.


6

Set home and **次へ**



7

同意する

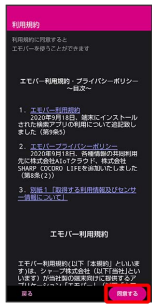

8

完了



・ Continue by following onscreen prompts.


9

When permission setting screen for EMOPA appears, **Next**



10


While using the app / **Only this time**

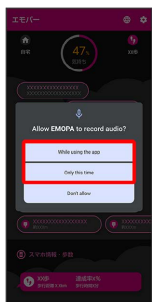

・ Tap **Only this time** to temporarily permit usage of application.

11


Allow

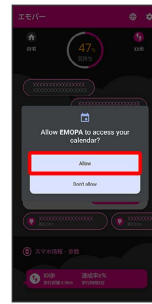

・ Normally, select **Allow** to permit usage of the function.


12

Allow

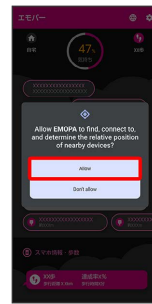


13

Allow

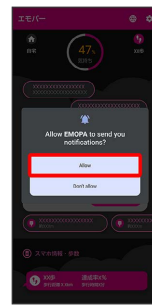


14

Allow

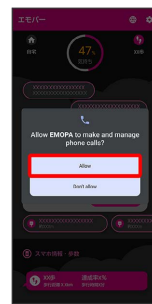

15

Allow

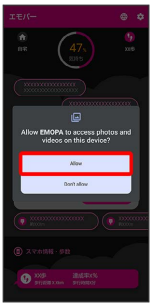

• Select photos and videos appears for some applications, and tap to select individual photos and videos to allow.


16

設定する




17

EMOPA

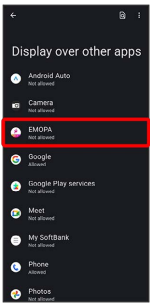


18


Allow display over other apps ()

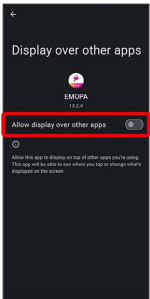

19

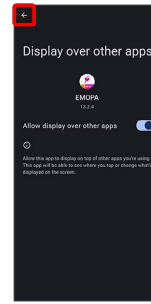

20

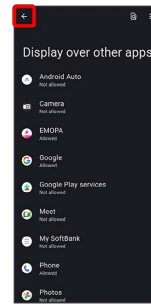


21

設定する




22

Allow notification access

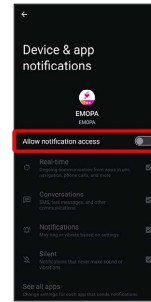


23

Allow

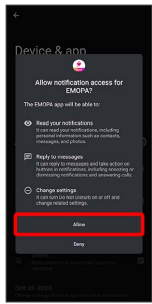

24

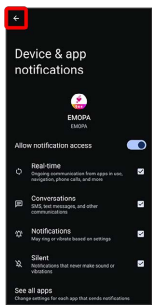


25

Proceed to the setting




26

Allow all the time

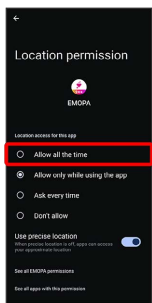

27

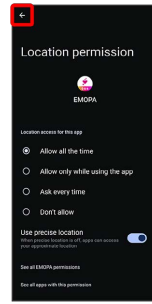

EMOPA Setting is complete.

+ Other Ways to Set Required Permissions for Applications

Setting Functions to Use by Application

In Home Screen, (Settings) → Apps → See all XX apps → Tap application name → Permissions → Permissions → Tap function → Allow / Don't allow

- Allow all the time / Always allow all / Allow only while using the app / Ask every time appear for some functions.
- For notification function, Tap All XXX notifications to toggle Allow () / Don't allow (). Allow All XXX notifications for additional settings of notification function. Follow onscreen prompts.
- If confirmation appears, follow onscreen prompts.

Setting Whether to Pause Notifications by Removing Permissions and Temporary Files for Applications That Have Not Been Used for Several Months

In Home Screen, (Settings) → Apps → See all XX apps → Tap application name → Pause app activity if unused

- Tap Pause app activity if unused to toggle on () / off ().
- May not be usable with some applications.

Setting Applications with Permitted Usage by Function


- In Home Screen, (Settings) → Security & privacy → Privacy → Permission manager → Tap function → Tap application name → Allow / Don't allow
- Allow all the time / Always allow all / Allow only while using the app / Ask every time appear for some feature or applications.
 - For notification function, Tap application name, then Tap All XXX notifications to toggle Allow ()/ Don't allow (). Allow All XXX notifications for additional settings of notification function. Follow onscreen prompts.
 - If confirmation appears, follow onscreen prompts.

Applications

Activating Applications


1

Flick Home Screen up

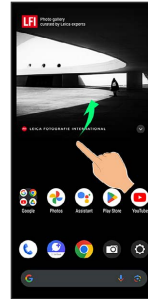

2

Tap application

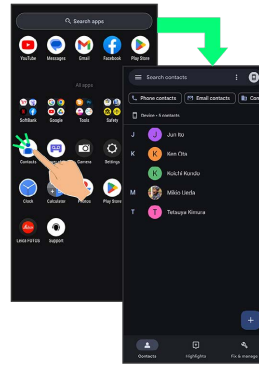

Application activates.

- If confirmation appears, follow onscreen prompts.
- Some applications can be activated from Home Screen.

Using Applications

Setting Required Privileges for Using Applications


Some applications first require permission to access handset data or privileges to access important functions such as photographing.

Confirmation appears for applications requiring permission when first activated. Follow onscreen prompts.

- See "[Confirmation when First Activating Applications](#)" for details.

Function Shortcuts


With some applications, Touch & Hold for shortcuts to functions. Tap function shortcut to launch function directly.

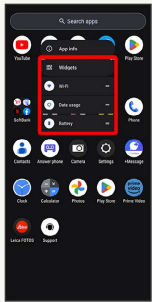

Opening Recent Apps Window

1

Drag bottom of Display up

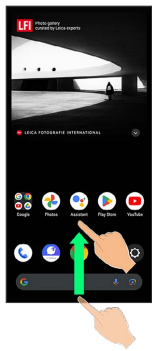

Recent apps window opens.


- In app list, recent apps window does not open by Dragging bottom of Display up.
- When **3-button navigation** is enabled, Tap on Navigation Bar for recent apps window. See "[Quick Operation Settings](#)" and "[System Settings](#)" for details.

+ Opening Most Recently Activated Application

Flick bottom of Display to the right

- When **3-button navigation** is enabled, Tap in recent apps window.

Recent Apps Window Layout

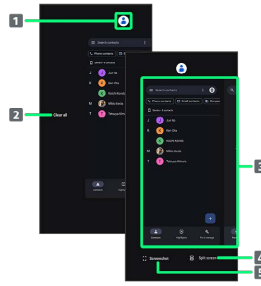

- 1 Show application menu.
- 2 Remove all applications from the list.¹
- 3 Activate recently used applications.
- 4 Split screen (Multi-Window).
- 5 Capture Screenshots.

1 Appears when Flicking application list to the right.

+ Recent Apps Window Operations

Exiting Applications

In recent apps window, select the application in list to exit → Flick it up

- Application is also removed from the list.

Checking Application Information

In recent apps window, Tap icon of application in list →

App info

- May not be usable with some applications.

Capturing Screenshot of Application in Recent Apps Window

In recent apps window, **Screenshot**

- May not be usable with some applications.

Splitting Screen (Multi-Window)

In recent apps window, **Split screen** → Follow onscreen prompts

- In recent apps window, Tap icon of application in list → **Split screen** to split window.
- See "[Multi-Window](#)" for details.
- May not be usable with some applications.

Pinning Screen

In recent apps window, Tap icon of application in list →

Pin → **GOT IT**


- Appears when "App pinning" is enabled. See "[Security & Privacy Settings](#)" for details.

Adding/Deleting Applications

Download a variety of applications (free/paid) from Google Play. Change the setting of downloaded applications to enable manual or automatic updates. Sign in to a Google Account beforehand.

+ Getting Help with Google Play

In Google Play,   Help & feedback

 Google Play Help window opens.

! Google Play Cautions

Application Installation Disclaimer

Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC). SoftBank Corp. is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Google Play Operations & User Interface


Operations and user interface are subject to change due to automatic application updates or other reasons.

Installing Free Applications

1

In Home Screen,  (Play Store)




 Google Play opens.

· If confirmation appears, follow onscreen prompts.

2


Tap free application

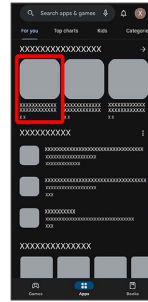

3

Install



 Application downloads and installs.


· If confirmation appears, follow onscreen prompts.

Purchasing Applications

1

In Home Screen,  (Play Store)



 Google Play opens.

· If confirmation appears, follow onscreen prompts.


2

Tap paid application




3

Tap price

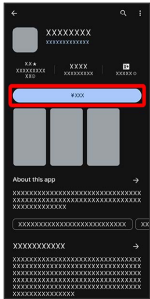

4

Follow onscreen prompts

 Application downloads and installs.

Purchased Applications

Payment







Pay once. Re-downloads of uninstalled applications are free of charge.

Use on Other Android™ Devices

Install same application on other Android devices under same Google Account at no added cost.

Refund Requests

Request refunds within designated period. Returned applications are deleted from handset; no payment is required. One refund request per application.

In Google Play,   **Manage apps & device** 
Manage  **Tap application**  **Refund**  **Request refund**


Application Purchase Disclaimer


Purchase applications at your own risk. SoftBank Corp. is not responsible for any disadvantage resulting for user or third parties.

Updating Installed Applications

1

In Home Screen,  (Play Store)

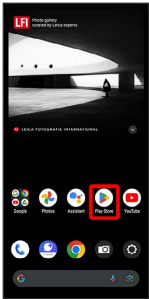


 Google Play opens.




- If confirmation appears, follow onscreen prompts.


2

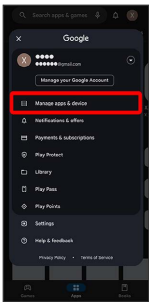
  Manage apps & device



3

Manage  Updates available  Tap application 
Update

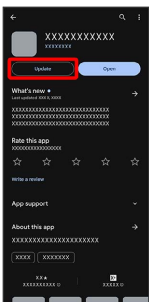







 Application Updates.








- If confirmation appears, follow onscreen prompts.

+ Making Application Update Settings

Setting Automatic Update Options

In Google Play,   Settings  Network preferences  Auto-update apps  Select update item  OK

Setting Automatic Update by Application

In Google Play,   Manage apps & device 
Manage  Tap application    Enable auto update


- If confirmation appears, follow onscreen prompts.
- Tap **Enable auto update** to toggle on () / off () .
- Automatic update is not available for some applications.

Uninstalling Applications

Applications installed via Google Play can be deleted (uninstalled).

1

In Home Screen, (Play Store)

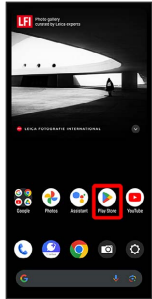


Google Play opens.

• If confirmation appears, follow onscreen prompts.


2

X

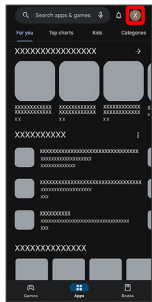


3

Manage apps & device

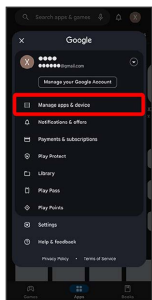


4

Manage

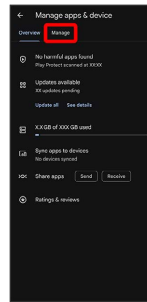


5

Tap application

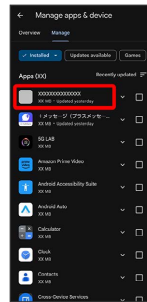


6

Uninstall

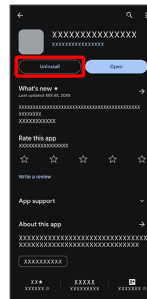

7

Uninstall

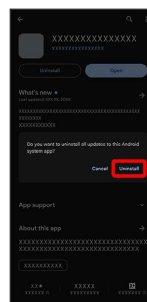

Application is deleted.

Wi-Fi/Bluetooth®

Connecting by Wi-Fi.....	110
Using Bluetooth® Function.....	116

Connecting by Wi-Fi

Handset supports Wi-Fi (wireless LAN). Access the Internet via household Wi-Fi networks.

Connecting Selected Access Points


1

In Home Screen, (Settings)



2

Network & internet

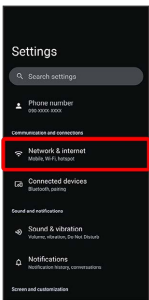

3

Wi-Fi and Mobile Network



Wi-Fi and Mobile Network menu opens.

4

Wi-Fi ()




Wi-Fi is enabled.

- Access point search starts; available access points appear upon completion.
- Tap **Wi-Fi** to toggle on ()/off ().


5

Tap access point

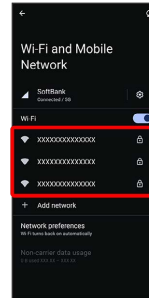

6

Enter password → **Connect**

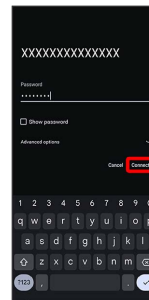


Handset connects to the access point.

- Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, check the password with your ISP.
- Depending on access point, password entry may not be required.



+ Wi-Fi Operations

Updating Wi-Fi and Mobile Network Setting Status

In Wi-Fi and Mobile Network menu, 



Enabling/Disabling Automatic Use of Wi-Fi when High-Quality Network Is Saved (Home Network, Etc.)

In Wi-Fi and Mobile Network menu, **Network preferences** → **Turn on Wi-Fi automatically**

· Tap **Turn on Wi-Fi automatically** to toggle on ()/ off ().

Enabling/Disabling Available Network Notifications

In Wi-Fi and Mobile Network menu, **Network preferences** → **Notify for public networks**

· Tap **Notify for public networks** to toggle on ()/ off ().

Installing Certificates

In Wi-Fi and Mobile Network menu, **Network preferences** → **Install certificates** → Follow onscreen prompts

Viewing Data Usage with Wi-Fi

In Wi-Fi and Mobile Network menu, **Non-carrier data usage**

Checking Access Point Activity while Connected


In Wi-Fi and Mobile Network menu, Tap connected access point

· Connection activity, signal strength, frequency, security, etc. appear.

Share Wi-Fi Password with Other Device

Scan QR code on Display with other device to share.

In Wi-Fi and Mobile Network menu, Tap connected access point → **SHARE**

 QR code appears.

Disconnecting Connected Access Point

In Wi-Fi and Mobile Network menu, Tap connected access point → **DISCONNECT**

· Tap **CONNECT** to connect to disconnected access point.

Disconnecting Saved Access Points

In Wi-Fi and Mobile Network menu, **Saved networks** →

Tap access point to disconnect → **DISCONNECT**

· Tap **CONNECT** to connect to disconnected access point.


? Troubleshooting


Q. Cannot detect access points

A. There may be multiple access points using neighboring channels. In this instance, handset may not detect access points correctly.

Entering Details Manually to Connect


1

In Home Screen,  (Settings)

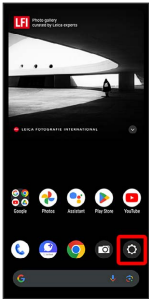


2


Network & internet

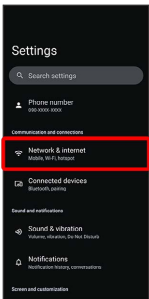

3

Wi-Fi and Mobile Network

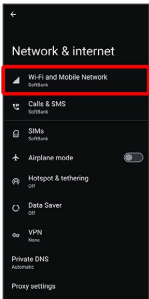




 Wi-Fi and Mobile Network menu opens.

4

Wi-Fi ()




 Wi-Fi is enabled.

· Tap **Wi-Fi** to toggle on ()/off ().


5

Add network

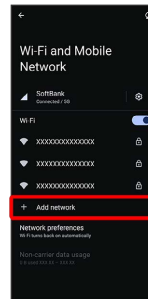


6

Enter network name

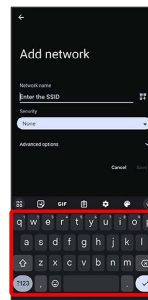


7

Tap Security field

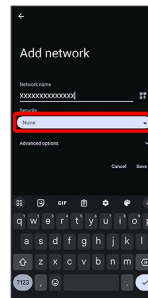


8

Select security

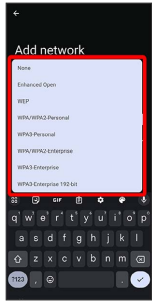


9

Tap Password field

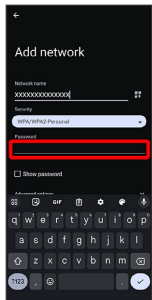


10

Enter password

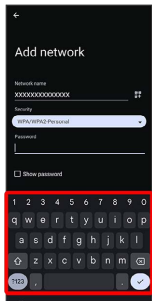

11

Save

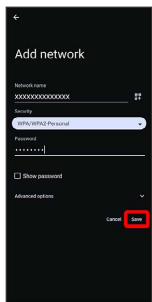


Handset is connected.

- Entering a password is not required if an access point is not security protected.
- If **Save** is hidden, tap on the keyboard to display it.

Deleting Connected Access Points


1

In Home Screen, (Settings)

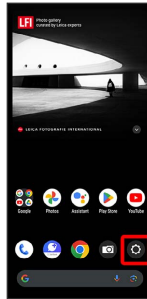


2

Network & internet

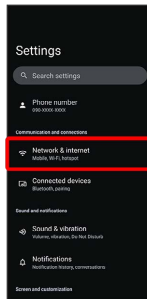

3


Wi-Fi and Mobile Network

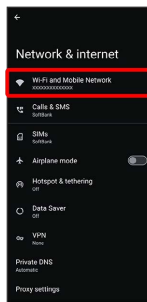

Wi-Fi and Mobile Network menu opens.


4

Tap connected access point

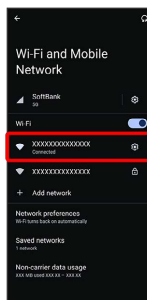

5

Forget

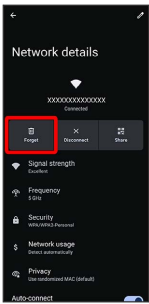


Handset disconnects from the access point.

- After disconnecting from an access point connection, the password may need to be entered again to reconnect.

Deleting Saved Access Points


1

In Home Screen, (Settings)

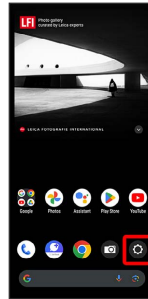


2

Network & internet

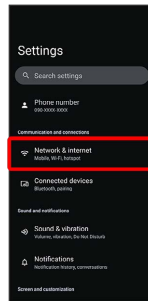

3

Wi-Fi and Mobile Network

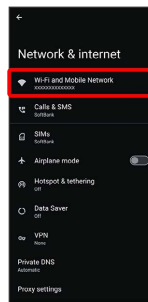

Wi-Fi and Mobile Network menu opens.


4

Saved networks




5

Tap access point

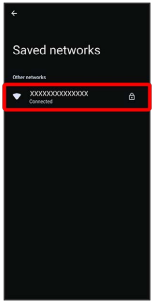

6

Forget

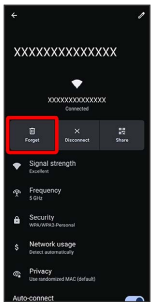


The access point is deleted.

Using Wi-Fi Direct

Use Wi-Fi Direct to establish a Wi-Fi connection with other Wi-Fi Direct compatible devices with no need for an access point or Internet connection.

1

In Home Screen, (Settings) → Network & internet

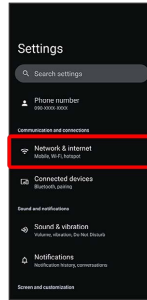

2

Wi-Fi and Mobile Network → Wi-Fi ()




Wi-Fi is enabled.

Tap Wi-Fi to toggle on ()/off ().

3

Network preferences

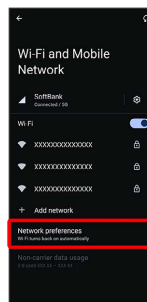



4


Wi-Fi Direct




Found Wi-Fi Direct compatible devices appear in Peer devices field.


- If target device does not appear, Tap   **Search for devices** and search again.

5

Tap target device  Follow onscreen prompts for authentication

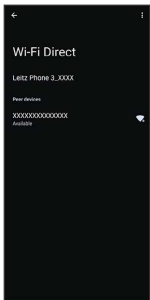

Handset connects to the device.

- If connection is not accepted after a certain period, the connection request is canceled.
- To stop the connection, Tap the connected device  **OK** .

Using Bluetooth® Function

Connect handset to other Bluetooth® devices (e.g., headset) for handsfree conversations, or connect to other Bluetooth®-capable mobile phones, etc. to exchange data.

Bluetooth® Connectivity

The Bluetooth® function is a technology that enables wireless connection with PCs, Bluetooth® devices with handsfree functionality, etc. such as the following.

Function	Description
Sound output	Listen to music, audio, etc. wirelessly. Use broadcast function to listen to music, etc. on multiple devices at the same time.
Handsfree conversation	Use Bluetooth® devices (e.g., headsets) for handsfree conversations.
Data exchange	Exchange data with Bluetooth® devices.

Enabling Bluetooth® Function


1

In Home Screen, (Settings)




2

Connected devices

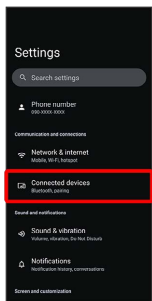


3

Connection preferences

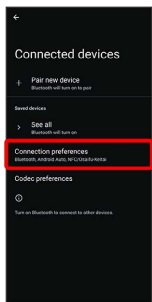

4


Bluetooth

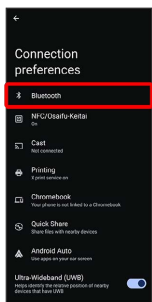

Bluetooth® menu opens.

5

Use Bluetooth ()

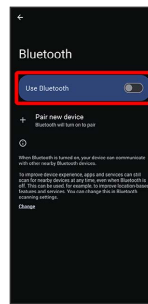

Bluetooth® is enabled.

Tap **Use Bluetooth** to toggle on ()/off ().

+ Renaming Handset Name that Appears on Other Devices

In Bluetooth® menu, **Device name** → Enter name →

RENAME

Available when **Use Bluetooth** is enabled.

? Troubleshooting

Q. Cannot use Bluetooth®

A. Handset may be in Airplane mode. If in Airplane mode, Bluetooth® function is disabled. Bluetooth® function can be enabled again after placing handset in Airplane mode.

! Bluetooth® Cautions

Connection

Bluetooth® connection may not be possible with some Bluetooth® devices. In addition, noise may interfere with wireless or handsfree conversations.

File Transfer


Files may not appear correctly on recipient devices.


Pairing Bluetooth® Devices

Search for and pair nearby Bluetooth® devices. Paired Bluetooth® devices can be connected easily.

- Set Bluetooth® devices pair to be discoverable on handset first.


1

In Home Screen,  (Settings)

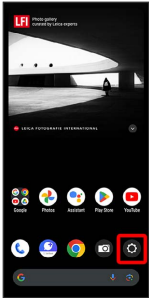

2


Connected devices

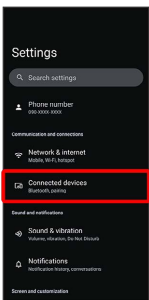

3


Pair new device



 Found Bluetooth® devices appear in Available devices field.


4


Tap target device

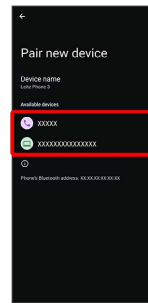

5

Continue by following onscreen prompts to authenticate

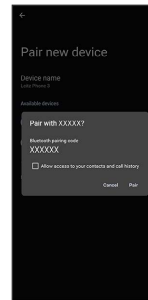

 Pairing completes; handset connects to some devices (e.g., handsfree devices) automatically.



- Authentication procedure varies by device. Passkey entry may be required.
- Passkey is a 1 to 16-digit number or a set of characters/symbols required for authentication between handset and other devices.


Connecting to Paired Bluetooth® Devices

Connect handset and paired Bluetooth® device.

- Enable the Bluetooth® function on handset and the paired Bluetooth® device beforehand.

1


In Home Screen,  (Settings)  **Connected devices**

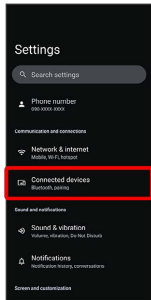

 Connected devices menu opens.

2

Tap target device

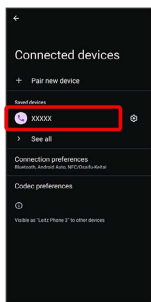

 Handset connects to the device.



Connection by Accepting Connection Requests




Handset automatically accepts connection requests from paired devices. For unpaired devices, set handset to be discoverable, then perform pairing operation on other devices. When connection request arrives, follow onscreen prompts.

- If confirmation appears, follow onscreen prompts.

Paired Bluetooth® Device Operations

Renaming Paired Devices

In Connected devices menu,  for paired device 

  Enter name  **RENAME**

Unpairing Devices

In Connected devices menu,  for device to unpair 

FORGET  **FORGET DEVICE**


Receiving Data via Bluetooth®

See "Bluetooth®でデータを受信する (例: 電話帳)" (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110900/>) (Japanese) and "Bluetooth®で電話帳データを取り込む (データ引継)" (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110901/>) (Japanese) for details.

Sending Data via Bluetooth® (e.g., Address Book)

1

In Home Screen, (Google) → (Contacts)

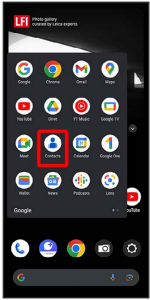


Contacts opens.

· If confirmation appears, follow onscreen prompts.

2


Tap contact

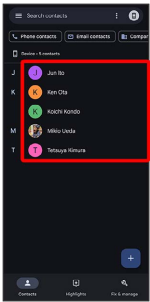

Contact opens.


3

→ Share → Tap items to share → Continue

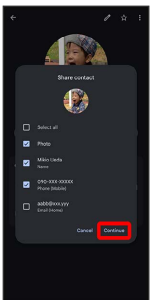

4


Bluetooth

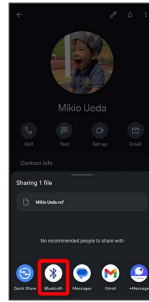

· If Bluetooth is hidden, Flick share menu up first.

5

Tap target device

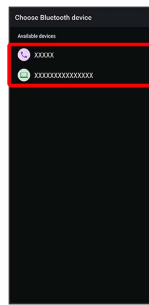

Data is sent.

+ Sending to Several Contacts

In Contacts, Touch & Hold contact → Tap another contact (✓) → Share → Bluetooth → Tap target device

· If Bluetooth is hidden, Flick share menu up first.

Handset Settings

About Settings.....	122
Data Usage Settings.....	123
Sound & Vibration Settings.....	128
Display Settings.....	135
Useful Settings.....	140
Security & Privacy Settings.....	147
Location Settings.....	161
Battery Settings.....	162
System Settings.....	166
Other Handset Settings.....	172

About Settings

The User Guide describes main setting options.


About Settings


Customize operation of handset functions.


Tap search bar at top of Display to search for items in settings menu.

Item	Description
Phone number	Check own phone number.
Network & internet	Make network and Internet settings for Wi-Fi, mobile network, hotspot tethering, etc.
Connected devices	Make Bluetooth® and other device connection settings.
Sound & vibration	Set ringtone, notification sound, etc.
Notifications	Make notification settings.
Display	Set Display brightness, font size, etc.
Wallpaper & style	Make settings for wallpapers and icons, etc.
Home applications	Change the home application.
Useful	Set useful functions such as ScrollAuto, Simple mode, and Clip Now.
Security & privacy	Make settings for screen lock, face authentication, application feature access history and permissions, etc.
Location	Make settings for location information.
Safety & emergency	Make settings for emergency information and emergency calls.
Passwords & accounts	Make settings for password management and Google Autofill. Make settings to create/add accounts, sync accounts.
Digital Wellbeing & parental controls	Prevent excessive handset use by setting timers for each application or showing number of notifications received and frequency of screen unlocking, etc.
Google	Make settings for Google services.
Accessibility	Set captions, magnification gestures, and other useful accessibility functions.
Battery	Check battery usage and save battery power by restricting some handset features.
Storage	Check memory space of internal storage, SD Card, and USB drive mount or unmount SD Card, erase data on SD Card, etc.
Apps	Make application settings.
About phone	Check and make settings for handset information.
System	Make settings for language, input, date and time, backup, reset, etc.
Troubleshooting	Check FAQ on Support Website and do a self-check.

1


In Home Screen,  (Settings)

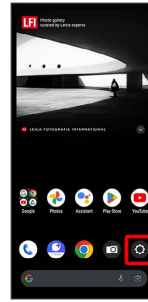


 Settings appear.

2

Select item to set

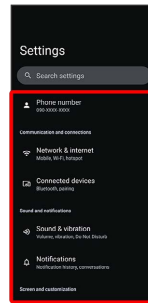

 Settings open.



Data Usage Settings


Check the amount of your mobile data usage (per month) and restrict usage.

Data usage is only as tracked by handset, and may differ from actual data usage statement.

Checking Application Data Usage


1


In Home Screen,  (Settings)  Network & internet

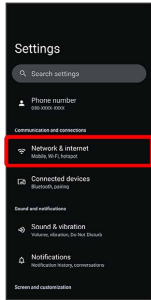

2


SIMs

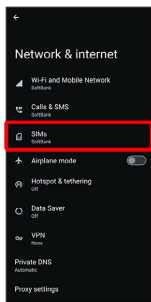


 SIMs window opens.

3


SoftBank

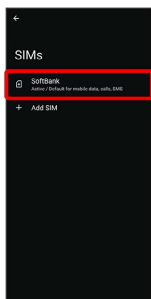


 SoftBank window opens.

4


App data usage

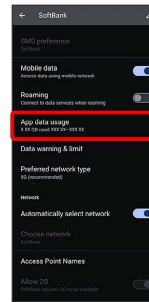



 Check application data usage in Mobile data usage window.

+ Mobile Data Usage Operations


Setting Whether to Permit Restriction on Use of Data when Data Saver Set




In Mobile data usage window, Tap application name 

Unrestricted data usage


- Tap **Unrestricted data usage** to toggle on ()/off ().
- See "Network & Internet" for details on Data Saver.




Setting Whether to Alert User when Mobile Data Usage Reaches Alert Amount

In SoftBank window, **Data warning & limit**  **Set data warning**

- Tap **Set data warning** to toggle on ()/off ().
- When data usage reaches the alert amount,  appears on Status Bar.

Setting Whether to Use Restriction on Use of Mobile Data


In SoftBank window, **Data warning & limit**  **Set data limit**

- Tap **Set data limit** to toggle on ()/off ().
- If confirmation appears, follow onscreen prompts.
- When data usage reaches the upper limit,  appears on Status Bar, and notification indicating that mobile data is disabled appears. Follow onscreen prompts.

Setting Reset Date for Data Usage


1

In Home Screen, (Settings) → Network & internet

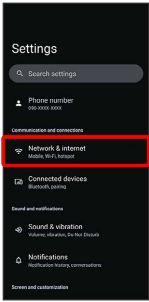


2

SIMs

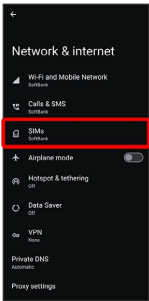


3

SoftBank

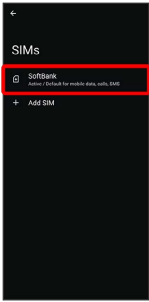


4

Data warning & limit

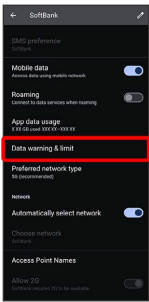


5

Mobile data usage cycle

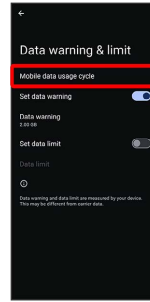

6

Flick date up/down to set reset date → Set

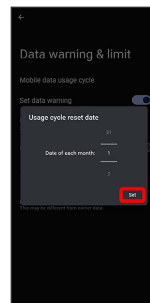


Reset date is set.

Setting an Alert Amount for Increased Data Usage


1

In Home Screen, (Settings) → Network & internet

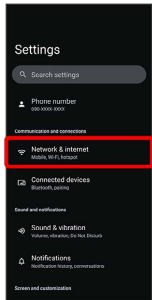


2

SIMs

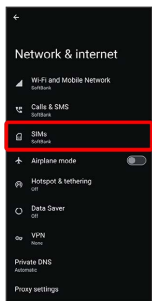


3

SoftBank

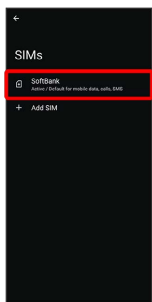


4

Data warning & limit

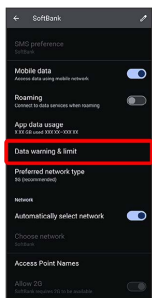

5


Data warning

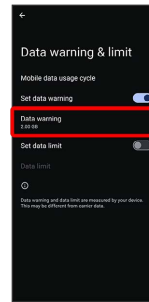

Available when **Set data warning** is enabled.

6

Enter amount for alert → Set

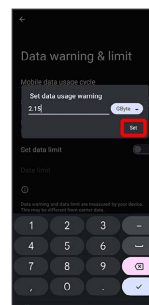

Amount for data alert is set.

- Tap **MB / GB** to change the unit (MB or GB).
- Data usages are approximate, and may differ from the actual data usage.

Changing Automatic Data Communication & Sync Settings



Customize settings to automatically lower amount of data communication.


Change settings in the following ways.

Item	Description
Location	Disable location information. See " Location Settings " for details.
Automatic syncing	Disable automatic syncing of applications and data set in your account. See " Passwords & accounts " for details.
Background data communication	Restrict background data. See " Restrict Background Mobile Data " for details.
Communication while abroad	Set handset to not permit data while using handset abroad. See " Changing Roaming Setting " for details.

Setting a Limit on Mobile Data Usage


1

In Home Screen,  (Settings)  Network & internet

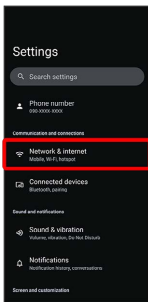


2

SIMs

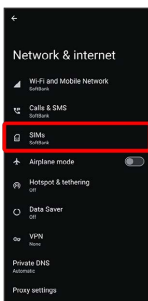


3

SoftBank

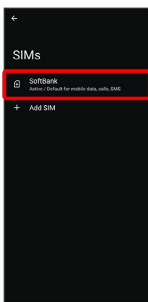


4

Data warning & limit

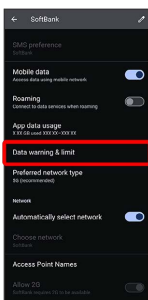


5


Data limit

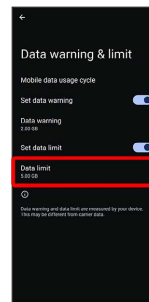


· Available when **Set data limit** is enabled.

6

Enter amount for limit  **Set**

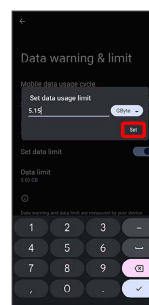


 Limit on data is set.

- Tap **MB** / **GB** to change the unit (MB or GB).
- Data usages are approximate, and may differ from the actual data usage.

Restrict Background Mobile Data


1

In Home Screen, (Settings) → Network & internet

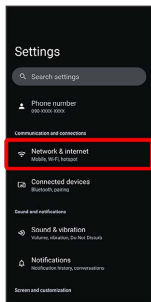


2

SIMs

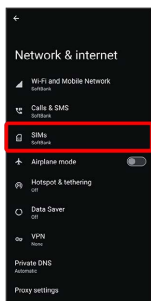


3


SoftBank

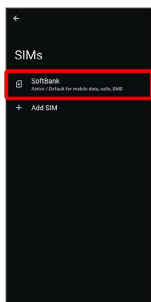

4


App data usage

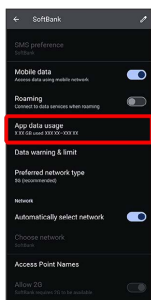

 Mobile data usage window opens.


5


Tap application name

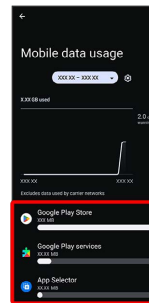

6

Background data ()

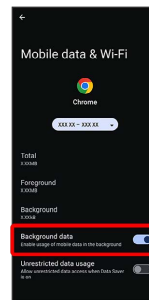

 Restriction on background data is set.


· Tap **Background data** to toggle on ()/off ().

Sound & Vibration Settings

Set ringtone, notification sound, etc.


Sound & Vibration Settings

Settable items are the following.

Item	Description
Media volume	Set volume for music, videos, etc.
Call volume	Set volume for calls.
Ring volume	Set ringtones for incoming calls, etc.
Notification volume	Set volume for notifications.
Alarm volume	Set volume for Alarm.
Dolby Sound Apps	Make settings for Dolby Atmos.
Dolby Spatial Audio	Set whether to make the sound from speaker of handset or from connected headphone, etc. sound realistic.
Do Not Disturb	Make detailed Manner mode settings.
Phone ringtone	Set ringtone.
Live Caption	Set whether to show captions for dialog in media, etc.
Media ¹	Set whether to continue showing media player in Quick Settings after deleting controller in Notifications Window.
Vibration & haptics	Set whether handset vibrates for incoming calls and keyboard Taps, etc.
Shortcut to prevent ringing	Set whether Manner mode is activated by Pressing Power Key and Volume Up Key, etc.
Default notification sound	Set default notification sound.
Default alarm sound	Set default alarm sound.
Dial pad tones	Enable/Disable dial pad tones when Tapping dialpad.
Screen locking sound	Enable/Disable tone when Locking/Unlocking Screen.
Charging sounds and vibration	Set whether tone sounds and handset vibrates when starting charging.
Tap & click sounds	Enable/Disable confirmation tones when tapping a Menu, etc..
Always show icon when in vibrate mode	Set whether to always show  on Status Bar when in Manner (vibrate) mode.



¹ Uses only for compatible applications.


Dolby Atmos


Handset supports Dolby Atmos. In Sound & vibration menu, Tap **Dolby Sound Apps** and enable Dolby Atmos () to enjoy 3D surround effect with Dolby Atmos contents. The audio effect is also present with media sound, ringtones, and alarms other than Dolby Atmos contents.

Sound & Vibration Operations



Setting Volume for Calls


In Home Screen,  (Settings)  **Sound & vibration**


 Drag "Call volume" bar to adjust

- Sound plays at set volume when releasing finger from .



Setting Volume for Notifications

In Home Screen,  (Settings)  **Sound & vibration**







 Drag "Notification volume" bar to adjust

- Sound plays at set volume when releasing finger from .



Setting Dolby Atmos



In Home Screen,  (Settings)  **Sound & vibration**



 **Dolby Sound Apps**  Follow onscreen prompts

- Tap  to toggle on (),  to toggle off ().
- Tap **Dynamic** / **Movie** / **Music** / **Voice** to switch profiles to use.
- When **Movie** / **Music** / **Voice** is selected, Tap  to set profile content.
- To return each profile to its default settings, Tap .



Setting Whether to Make the Sound from Speaker of Handset Sound Realistic

In Home Screen,  (Settings)  **Sound & vibration**



 **Dolby Spatial Audio**  **Phone speaker**

- Tap **Phone speaker** to toggle on ()/off ().
- Available only for compatible media.

Setting Whether to Make the Sound from Connected Headphone, etc. Sound Realistic

In Home Screen,  (Settings)  **Sound & vibration**

 **Dolby Spatial Audio**  **Wired headphones**

- Tap **Wired headphones** to toggle on ()/off ().
- Available only for compatible media.

Activating/Canceling Do Not Disturb

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb TURN ON NOW / TURN OFF
 NOW

Setting Action for Conversations, Calls, and Messages When Do Not Disturb Is Set

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb People Set each item

Making Application Interruption Settings

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb Apps Add apps Follow
 onscreen prompts

Setting Whether to Allow Alarm/Media Sounds/Touch Sounds/Reminders/Calendar events when Do Not Disturb Is Set

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb Alarms & other interruptions
 Alarms / Media sounds / Touch sounds /
 Reminders / Calendar events

· Tap / / /
 / to toggle on ()/off ().

Setting Specific Hours or Events to Activate Do Not Disturb

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb Schedules Sleeping /
 Event Set each item

· Tap to add schedule type.

· Tap for each schedule type to toggle on (),
 to toggle off ().

· Tap each schedule to delete
 item.

Setting Period until Do Not Disturb Is Canceled

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb Duration for Quick Settings
 Until you turn off / For 1 hour / Ask every time
 OK

· In , Tap / to change time until Do
 Not Disturb is canceled.

Setting Notification Action when Do Not Disturb Is Set

In Home Screen, (Settings) Sound & vibration
 Do Not Disturb Display options for hidden
 notifications No sound from notifications / No
 visuals or sound from notifications / Custom

· After Tapping , follow onscreen prompts.

Setting Whether to Show Captions Automatically when Playing Media

In Home Screen, (Settings) Sound & vibration
 Live Caption Use Live Caption

· Tap to toggle on ()/off ().

· Tap to download
 Live Caption feature beforehand.

· If confirmation appears, follow onscreen prompts.

Setting Whether Profanity Is Shown as Asterisks

In Home Screen, (Settings) Sound & vibration
 Live Caption Hide profanity

· Tap to toggle on ()/off ().

Setting Whether Laughter, Applause, Music, etc. Are Captioned with Sound Labels

In Home Screen, (Settings) Sound & vibration
 Live Caption Show sound labels

· Tap to toggle on ()/off
 ().

Setting Whether to Enable Live Captioning by Using Volume Key

In Home Screen, (Settings) Sound & vibration
 Live Caption Live Caption in volume control





· Tap to toggle on
 ()/off ().



Setting Whether to Continue Showing Media Player in Quick Settings after Deleting Controller in Notifications Window

In Home Screen, (Settings) Sound & vibration
 Media Pin media player





· Tap to toggle on ()/off ().



Setting Whether to Continue Showing Media Player on Lock Screen after Deleting Controller in Notifications Window

In Home Screen,  (Settings)  **Sound & vibration**  **Media**  **Show media on lock screen**





- Tap **Show media on lock screen** to toggle on ()/off ().



Setting Whether Handset Vibrates for Incoming Calls and Keyboard Taps, etc.

In Home Screen,  (Settings)  **Sound & vibration**  **Vibration & haptics**  **Use vibration & haptics**





- Tap **Use vibration & haptics** to toggle on ()/off ().



Setting Whether Handset Vibrates when Receiving Messages

In Home Screen,  (Settings)  **Sound & vibration**  **Vibration & haptics**  **Notification vibration**





- Tap **Notification vibration** to toggle on ()/off ().
- Available when **Use vibration & haptics** is enabled.



Setting Whether Handset Vibrates for Alarm Notifications

In Home Screen,  (Settings)  **Sound & vibration**  **Vibration & haptics**  **Alarm vibration**





- Tap **Alarm vibration** to toggle on ()/off ().
- Available when **Use vibration & haptics** is enabled.



Setting Whether Handset Vibrates when Tapping Keyboard and Dialpad, etc.

In Home Screen,  (Settings)  **Sound & vibration**  **Vibration & haptics**  **Touch feedback**






- Tap **Touch feedback** to toggle on ()/off ().
- Available when **Use vibration & haptics** is enabled.





Setting Whether Handset Vibrates when Playing Music and Video, etc.

In Home Screen,  (Settings)  **Sound & vibration**  **Vibration & haptics**  **Media vibration**





- Tap **Media vibration** to toggle on ()/off ().
- Available when **Use vibration & haptics** is enabled.
- Vibration may not work depending on the music or video.

Setting Whether Manner Mode Is Activated by Pressing Power Key and Volume Up Key

In Home Screen,  (Settings)  **Sound & vibration**   /  for "Shortcut to prevent ringing"





- Tap  to toggle on (),  to toggle off ().
- Available when **Power menu** is selected in **Press & hold power button**. See "System Settings" for details.

Setting Manner Mode That Is Activated by Pressing Power Key and Volume Up Key

In Home Screen,  (Settings)  **Sound & vibration**  **Shortcut to prevent ringing**  **Vibrate** / **Mute**

- Available when **Use prevent ringing** is enabled.




Setting Sound for Notifications



In Home Screen,  (Settings)  **Sound & vibration**  **Default notification sound**  **Follow onscreen prompts**

Setting Default Alarm Sound




In Home Screen,  (Settings)  **Sound & vibration**  **Default alarm sound**  **Follow onscreen prompts**



Setting Whether Dialpad Tones Sound

In Home Screen,  (Settings)  **Sound & vibration**  **Dial pad tones**




- Tap **Dial pad tones** to toggle on ()/off ().
- Disable **Dial pad tones** to save battery power.



Setting Whether Tone Sounds when Locking/Unlocking Screen

In Home Screen,  (Settings)  **Sound & vibration**  **Screen locking sound**

- Tap **Screen locking sound** to toggle on ()/off ().
- Disable **Screen locking sound** to save battery power.

Setting Whether Tone Sounds and Handset Vibrates when Starting Charging

In Home Screen,  (Settings)  **Sound & vibration**  **Charging sounds and vibration**

- Tap **Charging sounds and vibration** to toggle on ()/off ().
- Disable **Charging sounds and vibration** to save battery power.

Setting Whether Confirmation Tones Sound when Tapping a Menu, Etc.

In Home Screen, ⚙️ (Settings) → Sound & vibration

→ Tap & click sounds

- Tap Tap & click sounds to toggle on ()/off ().
- Disable Tap & click sounds to save battery power.

Setting Whether to Always Show on Status Bar When in Manner (Vibrate) Mode

In Home Screen, ⚙️ (Settings) → Sound & vibration


→ Always show icon when in vibrate mode

- Tap Always show icon when in vibrate mode to toggle on ()/off ().

Setting Ringtones


1


In Home Screen, ⚙️ (Settings)

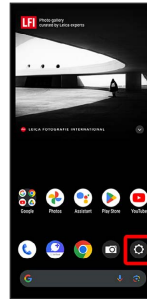

2

Sound & vibration

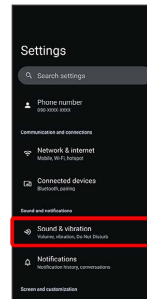

 Sound & vibration menu opens.

3


Phone ringtone



4


Tap ringtone



 Ringtone plays.

5

OK

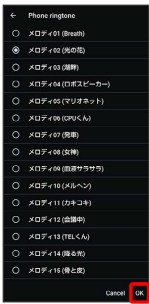


Setting is complete.

Setting Volume for Ringtones for Incoming Calls


1

In Home Screen, (Settings)

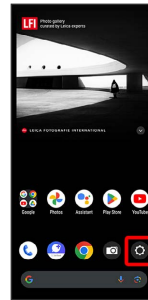

2


Sound & vibration

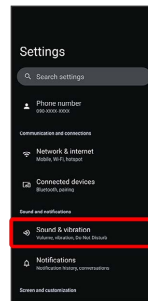

Sound & vibration menu opens.

3

Drag "Ring volume" ● left/right

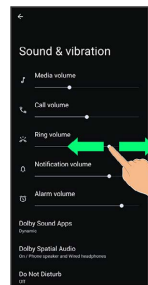


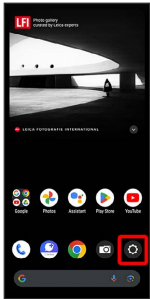
Ringtone plays to check volume.

· Drag ● right to increase volume, and left to decrease volume.

Setting Volume of Music and Videos


1


In Home Screen,  (Settings)




2


Sound & vibration

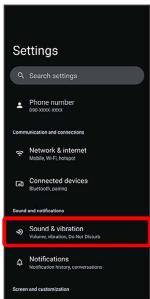


 Sound & vibration menu opens.

3


Drag "Media volume"  left/right

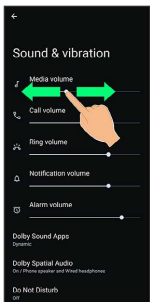


 Sample sound plays.

Setting Alarm Volume


1


In Home Screen,  (Settings)

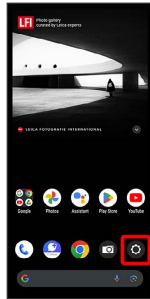


2


Sound & vibration

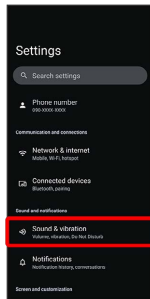


 Sound & vibration menu opens.

3

Drag "Alarm volume"  left/right

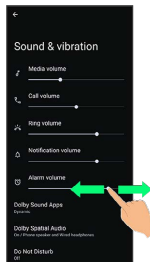


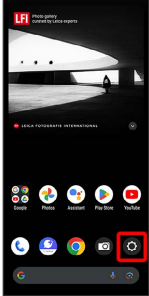
 Alarm sound plays.

Setting Vibration for Incoming Calls

Make vibration settings for incoming calls.


1


In Home Screen,  (Settings)



2


Sound & vibration

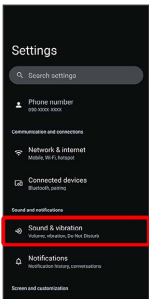

 Sound & vibration menu opens.


3


Vibration & haptics

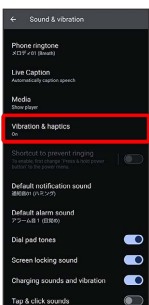



4

Ring vibration / Vibrate first then ring gradually

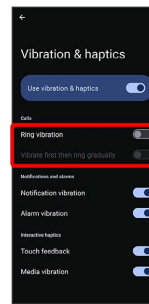

 Setting is complete.

- Tap **Ring vibration** / **Vibrate first then ring gradually** to toggle on ()/off ().
- Available when **Use vibration & haptics** is enabled.
- **Vibrate first then ring gradually** is available when **Ring vibration** is enabled.

Display Settings

Set Display brightness, font size, etc.

Display Settings

Settable items are the following.

Item	Description
Brightness level	Set Display brightness.
Adaptive brightness	Set whether to automatically adjust of Display brightness for surroundings.
Lock screen	Set notifications to show in lock screen, etc. See " Wallpaper & style " for details on Shortcuts.
Screen timeout (Sleep)	Set a period of inactivity after which Display turns off automatically.
Charging indicator when the screen is off	Set whether to display battery level when charging, etc. while screen is turned off (Screen Lock).
Dark theme	Set whether to enable Dark theme and time for using Dark theme.
Display size and text	Set size of text, images, and icons.
Text font	Set the font type of text on Display.
Customize Home	Make Home Screen settings. See " Making Home Screen Settings " for details.
Basic settings	Set picture quality of display.
HDR video	Set HDR video quality.
Virtual HDR	Set whether to use HDR Video-like rendering for standard video.
Relax View	Set whether to use RelaxView for eye-friendly image quality, and the time to use RelaxView.
Outdoor view	Set whether screen is easier to see in bright sunlight.
Screen color temperature	Set whether to make screen have natural tints (screen color temperature) under various lighting conditions.
Hakkiri View	Set whether to enable Hakkiri View.
High-speed display	Set whether to enable fast-moving videos and applications to appear smoothly. See " High-Speed Display Settings " for details.
Auto-rotate screen	Set whether to rotate Display with handset orientation automatically.
glove mode	Set whether to enable tap operation even with gloves on.
Screen saver	Set screen saver images and timing for activating screen saver.

+ Display Operations

Setting Display Brightness

In Home Screen, (Settings) → Display → Brightness level → Drag bar to adjust brightness

Setting Whether to Automatically Adjust Display Brightness for Surroundings

In Home Screen, (Settings) → Display → for "Adaptive brightness"
 · Tap to toggle on (), to toggle off ().

Setting Whether to Show Notifications in Lock Screen

In Home Screen, (Settings) → Display → Lock screen → Privacy → Show all notification content / Show sensitive content only when unlocked / Don't show notifications at all
 · Show sensitive content only when unlocked appears when unlock method is setting other than None or Swipe .

Setting Whether to Hide Notification Viewed in Lock Screen so New Notifications Are Easier to View

In Home Screen, (Settings) → Display → Lock screen → Organize notifications on the lock screen
 · Tap Organize notifications on the lock screen to toggle on ()/off ().
 · Notifications that cannot be deleted still appear even when Organize notifications on the lock screen is on.
 · Notification Indicators on Status Bar are not hidden.





Setting Whether to Show Only Icons for Notifications Shown in Lock Screen




In Home Screen, (Settings) → Display → Lock screen → Show only notification icons
 · Tap Show only notification icons to toggle on ()/off ().

Showing Text in Lock Screen





In Home Screen, (Settings) → Display → Lock screen → Add text on lock screen → Enter message → SAVE
 · Set when unlock method is setting other than None .




Setting Whether to Allow Operation of Connected Device Without Unlocking Screen

In Home Screen,  (Settings) →  Display →  Lock screen →  Use device controls





· Tap  to toggle on ()/off ().




Setting Whether to Show Large Clock When No Notifications are Shown in Lock Screen

In Home Screen,  (Settings) →  Display →  Lock screen →  Large clock view






· Tap  to toggle on ()/off ().




Setting Whether Clock and Notification Indicators Appear after Set Time while Display Is Turned Off (Screen Lock)

In Home Screen,  (Settings) →  Display →  Lock screen →  Show time and info





· Tap  to toggle on ()/off ().




Setting Whether Clock and Notification Indicators Appear by Tapping Screen while Screen is Turned Off (Screen Lock)



In Home Screen,  (Settings) →  Display →  Lock screen →  Tap to check phone →  Tap to check phone

· Tap  to toggle on ()/off ().

Setting Whether Holding Finger to Fingerprint Sensor Unlocks Screen while Screen Is Turned Off (Screen Lock)





In Home Screen,  (Settings) →  Display →  Lock screen →  You can unlock screen just by touching the fingerprint sensor even when the screen is turned off




· Tap  to toggle on ()/off ().

· Available when  is set if  is enabled.




· Save your fingerprint beforehand.




Setting Whether Lock Screen Appears When Notifications Arrive While Screen is Turned Off (Screen Lock)

In Home Screen,  (Settings) →  Display →  Lock screen →  Wake screen for notifications





· Tap  to toggle on ()/off ().





Setting Whether Battery Level, etc. Appears When Charging while Screen is Turned Off (Screen Lock)

In Home Screen,  (Settings) →  Display →  Charging indicator when the screen is off












· Tap  to toggle on ()/off ().


Setting Whether to Enable Dark Theme

In Home Screen,  (Settings) →  Display →  Dark theme /  for "Dark theme"





· Tap  to toggle on (),  to toggle off ().




Setting Time for Dark Theme

In Home Screen,  (Settings) →  Display →  Dark theme →  Schedule →  Turns on at custom time →  Start time →  Specify time →  OK →  End time →  Specify time →  OK





· Tap  to enable Dark Theme from nightfall until morning.




Setting Whether to Make Screen Text Bold

In Home Screen,  (Settings) →  Display →  Display size and text →  Bold text






· Tap  to toggle on ()/off ().

Setting Whether to Make Text Easier to Read by Outlining, etc.






In Home Screen,  (Settings) →  Display →  Display size and text →  High contrast text

· Tap  to toggle on ()/off ().

Resetting Changed Text Size Settings, etc.

In Home Screen,  (Settings) →  Display →  Display size and text →  RESET SETTINGS →  RESET

Setting Text Font

In Home Screen,  (Settings) →  Display →  Text font →  Tap item →  APPLY AFTER REBOOT

· Tap  to search for fonts on Google Play.

· Depending on the application, changing the font may prevent text from being shown correctly. Reset to the preset font.

Setting Image Quality

In Home Screen, (Settings) → Display → Basic settings → Recommended / Standard quality / Dynamic / Natural

Setting HDR Video Quality

In Home Screen, (Settings) → Display → HDR video → HDR standard / HDR dynamic / HDR cinema

Setting Whether to Use HDR Video-like Rendering for Standard Video

In Home Screen, (Settings) → Display → Virtual HDR

· Tap **Virtual HDR** to toggle on ()/off ().

Enabling RelaxView for Eye-friendly Image Quality

In Home Screen, (Settings) → Display → Relax View → Use Relax View

· Tap **Use Relax View** to toggle on ()/off ().

Setting Brightness for RelaxView

In Home Screen, (Settings) → Display → Relax View → Drag "Intensity" slider to adjust

· Available when **Use Relax View** is enabled.

Setting Time for RelaxView

In Home Screen, (Settings) → Display → Relax View → Schedule → Turns on at custom time → Start time → Specify time → OK → End time → Specify time → OK

· Tap **Turns on from sunset to sunrise** to enable RelaxView from nightfall until morning.

Setting Whether Screen is Easier to See in Bright Sunlight

In Home Screen, (Settings) → Display → Outdoor view

· Tap **Outdoor view** to toggle on ()/off ().

Setting Whether to Make Screen Have Natural Tints (Screen Color Temperature) under Various Lighting Conditions

In Home Screen, (Settings) → Display → Screen color temperature → Use automatic color temperature control (Smart color matching)

· Tap **Use automatic color temperature control (Smart color matching)** to toggle on ()/off ().

Adjusting Screen Color Temperature

In Home Screen, (Settings) → Display → Screen color temperature → Drag "Customize Color Temperature" slider to adjust

· Available when **Use automatic color temperature control (Smart color matching)** is disabled.

Setting Whether to Enable Hakkiri View, More Suitable Resolution for Middle-Age/Senior Users

In Home Screen, (Settings) → Display → Hakkiri View

· Tap **Hakkiri View** to toggle on ()/off ().

Setting Whether to Rotate Display with Handset Orientation Automatically

In Home Screen, (Settings) → Display → Auto-rotate screen

· Tap **Auto-rotate screen** to toggle on ()/off ().

· Disable **Auto-rotate screen** to save battery power.

· The feature may not follow the setting with certain applications.

Setting Whether to Enable Touch Operation Even with Gloves On

In Home Screen, (Settings) → Display → glove mode

· Tap **glove mode** to toggle on ()/off ().

Setting Screen Saver Images and Display Options

In Home Screen, (Settings) → Display → Screen saver → Use screen saver → Clock / Colors / Photos

· After Tapping **Clock / Photos**, next Tap **CUSTOMIZE** and follow onscreen prompts.

· To check set screen saver, Tap **Preview**.

Setting Timing for Activating Screen Saver

In Home Screen, ⚙️ (Settings) → Display → Screen saver → When to start → Tap item

- Available when **Use screen saver** is enabled.

! Glove Mode Cautions


Observe the following when using glove mode.

- Touch operation may not be possible depending on materials of your gloves.
- Disable **glove mode** () when not wearing gloves or when using handset in a bathroom.

Setting Display Timeout

1


In Home Screen, ⚙️ (Settings) → Display

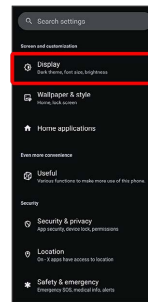

Display menu opens.


2

Screen timeout (Sleep)

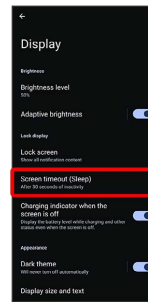

3

Tap time

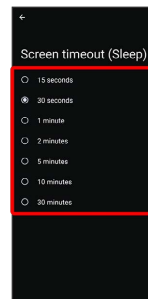


Set time until Display goes out.

- Set a shorter time to save battery power.

Setting Font Size


1


In Home Screen,  (Settings)



2

Display

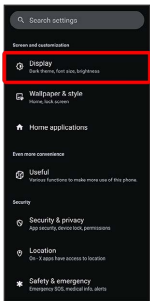


 Display menu opens.


3


Display size and text



4

Drag "Font size"  left/right

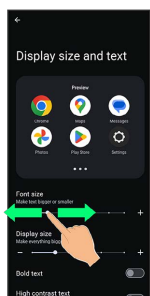


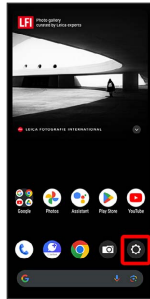
 Font size is changed.

· Check the set font size in Preview.

Setting Size of Images and Icons


1


In Home Screen,  (Settings)



2


Display

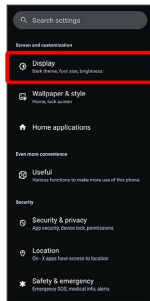

 Display menu opens.

3

Display size and text

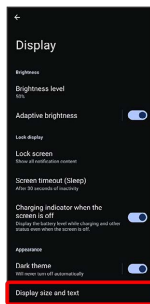

Drag "Display size" ● left/right

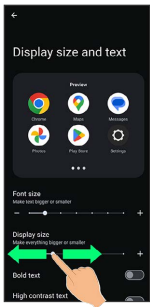


Image and icon sizes are changed.

- The feature may not follow the setting with certain applications.
- Check the set display size in Preview.

Useful Settings

Set useful functions such as ScrollAuto, Simple mode, and Clip Now.

Useful Settings

Settable items are the following.

Item	Description
Rich color technology Mobile	Set screen display and quality according to use. See "Display Settings" for details on each item.
High-speed display	Set fast-moving videos and applications to appear smoothly.
Lock Home Photo Shuffle	Set whether to change Wallpaper for Home Screen/lock screen randomly each time lock screen/Home Screen appears, etc. See "Changing Wallpaper" for details.
Fingerprint sensor and Pay Trigger	Make settings for using Fingerprint Sensor and Pay Trigger.
ScrollAuto	Set screen to scroll up or down automatically. See "自動で画面をスクロールする（スクロールオート）" (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34685/) (Japanese) for details.
Clip Now	Make settings for using Clip Now. See "スクリーンショットを撮る（Clip Now）" (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34684/) (Japanese) for details.
Gaming Menu	While playing a game, record game screen or search for walkthrough sites and make gaming screen and other settings. See "ゲーミングメニューを利用する" (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34686/) (Japanese) for details.
Quick operation	Set what action occurs when pressing Power Key, and make Navigation Bar settings.
Home	Switch to and make settings for the standard home application.
Junior Mode	Make settings for using Junior mode.
Simple mode	Set a simple and intuitive Home Screen and easy-to-read text.
Bright Keep	Set screen to turn on/off according to handset status.

Tethering
Auto

Set Wi-Fi tethering to be enabled automatically when at home or in a specified location.

See "テザリングオートを利用する (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110928/>)" (Japanese) for details.

Intelligent
charging

Enable smart charging and charging adapts to handset and ambient temperature for smooth, long-life operation.

See "Battery Settings" for details.

High-Speed Display Settings

Set fast-moving videos and applications to appear smoothly.


1

In Home Screen, (Settings)



2


Useful

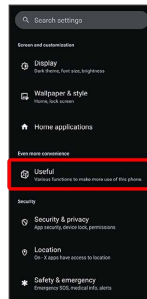

Useful menu opens.

3


High-speed display

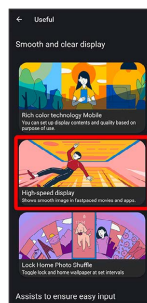

High-speed display window opens.


4

for "Increase video smoothness" ()

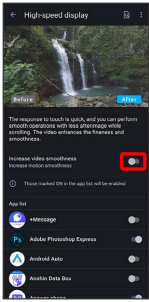

5

Tap application name

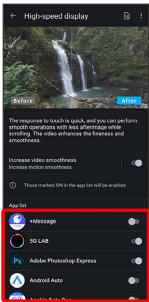

Setting is complete.

· Tap application name to toggle on ()/off ().

+ Setting Smoothness Type when Smoothing Video

In Home Screen, (Settings) Useful High-speed display Increase video smoothness Increase motion smoothness / Increase fineness to achieve smoothness

! Cautions for Using High-Speed Display

Observe the following when using High-Speed Display.

- May not be effective with some applications. In that case, disable setting. Effects may also depend on remaining battery level and temperature of handset.
- Videos above certain high quality and some copyright protected videos are not supported.
- Changing settings while the application is running may hinder effects. In that case, close the application.

Fingerprint Sensor and Pay Trigger Settings

Make settings for using Fingerprint Sensor and Pay Trigger. Settable items are the following.

Item	Description
Register	Make settings to save and authenticate fingerprints. See " Using Fingerprint Authentication Function " for details on each item.
Two-finger authentication	Set whether to allow fingerprint authentication by placing two fingers on the fingerprint sensor to unlock screen, purchase applications, etc., and log in.
Pay Trigger	Set whether to activate application by Touch & Hold of Fingerprint Sensor, and set application to activate by Touch & Hold of Fingerprint Sensor.
Tap to display the fingerprint sensor and clock when the screen is off	Set whether fingerprint sensor appears by tapping screen while screen is turned off (Screen Lock).
You can unlock screen just by touching the fingerprint sensor even when the screen is turned off	Set whether holding finger to Fingerprint Sensor unlocks screen while screen is turned off (Screen Lock).

+ Fingerprint Sensor and Pay Trigger Operations

Setting Whether to Allow Fingerprint Authentication by Placing Two Fingers on the Fingerprint Sensor to Unlock Screen, Purchase Applications, etc., and Log In

In Home Screen, (Settings) Useful Fingerprint sensor and Pay Trigger / for "Two-finger authentication"

- Tap to toggle on (), to toggle off ().
- Set when two or more fingerprints are saved.
- If confirmation appears, follow onscreen prompts.

Setting Whether to Use Two Fingers on All Authentication Prompts when using Two Fingers for Fingerprint Authentication

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → Two-finger authentication → Use two-finger authentication on all screens. / Use one-finger authentication for unlock only.

Setting Whether to Activate Set Application when Touching & Holding Fingerprint Sensor (Activate Pay Trigger), after Unlocking Screen with Fingerprint

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → / for "Pay Trigger"
 · Tap to toggle on (), to toggle off ().

Setting Applications to be Used with Pay Trigger

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → Pay Trigger → Launch app → Tap name of application

Saving Applications in the List (Pay Trigger Folder) Shown after Activating Pay Trigger

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → Pay Trigger → Pay Trigger folder → Follow onscreen prompts

Setting Whether to Open Pay Trigger Folder when Activating Pay Trigger

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → Pay Trigger → Pay Trigger folder also opens at startup
 · Tap Pay Trigger folder also opens at startup to toggle on ()/off ().
 · Pay Trigger folder is displayed when multiple applications are saved.

Setting Whether Fingerprint Sensor Appears by Tapping Screen while Screen is Turned Off (Screen Lock)

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → Tap to display the fingerprint sensor and clock when the screen is off
 · Tap to display the fingerprint sensor and clock when the screen is off to toggle on ()/off ().

Setting Whether Holding Finger to Fingerprint Sensor Unlocks Screen while Screen Is Turned Off (Screen Lock)

In Home Screen, (Settings) → Useful → Fingerprint sensor and Pay Trigger → You can unlock screen just by touching the fingerprint sensor even when the screen is turned off
 · Tap You can unlock screen just by touching the fingerprint sensor even when the screen is turned off to toggle on ()/off ().

Quick Operation Settings

Set what action occurs when pressing Power Key, and make Navigation Bar settings. Settable items are the following.

Item	Description
Press and hold to activate app	Set whether long pressing Power Key starts application, and what application starts.
Press twice to activate camera	Set whether to activate Camera by pressing Power Key twice.
System navigation	Make Navigation Bar settings.

+ Operations with Quick Operation Settings

Setting Whether to Long Press Power Key to Start Application

In Home Screen, (Settings) Useful Quick operation / for "Press and hold to activate app"
 · Tap to toggle on (), to toggle off ().

Setting Application to Start by Long Pressing Power Key

In Home Screen, (Settings) Useful Quick operation Press and hold to activate app Tap name of application

Setting Whether to Activate Camera by Pressing Power Key Twice

In Home Screen, (Settings) Useful Quick operation Press twice to activate camera Quickly open camera
 · Tap Quickly open camera to toggle on ()/off ().

Setting Whether to List Recently Used Applications by Dragging Bottom of Display Up or Tapping

In Home Screen, (Settings) Useful Quick operation System navigation Gesture navigation / 3-button navigation
 · After selecting 3-button navigation, appears on Navigation Bar.
 · Tap of "Gesture Navigation" to set gesture navigation operations. Follow onscreen prompts.
 · Tap of "3-button navigation" to set what action occurs when you Touch & Hold and the order of icons at bottom of Display.

Home Settings

Switch to and make settings for the standard home application.

Item	Description
Use Home	Tap to change Home application to Home. Make Home Screen settings.
Settings Home	See " Making Home Screen Settings " for details.

+ Changing Home Application to Home

In Home Screen, (Settings) Useful Home Use Home

Junior Mode Settings

Make settings for using Junior mode. Settable items are the following.

Item	Description
Using Family Link	Monitor your child's usage and set parental controls.
Prioritize text readability	Set whether to use light theme and black text.
Junior Home	Set whether to use Junior Home with applications for children.
RelaxView	Set whether to use RelaxView for eye-friendly image quality, and the time to use RelaxView. See " Display Settings " for details.
Emergency SOS	Set whether to make an emergency call when Power Key is quickly pressed five or more times. See " Safety & emergency " for details.

+ Junior Mode Operations

Monitoring Your Child's Usage and Setting Parental Controls

In Home Screen, (Settings) → Useful → Junior Mode → Using Family Link → Follow onscreen prompts

Setting Whether to Use Light Theme and Black Text

In Home Screen, (Settings) → Useful → Junior Mode → Prioritize text readability
 · Tap **Prioritize text readability** to toggle on (☑️)/off (☐️).

Setting Whether to Use Junior Home with Applications for Children


In Home Screen, (Settings) → Useful → Junior Mode → Junior Home
 · Tap **Junior Home** to toggle on (☑️)/off (☐️).
 · If confirmation appears, follow onscreen prompts.

Simple Mode Settings

Set a simple and intuitive Home Screen and easy-to-read text.


1

In Home Screen, (Settings)

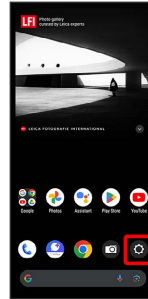

2


Useful

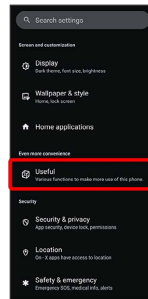

Useful menu opens.

3

Simple mode

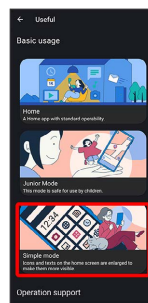

Simple mode window opens.

4

Set each item

Setting is complete.

+ Simple Mode Operations

Setting Simple and Intuitive Home Screen and Easy-to-Read Text at Same Time

In Simple mode window, **SET ALL ON** → **YES**

- If confirmation appears, follow onscreen prompts.

Setting Home Screen, Size of Text, Etc. Individually

In Simple mode window, **Simple Home** / **Prioritize text readability** / **Bold text** / **Enlarge the text** / **3-button navigation** / **Hakkiri View** / **Length of press-and-hold time (longer)**

- Tap **Simple Home** / **Prioritize text readability** / **Bold text** / **Enlarge the text** / **3-button navigation** / **Hakkiri View** / **Length of press-and-hold time (longer)** to toggle on ()/off ().
- If confirmation appears, follow onscreen prompts.

Bright Keep Settings

Set screen to turn on/off according to handset status. Settable items are the following.

Item	Description
Turn screen on by holding	Set whether to turn on Display when handset is picked up (e.g., from a desk) and held still.
Keeps the display while held in hand	Set whether to keep Display from turning off while handset is held.
In the home screen, let's darken early	Set whether to darken Home Screen quickly when handset is put down (e.g., on a desk) while Home Screen is displayed.
Keep display outside of home screen	Set whether to keep Display from turning off when handset is put down (e.g., on a desk) while Display other than Home Screen is turned on.

+ Bright Keep Operations

Setting Whether to Turn on Display when Handset Is Picked Up (E.G., from a Desk) and Held Still.

In Home Screen, **⚙️ (Settings)** → **Useful** → **Bright Keep** → **Turn screen on by holding**

- Tap **Turn screen on by holding** to toggle on ()/off ().
- Whether handset is picked up is determined from handset angle or vibration. Holding handset upright or moving while holding it may affect the determination.

Setting Whether to Keep Display On while Holding Handset

In Home Screen, **⚙️ (Settings)** → **Useful** → **Bright Keep** → **Keeps the display while held in hand**

- Tap **Keeps the display while held in hand** to toggle on ()/off ().
- Hand-held state is determined from handset angle or vibration. Usage status may affect determination of hand-held state.

Setting Whether to Darken Home Screen Quickly when Handset Is Put Down (E.G., on a Desk) while Home Screen Is Displayed

In Home Screen, **⚙️ (Settings)** → **Useful** → **Bright Keep** → **In the home screen, let's darken early**

- Tap **In the home screen, let's darken early** to toggle on ()/off ().

Setting Whether to Keep Display from Turning Off when Handset Is Put Down (E.G., on a Desk) while Display Other Than Home Screen Is Turned On

In Home Screen, (Settings) → Useful → Bright Keep → Keep display outside of home screen

- Tap Keep display outside of home screen to toggle on (●) / off (○).

Security & Privacy Settings

Make settings for screen lock, face authentication, application feature access history and permissions, etc.

Security & Privacy Settings

Settable items are the following.

- Notification appears above setting items that may be unsafe for security reason.

Item	Description
App security	Scan handset for security issues and set whether to perform scan regularly, etc.
Device unlock	Set screen unlock option, and save face data and fingerprint. See " Saving Fingerprints " for details on fingerprint authentication.
Account security	Check the security of handset, logged-in Google account, and saved passwords.
Device finders	Set whether location is shown if handset is lost, etc.
System & updates	With security update, check whether system updates are required via the network, and update manually as required. See " Updating the System " for details on security update. Check for Google Play system updates. Make settings such as whether to back up application data, Wi-Fi password, etc. to Google One. See " System Settings " for details on Backup.
Privacy	Check application feature access history and make settings for permissions. See " Setting Required Permissions for Applications " for details on Permission manager. See " Location Settings " for details on Location access.
More security & privacy	Make settings for encryption, credentials, App pinning feature, Google autofill service, etc. See " Display Settings " for details on notifications in lock screen. See " Sound & Vibration Settings " for details on Show media on lock screen.

+ Security & Privacy Operations

Setting Screen Not to Lock

In Home Screen, (Settings) → Security & privacy → Device unlock → Screen lock → None

- If method for unlocking screen is setting other than None or Swipe before changing setting, first Tap Screen lock and unlock screen.
- If confirmation appears, follow onscreen prompts.

Setting Whether Traced Pattern is Visible when Unlocking Screen

In Home Screen, (Settings) → Security & privacy → Device unlock → for "Screen lock" → Make pattern visible

- Tap **Make pattern visible** to toggle on ()/off ().
- Set when unlock method is **Pattern** .

Setting Whether to Disable Keyboard Animation During PIN Entry When Unlocking Screen

In Home Screen, (Settings) → Security & privacy → Device unlock → for "Screen lock" → Enhanced PIN privacy

- Tap **Enhanced PIN privacy** to toggle on ()/off ().
- Set when unlock method is **PIN** .

Setting Time after Display Off until Screen Locks

In Home Screen, (Settings) → Security & privacy → Device unlock → for "Screen lock" → Lock after screen timeout → Tap item

- Set when unlock method is setting other than **None** or **Swipe** .

Setting Whether Pressing Power Key Immediately Locks Screen

In Home Screen, (Settings) → Security & privacy → Device unlock → for "Screen lock" → Power button instantly locks

- Tap **Power button instantly locks** to toggle on ()/off ().
- Set when unlock method is setting other than **None** or **Swipe** .

Checking Security of Handset and Logged-in Google Account

In Home Screen, (Settings) → Security & privacy → Account security → Google Security Checkup

- Log in to a Google account beforehand.

Checking Security of Passwords Saved in Google Account

In Home Screen, (Settings) → Security & privacy → Account security → Password Checkup

- Log in to a Google account beforehand.

Setting Whether to Receive Notifications When an Unknown Bluetooth® Tracker is Detected, etc.

In Home Screen, (Settings) → Security & privacy → Device finders → Follow onscreen prompts

Checking for Google Play System Updates

In Home Screen, (Settings) → Security & privacy → System & updates → Google Play system update → Follow onscreen prompts

- Log in to a Google account beforehand.

Checking Applications that Used Location, Camera, Microphone, etc. in Past 24 hours

In Home Screen, (Settings) → Security & privacy → Privacy → Privacy dashboard → Location / Camera / Microphone

- Tap application to check/change access permissions for functions it is using.
- Tap **See other permissions** to display other functions. Tap displayed function to check/change access permissions for application functions.

Setting Ads

In Home Screen, (Settings) → Security & privacy → Privacy → Ads → Follow onscreen prompts

Managing Applications That Can Access Data Stored in Health Connect

In Home Screen, (Settings) → Security & privacy → Privacy → Health Connect → App permissions → Follow onscreen prompts

- If confirmation appears, follow onscreen prompts.

Checking Data Stored in Health Connect

In Home Screen, (Settings) → Security & privacy → Privacy → Health Connect → Data and access → See all categories → Follow onscreen prompts

- If confirmation appears, follow onscreen prompts.
- Tap **Auto-delete** → Tap item to set data storage period.
- Tap **Delete all data** → Tap item → **Next** → **Delete** → **Done** to delete data stored in selected period.

Setting Whether Camera is Accessible for All Applications and Services

In Home Screen, (Settings) → Security & privacy → Privacy → Camera access

- Tap **Camera access** to toggle on ()/off ().

Setting Whether Microphone is Accessible for All Applications and Services

In Home Screen, (Settings) → Security & privacy → Privacy → Microphone access

· Tap **Microphone access** to toggle on ()/off ().

Setting Whether to Display Notifications When Copied Text, Images, etc. on Clipboard are Used in Applications

In Home Screen, (Settings) → Security & privacy → Privacy → Show clipboard access

· Tap **Show clipboard access** to toggle on ()/off ().

Setting Whether Characters Remain Visible for a Short Time when Password is Entered

In Home Screen, (Settings) → Security & privacy → Privacy → Show passwords

· Tap **Show passwords** to toggle on ()/off ().

Setting Google Activity Controls

In Home Screen, (Settings) → Security & privacy → Privacy → Activity controls → Follow onscreen prompts

· Log in to a Google account beforehand.

Setting Whether to Allow Applications to Send Contents to Android System

In Home Screen, (Settings) → Security & privacy → More security & privacy → App content

· Tap **App content** to toggle on ()/off ().

Checking Android System Intelligence Functions

In Home Screen, (Settings) → Security & privacy → More security & privacy → Android System Intelligence → Device learning

· If confirmation appears, follow onscreen prompts.

Setting Whether to Display Suggestions for Reply, etc., on Keyboard Suggestion Bar

In Home Screen, (Settings) → Security & privacy → More security & privacy → Android System Intelligence → Keyboard → /

· Tap to toggle on (), to toggle off ().

Deleting Data Stored by Android System Intelligence

In Home Screen, (Settings) → Security & privacy → More security & privacy → Android System Intelligence → Clear data → Tap item → Clear data

Using Google Autofill Service

In Home Screen, (Settings) → Security & privacy → More security & privacy → Autofill service from Google → Follow onscreen prompts

· Log in to a Google account beforehand.

Setting Whether to Send Usage Status and Diagnosis Information to Google Automatically

In Home Screen, (Settings) → Security & privacy → More security & privacy → Usage & diagnostics → Usage & diagnostics

· Tap **Usage & diagnostics** to toggle on ()/off ().

Setting Screen to Remain Unlocked while Being Carried

In Home Screen, (Settings) → Security & privacy → More security & privacy → Extend Unlock → On-body detection → Use On-body detection → CONTINUE

· Set pattern / lock no. (PIN) / password for unlocking screen beforehand.

· Tap **Use On-body detection** to toggle on ()/off ().

· If confirmation appears, follow onscreen prompts.

Setting Screen to Remain Unlocked while in Specific Place

In Home Screen, (Settings) → Security & privacy → More security & privacy → Extend Unlock → Trusted places → Home / Add trusted place → Follow onscreen prompts

· Set pattern / lock no. (PIN) / password for unlocking screen beforehand.

· To select **Home**, log in to a Google account with home address set up beforehand.

· If confirmation appears, follow onscreen prompts.

Deleting Places Added as Trusted Places

In Home Screen, (Settings) → Security & privacy → More security & privacy → Extend Unlock → Trusted places → Tap place → Delete

Setting Screen to Unlock by Using Trusted Device

In Home Screen, (Settings) → Security & privacy → More security & privacy → Extend Unlock → Enter pattern / lock no. (PIN) / password → Trusted devices → Add trusted device → Tap device →

Follow onscreen prompts

- Set pattern / lock no. (PIN) / password for unlocking screen beforehand.
- Turn "Bluetooth" On and connect to Bluetooth® device beforehand.
- If confirmation appears, follow onscreen prompts.

Deleting Devices Added as Trusted Devices

In Home Screen, (Settings) → Security & privacy → More security & privacy → Extend Unlock → Enter pattern / lock no. (PIN) / password → Trusted devices → Tap name of device → REMOVE

Setting Whether to Enable Device Administration Applications

In Home Screen, (Settings) → Security & privacy → More security & privacy → Device admin apps → Tap device admin application name → Follow onscreen prompts

Setting Whether to Allow Applications Access to Trusted Certificates and Other Credentials

In Home Screen, (Settings) → Security & privacy → More security & privacy → Encryption & credentials → Trusted credentials → System / User → Tap certificate → Disable / Enable / Uninstall

- Tap on right of certificate to toggle on (), to toggle off ().

Viewing Details of Credentials Installed by User

In Home Screen, (Settings) → Security & privacy → More security & privacy → Encryption & credentials → User credentials → Tap certificate

Deleting Credentials Installed by User

In Home Screen, (Settings) → Security & privacy → More security & privacy → Encryption & credentials → User credentials → Tap certificate → UNINSTALL

Installing Encrypted Certificates

In Home Screen, (Settings) → Security & privacy → More security & privacy → Encryption & credentials → Install a certificate → Follow onscreen prompts

- If method for unlocking screen before change is setting other than None or Swipe, first unlock screen.
- Credentials may be required when configuring a Wi-Fi network. How to obtain credentials varies by the issuer.

Deleting All Credentials and Resetting Credential Storage Password

In Home Screen, (Settings) → Security & privacy → More security & privacy → Encryption & credentials → Clear credentials → OK

- Clearing credential storage also deletes all VPN settings.
- If method for unlocking screen is setting other than None or Swipe, first Tap OK and unlock screen.

Setting Whether to Show/Hide Trusted Agents

In Home Screen, (Settings) → Security & privacy → More security & privacy → Trust agents → Tap agent name

- Set pattern / lock no. (PIN) / password for unlocking screen beforehand.
- Tap agent name to toggle on ()/off ().

Setting Screen of Only Specified Application to Be Kept in View

In Home Screen, (Settings) → Security & privacy → More security & privacy → App pinning → Use app pinning () → Activate application to pin → Drag bottom of Display up → Tap icon of application in history → Pin → GOT IT

- Tap Use app pinning to toggle on ()/off ().
- To unpin, wait while Dragging bottom of Display up.
- If confirmation appears, follow onscreen prompts.

Requiring Screen to Be Unlocked after Screen of Only Specified Application No Longer Kept in View

In Home Screen, (Settings) → Security & privacy → More security & privacy → App pinning → Lock device when unpinning () → Pattern / PIN / Password → Set pattern / lock no. (PIN) / password

- Available when Use app pinning is enabled.
- If pattern / lock no. (PIN) / password for unlocking screen is set beforehand, Tap App pinning to show Ask for unlock pattern before unpinning / Ask for PIN before unpinning / Ask for password before unpinning . Tap Ask for unlock pattern before unpinning / Ask for PIN before unpinning / Ask for password before unpinning to toggle on ()/off ().

Setting Whether to Perform Screen Unlock Operation Before Erasing eSIM

In Home Screen, (Settings) → Security & privacy → More security & privacy → Confirm SIM deletion

- Tap Confirm SIM deletion to toggle on ()/off ().
- If confirmation appears, follow onscreen prompts.

Screen Lock Cautions

Make sure to make a note of and not forget pattern / lock no. (PIN) / password set for unlocking screen. If you forget the code, visit your nearest SoftBank Shop for recovery. Note that saved files and settings will be lost.

Main Security Codes

The following are main security codes required for handset use.

Code	Description
Center Access Code	A four-digit code set in subscription contract. See " Center Access Code " for details.
SIM PIN	A code for SIM Card/eSIM. SIM PIN is 9999 by default (change as needed). See " Enabling SIM PIN " for details.
Lock No. (PIN)	A code for unlocking screen. See " Requiring Lock No. (PIN) Entry for Unlocking Screen " for details.

Center Access Code

Center Access Code is a four-digit code set in subscription contract; necessary to use optional services from landlines, etc.


- Do not forget Center Access Code. If you forget the code, contact us for recovery. For details, contact [Customer Service](#).
- Be careful not to reveal security codes to others. If misused by others, SoftBank Corp. is not liable for any resulting damages.

Enabling SIM PIN

When SIM PIN is enabled, PIN entry is required for handset use each time handset is powered on with SIM Card installed/eSIM enabled. It is effective for preventing unauthorized use by others.

1


In Home Screen, (Settings) → Security & privacy

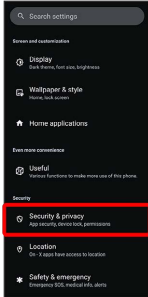

Security & privacy menu opens.


2

More security & privacy

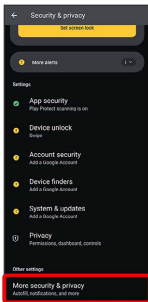


3

SIM lock

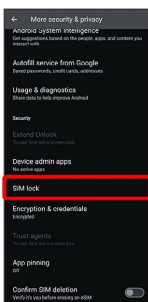

4

Lock SIM → Enter SIM PIN → OK ()

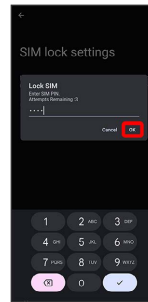

SIM card lock is enabled.

+ Disabling SIM Card Lock

In Security & privacy menu, More security & privacy → SIM lock → Lock SIM → Enter SIM PIN → OK ()

! SIM PIN Entry Cautions

SIM PIN entry is required when changing SIM PIN, when powering handset on with SIM card lock enabled, etc.


- Entering incorrect SIM PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; contact [Customer Service](#).
- Entering incorrect PUK ten consecutive times activates PUK Lock, disabling handset. For recovery, SIM Card/eSIM must be reissued at a SoftBank Shop (fees apply).

Changing SIM PIN

Enable SIM card lock first. See "Enabling SIM PIN" for details.

1


In Home Screen, (Settings) → Security & privacy

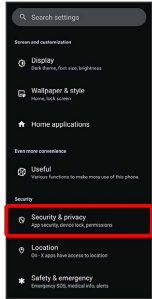

Security & privacy menu opens.

2

More security & privacy

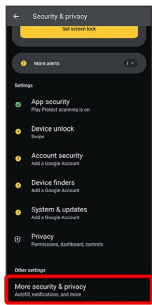


3

SIM lock



4


Change SIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK

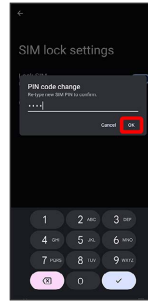

SIM PIN is changed.

Setting Screen to Unlock by Flicking Screen


1


In Home Screen,  (Settings)



2


Security & privacy

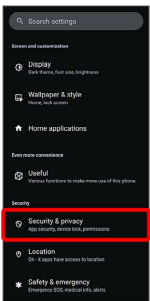

 Security & privacy menu opens.


3

Device unlock

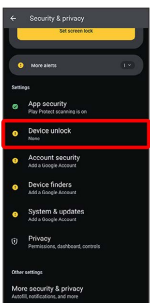

4


Screen lock

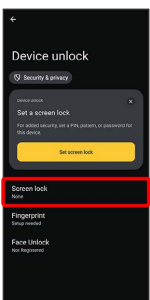


· If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.

5

Swipe

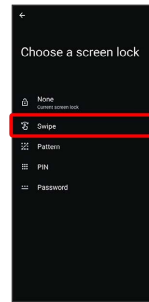

 Setting is complete.

· If confirmation appears, follow onscreen prompts.

Setting Screen to Unlock by Tracing Pattern


1

In Home Screen, (Settings)



2


Security & privacy

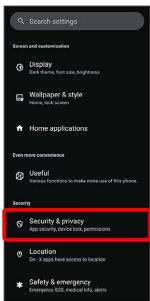

Security & privacy menu opens.


3

Device unlock

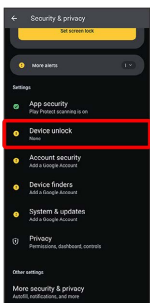

4


Screen lock

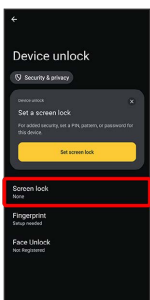

If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.


5

Pattern

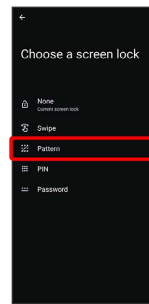

6

Enter new pattern

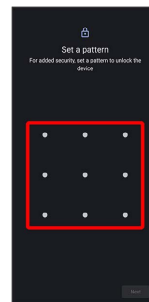

7


Next



Tap **Clear** to erase entered pattern.

8

Enter new pattern again

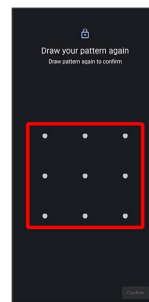

9


Confirm



If method for unlocking screen before change is setting other than **None** or **Swipe**, setting is complete.


10

Select method of notification display

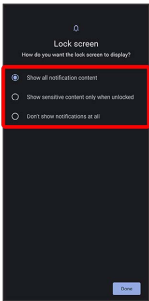

11

Done

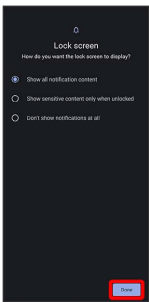


Setting is complete.

Requiring Lock No. (PIN) Entry for Unlocking Screen


1

In Home Screen, (Settings)

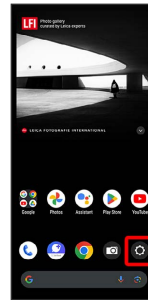

2


Security & privacy

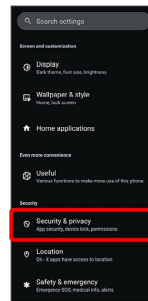

Security & privacy menu opens.


3

Device unlock

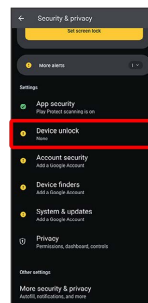

4


Screen lock

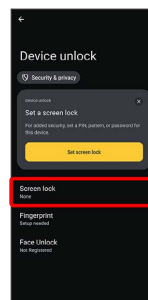

If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.

5

PIN

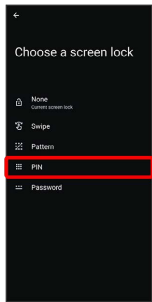


6

Enter new lock no. (PIN)



7


Next

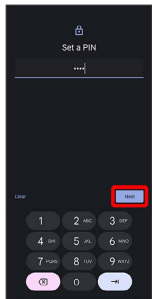

- Tap **Clear** to erase entered lock no. (PIN).


8

Enter new lock no. (PIN) again

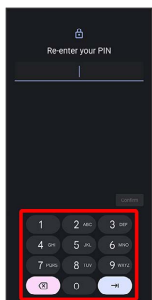

9


Confirm

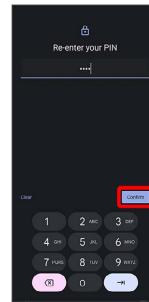

- If method for unlocking screen before change is setting other than **None** or **Swipe**, setting is complete.
- Tap **Clear** to erase entered lock no. (PIN).


10


Select method of notification display

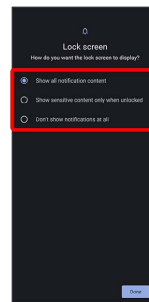

11


Done

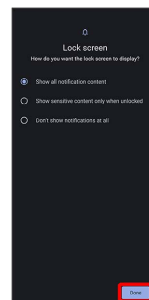

 Setting is complete.

Setting Screen to Unlock with Password


1


In Home Screen,  (Settings)



2


Security & privacy

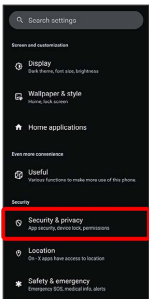

 Security & privacy menu opens.


3

Device unlock

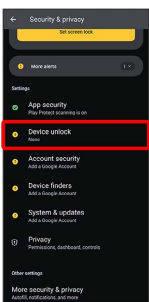

4


Screen lock

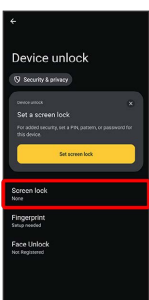

- If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.


5

Password

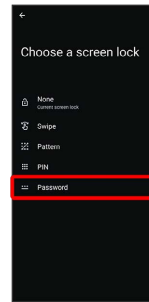


6

Enter new password

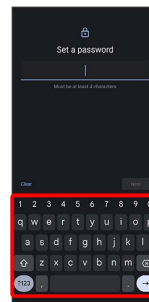

7


Next

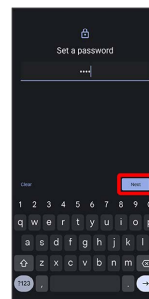

- Tap **Clear** to erase entered password.


8

Enter new password again

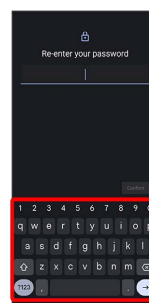

9


Confirm

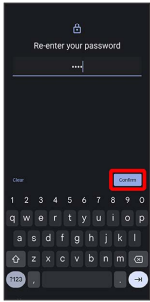

- If method for unlocking screen before change is setting other than **None** or **Swipe**, setting is complete.
- Tap **Clear** to erase entered password.


10

Select method of notification display

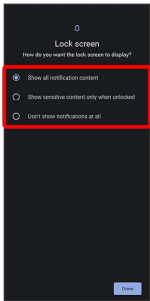

11

Done

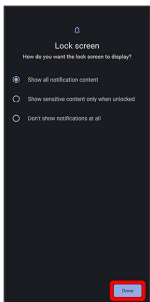


Setting is complete.

Using Face Authentication

When face data is saved, handset authenticates with face when Display is on, and screen unlocks.

1


In Home Screen, (Settings) **Security & privacy**

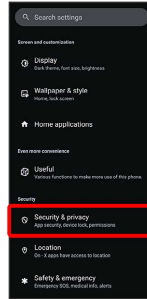

Security & privacy menu opens.


2

Device unlock

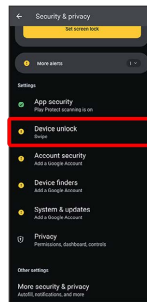


3

Face Unlock

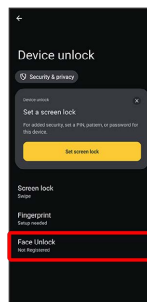

4


Follow onscreen prompts and set pattern / lock no. (PIN) / password for unlocking screen

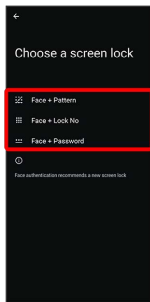

- This is a backup method for unlocking the screen if unable to authenticate with your face.
- Unlocks screen when unlock method is setting other than **None** or **Swipe**.
- See "[Setting Screen to Unlock by Tracing Pattern](#)," "[Requiring Lock No. \(PIN\) Entry for Unlocking Screen](#)," and "[Setting Screen to Unlock with Password](#)" for details on setting a method for unlocking screen.


5

Next

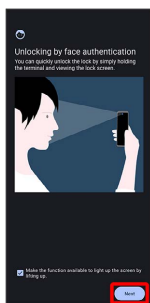


6

OK

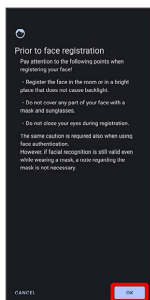


7

Align face with onscreen guides → Make settings for "Face recognition even when you are wearing a mask"

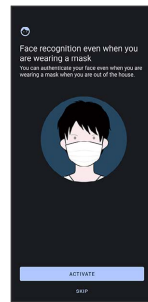

8

Tap action after screen unlock → OK

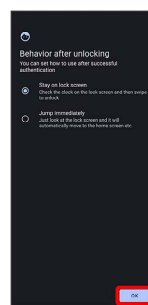

Face data is saved.

+ Face Authentication Operations

Deleting Face Data

In Security & privacy menu, **Device unlock** → **Face Unlock** → Enter pattern / lock no. (PIN) / password → **Deletion of face data** → **Yes**

Setting Whether to Use Face Authentication Even When Wearing Mask

In Security & privacy menu, **Device unlock** → **Face Unlock** → Enter pattern / lock no. (PIN) / password → **Face recognition even when you are wearing a mask**

- Tap **Face recognition even when you are wearing a mask** to toggle on (☑️)/off (☐️).
- If confirmation appears, follow onscreen prompts.

Changing Action after Screen Unlock after Saving Face Data

In Security & privacy menu, **Device unlock** → **Face Unlock** → Enter pattern / lock no. (PIN) / password → **Stay on lock screen** / **Jump immediately**

Checking Overview and Precautions for Face Authentication after Saving Face Data

In Security & privacy menu, **Device unlock** → **Face Unlock** → Enter pattern / lock no. (PIN) / password → **Face authentication** / **Precautions**

! Face Authentication Cautions

Cautions for Saving Face Data

Access permission for camera is required when saving face data. To permit access, Tap **WHILE USING THE APP**.

- When Tapping **ONLY THIS TIME** / **DON'T ALLOW**, the face authentication may not operate normally.

Cautions for Screen Unlock Using Face Authentication

If face authentication fails three times in a row, the screen cannot be unlocked with face authentication. To unlock screen, use unlock method (Pattern/Lock No.(PIN)/ Password). After unlocked, the screen can be unlocked with face authentication.

Location Settings

Make settings for location information.

Location Settings

Settable items are the following.

Item	Description
Use location	Set whether to use location information.
App location permissions	Check permission to access location information and set whether to allow use of location information for each application.
Location services	Making Settings for Google Location History, Emergency Location Service, etc.

+ Location Operations

Setting Whether to Use Location Information

In Home Screen, **(Settings)** → **Location** → **Use location**

- Tap **Use location** to toggle on ()/off ().
- If confirmation appears, follow onscreen prompts.

Showing Applications that Recently Used Location

In Home Screen, **(Settings)** → **Location**

- Applications that recently used location appear below "Recent access."

Setting Whether to Allow Use of Location, etc. for Each Application

In Home Screen, **(Settings)** → **Location** → **App location permissions** → Tap application name → **Allow**

all the time / **Allow only while using the app** / **Ask every time** / **Don't allow**

- If confirmation appears, follow onscreen prompts.
- **Allow all the time** does not appear for some applications.

Setting Google Location History

In Home Screen, **(Settings)** → **Location** → **Location services** → **Google Location History**

Follow onscreen prompts

- Log in to a Google account beforehand.

Setting Whether to Improve Location Accuracy

In Home Screen, (Settings) → Location → Location services → Google Location Accuracy → Improve Location Accuracy

- Tap **Improve Location Accuracy** to toggle on ()/off ().

Managing Location Share Setting

In Home Screen, (Settings) → Location → Location services → Google Location Sharing →

Follow onscreen prompts

- Log in to a Google account beforehand.

Setting Whether to Sound Alarm When Earthquake is Detected Near Your Current Location

In Home Screen, (Settings) → Location → Location services → Earthquake alerts → Earthquake alerts

- Tap **Earthquake alerts** to toggle on ()/off ().
- May not be usable in some regions.
- Tap **See a demo** to simulate Earthquake alert.
- Tap **Learn earthquake safety tips** to search the website for earthquake safety information.

Setting Whether to Send Location in Emergency

In Home Screen, (Settings) → Location → Location services → Emergency Location Service → Use Emergency Location Service

- Tap **Use Emergency Location Service** to toggle on ()/off ().
- Tap **Open Personal Safety** to set whether emergency information can be viewed without unlocking screen, etc. Follow onscreen prompts.

Setting Whether to Use Wi-Fi Scanning to Increase Accuracy of Location

In Home Screen, (Settings) → Location → Location services → Wi-Fi scanning → Wi-Fi scanning

- Tap **Wi-Fi scanning** to toggle on ()/off ().

Setting Whether to Use Bluetooth® Scanning to Increase Accuracy of Location

In Home Screen, (Settings) → Location → Location services → Bluetooth scanning → Bluetooth scanning

- Tap **Bluetooth scanning** to toggle on ()/off ().

Battery Settings

Check battery usage, or save battery power by restricting some handset features.

Battery Settings

Settable items are the following.

Item	Description
XX%	Check battery strength.
health level	Check battery condition.
Battery usage	Check battery usage.
Battery Saver	Save battery power by restricting some handset features.
Intelligent Charge	Enable smart charging and charging adapts to handset and ambient temperature for smooth, long-life operation. Also set whether to stop charging when battery level reaches about 90% and change to direct charging, and whether to charge only when Display is off (screen lock) and change to direct charging when Display turns on.
Charge share	Set whether to power Qi compatible wireless chargeable device by stacking it on the back of handset (Charge share), etc.
Battery percentage	Set whether to show battery strength in percent beside battery indicator on Status Bar.

+ Battery Operations

Checking Battery Health

In Home Screen, (Settings) → Battery → health level

Checking Battery Usage

In Home Screen, (Settings) → Battery → Battery usage

Checking Battery Usage for Each Application

In Home Screen, (Settings) → Battery → Battery usage → Tap application name
 · Available when **View by apps** is selected.

Checking Battery Usage for Each System

In Home Screen, (Settings) → Battery → Battery usage → View by apps → View by systems

Setting Whether to Stop Charging when Battery Level Reaches about 90% and Change to Direct Charging

In Home Screen, (Settings) → Battery → Intelligent Charge → / for "Change maximum charge"

- Tap to toggle on (), to toggle off ().
- During direct charging, charging of Battery stops, and power is supplied directly to handset from AC adaptor. Use handset as usual while using direct charging.

Setting Whether to Charge Only when Display Is Off (Screen Lock) and Change to Direct Charging when Display Turns On

In Home Screen, (Settings) → Battery → Intelligent Charge → / for "Charge only when screen is off"

- Tap to toggle on (), to toggle off ().
- If battery level is too low, handset will charge until battery reaches adequate level, even while Display is turned on.

Checking Battery Health

In Home Screen, (Settings) → Battery → Intelligent Charge → Battery Health

Setting Whether to Show Battery Strength in Percent beside Battery Indicator on Status Bar


In Home Screen, (Settings) → Battery → Battery percentage

- Tap **Battery percentage** to toggle on ()/off ().

Using Battery Saver

1


In Home Screen, (Settings) → Battery

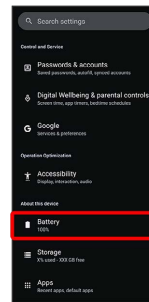

Battery opens.

2


Battery Saver

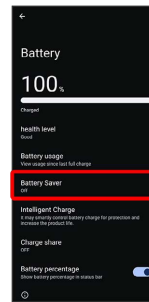

Battery Saver menu appears.

3

Use Battery Saver ()

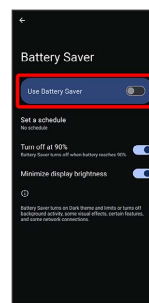

Setting is complete.

- Tap **Use Battery Saver** to toggle on ()/off ().
- Battery Saver is automatically disabled when charging starts.

+ Battery Saver Operations

Enabling Battery Saver Automatically when Battery Level Falls to Specified Level

In Battery Saver menu, **Set a schedule** → **Based on percentage** → Drag bar to adjust battery level

· To cancel the setting, Tap **No schedule** .

Setting Whether to Automatically Disable Battery Saver when Battery Level is 90%

In Battery Saver menu, **Turn off at 90%**

· Tap **Turn off at 90%** to toggle on ()/off ().

Setting Whether to Minimize Display Brightness

In Battery Saver menu, **Minimize display brightness**

· Tap **Minimize display brightness** to toggle on ()/off ().


Using Charge Share

Power Qi compatible wireless chargeable device by stacking it on the back of handset (Charge share).

· Using Charge share consumes handset's battery.

1

In Home Screen, **(Settings)** → **Battery**

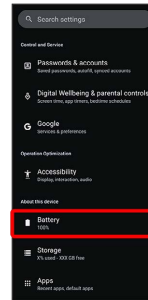

Battery opens.

2


Charge share



Charge share menu opens.

3


To use the Charge Share function ()

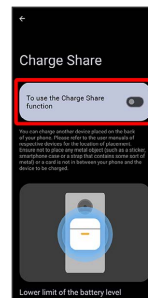



· Tap **To use the Charge Share function** to toggle on ()/off ().

4

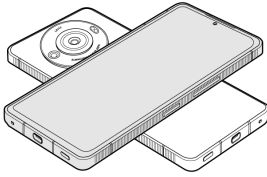Place handset and Qi compatible device so that Charge Share position on back of handset overlaps wireless charging position of Qi compatible device




 Charging of Qi compatible device starts.

- As a guide, use  mark on the back of handset for alignment.
- To charge Qi compatible mobile phone, stack handset and Qi compatible mobile phone crosswise.
- Charge share automatically stops when handset reaches the set "Lower limit of the battery level" or when time set in "Share timer" elapses from the start of charging.

Charge Share Operations

Setting Battery Level to Stop Charge Share

In Charge share menu, Drag  left/right below "Lower limit of the battery level"

- Available when **To use the Charge Share function** is disabled.

Setting Time to Stop Charge Share

In Charge share menu, Drag  left/right below "Share timer"

- Available when **To use the Charge Share function** is disabled.

Cautions for Using Charge Share

Note the following when charging with Charge share:

- This function is not guaranteed to work with all Qi compatible wireless chargeable devices.
- Powering to small devices (e.g., earphone cases) may not work when:
 - Handset is used outside Japan.
 - Handset is connected to Wi-Fi only (not connected to mobile network).
- Charge share is not available while charging handset.
- For Charge share to function properly, do not move handset or other device while powering.
- Adjust handset and other device to be charged to correct position and confirm that charging starts. If not charged in correct position, charging may fail or cause overheating.
- Position of Qi compatible wireless charging varies by device. Check the user guide, etc. of other device to adjust charging position.

- Do not place any metallic material between handset and other device. Metallic materials may prevent charging or cause overheating.
- If charging is slow, remove cases from handset and device to be charged.
- In the following cases, Charge share automatically stops and **To use the Charge Share function** is disabled.
 - Device to be charged is not detected for a certain period of time.
 - Handset is hot.
 - USB device (e.g., charger) is connected to External Connection Jack.
 - Other abnormal condition is detected.

System Settings

Make settings for language and input, date and time, backup, reset, etc.

System Settings

Settable items are the following.

Item	Description
Languages	Make settings for display language, language used for voice input, etc.
Keyboard	Make settings for on-screen keyboard to use and functions for text entry.
Gestures	Set whether to activate camera by pressing Power Key twice, or to activate Manner Mode by pressing Power Key and Volume Up Key simultaneously, etc.
Date & time	Make settings for date and time.
Backup	Make settings such as whether to back up application data, photos/videos, etc. to Google One.
System update	Check whether system updates are required via the network, and update manually as required. See " Updating the System " for details.
Data transfer	Import data from other mobiles, etc. using Bluetooth® or SD Card. See " Bluetooth®で電話帳データを取り込む (データ引継) " (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110901/) (Japanese) and " SDカードからデータを取り込む (データ引継) " (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/detail/110902/) (Japanese) for details.
Reset options	Reset network and application settings, all data on handset, etc.
Hardware Feedback	Set whether to send feedback on hardware.
Power menu	Open Power menu.

+ System Operations

Accessing Developer Options

In Home Screen, ⚙️ (Settings) → About phone → Build number seven times → System → Developer options

🚩 Developer options open.

· If method for unlocking screen is setting other than None or Swipe, first Tap Build number 7 times and unlock screen.

Adding Languages Shown on Display

In Home Screen, ⚙️ (Settings) → System → Languages → System Languages → Add a language → Tap language

Setting Language Shown on Display

In Home Screen, ⚙️ (Settings) → System → Languages → System Languages → Drag ≡ for language to top → Change
· Add languages beforehand.

Deleting Added Languages

In Home Screen, ⚙️ (Settings) → System → Languages → System Languages → ⋮ → Remove → Tap languages () → REMOVE

Setting Language Shown on Display for Each Application

In Home Screen, ⚙️ (Settings) → System → Languages → App Languages → Tap application → Select language
· May not be usable with some applications.

Setting Temperature Unit to Show on Handset

In Home Screen, ⚙️ (Settings) → System → Languages → Regional preferences → Temperature → Tap item

Setting Day to Show as First Day of Week

In Home Screen, ⚙️ (Settings) → System → Languages → Regional preferences → First day of week → Tap item

Setting Voice Input Service to Use

In Home Screen, ⚙️ (Settings) → System → Languages → Voice input → Tap item

Making Settings for Voice Input Service to Use


In Home Screen, ⚙️ (Settings) → System → Languages → ⚙️ for "Voice input" → Follow onscreen prompts

Making Settings for Voice Recognized by Handset

In Home Screen, ⚙️ (Settings) → System → Languages → On-device recognition → Follow onscreen prompts

Setting Speech Synthesis Engine for Text-to-Speech

In Home Screen, (Settings) → System → Languages → Text-to-speech output → Preferred engine → Tap engine

- Tap  for "Preferred engine" to set operation of speech synthesis engine.

Setting Language for Text-to-Speech

In Home Screen, (Settings) → System → Languages → Text-to-speech output → Language → Tap language

Setting Speed for Text-to-Speech

In Home Screen, (Settings) → System → Languages → Text-to-speech output → Drag "Speech rate" bar to adjust speed

- May be unavailable depending on language.

Setting Pitch for Text-to-Speech

In Home Screen, (Settings) → System → Languages → Text-to-speech output → Drag "Pitch" bar to adjust pitch height

- May be unavailable depending on language.

Playing Sample

In Home Screen, (Settings) → System → Languages → Text-to-speech output → PLAY

Resetting Speed/Pitch for Text-to-Speech



In Home Screen, (Settings) → System → Languages → Text-to-speech output → RESET

Setting Input Method

In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Tap input method → Follow onscreen prompts

Setting Whether to Block Offensive Words While Using Google Voice Typing

In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Google Voice Typing → Block offensive words

- Tap **Block offensive words** to toggle on ()/off ().

Setting Language to Use in Google Voice Typing

In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Google Voice Typing → Languages → Tap languages → SAVE

- Multiple languages are selectable.

Setting Main Language to Use in Google Voice Typing

In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Google Voice Typing → Primary language → Tap language

- Available when two or more languages are selected during Voice Input language settings.

Adding Language to Use in Google Voice Typing When Not Connected to the Internet

In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Google Voice Typing → Add a language → Tap language → Follow onscreen prompts


Setting Update Method for Language to Use in Google Voice Typing When Not Connected to the Internet



In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Google Voice Typing → Auto update languages → Tap item

Checking Languages Available in Google Voice Typing When Not Connected to the Internet

In Home Screen, (Settings) → System → Keyboard → On-screen keyboard → Google Voice Typing → Advanced

Showing Virtual Keyboard when Using Physical Keyboard

In Home Screen, (Settings) → System → Keyboard → Physical keyboard → Use on-screen keyboard ()

- Tap **Use on-screen keyboard** to toggle on ()/off ().

- Available when physical keyboard is connected.

Showing Shortcuts List when Using Physical Keyboard

In Home Screen, (Settings) → System → Keyboard → Physical keyboard → Keyboard shortcuts

- Available when physical keyboard is connected.

Assigning Another Key to Physical Keyboard Key

In Home Screen, (Settings) → System → Keyboard → Physical keyboard → Modifier Keys → Follow onscreen prompts

- Available when physical keyboard is connected.

Setting Whether to Check Spelling During Entry

In Home Screen, (Settings) → System → Keyboard → Spell checker → Use spell checker

- Tap Use spell checker to toggle on ()/off ().
- Tap Languages to set languages to check spelling.
- Tap Default spell checker to select spell checker to use.
- Tap for "Default spell checker" to set spelling check operation.

Adding Words to Personal Dictionary

In Home Screen, (Settings) → System → Keyboard → Personal dictionary → Tap entry field → Enter words → Enter shortcut → ✓ → ←

Deleting Words from Personal Dictionary

In Home Screen, (Settings) → System → Keyboard → Personal dictionary → Tap word(s) →

Setting Speed of Pointer for Mouse/Trackpad

In Home Screen, (Settings) → System → Keyboard → Pointer speed → Drag bar to adjust speed → OK

- The longer the bar, the faster the speed.

Setting Whether to Activate Camera by Pressing Power Key Twice

In Home Screen, (Settings) → System → Gestures → Quickly open camera → Quickly open camera

- Tap Quickly open camera to toggle on ()/off ().

Setting Whether to List Recently Used Applications by Dragging Bottom of Display Up or Tapping

In Home Screen, (Settings) → System → Gestures → Navigation mode → Gesture navigation / 3-button navigation

- After selecting 3-button navigation, appears on Navigation Bar.
- Tap of "Gesture navigation" to set gesture navigation operations. Follow onscreen prompts.
- Tap of "3-button navigation" to set what action occurs when you Touch & Hold and the order of icons at bottom of Display.

Setting Whether to Use One-handed Mode

In Home Screen, (Settings) → System → Gestures → One-handed mode → Use one-handed mode

- Tap Use one-handed mode to toggle on ()/off ().

Setting Gestures for One-handed Mode

In Home Screen, (Settings) → System → Gestures → One-handed mode → Pull screen into reach / Show notifications

- Select Pull screen into reach to shift screen to lower half of display by flicking navigation bar down.
- Select Show notifications to flick down navigation bar to display notification panel.
- Available when Use one-handed mode is enabled.

Setting Whether to Use One-handed Mode by Using Shortcut

In Home Screen, (Settings) → System → Gestures → One-handed mode → for "One-handed mode shortcut"

- If confirmation appears, follow onscreen prompts.
- Tap to toggle on (), to toggle off ().
- Tap One-handed mode shortcut to set shortcut type. Follow onscreen prompts.

Setting Whether Fingerprint Sensor and Clock Appear by Tapping Screen while Screen is Turned Off (Screen Lock)

In Home Screen, (Settings) → System → Gestures → Tap to check phone → Tap to check phone

- Tap Tap to check phone to toggle on ()/off ().
- Save your fingerprint beforehand.

Setting Action When Long Pressing Power Key

In Home Screen, (Settings) → System → Gestures → Press & hold power button → Power menu / Launch the app

- Tap for "Launch the app" → Select application to set type of application to start.
- Drag "Press & hold duration" slider to adjust time until application is activated.

Setting Whether Manner Mode Is Activated by Pressing Power Key and Volume Up Key

In Home Screen, (Settings) → System → Gestures → Prevent ringing / Prevent ringing

- Tap to toggle on (), to toggle off ().
- Available when Power menu is selected in Press & hold power button .

Setting Manner Mode That Is Activated by Pressing Power Key and Volume Up Key

In Home Screen, (Settings) → System → Gestures → Prevent ringing → Vibrate / Mute

- Available when Use prevent ringing is enabled.

Setting Whether to Use Date Information from Network

In Home Screen, (Settings) → System → Date & time → Set time automatically

- Tap Set time automatically to toggle on ()/off ().

Setting Date and Time Manually

In Home Screen, (Settings) → System → Date & time → Date / Time → Specify date/time → OK

- Available when Set time automatically is disabled.

Setting Whether to Use Time Zone Information from Network

In Home Screen, (Settings) → System → Date & time → Set automatically

- Tap Set automatically to toggle on ()/off ().

Setting Whether to Update Time Zone Based On Location

In Home Screen, (Settings) → System → Date & time → Use location

- Tap Use location to toggle on ()/off ().

Setting Time Zone Manually

In Home Screen, (Settings) → System → Date & time → Time zone → Region → Select region

- For some regions, select time zone after selecting region.
- Available when Set automatically is disabled.

Setting Backup to Google One

In Home Screen, (Settings) → System → Backup

- Log in to a Google account beforehand. Backup by Google One will be enabled () automatically.
- Tap Backup by Google One to disable () and remove data from the cloud. Follow onscreen prompts. To enable () again, Tap Turn on .
- Back up now → BACK UP NOW to manually backup to Google One.

Setting Backup Account

In Home Screen, (Settings) → System → Backup → Account storage → Tap Google account → Confirm

- Make settings when logged in to multiple Google accounts.
- To add account, Tap Add account , then follow onscreen prompts.

Managing Storage of Backed Up Data

In Home Screen, (Settings) → System → Backup → Manage storage → Follow onscreen prompts

Checking Details of Backed Up Data

In Home Screen, (Settings) → System → Backup

- Details of backed up data are shown below "Backup details."
- For some items, Tap to check for more details. Follow onscreen prompts.

Setting Whether to Back Up Using Mobile Data

In Home Screen, (Settings) → System → Backup → Back up using mobile or metered Wi-Fi data

- Tap Back up using mobile or metered Wi-Fi data to toggle on ()/off ().

Resetting Network Settings

In Home Screen, (Settings) → System → Reset options → Reset Mobile Network Setting → RESET SETTINGS → RESET SETTINGS

· If method for unlocking screen is setting other than None or Swipe, first Tap RESET SETTINGS and unlock screen.

Resetting Bluetooth® and Wi-Fi Settings

In Home Screen, (Settings) → System → Reset options → Reset Bluetooth & Wi-Fi → Reset

Resetting Application Settings

In Home Screen, (Settings) → System → Reset options → Reset app preferences → RESET APPS

Deleting eSIM

In Home Screen, (Settings) → System → Reset options → Erase eSIMs → ERASE

· To use eSIM again after eSIM is deleted, QR code to download eSIM must be reissued.
· Even if eSIM is deleted, contract has not been canceled.

Setting Whether to Send Feedback on Hardware

In Home Screen, (Settings) → System → Hardware Feedback → /


Opening Power Menu

In Home Screen, (Settings) → System → Power menu

Setting 24-Hour Time Indication


1

In Home Screen, (Settings)

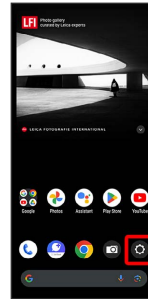


2

System

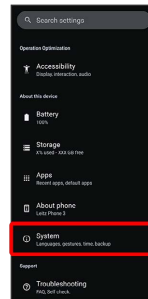



3

Date & time

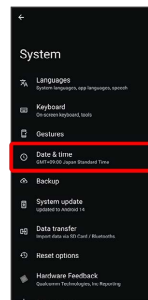

4

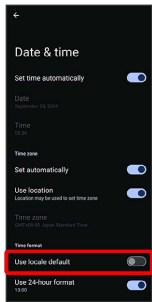
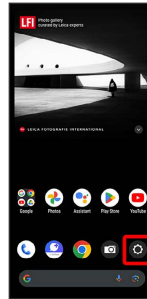
Use locale default ()

 24-hour or 12-hour format is automatically set depending on your language and region.

- Tap **Use locale default** to toggle on ()/off ().
- When **Use locale default** is disabled, Tap **Use 24-hour format** to toggle 24-hour format ()/12-hour format ().


Resetting Handset

1

In Home Screen,  (Settings)


2

System

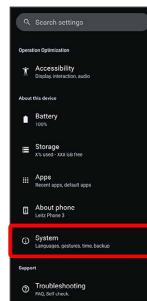


3

Reset options

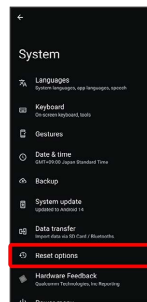

4

Erase all data (factory reset)

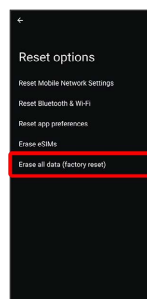

5


Erase all data



- To also erase SD Card data, Tap **Erase SD card** ().
- Unlocks screen when unlock method is setting other than **None** or **Swipe** .

6

Erase all data

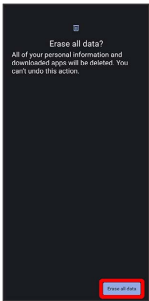

 Handset is reset.

Cautions when Erasing All Data (Factory Reset)

Observe the following when erasing all data (factory reset).

- Erasing all data (factory reset) deletes all data in internal storage irreversibly. Back up important data beforehand.
- Deleted content cannot be restored. Reset with caution.

Other Handset Settings

Phone Number

See "[Checking Your Phone Number](#)" for details on phone number.

Network & Internet

Make network and Internet settings for Wi-Fi, mobile network, hotspot tethering, etc. Settable items are the following.

Item	Description
Wi-Fi and Mobile Network	Make settings for using Wi-Fi connection and mobile network. See "Connecting by Wi-Fi" for details on using Wi-Fi connection.
Calls & SMS	Set SIM to use when multiple SIMs are enabled. Make settings for mobile network. See "Global Roaming" for details on roaming, automatic network selection, and network selection. See "Data Usage Settings" for details on application data usage as well as data usage alert and limit.
SIMs	Allow 2G is not available on handset. See "Download your service plan with eSIM" and "Erase your service plan with eSIM" for details on downloading and erasing eSIM.
Airplane mode	Set whether to stop signal-transmitting functions Make tethering settings.
Hotspot & tethering	See "テザリング機能を利用する (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34714/)" (Japanese) for details.
Data Saver	Make settings for Data Saver.
VPN	Add VPN destinations.
Private DNS	Set private DNS.
Proxy settings	Make proxy settings.

+ Network & Internet Operations

Making Settings for Mobile Network

In Home Screen, (Settings) → Network & internet → Wi-Fi and Mobile network → ⚙️ for "SoftBank" → Set each item

· Alternatively, in Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Set each item to set for mobile network.

Setting SIM to Use for Calls

In Home Screen, (Settings) → Network & internet → Calls & SMS → Calls → Follow onscreen prompts

· Available when multiple SIMs are enabled.
· Alternatively, in Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Calls preference to set SIM to use. Follow onscreen prompts.

Setting SIM to Use for Sending SMS

In Home Screen, (Settings) → Network & internet → Calls & SMS → SMS → Follow onscreen prompts

· Available when multiple SIMs are enabled.
· Alternatively, in Home Screen, (Settings) → Network & internet → SIMs → SoftBank → SMS preference to set SIM to use. Follow onscreen prompts.

Setting Whether to Enable All Communications over Mobile Network

In Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Use SIM

· Tap Use SIM to toggle on ()/off ().
· If confirmation appears, follow onscreen prompts.

Setting Whether to Use Mobile Data

In Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Mobile data

· Tap Mobile data to toggle on ()/off ().

Using 5G/4G LTE/4G/3G Network

In Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Preferred network type → 5G (recommended) / 4G / 3G ()

· In Japan, set to 5G (recommended) or 4G .

Adding Access Points

In Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Access Point Names → Tap item → Set/enter each item → Save

Deleting Added Access Points

In Home Screen, (Settings) → Network & internet → SIMs → SoftBank → Access Point Names → Reset to default

Setting Whether to Stop Signal-Transmitting Functions

In Home Screen, (Settings) → Network & internet → Airplane mode

· Tap Airplane mode to toggle on ()/off ().

Setting Data Saver

In Home Screen, (Settings) → Network & internet → Data Saver → Use Data Saver

· Tap Use Data Saver to toggle on ()/off ().

Setting Whether to Exclude Application(s) from Data Saver

In Home Screen, (Settings) → Network & internet → Data Saver → Unrestricted data → Tap application name

· Tap application name to toggle on ()/off ().

Adding VPN Destinations

In Home Screen, (Settings) → Network & internet → VPN → + → Set/enter details → SAVE

· Tap an added VPN to connect/disconnect it. Tap ⚙ to edit/delete it.

Setting Private DNS

In Home Screen, (Settings) → Network & internet → Private DNS → Tap item → SAVE

· After Tapping Private DNS provider hostname , enter hostname.

Setting Proxy

In Home Screen, (Settings) → Network & internet → Proxy settings → Proxy/port/exclusion list → Tap item → OK

Connecting to Network via Set Proxy

In Home Screen, (Settings) → Network & internet → Proxy settings → Enable proxy → YES ()

· Tap Enable proxy to toggle on ()/off ().

Connected Devices

Make Bluetooth® and other device connection settings.

Settable items are the following.

- Names and status of devices connected by Bluetooth® and USB appear at top of Display.

Item	Description
Pair new device	Search for and pair nearby Bluetooth® devices. See "Pairing Bluetooth® Devices" for details.
Connection preferences	Make settings for Bluetooth® connection, NFC/Osaifu-Keitai® operation, etc. For details on Bluetooth®, see "Using Bluetooth® Function." For details on NFC/Osaifu-Keitai®, see "NFC/おサイフケータイ®を利用する (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34700/)" (Japanese).
Codec preferences	Set codec for Bluetooth® connection.

+ Connected Device Operations

Viewing Handset Screen on Other Device

In Home Screen, (Settings) → Connected devices → Connection preferences → Cast → Tap target device → START NOW

Making Printing Settings

In Home Screen, (Settings) → Connected devices → Connection preferences → Printing → Follow onscreen prompts

Making Chromebook™ Settings

In Home Screen, (Settings) → Connected devices → Connection preferences → Chromebook → Follow onscreen prompts

Making Quick Share Settings

In Home Screen, (Settings) → Connected devices → Connection preferences → Quick Share → Follow onscreen prompts

Making Android Auto™ Settings

In Home Screen, (Settings) → Connected devices → Connection preferences → Android Auto → Follow onscreen prompts

- Log in to a Google account beforehand.

Setting Whether to Detect Location of Nearby Devices Compatible with Ultra-Wideband (UWB)

In Home Screen, (Settings) → Connected devices → Connection preferences → Ultra-Wideband (UWB)

- Tap Ultra-Wideband (UWB) to toggle on ()/off ().

Setting Codec for Bluetooth® Connection

In Home Screen, (Settings) → Connected devices → Codec preferences → Follow onscreen prompts

! Cautions for Using Connected Devices

Cautions for Using Cast

Connection with Miracast® device is not supported.

Cautions for Using Ultra-Wideband (UWB)

In places or areas where the use of ultra-wideband (UWB) is prohibited, such as while traveling by airplane or ship, ultra-wideband (UWB) should be disabled by activating Airplane mode.

To activate Airplane mode:

Flick Status Bar down → Flick Notifications Window down → Airplane mode Off (On)

- Alternatively, in Home Screen, (Settings) → Network & internet → Airplane mode () to activate Airplane mode.
- To stop using ultra-wideband (UWB) only, in Home Screen, Tap (Settings) → Connected devices → Connection preferences → Ultra-Wideband (UWB) ().
- Usage restrictions of ultra-wideband (UWB) vary depending on the country or region of use. Check the laws and regulations of the country or region for restrictions beforehand.

Notifications

Make notification settings. Settable items are the following.

Item	Description
App notifications	Manage notifications per application.
Notification history	Set whether to show history of recent notifications and notifications set to snoozing.
Conversations	Check conversations set as high priority or with their settings changed.
Bubbles	Set whether to allow applications to show bubbles.
Organize notifications on the lock screen	Set whether to hide notification viewed in lock screen so new notifications are easier to view.
Device & app notifications	Manage notification access permissions for devices and applications.
Notifications on lock screen	Set type of notifications to show in lock screen.
Sensitive notifications	Set whether to show sensitive notifications in lock screen.
Do Not Disturb	Make settings for silent mode. See "Sound & Vibration Settings" for details on Do Not Disturb.
Flash notifications	Set whether to flash Mobile Light or screen for incoming calls or alarm notifications, etc.
Wireless emergency alerts	Make settings for Urgent News. See "緊急速報メールを利用する (https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34688/)" (Japanese) for details on emergency broadcasts.
Hide silent notifications in status bar	Set whether to hide silent notification on status bar.
Allow notification snoozing	Set whether to allow notification snoozing.
Notification dot on app icon	Set whether to show notification dot on application icon.
Enhanced notifications	Set whether notifications are reduced or silenced depending on type and usage of application that sent notifications.

💡 Bubble Function

Bubble function is available only for compatible applications.

+ Notification Operations

Setting Whether to Use Notifications for Each Application

In Home Screen, (Settings) → Notifications → App notifications → / for apps

- Tap to toggle on (), to toggle off ().
- Tap application names to set whether to use notifications for each notification type.

Setting Whether to Show History of Recent Notifications and Notifications Set to Snoozing

In Home Screen, (Settings) → Notifications → Notification history

- Tap Use notification history to toggle show ()/hide ().
- Notifications received after Use notification history is enabled are shown.

Checking Conversations Set as High Priority or Changed their Settings

In Home Screen, (Settings) → Notifications → Conversations

Setting Whether to Allow Applications to Show Bubbles

In Home Screen, (Settings) → Notifications → Bubbles → Allow apps to show bubbles

- Tap Allow apps to show bubbles to toggle on ()/off ().

Setting Whether to Hide Notification Viewed in Lock Screen so New Notifications Are Easier to View

In Home Screen, (Settings) → Notifications → Organize notifications on the lock screen

- Tap Organize notifications on the lock screen to toggle on ()/off ().
- Notifications that cannot be deleted still appear even when Organize notifications on the lock screen is on.
- Notification Indicators on Status Bar are not hidden.

Managing Notification Access Permissions for Devices and Applications

In Home Screen, (Settings) → Notifications → Device & app notifications → Follow onscreen prompts

Setting Type of Notifications to Show in Lock Screen

In Home Screen, (Settings) → Notifications → Notifications on lock screen → Show conversations, default, and silent / Hide silent conversations and notifications / Don't show any notifications

Setting Whether to Show Sensitive Notifications in Lock Screen

In Home Screen, (Settings) → Notifications → Sensitive notifications

- Tap Sensitive notifications to toggle show ()/hide ().
- Sensitive notifications appears when unlock method is setting other than None or Swipe .

Setting Whether to Flash Mobile Light for Incoming Calls or Alarm Notifications

In Home Screen, (Settings) → Notifications → Flash notifications → Camera flash

- Tap Camera flash to toggle on ()/off ().
- Tap Preview to check action on notification.

Setting Whether to Flash Screen for Incoming Calls or Alarm Notifications

In Home Screen, (Settings) → Notifications → Flash notifications → / for "Screen flash"

- Tap to toggle on (), to toggle off ().
- Tap Screen flash to set the color of screen when flashing. Follow onscreen prompts.
- Tap Preview to check action on notification.

Setting Whether to Hide Silent Notification on Status Bar

In Home Screen, (Settings) → Notifications → Hide silent notifications in status bar

- Tap Hide silent notifications in status bar to toggle on ()/off ().

Setting Whether to Allow Notification Snoozing

In Home Screen, (Settings) → Notifications → Allow notification snoozing

- Tap Allow notification snoozing to toggle on ()/off ().

Setting Whether to Show Notification Dot on Application Icon

In Home Screen, (Settings) → Notifications → Notification dot on app icon

- Tap Notification dot on app icon to toggle show ()/hide ().

Setting Whether Notifications Are Reduced or Silenced Depending on Type and Usage of Application that Sent Notifications

In Home Screen, (Settings) → Notifications → Enhanced notifications

- Tap Enhanced notifications to toggle on ()/off ().
- If confirmation appears, follow onscreen prompts.

Wallpaper & style

Make settings for wallpapers and icons, etc. Tap Lock Screen / Home Screen at top of Display to switch setting items. Settable items are the following.

Item	Description
Change wallpaper	Set Wallpaper for Home Screen/lock screen. See "Changing Wallpaper" for details.
Text font	Set the font type of text on Display. See "Display Settings" for details.
Clock color & size	Set clock color and size displayed on lock screen.
Shortcuts	Set shortcut icons displayed at bottom of lock screen.
Lock screen	Set notifications to show in lock screen, etc. See "Display Settings" for details.
Themed icons	Set whether to show application icons in monochrome.
App Icon Shape	Set application icon shape.
Lock Home Photo Shuffle	Set whether to change Wallpaper for Home Screen/lock screen randomly each time lock screen/Home Screen appears, etc. See "Changing Wallpaper" for details.
Home settings	Make Home Screen settings. See "Making Home Screen Settings" for details.

+ Wallpaper & Style Operations

Setting the Color of Icons and Widgets to Match Wallpaper

In Home Screen, (Settings) → Wallpaper & style → Lock Screen / Home Screen → Wallpaper colors → Select color

Setting the Color of Icons and Widgets

In Home Screen, (Settings) → Wallpaper & style → Lock Screen / Home Screen → Basic colors → Select color

Setting Whether to Enable Dark Theme

In Home Screen, (Settings) → Wallpaper & style → Lock Screen / Home Screen → / for "Dark theme"

- Tap to toggle on (), to toggle off ().

Setting Time for Dark Theme

In Home Screen, (Settings) → Wallpaper & style
 → Lock Screen / Home Screen → ⋮ → Dark
 theme → Schedule → Turns on at custom time →
 Start time → Specify time → OK → End time →
 Specify time → OK

· Tap Turns on from sunset to sunrise to enable Dark
 Theme from nightfall until morning.

Changing Font of Clock Displayed on Lock Screen

In Home Screen, (Settings) → Wallpaper & style
 → Lock Screen → Flick screen below Lock Screen
 left/right

Setting Color and Size of Clock Displayed on Lock Screen

In Home Screen, (Settings) → Wallpaper & style
 → Lock Screen → Clock color & size → Color /
 Size → Follow onscreen prompts

Setting Shortcut Icons Displayed at Bottom of Lock Screen

In Home Screen, (Settings) → Wallpaper & style
 → Lock Screen → Shortcuts → Left shortcut /
 Right shortcut → Tap shortcut

Setting Whether to Show Application Icons in Monochrome

In Home Screen, (Settings) → Wallpaper & style
 → Home Screen → Themed icons
 · Tap Themed icons to toggle on ()/off ().

Setting Application Icon Shape

In Home Screen, (Settings) → Wallpaper & style
 → Home Screen → Tap icon below "App Icon Shape"

Home Applications

Change the home application. You can change to a home
 application installed via Google Play.

Item	Description
Home	Change home application to Home.
Junior Home	Change home application to Junior Home.
Simple Home	Change home application to Simple Home.

Safety & emergency

Make settings for emergency information and emergency calls.
 Settable items are the following.

Item	Description
OPEN PERSONAL SAFETY	Make settings for Personal Safety.
Medical information	Check and edit your own medical information (name, address, blood type, allergies, etc.).
Emergency contacts	Check and edit your emergency contacts.
Emergency SOS	Set whether to make an emergency call when Power Key is quickly pressed five or more times.
Crisis alerts	Set whether to receive notifications about nearly natural disasters, etc.
Emergency Location Service	Set whether to send location in an emergency. See "Location Settings" for details.
Earthquake alerts	Set whether to sound alarm when an earthquake is detected near your current location. See "Location Settings" for details.
Wireless emergency alerts	Make settings for Urgent News. See "緊急速報メールを利用する (https:// www.softbank.jp/mobile/support/manual/ smartphone/leitz-phone3/menu/34688/)" (Japanese) for details on emergency broadcasts.

+ Safety & emergency Operation

Making Settings for Personal Safety

In Home Screen, (Settings) → Safety &
 emergency → OPEN PERSONAL SAFETY → Set each
 item

· Log in to a Google account beforehand.

Editing Your Own Medical Information (Name, Address, Blood Type, Allergies, etc.)

In Home Screen, (Settings) → Safety &
 emergency → Medical information → Set/enter each
 item

Setting Emergency Contacts

In Home Screen, (Settings) → Safety &
 emergency → Emergency contacts → Add contact
 → Tap contact

Deleting Emergency Contacts

In Home Screen, (Settings) → Safety & emergency → Emergency contacts → ✕ for contact → Remove

Checking Emergency Information

In lock screen, Flick up → Emergency → View emergency info

- Use if method for unlocking screen is setting other than None or Swipe. See "Setting Screen to Unlock by Tracing Pattern," "Requiring Lock No. (PIN) Entry for Unlocking Screen," and "Setting Screen to Unlock with Password" for details on setting a method for unlocking screen.

Setting to Make an Emergency Call (Start Emergency SOS) when Power Key is Quickly Pressed Five or More Times

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → Turn on Emergency SOS

- Tap for "Call emergency services" to toggle off.

Setting Operation to Start Emergency SOS

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → ⚙️ for "How it works" → Tap item

- Available when Emergency SOS is enabled.

Simulate Emergency SOS

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → Try a demo →

Follow onscreen prompts

- Available when Emergency SOS is enabled.

Setting Phone Number for Emergency Calls

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → Call emergency services → Number to call → Enter the number → OK

- Available when Emergency SOS is enabled.

Setting Whether to Share Emergency Location Information, etc. with Emergency Contacts

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → / for "Share info with emergency contacts"

- Tap to toggle on (), to toggle off ().
- Available when Emergency SOS is enabled.
- Log in to a Google account and Tap Share info with emergency contacts to set emergency contacts and permissions beforehand.

Setting Information to Share with Emergency Contacts in Emergency

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → Share info with emergency contacts → Tap item below "Share this info in an emergency"

- Tap an item to toggle on ()/off ().
- Available when Emergency SOS is enabled.
- Log in to a Google account and Tap Share info with emergency contacts to set emergency contacts and permissions beforehand.

Setting Whether to Record Emergency Video

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → / for "Record emergency video"






- Tap to toggle on (), to toggle off ().
- Available when Emergency SOS is enabled.
- Log in to a Google account and Tap Record emergency video to set permissions beforehand.

Setting Whether to Automatically Share Link to Download Emergency Video with Emergency Contacts

In Home Screen, (Settings) → Safety & emergency → Emergency SOS → Record emergency video → Auto share





- Tap Auto share to toggle on ()/off ().
- Available when Emergency SOS is enabled.
- Log in to a Google account and Tap Record emergency video to set permissions beforehand.



Checking Emergency Video

In Home Screen,  (Settings)  **Safety & emergency**  **Emergency SOS**  **Record emergency video**  **Your videos**

- Available when Emergency SOS is enabled.
- Log in to a Google account and Tap **Record emergency video** to set permissions beforehand.

Setting Whether to Receive Notifications About Nearby Natural Disasters, etc.

In Home Screen,  (Settings)  **Safety & emergency**  **Crisis alerts**  **Crisis alerts**

- Tap **Crisis alerts** to toggle on ()/off ().
- Log in to a Google account and set permissions beforehand.





Passwords & accounts

Make settings for creating/adding accounts, syncing accounts, and Google Autofill. Settable items are the following.

Item	Description
Passwords, passkeys and data services	Set whether to use Google Autofill and what to enter.
Add account	Create or add accounts.
Automatically sync app data	Set whether to automatically sync data.






+ Password & Accounts Operations



Using Google Autofill Service

In Home Screen,  (Settings)  **Passwords & accounts**  **Google** below "Passwords, passkeys and data services"  **None** / **Google**






- Tap **Add service** to add Autofill service. Follow onscreen prompts.

Setting Whether to Use Google Autofill Feature

In Home Screen,  (Settings)  **Passwords & accounts**   below "Passwords, passkeys and data services"  **Use Autofill with Google**






- Log in to a Google account beforehand.
- Tap **Use Autofill with Google** to toggle on ()/off ().

Setting Content of Google Autofill






In Home Screen,  (Settings)  **Passwords & accounts**   below "Passwords, passkeys and data services"  Set each item

- Log in to a Google account beforehand.
- Available when **Use Autofill with Google** is enabled.

Adding an Account

In Home Screen,  (Settings)  **Passwords & accounts**  **Add account**  Tap type of account to add  Follow onscreen prompts

Managing Account Information, Privacy, Security, etc.

In Home Screen,  (Settings)  **Passwords & accounts**  Tap account  **Google Account**  Set each item

- Log in to a Google account beforehand.

Setting Applications to Sync for Each Account

In Home Screen, (Settings) → Passwords & accounts → Tap account → Account sync → Tap applications and data to sync

- Log in to a Google account beforehand.
- Tap sync item to toggle on ()/off ().

Setting Whether to Automatically Sync Data

In Home Screen, (Settings) → Passwords & accounts → Automatically sync app data → OK

- Tap Automatically sync app data → OK to toggle on ()/off ().

Digital Wellbeing & Parental Controls

Prevent excessive handset use by setting timers for each application or showing number of notifications received and frequency of screen unlocking, etc. Settable items are the following.

Item	Description
XX minutes/ XX hr, XX min	View total duration of handset use today.
Dashboard	Check history of total duration of handset use. Also restrict usage of individual applications.
Bedtime mode	Activate Bedtime Mode at specified time.
Focus mode	Pause applications that might be a distraction. Also specify day and time.
Manage notifications	Manage application notifications. See "Notifications" for details.
Do Not Disturb	Make Do Not Disturb settings. See "Sound & Vibration Settings" for details.
Heads Up	Set whether to alert to be aware of surroundings when using handset while walking.
Show icon in the app list	Set whether to show Digital Wellbeing as application in app list.
Set up parental controls	Set controls on usage as a parent/guardian.

+ Digital Wellbeing & Parental Controls Operations

Checking Handset Use Time, Frequency of Notifications, and Frequency of Screen Unlocking

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Dashboard → Screen time → Screen time / Notifications received / Times opened

Checking Handset Use Time, Frequency of Notifications, and Number of Activations for Each Application

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Dashboard → Show all XX apps → Tap application name → Screen time → Screen time / Notifications received / Times opened


- Tap Daily / Hourly to check use time, frequency of notifications, and number of activations per day or per hour.

Setting Limit on Daily Use Time for Each Application

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Dashboard → Show all XX apps → Tap application name → App timer → Set hours/minutes → OK

- As set limits are then reached, icons for the applications turn gray and applications cannot be used until next day.
- May not be usable with some applications.
- Alternatively, In Home Screen, (Settings) → Digital Wellbeing & parental controls → Dashboard → Show all XX apps → ⌚ → Set hours/minutes → OK to set limit on daily use.

Removing Set Limit on Use

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Dashboard → Tap application name →  for "App timer"

- Alternatively, In Home Screen, (Settings) → Digital Wellbeing & parental controls → Dashboard → ⌚ → DELETE TIMER to remove set limit on use.

Setting/Canceling Bedtime Mode

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → TURN ON NOW / TURN OFF FOR NOW


- An initial settings screen opens at first activation. Follow onscreen prompts.
- Tap PAUSE FOR 30 MIN to temporarily cancel Bedtime mode. Follow onscreen prompts.





Setting Schedule for Bedtime Mode

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Bedtime routine → Use a schedule / Turn on while charging → Follow onscreen prompts

- To cancel the setting, Tap None .



Setting Whether to Activate Do Not Disturb while Bedtime Mode Is Activated

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Customize →  for "Do Not Disturb for Bedtime mode"

- Tap  to toggle on (),  to toggle off ().
- Tap Do Not Disturb for Bedtime mode to add or check contacts to allow calls from while in Bedtime mode.



Setting Whether to Hide Screen Colors while Bedtime Mode Is Activated

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Customize → Screen options at bedtime → Grayscale

- Tap Grayscale to toggle on ()/off ().



Setting Whether Screen Remains Dark while Bedtime Mode Is Activated

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Customize → Screen options at bedtime → Keep the screen dark

- Tap Keep the screen dark to toggle on ()/off ().



Setting Whether Lock Screen/Home Screen Remains Dark while Bedtime Mode Is Activated

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Customize → Screen options at bedtime → Dim the wallpaper

- Tap Dim the wallpaper to toggle on ()/off ().



Setting Whether to Use Dark Theme Only while Bedtime Mode Is Activated

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Customize → Screen options at bedtime → Dark theme

- Tap Dark theme to toggle on ()/off ().
- Tap Dark theme settings to make settings for dark mode. See "Display Settings" for details.

Setting Whether to End Bedtime Mode at Set Alarm Time

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Bedtime mode → Customize → Turn off Bedtime mode at next alarm

- Tap Turn off Bedtime mode at next alarm to toggle on ()/off ().

Setting Days to Activate Focus Mode

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Focus mode → Show all XX apps → Select applications → Set a schedule → Tap days → SET

Setting Time to Activate Focus Mode

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Focus mode → Show all XX apps → Select application → Set a schedule → Start → Specify time → OK → End → Specify time → OK → SET

Deleting Schedule Set for Focus Mode

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Focus mode → [] for "schedule"

Enabling Focus Mode

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Focus mode → Show all XX apps → Select applications → TURN ON NOW

- To cancel the setting, Tap TURN OFF NOW .
- Tap TAKE A BREAK → Tap the end time to temporarily turn off Focus Mode.

Setting Whether to Alert to be Aware of Surroundings When Using Handset while Walking

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Heads Up → Use Heads up

- An initial settings screen opens at first activation. Follow onscreen prompts.
- Tap Use Heads up to toggle on ()/off ().

Setting Whether to Show Digital Wellbeing as Application in App List

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Show icon in the app list

- Tap Show icon in the app list to toggle on ()/off ().

Setting Parental Controls

In Home Screen, (Settings) → Digital Wellbeing & parental controls → Set up parental controls →

Follow onscreen prompts

Google




Make settings for Google services. Settable items are the following.

- Log in to a Google account beforehand.

Item	Description
Manage your Google Account	Make settings for a Google account.
Ads	Make settings for your advertising ID. Set whether to autofill information saved to your Google account such as password, or your SMS verification code.
Autofill	Make backup settings.
Backup	Set to whether to control directly from Notifications Window when playing media on TV or speaker equipped with Chromecast, etc. on the same Wi-Fi network, to set notifications about device near Handset, or to share files using Quick Share.
Devices & sharing	Set whether location is shown if handset is lost.
Find My Device	Set a phone number to allow you to reset your Google account.
Mobile data & messaging	Set controls on usage as a parent/guardian.
Parental controls	Set whether to allow use of shared data.
Personalize using shared data	Make settings for work profile and nearby devices, and restore contacts from a backup.
Set up & restore	Make settings for Google Play Instant and Google contact sync that can be set about syncing contacts.
Settings for Google apps	

Accessibility





Set captions, magnification gestures, and other useful accessibility functions. Settable items are the following.




Item	Description
セキュリティ One	Set whether to use  (セキュリティOne), etc.
TalkBack	Set whether to use text to speech in order to use handset without looking at screen.
Select to Speak	Set whether to read out tapped text on screen, etc. by using shortcuts.
Display size and text	Set size of text, images, and icons on Display. See " Setting Font Size " for details on Font Size. See " Setting Size of Images and Icons " for details on Size of Images and Icons. See " Display Settings " for details on text thickness and readability, and how to reset settings.
Color and motion	Set the color of Display and icons, and animation of setting switch ( / ), etc. See " Display Settings " for details on Dark theme.
Extra dim	Set whether to dim screen darker than minimum screen brightness.
Magnification	Set whether to enable enlarged view by using a shortcut.
Accessibility Menu	Set whether to use Accessibility Menu to adjust volume, brightness, etc. by using shortcuts.
Switch Access	Set whether to operate handset using switches (Switch Access) instead of touchscreen.
Timing controls	Set time to hold down screen for Touch & Hold, to display messages for a short time, etc.
System controls	Set navigation bar, whether to end call when power key is pressed during call, and whether to automatically rotate screen according to handset orientation. See " Quick Operation Settings " and " System Settings " for details on Navigation Bar. See " System Settings " for details on One-handed Mode. See " Display Settings " for details on Auto-rotate Screen.
Vibration & haptics	Set whether handset vibrates for arriving calls and messages. See " Sound & Vibration Settings " for details.

Live Caption	Set whether to show captions for dialog in media, etc. See " Sound & Vibration Settings " for details.
Caption preferences	Make settings for captions.
Audio description	Set whether to read out description of screen content.
Flash notifications	Set whether to flash Mobile Light or screen for incoming calls or alarm notifications, etc. See " Notifications " for details.
Audio adjustment	Set whether audio playback is monaural, and left/right balance of audio.
Accessibility shortcuts	Set size of shortcut button which opens Accessibility Menu and whether to enable shortcut from lock screen, etc.
Text-to-speech output	Make detailed voice-to-text settings. See " System Settings " for details.






+ Accessibility Operations






Setting Whether to Use (セキュリティOne)

In Home Screen,  (Settings)  Accessibility  セキュリティOne  Use セキュリティOne





- If confirmation appears, follow onscreen prompts.
- Tap  to toggle on ()/off ().






Setting Whether to Use (セキュリティOne) by Using Shortcut

In Home Screen,  (Settings)  Accessibility  セキュリティOne  /  for "セキュリティOne shortcut"






- If confirmation appears, follow onscreen prompts.
- Tap  to toggle on (),  to toggle off ().
- Tap  to set shortcut type. Follow onscreen prompts.





Setting Whether to Use Text to Speech in Order to Use Handset Without Looking at Screen

In Home Screen,  (Settings)  Accessibility  TalkBack  Use TalkBack



- When  is initially activated, instruction screen for using "TalkBack" will be displayed. Follow onscreen prompts.
- Tap  to toggle on ()/off ().
- Tap  to set speed and pitch of sound, etc. Follow onscreen prompts.





Setting Whether to Read Out Items On Screen by Using Shortcut

In Home Screen,  (Settings)  Accessibility  TalkBack  /  for "TalkBack shortcut"






- If confirmation appears, follow onscreen prompts.
- Tap  to toggle on (),  to toggle off ().
- Tap **TalkBack shortcut** to set shortcut type. Follow onscreen prompts.



Setting Whether to Read Out Tapped Text on Screen by Using Shortcut

In Home Screen,  (Settings)  Accessibility  Select to Speak  /  for "Select to Speak shortcut"







- If confirmation appears, follow onscreen prompts.
- Tap  to toggle on (),  to toggle off ().
- Tap **Select to Speak shortcut** to set shortcut type. Follow onscreen prompts.
- Tap **Settings** to set speed and pitch of sound, etc. Follow onscreen prompts.





Setting Whether to Correct Colors when Red and Green Are Indistinguishable

In Home Screen,  (Settings)  Accessibility  Color and motion  Color correction  Use color correction






- Tap **Use color correction** to toggle on ()/off ().
- Tap **Red-green** / **Red-green** / **Blue-yellow** / **Grayscale** to select a mode.



Setting Whether to Correct Color by Using Shortcut

In Home Screen,  (Settings)  Accessibility  Color and motion  Color correction  /  for "Color correction shortcut"







- If confirmation appears, follow onscreen prompts.
- Tap  to toggle on (),  to toggle off ().
- Tap **Color correction shortcut** to set shortcut type. Follow onscreen prompts.





Setting Whether to Invert Display Colors

In Home Screen,  (Settings)  Accessibility  Color and motion  Color inversion  Use color inversion





- Tap **Use color inversion** to toggle on ()/off ().



Setting Whether to Invert Display Color by Using shortcut

In Home Screen,  (Settings)  Accessibility  Color and motion  Color inversion  /  for "Color inversion shortcut"





- If confirmation appears, follow onscreen prompts.
- Tap  to toggle on (),  to toggle off ().
- Tap **Color inversion shortcut** to set shortcut type. Follow onscreen prompts.



Setting Whether Not to Show Animation when Tapping Setting Switch (/)

In Home Screen,  (Settings)  Accessibility  Color and motion  Remove animations






- Tap **Remove animations** to toggle on ()/off ().





Setting Whether to Use a Large Pointer

In Home Screen,  (Settings)  Accessibility  Color and motion  Large mouse pointer





- Tap **Large mouse pointer** to toggle on ()/off ().

Setting Whether to Dim Screen Darker than Minimum Screen Brightness

In Home Screen,  (Settings)  Accessibility  Extra dim  /  for "Extra dim"





- Tap  to toggle on (),  to toggle off ().



Setting Screen Brightness

In Home Screen,  (Settings)  Accessibility  Extra dim  Drag "Intensity" bar to adjust intensity

- Available when **Make screen extra dim** is enabled.

Setting Whether to Keep Screen Dim when Handset Restarts

In Home Screen,  (Settings)  Accessibility  Extra dim  Keep on after device restarts

- Available when **Make screen extra dim** is enabled.
- Tap **Keep on after device restarts** to toggle on ()/off ().

Setting Whether to Further Reduce Screen Brightness by Using Shortcut

In Home Screen, (Settings) Accessibility Extra dim / for "Extra dim shortcut"

- If confirmation appears, follow onscreen prompts.
- Tap to toggle on (), to toggle off ().
- Tap **Extra dim shortcut** to set shortcut type. Follow onscreen prompts.

Setting Whether to Enable Enlarged View by Using Shortcut

In Home Screen, (Settings) Accessibility Magnification / for "Magnification shortcut"

- If confirmation appears, follow onscreen prompts.
- Tap to toggle on (), to toggle off ().
- Tap **Magnification shortcut** to set shortcut type. Follow onscreen prompts.
- Tap **Magnification type** to set magnification method. Follow onscreen prompts.

Setting Whether to Move Magnification Range along with Typing

In Home Screen, (Settings) Accessibility Magnification Magnify typing

- Tap **Magnify typing** to toggle on ()/off ().

Setting Whether to Keep Screen Magnified While Switching Applications

In Home Screen, (Settings) Accessibility Magnification Keep on while switching apps

- Tap **Keep on while switching apps** to toggle on ()/off ().

Setting Whether to Use Accessibility Menu to Adjust Volume, Brightness, etc. by Using Shortcuts

In Home Screen, (Settings) Accessibility Accessibility Menu / for "Accessibility Menu shortcut"

- If confirmation appears, follow onscreen prompts.
- Tap to toggle on (), to toggle off ().
- Tap **Accessibility Menu shortcut** to set shortcut type. Follow onscreen prompts.
- Tap **Settings** to set size of button for Accessibility Menu. Follow onscreen prompts.

Setting Whether to Operate Handset Using Switches (Switch Access) Instead of Touchscreen

In Home Screen, (Settings) Accessibility Switch Access Use Switch Access Follow onscreen prompts

- If confirmation appears, follow onscreen prompts.
- Tap **Use Switch Access** to toggle on ()/off ().
- Tap **Settings** to set switch assignments, behavior, etc. Follow onscreen prompts.

Setting Whether to Use "Switch Access" by Using Shortcut

In Home Screen, (Settings) Accessibility Switch Access / for "Switch Access shortcut"

- If confirmation appears, follow onscreen prompts.
- Tap to toggle on (), to toggle off ().
- Tap **Switch Access shortcut** to set shortcut type. Follow onscreen prompts.

Setting Time to Press Display for Touch & Hold

In Home Screen, (Settings) Accessibility Timing controls Touch & hold delay Tap item

Setting Time to Show Messages Visible Temporarily

In Home Screen, (Settings) Accessibility Timing controls Time to take action (Accessibility timeout) Tap time

When Using Mouse/Trackpad, Setting Time until Clicking when Pointer Is Stopped

In Home Screen, (Settings) Accessibility Timing controls Autoclick (dwell timing) Autoclick Off / Short / Medium / Long / Custom

- If **Custom** is selected, drag bar to adjust time until clicking.

Setting Whether to End Call by Pressing Power Key during Call

In Home Screen, (Settings) Accessibility System controls Power button ends call

- Tap **Power button ends call** to toggle on ()/off ().

Setting Whether to Show Captions

In Home Screen, (Settings) → Accessibility → Caption preferences → Show captions

· Tap Show captions to toggle on ()/off ().

Setting How Captions Shown

In Home Screen, (Settings) → Accessibility → Caption preferences → Caption size and style → Text size / Caption style → Tap item

Setting Caption Language

In Home Screen, (Settings) → Accessibility → Caption preferences → More options → Language → Tap language

Setting Whether to Read Out Description of Screen Content

In Home Screen, (Settings) → Accessibility → Audio description

· Tap Audio description to toggle on ()/off ().

Setting Whether to Use Monaural Audio Playback

In Home Screen, (Settings) → Accessibility → Audio adjustment → Mono audio

· Tap Mono audio to toggle on ()/off ().

Setting Left/Right Balance of Audio

In Home Screen, (Settings) → Accessibility → Audio adjustment → Drag "Audio balance" bar to adjust left/right balance

Setting Size and Transparency of Shortcut Button That Opens Accessibility Menu

In Home Screen, (Settings) → Accessibility → Accessibility shortcuts → Accessibility button & gesture → Set each item

Setting Whether to Enable Preset Accessibility Functions by Long Pressing Volume Up/Down Keys Simultaneously in Lock Screen

In Home Screen, (Settings) → Accessibility → Accessibility shortcuts → Shortcut from lock screen

· Tap Shortcut from lock screen to toggle on ()/off ()

· Make sure to set shortcuts to Accessibility functions to be enabled in Hold volume keys beforehand.

Storage

Check memory space of internal storage, SD Card and USB drive, mount or unmount SD Card, erase data on SD Card, etc. Settable items are the following.

· Available items vary depending on SD Card and USB drive status.

Item	Description
This device	View information on internal storage usage.
SD card	Check data saved on SD Card. Mount or unmount SD Card, etc. For details on mounting/unmounting SD Card, see "Internal Storage and SD Card."
(USB drive name) ¹	Check data saved on USB drive.

1 Appears when the USB host function is in use. See "USB ホスト機能を利用する (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34710/>)" (Japanese) for details.

+ Checking Data Saved in Internal Storage

In Home Screen, (Settings) → Storage → Document & other / Audio / Videos / Images → Leitz Phone 3

· If confirmation appears, follow onscreen prompts.

Apps

Make application settings. Settable items are the following.

- Any recently used applications appear in "Recently opened apps."

Item	Description
See all XX apps	Check and make settings for installed applications.
Default apps	Set applications used as default.
Screen time	Check history of total duration of handset use. Also restrict usage of individual applications. See " Digital Wellbeing & Parental Controls " for details.
Unused apps	Open unused applications.
App battery usage	Set whether to limit battery usage based on usage per each application.
Special app access	Make settings for special application access.

+ Application Operations

Making Application Settings

In Home Screen, (Settings) → Apps → See all XX apps → Tap application name → Set each item

View System Applications

In Home Screen, (Settings) → Apps → See all XX apps → ⋮ → Show system

Resetting Application Settings

In Home Screen, (Settings) → Apps → See all XX apps → ⋮ → Reset app preferences → RESET APPS

Setting Digital assistant Applications

In Home Screen, (Settings) → Apps → Default apps → Digital assistant app → Follow onscreen prompts

Setting Default Applications for Browser, Home Screen, Phone, Caller ID/Spam Applications, SMS, etc.

In Home Screen, (Settings) → Apps → Default apps → Browser app / Call redirecting app / Caller ID & spam app / Home app / Phone app / SMS app
→ Tap application name

- Tap ⚙️ for "Home app" to set Home Screen application.

Setting Integration with Other Applications, Etc.

In Home Screen, (Settings) → Apps → Default apps → Opening links → Follow onscreen prompts

Checking Unused Applications

In Home Screen, (Settings) → Apps → Unused apps

Setting Whether to Limit Battery Usage Based on Usage per Each Application

In Home Screen, (Settings) → Apps → App battery usage → Tap application name → Unrestricted / Optimized / Restricted

- Optimized / Restricted may not be usable with some applications.

Make Settings for Special Application Access

In Home Screen, (Settings) → Apps → Special app access → Set each item

About Phone

Check and make settings for handset information. Items that can be set/checked are the following.

Item	Description
Device name	Change handset name.
Phone number (sim slot 1)	Check phone number.
Phone number (sim slot 2)	Check phone number.
Legal information	Check third-party licenses, Google terms of service, etc.
Regulatory labels	Check information on Technical Conformance Certification or Checking VCCI Information.
Battery status	Check depletion of Battery.
SIM status (sim slot 1)	Check SIM Card status.
SIM status (sim slot 2)	Check SIM Card status.
Model	Check model name, serial number, etc.
EID	Check eSIM identification number.
IMEI (sim slot 1)	Check IMEI barcode.
IMEI (sim slot 2)	Check IMEI barcode.
Android version	Check the Android version.
IP address	Check the IP address.
Wi-Fi MAC address	Check the MAC address.
Device Wi-Fi MAC address	Check the Wi-Fi MAC address of the device.
Bluetooth address	Check the Bluetooth® address.
Up time	Check handset operation time.
Build number	Check the build number.

+ About Phone Operations

Changing Handset Name

In Home Screen, (Settings) → About phone → Device name → Enter handset name → OK → OK

Your Phone Number, Checking Battery Level, and Other Handset Status

In Home Screen, (Settings) → About phone

- Next, Battery status to check battery depletion.
- Next, IMEI (sim slot 1) / IMEI (sim slot 2) to check IMEI barcode.

Checking Third-Party Licenses, Google Terms of Service, Etc.

In Home Screen, (Settings) → About phone → Legal information → Follow onscreen prompts

Checking Technical Conformance Certification

Handset conforms to technical standards under the Radio Law and Telecommunications Business Law.

In Home Screen, (Settings) → About phone → Regulatory labels

Checking VCCI Information

Handset conforms to technical standards under the VCCI regulations, and is indicated by the conformance mark on handset electronic nameplate.

In Home Screen, (Settings) → About phone → Regulatory labels

Troubleshooting

Check FAQ on Support Website and do a self-check.

Item	Description
FAQ	Check FAQ on Support Website.
Search for settings	Search for items in settings menu.
Proficient use guide	Check useful information on handset.
Improved camera scanning accuracy in the application.	Set whether to zoom in on scan screen to make it easier to read barcodes and text in camera mode of some payment applications.
Self check	Perform a self-check.
Power menu	Open Power menu. See " System Settings " for details.

+ Troubleshooting Operations

Checking FAQ on Support Website

In Home Screen, (Settings) → Troubleshooting → FAQ

- If confirmation appears, follow onscreen prompts.

Searching for Items in Settings Menu

In Home Screen, (Settings) → Troubleshooting → Search for settings → Enter search text →

Search results appear.

Checking Useful Information on Handset

In Home Screen, (Settings) → Troubleshooting → Proficient use guide

Setting Whether to Zoom In on Scan Screen to Make it Easier to Read Barcodes and Text in Camera Mode of Some Payment Applications

In Home Screen, (Settings) → Troubleshooting → Improved camera scanning accuracy in the application.

- Tap Improved camera scanning accuracy in the application. to toggle on ()/off ().
- After scan is complete, reset to disable ().

Performing Self-Check

In Home Screen, (Settings) → Troubleshooting → Self check → DIAGNOSE → CHOOSE FROM THE SYMPTOMS. / CHOOSE THE PLACE THAT YOU WANT TO DIAGNOSE. → Follow onscreen prompts

Diagnosis results appear.

- Tap Secure storage to delete cache used by the application.
- Tap Frequently Asked Questions to check FAQ on Support Website.
- Tap diagnosis result for detailed result screen.
- Alternatively, Use Power Key + Volume Up Key → Think if it might be a malfunction? → CHOOSE FROM THE SYMPTOMS. / CHOOSE THE PLACE THAT YOU WANT TO DIAGNOSE. to perform Self-Check.

Deleting Self Check Diagnostic History

In Home Screen, (Settings) → Troubleshooting → Self check → : → Delete history → Tap the diagnostic history to delete () → DELETE → YES

Checking Memory Usage

In Home Screen, (Settings) → Troubleshooting → Self check → : → Memory(RAM) usage

Restarting Handset in Safe Mode

In Home Screen, (Settings) → Troubleshooting → Self check → : → Reboot with safe mode → OK

- Handset restarts in a state near to its state at time of purchase.

Exiting Safe Mode and Restarting Handset

In Home Screen, (Settings) → Troubleshooting → Self check → : → Reboot to cancel safe mode → OK

- While in Safe mode, handset enters Airplane mode. Note that after exiting Safe mode, handset remains in Airplane mode.

Viewing Advice Related to Temperature Rise in Handset

In Home Screen, (Settings) → Troubleshooting → Self check → : → How to manage device overheating → Follow onscreen prompts

Viewing Self Check Diagnostic History

- In Home Screen, ⚙️ (Settings) → Troubleshooting
- Self check → Tap the diagnostic history to view
- Follow onscreen prompts

Global Services

Global Roaming.....	194
Calling from Outside Japan.....	195

Global Roaming



Handset is Global Roaming Service eligible. Use the same handset number outside Japan.


Handset connects to an appropriate cellular provider automatically by default.

A specific carrier can also be selected manually.
Change carrier and roaming settings.

Setting a Cellular Provider


1

In Home Screen,  (Settings)  Network & internet

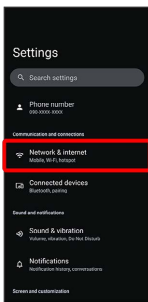


2


SIMs

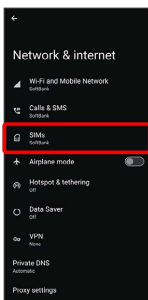

3


SoftBank  Automatically select network

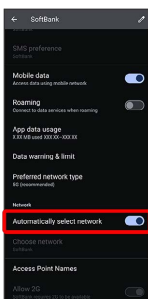


 Handset searches for all available networks.

4

Tap provider

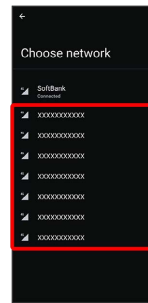


 Cellular provider is set.

To set an appropriate cellular provider automatically, Tap **Automatically select network** ().

Changing Roaming Setting


1

In Home Screen, (Settings) → Network & internet

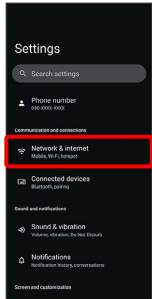

2

SIMs

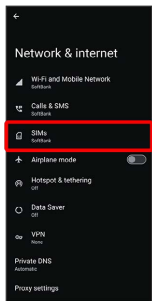

3

SoftBank → Roaming ()



Roaming is enabled.

- Tap **Roaming** to toggle on ()/off ().
- If confirmation appears, follow onscreen prompts.

Calling from Outside Japan


See SoftBank Website to learn about roaming areas/rates, etc.
http://mb.softbank.jp/en/global_services/

Print out roaming area/rate information to carry while traveling abroad as needed.


International Calls to Japan and Other Countries from Abroad

1

In Home Screen, (Phone)

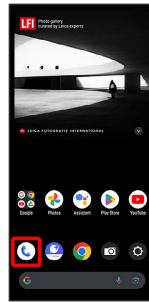

2

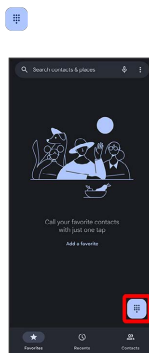

Dialpad window opens.

3


Touch & Hold 0



"+" appears.

4

Enter country code then other party number (omit first 0)

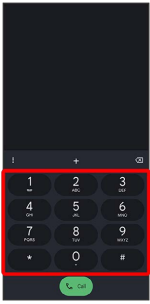

· Do not omit first 0 from phone numbers when dialing Italy (39).

5

Call



Handset dials number. Call begins when other party answers.


Calling Landlines & Mobiles within Current Country

Place calls the same way you would within Japan.

- Do not enter country code or omit first 0 from phone numbers.

1

In Home Screen, (Phone)

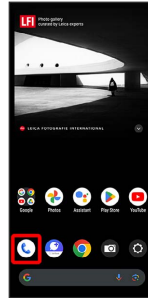


2



Dialpad window opens.

3


Use onscreen dialpad to enter number

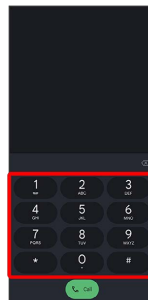

4

Call



 Handset dials number. Call begins when other party answers.

Warranty/Specifications/ Customer Service

Warranty & After-Sales Service.....	200
Specifications.....	200
Customer Service.....	202

Warranty & After-Sales Service

Warranty

- Handset warranty is for 1 year from date of purchase.
- Repair may be made free of charge under the terms of repair service. See SoftBank Website for terms of repair service.
<https://www.softbank.jp/mobile/support/product/warranty/> (Japanese)
- Warranty covers handset. Cables and complimentary sample accessories are not covered by warranty.

! Cautions

Damages

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.

Malfunction/Repairs

Information/settings on handset may be lost/changed due to malfunction or repairs. It is recommended that you keep a separate copy of contacts and other important information. SoftBank Corp. is not responsible for loss/change of data (contacts, images, sound, etc.) or settings due to damage or repairs.

Disassembly/Modification

Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

After-Sales Service

To request repairs, contact [Customer Service](#) or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms of repair service.
- After the warranty period, if handset can be repaired, repairs will be made at cost.
Repair parts (for maintaining product performance) are stocked for approximately 4 years after end of production. However, repair may not be possible even at cost within this period due to stock conditions.

💡 Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or [Customer Service](#).

Specifications

Some information may differ due to specification changes.

Handset

Handset specifications are as follows.

- Times in the table vary with location, status, settings, etc.
- OEL Display employs precision technology; however, some pixels may remain on/off.
- Please note that the temperature of handset may increase due to processing during continuous use or when operating under high loads.

Item	Description
Dimensions (W x H x D)	Approx. 77 mm x 161 mm x 9.3 mm (without protruding parts)
Weight	Approx. 209 g
Internal Battery Capacity	5,000 mAh
Continuous Talk Time ¹	4G LTE: Approx. 3,380 minutes
Continuous Standby Time ²	4G: Approx. 690 hours 4G LTE: Approx. 640 hours 5G: Approx. 590 hours ³
Charging Time ⁴	AC Adaptor (USB Type-C™ quick charge AC Adaptor for USB PD-PPS [ZSDBAV] (SBAC22-TCPD)): Approx. 100 minutes

- 1 Average measured with handset fully charged, in strong signal conditions at rest.
- 2 Average measured with handset fully charged, without calls or operations, in strong signal conditions at rest, and with data communication and Urgent News disabled. May vary with battery strength, ambient temperature, settings, etc.
- 3 This is the approximate time in a 5G standalone environment.
- 4 Measured when charging with handset powered off.

Quick Switch Adapter

Item	Description
Length	Approx. 32 mm
Weight	Approx. 4.6 g

SIM Removal Tool

Item	Description
Length	Approx. 28 mm
Weight	Approx. 0.8 g

Case

Item	Description
Dimensions (W x H x D)	Approx. 81 mm x 165.3 mm x 13.3 mm
Weight	Approx. 33.9 g

Lens Cap

Item	Description
Dimensions (Diameter x D)	Approx. ϕ 50.1 x 4.3 mm
Weight	Approx. 17.8 g

Materials (Handset)

Parts	Materials Used/Surface Finish
Display Surface (Glass Part)	Tempered glass/AF coating
Outer Casing (Metal Part), Power Key, Volume Key (Up/Down), Camera Panel Periphery, Card Tray (Exterior)	Aluminum/anodizing
Outer Casing (Resin Part), Opening for Earphones-Microphone Jack Part, Opening for External Connection Jack Part	PBT resin (containing glass)
Back Surface	Urethane resin/AF coating
Camera Panel	Tempered glass/AF coating, AR coating
Leitz logo part	PET resin
Card Tray	POM resin + Aluminum/anodizing
Card Tray Gasket	Silicone rubber

Materials (Quick Switch Adapter)

Parts	Materials Used/Surface Finish
USB Type-C plug (Metal part)	Stainless steel/nickel plating
USB Type-C plug (Resin part), USB Type-A plug (Resin part)	LCP resin
USB Type-A plug (Metal part)	SPCC/nickel plating
Handset (Metal part)	Aluminum alloy/anodizing
Handset (Resin part)	PBT resin

Materials (SIM Removal Tool)

Parts	Materials Used/Surface Finish
SIM Removal Tool	Stainless steel

Materials (Case)

Parts	Materials Used/Surface Finish
Case	Silicone (PC insert molding) + microfiber lining
Leitz logo part	Nickel/chrome plating, coating

Materials (Lens Cap)

Parts	Materials Used/Surface Finish
Lens Cap	Aluminum + PC lining + microfiber lining/anodizing

Customer Service

If you encounter any difficulties or are unsure of anything, contact customer service.

SoftBank Customer Support

- From a SoftBank handset, dial toll free at 157
- From a landline/IP phone, dial toll free at 0800-919-0157
- Business hours : Call 10:00am - 7:00pm / Chat 9:00am - 8:00pm

Smartphone Technical Support Center

- From a SoftBank handset, dial toll free at 151
- From a landline/IP phone, dial toll free at 0800-1700-151
- Business hours : Mon. - Fri. 9:00am - 7:00pm / Sat., Sun., and Holiday 9:00am - 5:00pm / 9:00am - 8:00pm (for general information)

Safety Precautions




Safety Precautions.....	204
Important Product Information.....	214
Handset & Hardware Care.....	215
General Notes.....	218
RF Exposure Information of This Product.....	220
Water & Dust Resistance.....	222

Safety Precautions

Read Safety Precautions before using handset.
Observe precautions to avoid injury to self or others, or damage to property.

Safety Precautions

These labels show degree of risk from improper use.







Label	Description
 DANGER	Great risk of death or serious injury ¹
 WARNING	Risk of death or serious injury ¹
 CAUTION	Risk of minor injury ² or property damage ³

1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, injuries with residual aftereffects from poisoning, etc., and injuries requiring hospital admission for treatment or long-term hospital attendance as an outpatient.

2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission for treatment or long-term hospital attendance as an outpatient.

3 Property damage: This refers to extended damage to buildings, furniture, livestock, pets, etc.

These symbols signify prohibited/compulsory actions.

Symbol	Description
	Prohibited actions
	Disassembly prohibited
	Exposure to liquids prohibited
	Use with wet hands prohibited
	Compulsory actions
	Unplug from outlet

Handset, SIM Card, Quick Switch Adapter, SIM Removal Tool, Case, Lens Cap, AC Adapter (Optional Accessory), Wireless Charger (Sold Separately) (Common)

DANGER



Prohibited

Do not use, store, or leave in extreme heat or where heat collects, such as fire, heat sources, under a kotatsu (blanketed warming table) or blanket, direct sunlight, inside vehicles in the hot sun, etc.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Keep away from cooking appliances (microwave ovens, induction stoves, etc.) and pressure vessels (e.g., pressure cookers).

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not subject to or place directly on sand, soil, or mud. Do not touch with dirty hands.

May cause fire, burns, injury, electric shock, etc.

For details on water and dust resistance, see "[Water & Dust Resistance](#)"



Prohibited

Do not charge handset while it is wet with water or other liquids (drinking water, sweat, sea water, pet urine, etc.).

Do not charge handset near water (in the bathroom, near a humidifier, etc.).

May cause fire, burns, injury, electric shock, etc.

For details on water resistance, see "[Water & Dust Resistance](#)"



Prohibited

Do not apply excessive force to or break handset. Particularly when carrying handset in your clothes pocket, do not bump it or place it between objects.

Internal Battery breakage may cause fire, burns, injury, etc.

* Examples of where to be careful

- Sitting or squatting with handset in your pants or skirt pocket
- Handset becoming caught in a sliding door or vehicle door when in a jacket pocket
- Stepping on handset when it is on something soft such as a sofa, bed, or futon or on the floor
- Handset becoming caught in a seat on a train or bus



Do Not Disassemble

Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not try to remove Internal Battery from handset.

May cause fire, burns, injury, etc.



Prohibited

Handset Back Cover cannot be removed. Do not try to remove. Even if handset bulges due to bulges of Internal Battery, etc., do not try to remove Back Cover or press it with excessive force.

May cause fire, burns, injury, etc.



Avoid Liquids Or Moisture

Do not wet with water or other liquids (drinking water, sweat, sea water, pet urine, etc.).

May cause fire, burns, injury, electric shock, etc.

For details on water resistance, see "[Water & Dust Resistance](#)"



Avoid Liquids Or Moisture

Do not let water or other liquids (drinking water, sweat, sea water, pet urine, etc.) enter charging terminals or External Connection Jack.

May cause fire, burns, injury, electric shock, etc.

For details on water resistance, see "[Water & Dust Resistance](#)"



Compulsory

Use optional accessories specified by SoftBank Corp.

Using third party accessories or those whose manufacturer, distributor, or specifications are unclear may result in fire, burns, injury, electric shock, etc.

⚠ WARNING

Prohibited

Do not drop, stomp, throw or subject to excessive force or strong impact/vibration.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Keep conductive materials (metal strip, pencil lead, etc.) away from charging terminals and External Connection Jack. Do not let dust enter them.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not cover/wrap with a blanket, etc. while using or charging.

May cause fire, burns, injury, etc.



Prohibited

Do not adhere metallic objects (e.g. stickers made of materials containing metal) on the wireless charger or handset.

It may cause fire, burns, injury, etc.



Prohibited

Do not place objects that contain metal (straps, clips, etc. made of materials containing metal) between the wireless charger and handset.

It may cause fire, burns, injury, etc.



Avoid Liquids Or Moisture

When caring for equipment, ensure that no disinfectant or water enters gaps, Charging Terminal, External Connection Jack, Earphones-Microphone Jack, Earpiece/Speaker, Mic/Recorder Mic, Mic, or Speaker.

Handset breakage may cause electric shock, etc.



Compulsory

When charging with wireless charger, remove any covers on handset.

Thickness of cover material or dust, etc., between handset and cover may prevent charging and/or cause fire, burns, injury, etc.



Compulsory

Power off handset near electronic devices that employ high precision control systems or weak signals.

Radio waves may cause electronic devices to malfunction or may adversely affect the operation.

Take added care near these devices: Hearing aids, implanted pacemakers/defibrillators and other electronic medical devices; other automatic control devices. If you are using an implanted pacemaker, implanted defibrillator, or other electronic medical device, check with its manufacturer or the vendor on radio wave effects.



Compulsory

If charging continues even after specified Charging Time, stop charging.

Failure to do so may cause fire, burns, injury, etc. due to overcharge or for other reasons.



Compulsory

When entering very dusty locations or locations where flammable gases are generated, be sure to power off handset beforehand and stop any charging in progress.

May ignite flammable gases, etc. and cause explosion, fire, etc.



Compulsory

Use in facilities such as gas stations should be in accordance with the facility guidelines.

Do not charge handset in facilities such as gas stations.

Take care not to drop handset in facilities such as gas stations and in particular do not use while refueling.

May ignite flammable gases, etc. and cause explosion, fire, etc.



Compulsory

If there is abnormal odor/sound, smoke, overheating, discoloration, distortion, or other abnormalities during use, charging, or storage, do the following while exercising caution.

- Unplug from the outlet.
- Power off handset.

Failure to follow the above steps may cause fire, burns, injury, electric shock, etc.

CAUTION

Prohibited

Do not use if broken.

May cause fire, burns, injury, etc.



Prohibited

Do not place on unstable surfaces; take added care when vibration is set.

Handset or related hardware may fall, resulting in injury, etc.



Prohibited

Do not use or store in a location that is subject to excessive dust, high humidity, or high temperatures.

May cause fire, burns, electric shock, etc.

For details on water and dust resistance, see "[Water & Dust Resistance](#)"



Prohibited

For use by a child, explain instructions and supervise use.

May cause accidental swallowing, injury, electric shock, etc.



Prohibited

Do not leave within the reach of small children or where pets can touch.

Take particular care with storage locations for small parts such as Card Tray, Quick Switch Adapter, and SIM Removal Tool.

May cause accidental swallowing, injury, electric shock, etc.



Compulsory

Use handset with caution, as it may become hot with continued use or while charging. Be careful not to place handset in clothes pocket, etc. and fall asleep, allowing unintentional continued contact.

Handset or AC Adaptor may become hot after continued use of applications, call functions, data communication and video viewing functions, etc. or while charging. Continuous direct contact with hot surfaces may cause skin redness, itching, rash, or low-temperature burns depending on your individual physical condition.

Handset**DANGER**

Prohibited

Do not throw into a fire or apply heat.

May cause fire, burns, injury, etc.



Prohibited

Do not pierce with a sharp object (nail, etc.), hit with a hard object (hammer, etc.), step on, or otherwise subject to excessive force.

May cause fire, burns, injury, etc.



Compulsory

If substance in handset gets in eyes, mouth, etc., rinse with clean water and consult a doctor immediately.

Substances in handset may cause loss of sight or other physical harm.

WARNING



Prohibited

Do not shine Mobile Light close to eyes. Maintain a safe distance, especially from small children.

May cause visual impairment or other problems; may temporarily affect eyesight or startle, leading to injury or other accident.



Prohibited

Do not point Mobile Light at drivers when it is turned on.

May hinder driving performance, leading to an accident.



Prohibited

Do not stare at Display for a long period when it is flickering.

May cause spasms, loss of consciousness, etc.



Prohibited

Do not let water or other liquids (drinking water, sweat, sea water, pet urine, etc.) or a foreign object (metal strip, flammable material, etc.) enter SIM/SD Card Slot.

In addition, insert SIM Card and SD Card into correct openings in correct orientation.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not expose Camera lens to direct sunlight for an extended period.

May cause fire, burns, injury, etc. due to light-collecting mechanism of the lens.



Prohibited

Do not stare proximity sensor.

May temporarily affect eyesight, leading to accidents.



Compulsory

Power off handset or activate Airplane mode before boarding an airplane.

Handset use on airplanes is restricted; follow the instructions given by the respective airlines.

Radio waves may adversely affect an airplane's electronic devices.

If you engage in a prohibited activity while using handset on an airplane, you may be punished by law.



Compulsory

Regarding handset use in a hospital, follow the instructions given by the respective medical institution.

Power off handset where handset use is prohibited.

Radio waves may adversely affect an airplane's electronic devices or electronic medical devices.



Compulsory

When you are on a handsfree call, while ringtone is playing loudly, when in standby, etc., be sure to keep handset at a safe distance from your ears.

When you attach earphones-microphone to handset and play games, videos, or music, adjust the volume to a comfortable level beforehand.

When making a handsfree call, handset emits sound loudly.

Even in standby, the ringtone or alarm may ring suddenly.

Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty.

In addition, not being able to hear surroundings may cause an accident.



Compulsory

If you have a weak heart, adjust ringtone vibration and volume as needed.

Handset suddenly vibrating and ringing for a new call may startle you and adversely affect your heart.



Compulsory

If you are using an electronic medical device, check with its manufacturer or vendor on radio wave effects before using handset.

Radio waves may adversely affect electronic medical devices, etc.



Compulsory

If Display or Camera lens breaks, be careful with broken parts and exposed handset parts.

Touching the broken or exposed parts may cause burns, injury, electric shock, etc.



Compulsory

If Internal Battery leaks or there is abnormal odor, discontinue use immediately and keep sources of flame away.

Leaked fluid may catch fire, causing the battery to ignite, burst, etc.



Compulsory

Do not let your pet bite handset.

May cause Internal Battery to ignite, burst, overheat, or leak, causing fire, burns, injury, etc.

CAUTION



Prohibited

When using the motion sensor and electromagnetic sensor, make sure of the safety around you and hold handset firmly; do not swing with excessive force.

Failure to do so may cause injury or other accident.



Prohibited

If Display breaks and substance in handset leaks, do not let it get on your skin (face, hands, etc.) or clothes.

May harm sight, skin, etc.

If substance in handset gets in eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water.

If substance in handset gets in eyes, mouth, etc., rinse and consult a doctor immediately.



Prohibited

Do not dispose of handset with regular trash.

May cause fire, burns, injury, etc. May also adversely affect the environment. When handset is no longer needed, take it to a SoftBank shop, or follow the local regulations regarding handset collection.



Prohibited

If substance in Internal Battery leaks, do not let it get on your skin (face, hands, etc.) or clothes.

May harm sight, skin, etc.

If substance in handset gets in eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water.

If substance in handset gets in eyes, mouth, etc., rinse and consult a doctor immediately.



Prohibited

When removing SIM Card, do not scratch your fingers or other part of yourself with point of SIM Removal Tool.

May harm sight, skin, etc.

Contact with point of SIM Removal Tool may cause injury, etc.



Compulsory

Before using handset in a vehicle, check with the manufacturer or dealer of the vehicle on radio wave effects.

In rare cases, radio waves may adversely affect operation of on-vehicle electronic devices, depending on the type of vehicle. If this occurs, discontinue use immediately.



Compulsory

For any skin abnormalities associated with handset use, discontinue use and consult a doctor immediately.

Handset use may cause itchiness, skin irritation, rashes, etc. depending on your physical condition.

For details on materials used for handset parts, see "[Materials \(Handset\)](#)."



Compulsory

Earpiece/Speaker, Speaker, and Camera use magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Metal strip on handset may cause injury, etc.



Compulsory

See Display in a sufficiently bright place at a reasonable distance.

Seeing in a dark place or at a close distance may deteriorate vision or cause other problems.

AC Adaptor (Optional Accessory), Wireless Charger (Sold Separately)

WARNING



Prohibited

Do not use AC Adaptor or Wireless Charger if the cord is damaged.

May cause fire, burns, electric shock, etc.



Prohibited

Do not touch AC Adaptor or Wireless Charger if thunder is audible.

May cause electric shock, etc.



Prohibited

Do not short-circuit charging terminals when AC Adaptor is plugged into the outlet. In addition, keep your hands and other body parts away from charging terminals.

May cause fire, burns, electric shock, etc.



Prohibited

Do not place a heavy object on top of AC Adaptor or Wireless Charger cord; do not apply excessive force by pulling, etc.

May cause fire, burns, electric shock, etc.



Prohibited

When plugging/unplugging AC Adaptor, keep metal objects away.

Failure to do so may cause fire, burns, electric shock, etc.



Prohibited

Do not use a voltage converter (travel converter for overseas use, etc.) when charging with AC Charger.

May cause ignition, overheating, electric shock, etc.



Prohibited

When AC Adaptor is connected to handset, do not apply excessive force to the connection.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not use wireless charger to charge anything that is wet due to contact with water or other fluids (beverages, sweat, seawater, pet urine, etc.).

Do not charge handset near water (in the bathroom, near a humidifier, etc.).

It may cause fire, burns, injury, electric shock, etc.



Do Not Use Wet Hands

Do not touch AC Adaptor cord, charging terminals, power plug, or Wireless Charger with wet hands.

May cause fire, burns, electric shock, etc.



Compulsory

Use at the specified power supply voltage.

When charging handset overseas, use AC Adaptor designed for overseas use.

Use at other power supply voltages may cause fire, burns, electric shock, etc.

AC Adaptor: AC 100 V (connect to a household AC outlet only)

AC Adaptor designed for overseas use: AC 100 V - 240 V (connect to a household AC outlet only)



Compulsory

Wipe off any dust on the power plug.

Using Charger when dust is on plug may cause fire, burns, electric shock, etc.



Compulsory

Plug AC Adaptor into the outlet firmly.

Failure to do so may cause fire, burns, electric shock, etc.



Compulsory

When unplugging from the outlet, grasp AC Adaptor and pull, without forcefully pulling cord.

Pulling the AC Adaptor cord may damage the cord, causing fire, burns, electric shock, etc.



Compulsory

If you are using an implanted pacemaker, implanted defibrillator, or other electronic medical device, consult a doctor fully before using wireless charger.

Radio waves may adversely affect operation of electronic medical devices.



Compulsory

When inserting/removing USB Type-C plug into/from handset, insert/remove it straight into/from Jack, without forcefully pulling cord.

Inserting/removing in an incorrect orientation may cause fire, burns, injury, electric shock, etc.



Compulsory

If charging terminals become bent or deformed, discontinue use immediately. In addition, do not use AC Adaptor by restoring the terminals to their original state.

May cause fire, burns, injury, electric shock, etc. due to short-circuiting of charging terminals.



Disconnect Power Source

When not using AC Adaptor, unplug it from the outlet.

Leaving it plugged in may cause fire, burns, injury, electric shock, etc.



Disconnect Power Source

If splashed with water or other liquids (drinking water, sweat, sea water, pet urine, etc.), unplug from the outlet immediately.

Splashing can cause short-circuiting, causing fire, burns, electric shock, etc.



Disconnect Power Source

Before cleaning, unplug AC Adaptor from the outlet.

Cleaning AC Adaptor without unplugging it may cause fire, burns, electric shock, etc.

⚠ CAUTION

Prohibited

Do not touch AC Adaptor for long periods when it is plugged into the outlet.

May cause burns, etc.

SIM Card**⚠ CAUTION**

Compulsory

When handling SIM Card, be careful with cut edges so as not to damage your hands or other body parts.

Cut edges may be sharp and cause injury.

Quick Switch Adapter**⚠ WARNING**

Prohibited

Do not short-circuit terminals while connected to handset. Do not touch terminals with hands, fingers or any part of body.

May cause fire, burns, electric shock, etc.



Prohibited

When connecting/disconnecting Quick Switch Adapter to/from handset, keep metal objects away.

May cause fire, burns, electric shock, etc.



Prohibited

Do not apply excessive force to terminals while Quick Switch Adapter is connected to handset.

May cause fire, burns, injury, electric shock, etc.



Do Not Use Wet Hands

Do not touch Quick Switch Adapter with wet hands.

May cause fire, burns, electric shock, etc.



Compulsory

Wipe off any dust on terminals.

Using the adapter with dust may cause fire, burns, electric shock, etc.



Compulsory

Insert Quick Switch Adapter into handset firmly.

Failure to do so may cause fire, burns, electric shock, etc.



Compulsory

If terminal is deformed or bent, discontinue use immediately. Also, do not use handset by restoring the deformed terminal.

Short circuit of the terminals may cause fire, burns, injury, or electric shock.

⚠ CAUTION

Prohibited

Do not touch Quick Switch Adapter continuously while it is plugged into handset.

May cause burns, etc.



Compulsory

For any skin abnormalities associated with handset use, discontinue use and consult a doctor immediately.

Handset use may cause itchiness, skin irritation, rashes, etc. depending on your physical condition.

For details on materials used for handset parts, see "[Materials \(Quick Switch Adapter\)](#)."

SIM Removal Tool**⚠ WARNING**

Prohibited

Tip of SIM Removal Tool is pointed. Do not use pointed at yourself or others.

Doing so may allow it to strike yourself or others, causing injuries or loss of sight.

Case**⚠ CAUTION**

Prohibited

When attaching handset to Case, be careful not to get your fingers caught.

May cause injury, etc.



Compulsory

For any skin abnormalities associated with handset use, discontinue use and consult a doctor immediately.

Handset use may cause itchiness, skin irritation, rashes, etc. depending on your physical condition.

For details on materials used for handset parts, see "[Materials \(Case\)](#)."

Lens Cap**⚠ CAUTION**

Compulsory

Lens Cap uses magnet; check that nothing metal (cutter blades, staples, etc.) is adhering.

Anything adhering may cause injury, etc.



Compulsory

For any skin abnormalities associated with handset use, discontinue use and consult a doctor immediately.

Handset use may cause itchiness, skin irritation, rashes, etc. depending on your physical condition.

For details on materials used for handset parts, see "[Materials \(Lens Cap\)](#)."

Handset Use & Electronic Medical Devices

WARNING



Compulsory

If you are using an electronic medical device (implanted pacemaker, implanted defibrillator, etc.), carry or use handset at least 15 cm away from where the device is.

Radio waves may adversely affect operation of electronic medical devices.



Compulsory

Before using an electronic medical device other than an implanted pacemaker or implanted defibrillator outside a medical institution (for home treatment, etc.), check with its manufacturer on radio wave effects.

Radio waves may adversely affect operation of electronic medical devices.



Compulsory

In a situation where you may not be able to maintain a distance of at least 15 cm from other persons, such as when your movement is restricted, disable radio wave emission by activating Airplane mode, powering off handset, etc.

There may be persons with an electronic medical device (implanted pacemaker, implanted defibrillator, etc.) nearby. Radio waves may adversely affect operation of electronic medical devices.



Compulsory

Regarding handset use in a medical institution, follow the instructions given by the medical institution.

Radio waves may adversely affect operation of electronic medical devices.

Important Product Information

General Use

- If your SIM Card or handset (with SIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact [Customer Service](#).
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places; may affect calls.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Beware of eavesdropping.
Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.
 - Eavesdropping
Deliberate/accidental interception of communications constitutes eavesdropping.
- Beware of harmful/malicious websites. Take added care when posting personal information.
- Handset uses an OEL display.
The same image shown continuously and at a high brightness setting may burn into Display. It is recommended that you lower Display brightness/shorten time until Display turns off (sleep). Colors on an OEL display may also appear differently when viewed at an angle.
- An export license may be required to carry handset into other countries if it is to be used by or transferred to another person. However, no such license is required when taking handset abroad for personal use on a vacation or business trip and then bringing it back.
Export control regulations in the United States provide that an export license granted by the US government is required to carry handset into Cuba, Iran, North Korea or Syria.
- Many different kinds of applications can be installed on handset from Google Play (provided by Google LLC). SoftBank Corp. is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Heat from Handset Use

- Depending on how or where used, interior of handset may become hot. Handset may then power off as a safety precaution.
Let handset cool before powering on handset.


Camera




- Mind etiquette when using Camera.
- Test Camera before shooting special moments.
- Do not use Camera in places where shooting is prohibited.
- Shot images may not be used/transferred without copyright holder (photographer) permission, except for personal use.

Urgent News (Application)

- When Urgent News is received, handset notifies user via message, alert, and by vibrating.
 - Urgent News is enabled by default (can also be disabled).
 - By default, Alert sounds at maximum volume even when Manner mode is set, and vibration is enabled regardless of Manner mode setting (can be changed).
 - See "緊急速報メールを利用する (<https://www.softbank.jp/mobile/support/manual/smartphone/leitz-phone3/menu/34688/>)" (Japanese) for details on Urgent News settings.
- Alerts are not received during calls/transmissions or in poor signal conditions.
(Alerts can be received during voice calls over VoLTE.)
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.

Technical Regulations Conformity Certification



Handset conforms to technical regulations pursuant to the Radio Law and the Telecommunications Business Law. To check technical regulations conformity certification information (e.g., 

In Home Screen,  (Settings)  About phone 

Regulatory labels

Voluntary Control of Radio Interference

Handset conforms to technical regulations pursuant to the Rules for Voluntary Control Measures of VCCI; the corresponding conformity mark is shown on electronic rating plate on handset. To check the electronic rating plate:

In Home Screen,  (Settings)  About phone 

Regulatory labels

Handset & Hardware Care

Handset & Hardware Care

- Use handset within 5°C - 35°C and 35% - 85% humidity.
For use in bathrooms, see "Cautions for Use in a Bathroom."
- Avoid extreme temperature or direct sunlight.
- Handset/Internal Battery may become warm during operation or while charging. This is normal.
- Warranty does not cover malfunctions resulting from misuse.
- Wipe clean with a dry, soft cloth (such as for eye glasses).
 - Wiping forcefully may scratch Display.
 - Allowing moisture or smudges to remain on Display may leave blemishes.
 - Wiping with alcohol, thinner, benzene, detergent, etc. may remove print or fade colors.
- Avoid scratching Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit or squat with handset in your pants or skirt pocket. Be careful in particular when wearing heavy clothing.
 - Do not place heavy objects on handset inside handbags, packs, etc.
- Handset back cover is not removable. Do not try to remove it; may cause damage or malfunction, or affect water and dust resistance.
- Connect only specified products to Jacks. Other devices may malfunction or cause damage.
- Do not power off while using SD Card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- If thunder is audible while outdoors, discontinue use; there is a risk of lightning strike or electric shock.
- When holding handset, do not block Earpiece, Mic, Speaker, or Recorder Mic.
- Do not cover or place a sticker/label over Proximity Sensor; Display may remain off during calls, disabling handset operation.
- If your hair is between Earpiece and your ear during calls, Proximity Sensor may not function properly.
Display may remain on; touching Display accidentally may end the call.
- Do not cover Light Sensor or place a sticker/label over it; may hinder ambient light detection, resulting in malfunction of Light Sensor.
- Handset Earpiece is located at the center of Display upper end. If other party's voice is hard to hear during calls, hold handset so that Earpiece is next to your earhole for better audibility.

Display (Touchscreen)

- Touchscreen is designed to be touched lightly with fingers. Do not press Display strongly with fingers or press on it with sharp objects (fingernails, ballpoint pens, pins, etc.).
- Touchscreen may not respond even if touched in these situations. Operating the display as follows may cause it to malfunction:
 - Use with gloves¹
 - Use with long fingernails
 - Use with objects on/against Display
 - Use by sticking protective film or sticker, etc. on Display
 - Use while wet
 - Use when your fingers are wet or sweaty
 - Use underwater
- When using handset with gloves on, enable glove mode. To set:
In Home Screen, ⚙ (Settings) → Display → glove mode ()

Quick Switch Adapter

- Keep Quick Switch Adapter free of water or other liquids (drinking water, sweat, sea water, pet urine, etc.) or a foreign object such as dust. Quick Switch Adapter is not water and dust resistant. Do not use in high humidity (e.g., bathroom) or in rain, etc. With the adapter put on your body, the moisture from perspiration may corrode the inside and cause it to malfunction.
- Clean the terminals, etc. from time to time to maintain them in clean condition. Use in a soiled condition may prevent normal use. Avoid damaging terminal when cleaning.
- Do not drop or subject to impact. May cause malfunction or damage.
- Do not subject to strong impact. Do not deform the terminal. May cause malfunction.

SIM Removal Tool

- Do not insert SIM Removal Tool in hole other than removal hole in Card Tray. May cause malfunction or damage.
- Do not apply excessive force. May cause malfunction or damage.
- Follow local rules regarding collection when disposing.
- Do not use SIM Removal Tool for any purpose other than described in this guide. May cause malfunction or damage.
- Do not use SIM Removal Tool in other mobile terminals. May cause malfunction or damage to mobile terminal.

Earphones-Microphone

Some earphones-microphones may not work properly.

- Do not subject Earphones-Microphone Jack to strong impact while using earphones-microphone; may affect water and dust resistance.

Handset Camera Panel Part /Lens Cap

Since magnets are used in handset camera panel part and Lens Cap, keep them away from IC cards and magnetic cards when carrying and using.

Otherwise, this may cause magnetic card malfunction.

Forcing Power Off

If handset has stopped processing or won't respond to operation, power off forcibly as follows.

Press and hold Power key and Volume Up key simultaneously for at least 8 seconds.

- Display goes out and handset powers off.

Bluetooth® Function

SoftBank Corp. is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth® function.

■Precautions

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

1. Before using Bluetooth®, visually check that no other radio stations sharing the same frequency band are in use nearby.
2. Should interference occur between handset and other radio stations, move it to a different location or cancel Bluetooth® function immediately.
3. For additional information and support, contact [Customer Service](#).

- Frequency Band

This radio station utilizes 2.4 GHz band.

FH:FH-SS modulation, with a maximum interference range of about 80 m.

XX:Other modulation, with a maximum interference range of about 80 m.

It is not possible for the radio station to avoid using the frequency band of a mobile unit identification apparatus.

2.4FH/XX8

Wi-Fi (Wireless LAN)

Wireless LAN (hereafter "Wi-Fi") uses radio waves to enable communication between compatible devices within range. However, it is advisable for the user to configure security settings to avoid risk of data interception.

- Do not use Wi-Fi near electrical appliances, audiovisual equipment or office automation equipment; may affect Wi-Fi transmission speed, availability, clarity, etc. (Especially when a microwave oven is in use.)
- If there are multiple access points nearby, handset may not detect access points correctly.
- To check information and precautions regarding frequency bands:

In Home Screen,  (Settings)  About phone 

[Regulatory labels](#)

■Precautions

The frequency band utilized by handset Wi-Fi is shared with industrial, scientific or medical equipment, including household microwave ovens, and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

1. Before using Wi-Fi, visually check that no other radio stations sharing the same frequency band are in use nearby.
2. Should interference occur between handset and other radio stations, move it to a different location or disable Wi-Fi immediately.
3. For additional information and support, contact [Customer Service](#).

· Frequency Band

This radio station utilizes 2.4 GHz, 5 GHz bands, and 6 GHz bands.

· 2.4 GHz band

DSSS-OFDM modulation, with a maximum interference range of 40 m.



Handset supports Wi-Fi channels 1 - 13. Handset does not connect to access points set to other channels.

· Channels in 5 GHz band

Three bands are available within 5 GHz frequency band: 5.2 GHz, 5.3 GHz, and 5.6 GHz (W52, W53, and W56).

- W52 (5.2 GHz band; channels 36, 40, 44, 48)
- W53 (5.3 GHz band; channels 52, 56, 60, 64)

- W56 (5.6 GHz band; channels 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144)

Use of 5.2 GHz or 5.3 GHz band wireless LAN for outdoor communication is prohibited by law (excluding communication with the access points and relay stations of high-output data communications systems operating in the 5.2 GHz band).

Although 5.8 GHz band wireless LAN (W58/149, 153, 157, 161, 165 ch) is also available in the 5 GHz frequency band, you cannot use in Japan under the law.

· 6 GHz band

In the 6 GHz frequency band, the band from 5925 MHz to 6425 MHz is available.

The 6 GHz transmit power class supports LPI (Low Power Indoor) and VLP (Very Low Power).

Use of 6 GHz band wireless LAN for outdoor communication is prohibited by law (excluding 6 GHz tethering (VLP mode) usage).

■Simultaneous Use with Bluetooth®

Wi-Fi (IEEE 802.11b/g/n/ax) and Bluetooth® transmit on the 2.4 GHz band. Enabling handset Bluetooth® or using Bluetooth® devices near handset may affect Wi-Fi transmission speed, availability and clarity. Should interference occur, cancel handset Bluetooth® or discontinue Bluetooth® device use.

- Available channels vary by country.
- For use of Wi-Fi aboard aircraft, check with airline beforehand.
- In some countries/regions, there are restrictions on the use of Wi-Fi. Check the local laws and regulations before using Wi-Fi on handset abroad.

FeliCa and NFC Reader/Writer

- FeliCa and NFC Reader/Writer of handset is designated as inductive reading-and-writing communication equipment under the Radio Law.


- It uses the 13.56 MHz frequency band. If other FeliCa and NFC reader/writers are used nearby, keep an adequate distance from them.

Also, make sure that other radio wireless stations using the same frequency bands are not nearby.

- Before using aboard an aircraft, check with the airline beforehand. Use may be restricted depending on the country.

Be sure to check laws and other conditions of the country/region.

- Designation can be checked as follows.

In Home Screen,  (Settings)  About phone 

[Regulatory labels](#)

General Notes

"LP-03" here refers to this mobile phone "Leitz Phone 3."

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use Camera responsibly.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without copyright holder permission may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images shot with Camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software; do not separate it from hardware in whole or part.

Open Source Software

- Handset contains software based on GNU General Public License (GPL), GNU Lesser General Public License (LGPL), and other licenses.

To check details of relevant software licenses:

In Home Screen, (Settings) → About phone → Legal information → Third-party licenses

- The source code of software based on GPL, LGPL, and Mozilla Public License (MPL) is provided on the following website free of charge.
<https://k-tai.sharp.co.jp/support/developers/oss/>
 (Japanese)

Regulatory Information

In some countries/regions including Europe*1, there are restrictions on the use of 5/6GHz WLAN that may limit the use to indoors only.

Please check the local laws and regulations beforehand.

*1 Belgium [BE], Bulgaria [BG], Czech Republic [CZ], Denmark [DK], Germany [DE], Estonia [EE], Ireland [IE], Greece [EL], Spain [ES], France [FR], Croatia [HR], Italy [IT], Cyprus [CY], Latvia [LV], Lithuania [LT], Luxembourg [LU], Hungary [HU], Malta [MT], Netherlands [NL], Austria [AT], Poland [PL], Portugal [PT], Romania [RO], Slovenia [SI], Slovakia [SK], Finland [FI], Sweden [SE], United Kingdom (Northern Ireland) [UK(NI)], Switzerland [CH], Liechtenstein [LI], Iceland [IS] and Norway [NO].

Norway: Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of Ny-Alesund, Svalbard.

Hereby, SHARP CORPORATION declares that the radio equipment type LP-03 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://jp.sharp/k-tai/>

Manufacturer's Address:

SHARP CORPORATION,
 1 Takumi-cho, Sakai-ku, Sakai-shi,
 Osaka 590-8522, Japan

Frequency Range of Supported Bands in EU

Item	Description
GSM 900	Tx 880.2 to 914.8 MHz Rx 925.2 to 959.8 MHz
DCS 1800	Tx 1710.2 to 1784.8 MHz Rx 1805.2 to 1879.8 MHz
WCDMA FDD I	Tx 1922.4 to 1977.6 MHz Rx 2112.4 to 2167.6 MHz
WCDMA FDD VIII	Tx 882.4 to 912.6 MHz Rx 927.4 to 957.6 MHz
LTE Band 1	Tx 1922.5 to 1977.5 MHz Rx 2112.5 to 2167.5 MHz
LTE Band 3	Tx 1710.7 to 1784.3 MHz Rx 1805.7 to 1879.3 MHz
LTE Band 7	Tx 2502.5 to 2567.5 MHz Rx 2622.5 to 2687.5 MHz
LTE Band 8	Tx 880.7 to 914.3 MHz Rx 925.7 to 959.3 MHz
LTE Band 20	Tx 834.5 to 859.5 MHz Rx 793.5 to 818.5 MHz
LTE Band 38	Tx 2572.5 to 2617.5 MHz Rx 2572.5 to 2617.5 MHz
LTE Band 40	Tx 2302.5 to 2397.5 MHz Rx 2302.5 to 2397.5 MHz
Bluetooth	Tx 2402 to 2480 MHz Rx 2402 to 2480 MHz
WLAN 2.4 GHz	Tx/Rx 2412 to 2472 MHz (BW:20MHz) Tx/Rx 2422 to 2462 MHz (BW:40MHz)
WLAN 5 GHz	W52 (U-NII 1): Tx/Rx 5180 to 5240 MHz (BW:20 MHz) Tx/Rx 5190 to 5230 MHz (BW:40 MHz) Tx/Rx 5210 MHz (BW:80 MHz) W53 (U-NII 2A): Tx/Rx 5260 to 5320 MHz (BW:20 MHz) Tx/Rx 5270 to 5310 MHz (BW:40 MHz)
WLAN 6GHz	Tx/Rx 5290 MHz (BW:80 MHz) W52/W53: Tx/Rx 5250 MHz (BW:160MHz) W56 (U-NII 2C): Tx/Rx 5500 to 5700 MHz (BW:20 MHz) Tx/Rx 5510 to 5670 MHz (BW:40 MHz) Tx/Rx 5530 to 5610 MHz (BW:80 MHz) Tx/Rx 5570 MHz (BW:160MHz)
NFC	Tx/Rx 13.56 MHz
UWB	7.9872GHz

	GPS:Rx L1 (1575.42 MHz)
	GLONASS:Rx G1 (1598.0625 to 1605.375 MHz)
	Galileo:Rx E1 (1575.42 MHz)
GNSS	BeiDou:Rx B1I (1561.098 MHz)
	BEIDOU:Rx B1C (1575.42MHz)
	GPS:Rx L5 (1176.450 MHz)
	Galileo:Rx E5a (1176.450 MHz)
	BEIDOU:Rx B2a (1176.450MHz)

Maximum Transmit Power

Item	Description
GSM 900	+33 dBm (Power Class 4)
DCS 1800	+30 dBm (Power Class 1)
WCDMA FDD I	+24 dBm (Power Class 3)
WCDMA FDD VIII	+24 dBm (Power Class 3)
LTE Band 1	+23 dBm (Power Class 3)
LTE Band 3	+23 dBm (Power Class 3)
LTE Band 7	+23 dBm (Power Class 3)
LTE Band 8	+23 dBm (Power Class 3)
LTE Band 20	+23 dBm (Power Class 3)
LTE Band 38	+23 dBm (Power Class 3)
LTE Band 40	+23 dBm (Power Class 3)
Bluetooth	+17.0 dBm (Power Class 1)
WLAN 2.4 GHz	+15.0 dBm
WLAN 5 GHz	+15.0 dBm
WLAN 6GHz	+15.0 dBm
NFC	0 dB μ A/m at 10m
UWB	-42.3dBm/MHz

Battery Cautions

Use specified Charger only.

Non-specified equipment use may cause Internal Battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.

Battery is built into handset. Do not dispose of handset with ordinary refuse; take it to a SoftBank Shop for appropriate disposal.

Charge handset in ambient temperature 5°C - 35°C; Internal Battery may leak/overheat and performance may deteriorate outside this range.

Mobile Light

Do not shine Mobile Light in eyes.

May temporarily affect eyesight or startle, leading to accidents.

Volume Level Caution

To prevent possible hearing damage, do not listen at high volume levels for long periods.



FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

■ FCC Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.
 - A. The use of antennas mounted on outdoor structures, e.g., antennas mounted on the outside of a building or on a telephone pole, or any fixed outdoors infrastructure is prohibited. Antennas may be mounted only on the hand held UWB device.
 - B. UWB devices may not be employed for the operation of toys. Operation onboard an aircraft, a ship or a satellite is prohibited.
 - C. This device is approved under Part 15.519 for handheld use only.

RF Exposure Information of This Product

【LP-03】 here refers to this mobile phone 【Leitz Phone 3】 .

RF Exposure Information of This Product (for Japan)

This mobile phone 【LP-03】 complies with the Japanese technical regulations on human exposure to radio frequency (RF) electromagnetic energy.

This mobile phone is designed in observance of the Japanese technical regulations regarding human exposure to radio waves (*1). These technical regulations are consistent with the limits of human exposure to radio waves established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the International Committee on Electromagnetic Safety (ICES) in IEEE. The permissive limits include substantial safety margins designed to assure the safety of all persons, regardless of age and health.

The technical regulations set out limits of exposure to radio waves as the SAR (Specific Absorption Rate, for up to 6GHz) and the PD (Power Density, for above 6GHz), and the limits for the SAR and the PD for mobile phones are 2.0 W/kg and 2 mW/cm², respectively. If a mobile phone supports simultaneous transmission of the frequency bands which should be evaluated in the SAR and PD, the technical regulations require that the Total Exposure Ratio (TER) should be used to indicate its compliance. The TER of less than or equal to 1 indicates the mobile phone satisfies the limits.

The TER for this mobile phone when tested for use near head is 0.761, and that when worn on the body is 0.353 (*2, *3). There may be slight differences of the SAR and PD values in individual product, but they all satisfy the limits. The actual SAR and PD of this mobile phone while operating can be well below the indicated above. This is due to automatic changes in the power level of the device to ensure it only uses the minimum required to access the mobile network(s).

This mobile phone can be used at positions other than against your head. By using accessories such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body, this mobile phone is certified the compliance with the Japanese technical regulations.

The World Health Organization has stated that "A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

For more information about RF exposure information, see the following websites:

Ministry of Internal Affairs and Communications (MIC)
<https://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>

Association of Radio Industries and Businesses (ARIB)
<https://www.arib-emf.org/01denpa/denpa02-02.html>
 (Japanese)

World Health Organization

<https://www.who.int/news-room/fact-sheets/detail/electromagnetic-fields-and-public-health-mobile-phones>
List of Specific Absorption Rates (SAR) for radio waves
<https://www.softbank.jp/mobile/support/sar/> (Japanese)

*1 The technical regulations are provided in the Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

*2 Including other radio systems that can be simultaneously used with 5G/LTE.

*3 The values of SAR and PD that the TER values are calculated are as follows: For temporal region (near ear), SAR: 0.623 W/kg, PD: 0.899 mW/cm²; For body-worn, SAR: 0.446 W/kg, PD: 0.259 mW/cm².

European RF Exposure Information

This mobile phone 【LP-03】 is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by the international guidelines. The guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety margins designed to assure the protection of all persons, regardless of age and health conditions. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use near head is 0.23 W/kg, and that when worn on the body at the separation distance of 0.5 cm from the body is 0.79 W/kg (*4). For electronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with the guidelines.

*4 The tests are carried out in accordance with the international guidelines for testing.

Simplified Declaration of Conformity for 【LP-03】
Hereby, SHARP CORPORATION declares that the radio equipment type 【LP-03】 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://jp.sharp/k-tai/>.

FCC RF Exposure Information

This mobile phone 【LP-03】 is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy required by the Federal Communications Commission (FCC). The limit is based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations as required by the FCC. The highest SAR value for this handset when tested for use near the head is 0.35 W/kg, and that when worn on the body as shown below is 0.60 W/kg.

Body-worn Operation: This mobile phone was tested for typical body-worn operations with the separation distance of 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain the above separation distance between the user's body and the mobile phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with the FCC RF exposure requirements and should be avoided. When using the Battery Share of device, this device should be operated with a minimum distance of 20 cm between the device and your body.

The FCC has granted an equipment authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure requirements. Filed SAR information of this mobile phone can be found by searching FCC ID APYHRO00330 in the FCC ID Search webpage: <https://www.fcc.gov/oet/ea/fccid>.

Additional information on SAR can be found on the FCC website at <https://www.fcc.gov/general/radio-frequency-safety-0>.

FCC ID Location

The device is electronically labeled and the FCC ID can be displayed from Home Screen as follows: Flick Home Screen up → ⚙️ (Settings) → About phone → Regulatory labels

Water & Dust Resistance

Handset Water & Dust Resistance

Handset has IPX5¹-, IPX8²-equivalent water protection and IP6X³-equivalent dust protection with Card Tray closed firmly leaving no gap between handset and Card Tray.

1 IPX5 compliant means that a handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter:6.3 mm), from all directions (approximately 3 m from handset) for at least 3 minutes.

2 IPX8 compliant means that a handset continues to function as a phone after being gently submerged in tap water at room temperature and a depth of 1.5 m in still water, and taken out after approximately 30 minutes.

3 IP6X compliant means that a handset continues to function as a phone and its safety is maintained after being agitated in a device containing dust of 75 µm or smaller in diameter for 8 hours and then removed from the device.

- Water and dust resistance may be affected under some circumstances. Warranty does not cover malfunctions resulting from misuse.
- Handset is compliant with IPX5 and IPX8 water protection standards as well as IP6X dust protection standard. However, ingress of dirt, sand, mud, metal powder, food, beverage, sea water, etc. may cause malfunction.

■ Handset Care





- Close Card Tray firmly leaving no gap between handset and Card Tray. Any debris (single hair, grain of sand, minute fiber, etc.) trapped between gasket and contacting surface may allow ingress of water/dust.
- If handset is exposed to liquids with Card Tray open, they may enter handset and cause electric shock or malfunction. Discontinue use and power off.
- If handset is wet, wipe it with a dry cloth.
- Never open/close Card Tray with wet hands or while handset is wet or has a foreign object adhered to it.
- Do not use Earphones-Microphone Jack or External Connection Jack while it is wet or obstructed by sand/dirt; may affect water and dust resistance or may cause malfunction, burns or fire due to electric shock, short-circuiting, etc.
- Handset is only water resistant against fresh/tap water between 5°C - 35°C.

Precautions

- Do not subject handset to soap, detergent, bath powder/oil, sea/pool/spa water, hot water, etc.
- Rinse off sea/pool water, beverage, dirt, sand, mud, etc. immediately with fresh/tap water between 5°C - 35°C; residue may cause malfunction if allowed to dry.
- Do not soak handset in bath or pool; never use it in water (including key operation).
- Handset is not resistant to water pressure. Avoid high-pressure water/shower (over 6 liters/min.) and water immersion.
- Do not expose handset to high humidity for long periods; avoid prolonged use in bath/shower rooms.
- Volume may be low when an opening such as Mic, Recorder Mic, Earpiece or Speaker is wet; dry handset before use (see "Drying Handset").
- AC Adaptor and other optional accessories are not waterproof or dustproof. Do not use in high humidity or where exposed to water (e.g., outdoors, in bathrooms, at sinks, etc.). May cause fire, electric shock, or malfunction.
- Do not subject handset to strong impact (e.g., from a fall); do not poke Mic, Earpiece, Speaker, Recorder Mic, etc. with a sharp object; may affect water and dust resistance.
- Avoid placing handset directly on sand. Sand may penetrate Earpiece, Speaker, etc., resulting in low volume.
- To prevent condensation, warm handset to room temperature before bringing it from a cold place into a warm place such as a bathroom. If condensation occurs, leave handset at room temperature until it is dry.
- Handset does not float on water.
- Keep handset out of heavy rain.

Cautions for Use in a Bathroom

- Do not let handset get wet with liquids other than tap water at room temperature (spa water, soapy water, detergent solutions, bubble bath water, etc.); do not submerge it in a bathtub.
May cause malfunction.
If handset gets exposed to liquids other than tap water or falls in a bathtub, wash it, remove moisture and let handset dry naturally in the way specified in "[Washing Handset](#)" and "[Drying Handset](#)."
- Use handset at 5°C - 40°C with humidity of 99% or less, for up to 2 hours.
Note that this does not guarantee continuous operation of all functions.
- After exposing handset to water, be sure to remove moisture and let it dry naturally in the way specified in "[Drying Handset](#)."
Let handset dry naturally after using it in a bathroom or when condensation occurs inside Camera lens, etc.
- Be careful not to splash hot water on handset.
- Extreme temperature changes may cause condensation. Wait until handset reaches room temperature before bringing it from a cold place into a warm bathroom. In addition, do not splash cold water on handset when it is warm in a bathroom.
May cause malfunction.
- Never charge handset in a bathroom.
- Depending on the layout and condition of a bathroom, handset may not receive a signal (call functions and data communication may be unavailable).
- If operated with wet hands, handset may not respond or may malfunction.
- Do not use in a bath room with earphones or other external device connected.
- Disable glove mode beforehand as follows.

In Home Screen,  (Settings)  Display  glove mode ()

Charging Cautions

- Never connect a USB Type-C plug while handset or AC Adaptor is wet.
Handset is water resistant; however, if a USB Type-C plug is inserted while it is wet, liquid (tap water, beverage, sea water, pet urine, etc.) or a foreign object adhered to handset or a USB Type-C plug may cause overheating, burnout, fire, malfunction, burns, etc. due to electric shock, short-circuiting, etc.
- Do not use AC Adaptor where water is regularly in use (kitchens, bathrooms, shower rooms, etc.); may cause fire or electric shock.

Care & Maintenance

- Proper care of Card Tray gasket is crucial for continued handset water and dust resistance. Observe the following:
 - Do not remove or damage gasket.
Keep it clean.
 - If Card Tray is damaged or deformed, contact a SoftBank Shop.
 - Do not insert a sharp object into Card Tray gap, Earphones-Microphone Jack or External Connection Jack.
 - To maintain water and dust resistance, it is recommended to replace Card Tray every 2 years regardless of its condition. Customer-requested Card Tray replacement incurs fees and requires handset submission. For details, contact a SoftBank Shop or [Customer Service](#).

Washing Handset

Wipe off dirt, sand, beverage, etc., gently with a cloth. Then hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at room temperature (5°C - 35°C). Wash with your hands, holding Card Tray so it makes no gap with handset; do not use a brush or sponge. Dry handset before use; after drying it well, power on.

- Before washing handset, make sure that Card Tray is closed firmly leaving no gap between handset and Card Tray.
- Do not use a washing machine or ultrasonic cleaner.
- Earphones-Microphone Jack and External Connection Jack tend to accumulate dust, sand, etc.; rinse and dry them completely before use. Any residue may cause malfunction, burns or fire.
- Do not put a cotton swab, cloth, etc. into Earphones-Microphone Jack or External Connection Jack; may affect water resistance, causing malfunction.

Drying Handset


After exposing handset to water, be sure to dry Earpiece/ Speaker, Volume Keys, Power Key, Speaker, External Connection Jack, Mic/Recorder Mic, Earphones-Microphone Jack, Mic, and Camera panel.

1

Wipe handset surface with dry cloth

2


Holding handset firmly by its sides, shake it about 20 times

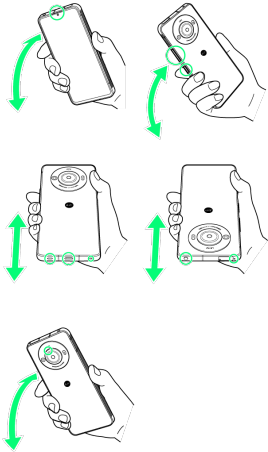

- When shaking handset, hold it firmly so as not to drop it.
- Shake with circled ○ portion downward to drain water from all holes and gaps.

3


Pat against dry cloth to remove moisture from openings and grooves

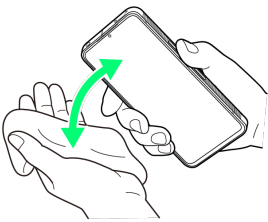

- Water may be trapped in openings; pat against a dry cloth to remove it.

4

Leave handset on dry cloth for approximately 2 - 3 hours at room temperature

 Handset is dried.

! Cautions

When Removing Moisture

Do not put a cotton swab, cloth, etc. into openings; may affect water and dust resistance.

After Drying Procedure

Do not use handset in wet conditions.

- Calls may fail, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit Earphones-Microphone Jack, External Connection Jack or other parts.
- Exposure to cold may freeze moisture and cause malfunction.

LEITZ PHONE 3 User Guide Index

A

About Settings.....	122
About the User Guide.....	3
Adding/Deleting Applications.....	104
Address Book.....	73
Applications.....	102

B

Basic Operations.....	32
Battery Settings.....	162

C

Calling from Outside Japan.....	195
Capturing Photos/Videos.....	90
Case.....	28
Charging Handset.....	19
Checking Notifications (Notifications Window).....	54
Checking Notifications (Quick Settings Window).....	56
Confirmation when First Activating Applications.....	98
Connecting by Wi-Fi.....	110
Customer Service.....	202

D

Data Usage Settings.....	123
Display Settings.....	135

E

eSIM.....	8
-----------	---

G

General Notes.....	218
Global Roaming.....	194
Google Account.....	25

H

Handset & Hardware Care.....	215
Handset Phone Number.....	72
Handset Screens.....	44

I

Icons at Display Top (Status Bar).....	52
Important Product Information.....	214
Internal Storage and SD Card.....	14

L

Lens Cap.....	29
Location Settings.....	161

M

Making Initial Settings..... 22

O

Optional Services.....65

Other Handset Settings.....172

P

Package Contents..... 6

Parts & Functions..... 6

Placing/Answering Calls.....60

Power On/Off..... 21

R

RF Exposure Information of This Product..... 220

S

Safety Precautions.....204

Security & Privacy Settings..... 147

Sending Messages (+メッセージ (+Message))..... 78

SIM Card..... 11

Sound & Vibration Settings..... 128

Specifications.....200

System Settings.....166

T

Text Entry.....37

U

Unlocking Screen.....27

Updating the System.....41

Useful Settings.....140

Using Airplane Mode.....36

Using Bluetooth® Function..... 116

Using Fingerprint Authentication Function.....38

Using Gmail..... 79

Using Manner Mode..... 34

Using the Internet (Chrome).....84

Using Touchscreen..... 33

V

Viewing & Managing Photos/Videos (Photos)..... 95

W

Warranty & After-Sales Service..... 200

Water & Dust Resistance..... 222

LEITZ PHONE 3 User Guide

May 2024, First Edition

SoftBank Corp.

Visit [SoftBank Shop](#) for assistance

Model : Leitz Phone 3

Manufacturer : SHARP CORPORATION