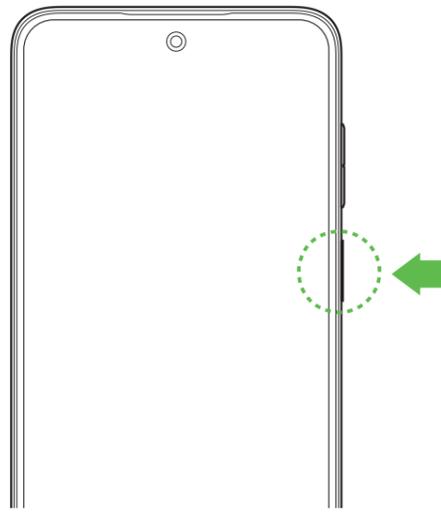# moto g 53s 5G

QUICK START

Powering On

Press and Hold **Power Key**

- Handset powers on, and Lock Screen appears shortly after.
- If initial settings appear, follow the onscreen instructions.

やめましょう、歩きスマホ。
モバイル・リサイクル・ネットワーク
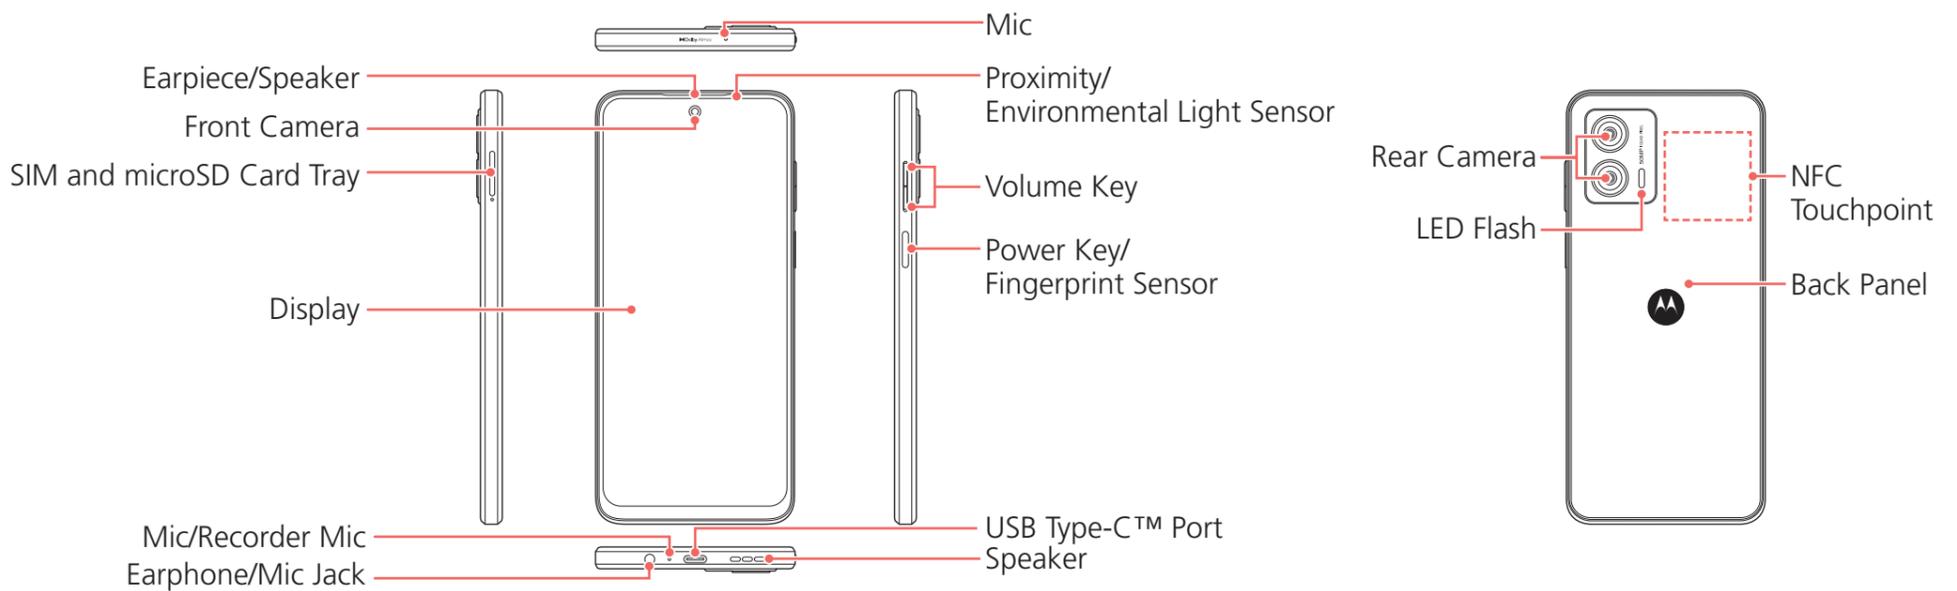キケン！水ぬれ充電
あぶない！電池への衝撃

Names of Parts & Key Functions

- Mic
- Earpiece/Speaker
- Front Camera
- SIM and microSD Card Tray
- Display
- Mic/Recorder Mic
- Earphone/Mic Jack
- Proximity/Environmental Light Sensor
- Volume Key
- Power Key/Fingerprint Sensor
- USB Type-C™ Port
- Speaker
- Rear Camera
- LED Flash
- NFC Touchpoint
- Back Panel

Lock Screen

SoftBank
12:34
Sun, Jan 1
☀ 50°
070 ▢▢▢▢ · now
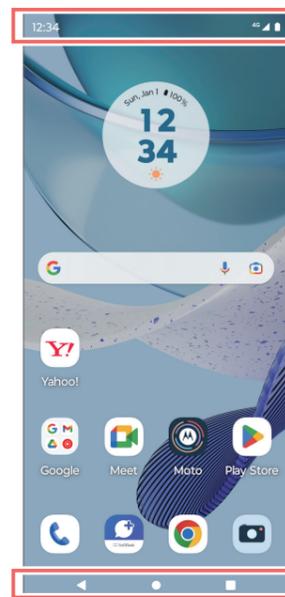Missed call
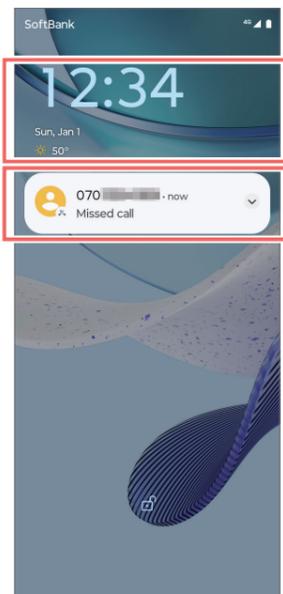
Date/Time/Weather

Notifications: Tap to display notifications, such as missed calls, etc.

After a period of inactivity, the display turns off and the screen locks.
Press Power Key when Lock Screen is displayed.
Slide screen up to unlock screen.

Home Screen

12:34
Sun, Jan 1 100%
12 34
Google
Yahoo!
Google   Meet   Moto   Play Store

Status Bar:
Notifications for new phone calls, etc. and handset status icons appear here.

Dock:
You can add shortcuts to applications, etc. here. It is always displayed even if you change the Home Screen sheet.

Navigation Buttons:
◀ Return to previous screen
● Return to Home Screen
▢ Display history

User Guide

Access the User Guide from handset or a computer.

■ **Online Manual**
Access from handset or a computer.

From handset
Select "オンラインマニュアル" in bookmarks

From a computer
https://www.softbank.jp/mobile/support/product/moto-g53s-5g-prepaid/
* PDF also available for download.

* Screenshots in the Quick Start guide may differ from actual screens shown.
* If you are using Simple Style (Prepaid Services), the handset uses 3G/4G communication services. (As of November 2023, Simple Style (Prepaid Services) does not support 5G communication services.)

Customer Service

If you need assistance or more information, feel free to contact us below.

■ **Procedures（My SoftBank）**
Apply for service changes simply at any time, without waiting.
View service charges/data amount and make changes to your plan and other settings.
https://u.softbank.jp/2HHEHkw

■ **Customer Support**
If you have any concerns or questions about how to use your handset or about services, we can provide you with the most appropriate solutions.
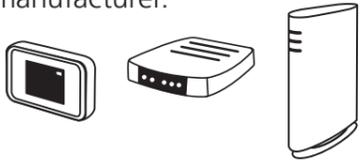**https://u.softbank.jp/3i5JjAB**

Wi-Fi Settings

Step 1　Preparing the Wi-Fi Router

❶ Check that "Wi-Fi" router is available

Is there a "Wi-Fi" router at your home or in the location where you want to use the Internet?
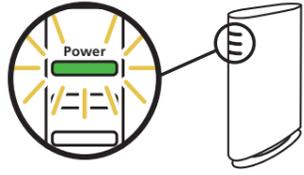
* Color and shape depend on the manufacturer.

❷ Check that router is on

Is the "Wi-Fi" router turned on?

* If unsure, see the Wi-Fi router instructions.

Power

❸ Check the [Network] and [Password]

!

Network

Memo:

* May appear as "SSID," etc.

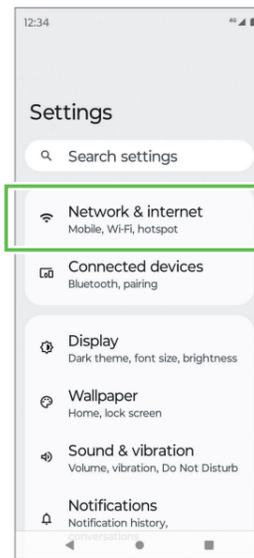**Password**

Memo:

* May appear as "KEY," "PSK-AES," etc.

[Product name]Wi-Fi router

Network　XXX-XXXX
Password　9999abcd

Step 2　Configuring Handset Settings
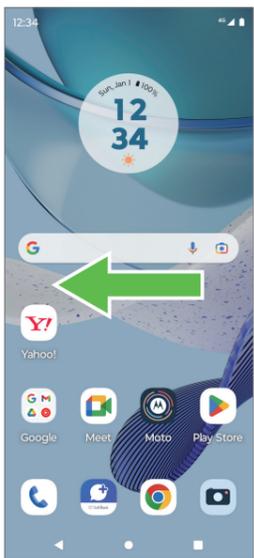
❶ Slide Home Screen left
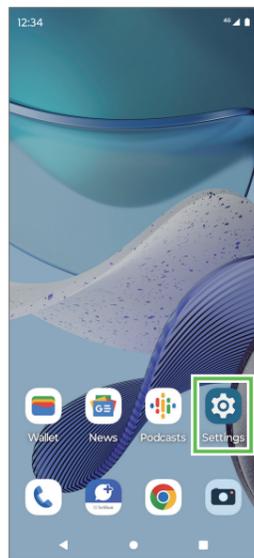
❷ Tap ⚙ **(Settings)**

❸ Tap **[Network & internet]**

❹ Tap **[Internet]**

If 🔘 appears, tap 🔘 to change it to 🔵.
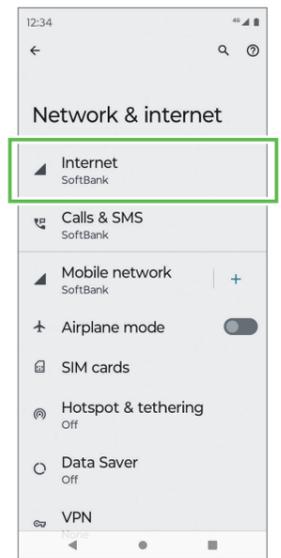
Network checked in Step 1 **!**
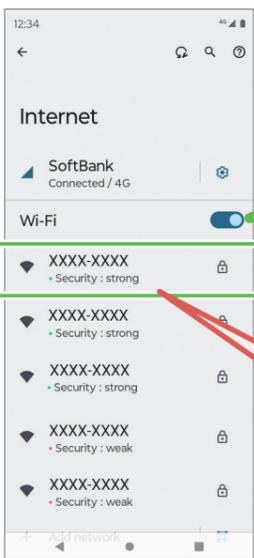
❺ Select [Network]

Confirmation Screen appears, so tap [Got it].
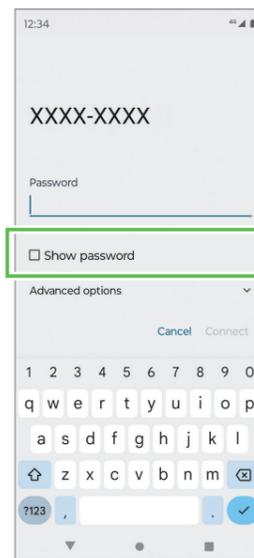
❻ Tap **[Show password]**

Password checked in Step 1 **!**

❼ Enter **Password** and tap **[Connect]**

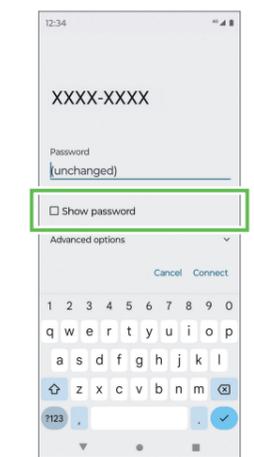▼ appears on Status Bar, and "Connected" appears in network field.
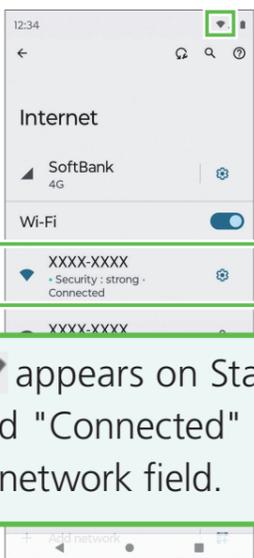
Done!

■ If Unable to Connect

If "Check password and try again" appears in network field, redo the settings as follows.

❶ Select [Network]

❷ Tap **[Show password]**

❸ Enter **Password** and tap **[Connect]**